



Woodstock Chimes®

Your Windcatcher, Your Way

The windcatcher of this chime is designed for easy removal so you can print, silkscreen or engrave a message, image or design on it. Follow the steps below to disconnect and reconnect your windcatcher.

Disconnecting the windcatcher:

Locate the sliding loop
of string at the top
of the windcatcher

Loosen the string
by tugging on the
bottom part of the loop

When the loop is large
enough, slip the windcatcher
through the sliding loop

Pull the windcatcher
off the loop of string



**IMPORTANT:
DO NOT CUT STRING**

Reconnecting the windcatcher:

Thread the bottom
of the center string through
the hole in the windcatcher

Pull the loop so it's longer
than the windcatcher

Open the loop and slide
the windcatcher through it

Pull tight to secure
the windcatcher

The World's Favorite Windchime™

www.chimes.com • woodstock@chimes.com

©2016 WPI