



## PRODUCT WARRANTY REGISTRATION

Activate your 2 years free warranty NOW







[www.mulco.com/apps/product-registration](http://www.mulco.com/apps/product-registration)

- ✓ Register to ensure your products are fully covered by Mulco Watches inc Warranty and keep your records on file for easy access.
- ✓ M Dedicated customer service.
- ✓ Exclusive discount on new products.


## WATER RESISTANCE

### Indications

### Use in Water

Watch Dial Mts/ft	Back of the watch case						
30 mts / 100 ft	W/R 3 atm	✓	✓	✓	✗	✗	✗
50mts / 160 ft	W/R 5 atm	✓	✓	✓	✓	✗	✗
100 mts / 330 ft	W/R 10 atm	✓	✓	✓	✓	✓	✗
200 mts / 660 ft	W/R 20 atm	✓	✓	✓	✓	✓	✓


\* Most of our watches are 10ATM  
please check yours on the caseback of your watch.

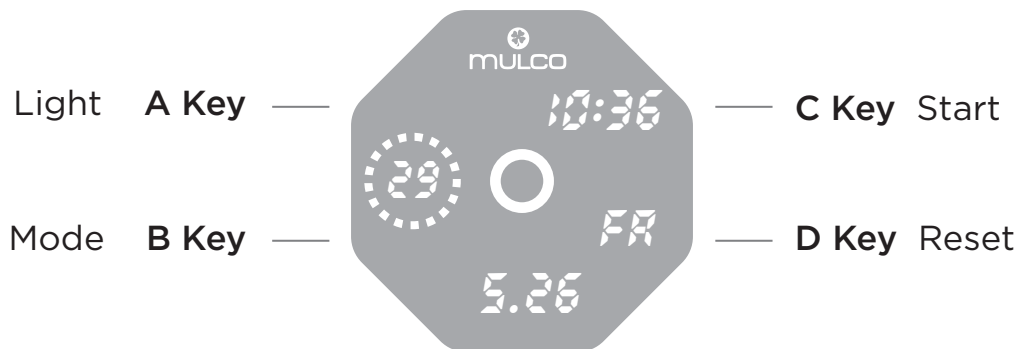

## Features

- 12 Digits LCD display, display Hour, Minute, Second, Month, Day and Week.
- Daily Alarm and Chime hourly
- Snooze
- 12/24H format selectable
- 1/100 second Chronograph with split functions
- EL backlight

## Watch modes

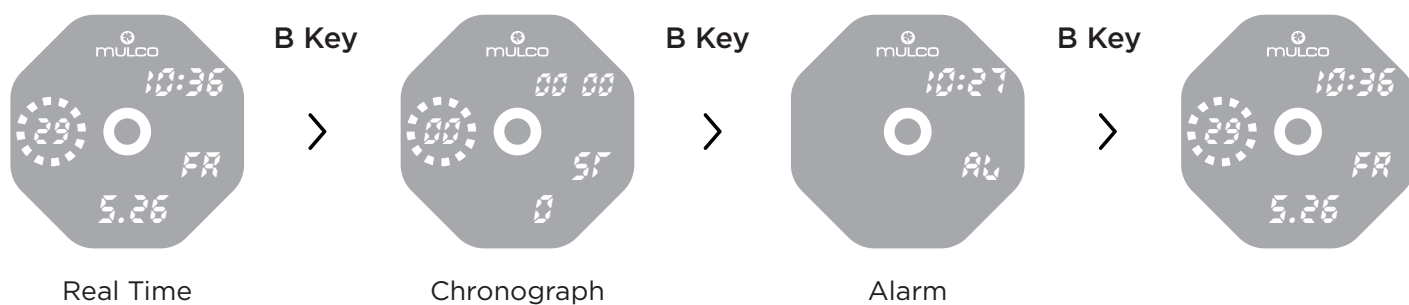

# Operational Manual



## 1. Backlight

- At any state, press A Key EL backlight for 3s.
- 



## 2. Chronograph

- Press D key to start / stop running.
  - When stop, press C key to zero.
  - When running, press C key to split count. Indicator "sp" showing.
  - Then press D key to exit split count, and stop counting. Press C key again to zero.
  - When running, press B key to return to Real Time Mode, and it running at back.
- 



## 3. Daily Alarm

- Turn on / off Alarm and chime - Press D key to turn on / off Alarm or chime.
  - Alarm setting: press C key to select "Hour" or "Minute" setting, Press D key to adjust the flashing item, Press C key to confirm, Press B key to return to Real Time Mode.
  - Alarm Snooze ON / OFF - At Alarm sounding state, Press C key or D key to stop sounding, and press B key to ON/OFF snooze function. When Snooze function be ON, it will sound five minutes later, and auto stop after sounding for 20 second.
- 



## 4. Time Setting

- "Second" flashing when loading, Press D key to zero. Press C key to select
- Items as following sequene: Hour > Minute > Month > Day > Day of week > Second
- When setting "Hour", "H" display for 24H format "A" or "P" for 12Hformat.
- Press D Key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes in the range of 00 to 29, the minutes are unchanged.