

get started

INSTANT™ **MILK FROTHER**
USER MANUAL

Instant

Welcome

to your new Instant™ Milk Frother!

Make your morning a little more amazing. Be your own barista and create café-quality drinks.

Get started with your Instant™ Milk Frother!



⚠ WARNING

Before using your Instant™ Milk Frother, read all instructions, including the Safety Information starting on page 4. Failure to follow the safeguards and instructions may result in personal injury and/or property damage. Keep this manual for reference.

CONTENTS

Important Safeguards	4
What's in the box?	7
Initial set up	8
Initial cleaning	8
Using Your Instant Milk Frother	9
Frothing Milk	11
Care, Cleaning, Storing	12
Learn more	13
Warranty	14

IMPORTANT SAFEGUARDS

⚠️ WARNING

Safety Instructions

At Instant™, we want you to feel comfortable using our products. This Instant™ Milk Frother was designed with you and your safety in mind.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, personal injury/or property damage.

Read all instructions before using and only use this appliance as described in the in-box materials. Failure to follow these safeguards and instructions may result in personal injury and/or property damage, and can void your warranty.

Placement

- **DO** operate the appliance on a stable, non-combustible, level surface.
- **DO NOT** place the appliance on or near a hot gas or electric burner, or in a heated oven.
- **DO NOT** let the power cord touch hot surfaces or open flame, including the stovetop.
- **DO NOT** connect appliance to an outlet below counter.

General Use

Spilled liquids from this frother can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

- **DO NOT** use this frother outdoors.
- **DO NOT** let the frother operate without milk.
- **DO NOT** use the appliance for anything other than its intended use. Not for commercial use. For household use only.
- **DO** regularly inspect the appliance and power cord.
- **DO** fill the jug with only water, milk or non-dairy milk alternatives. Never fill the jug with oil or other liquids.
- **DO NOT** leave the appliance exposed to sun, wind, and/or snow.
- **DO** operate and store the appliance above 32°F / 0°C
- **DO NOT** leave the appliance unattended when in use.

⚠ WARNING

- **DO NOT** allow children to operate the appliance; close supervision is required when any appliance is used near children.
- **DO NOT** let children play with this appliance.
- To avoid the risk of personal injury or damage to property, **DO NOT** open the top cover during the foaming, frothing or warming process. There are extremely hot liquids within the unit during the foaming, frothing and warming process.
- **DO NOT** touch hot surfaces. Use handles or knobs.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Care and Storage

- **DO** unplug from outlet when not in use before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
 - **DO NOT** store any materials in the frother when not in use.

Electrical Warning

The unit contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock.

To protect against electrical shock:

- **DO NOT** use with power converters or adapters, timer switches or separate remote-control systems.
- **DO** disconnect the appliance by first pressing the Start/Cancel button, and then grasping the plug and pulling from the outlet. Never pull from the power cord.
- **DO** keep appliance and cord away from children.
- To reduce the risk of fire or electric shock, **DO NOT** remove the bottom cover. No user-serviceable parts inside. Repair should be done by authorised service personnel only.
DO regularly inspect the appliance and power cord. **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at supportau.instant@instantbrands.com or by phone at 1800 251 643.


⚠ WARNING

- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in injury or property damage.
- To protect against electrical shock **DO NOT** immerse power cord, plug or the appliance the appliance in water or other liquid.
- **DO NOT** use the appliance in electrical systems other than 220-240V~, 50-60Hz for Australia and New Zealand.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX?

Instant™ Milk Frother

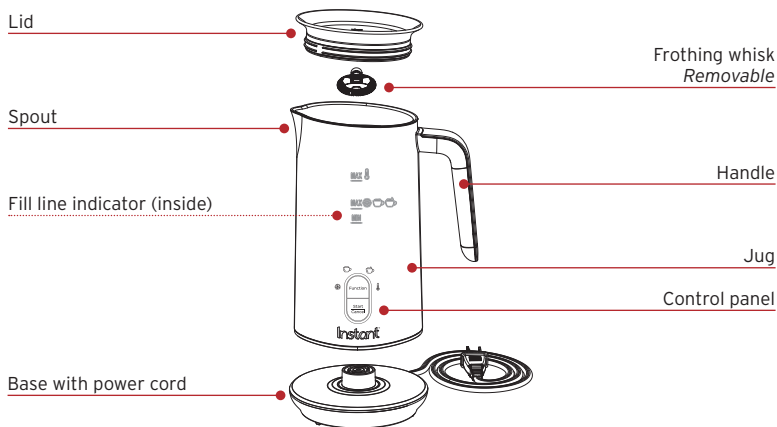

Illustrations are for reference only and may differ from the actual product.

Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live.

INITIAL SET UP

Before you begin creating your first at-home, café-style drink, follow these initial setup steps.

1. Remove the Instant™ Milk Frother and all accessories out of the box.
2. Remove all packaging materials from within and around the unit.
3. Plug the frother base in.
4. Follow the **Initial cleaning** steps before you begin frothing.

INITIAL CLEANING

It's important to clean the components before you begin frothing.

1. Remove the lid from the jug, put it aside.
2. Gently pull up on the whisk at the bottom of the frothing jug.
3. Hand wash and rinse the lid and whisk with dish soap and warm water.
4. Without immersing the jug in water, wash and rinse the inside of the whisk with dish soap and warm water.
5. Dry the lid, whisk and jug with a soft, dry cloth.
6. Once dry, place the whisk back into the jug by positioning the square end of the whisk over the shaft at the bottom of the jug, and rotating the whisk until it aligns with the shaft, then push down whisk until is secure.


Now you're ready to start making froth for your favourite drinks!

USING YOUR INSTANT™ MILK FROTHER

Get familiar with your frother's controls and programs.

Control Panel

The Instant™ Milk Frother has a simple, two button-control panel.

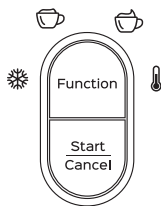

Function

You can toggle between the programs to create different types of foams, perfect for your drinks.

Start/Cancel

Starts and stops a selected program.

Cold foam

Create cold, silky microfoam to top your cold brew.



Light, warm foam

This setting heats and froths milk for lattes and matcha lattes.



Thick, warm foam

You can create thick, rich and warm foam, perfect for topping a cappuccino.



Warming

Heat your drink without creating foam. This setting slowly stirs the frothing whisk to keep your drink from burning. This setting is great for warming milk, creating hot chocolate and more.



FROTHING MILK

Non-dairy milk

The Instant™ Milk Frother allows you to make both light and thick froth, warm or cold, with dairy and dairy-free milks. However, **not all milk alternatives produce foam.**

Use **oat** or **soy milk** when using the **warm** or **cold foam** setting. **Coconut milk** will **only** produce foam with the **cold foam** setting. Keep in mind that frothing dairy-free milks may not produce the same results as dairy milk.

How to froth milk

Always use the freshest, coldest milk or milk alternative possible for best results. When frothing large quantities of milk, allow the frother to rest for **3 minutes** after every **2 frothing cycles**.

1. Ensure the froth whisk is securely in place at the bottom of the jug.
2. Remove the lid from the jug and pour your choice of milk into the jug. **Do not** *overflow the jug as this may cause the milk frother to overflow when using a foam setting.*
3. Place the lid on the jug and press down until secure.
4. Place the jug onto the base.
5. If the base is not plugged into an outlet, connect the plug into an outlet.
6. Press **Function** to toggle between programs.
7. Press **Start/Cancel** to begin.
8. To stop the program at any time, press **Start/Cancel**. Otherwise, the milk frother will stop on its own when the program ends.

Programs run for a maximum of 3 minutes.

CARE, CLEANING, STORING

Clean your Instant™ Milk Frother after every use to ensure the best possible results, and to prevent milk residue from burning onto the inside of the jug.

Always unplug the milk frother and let it cool to room temperature before cleaning. **DO NOT** use metal scouring pads, abrasive powders or harsh chemical detergents to clean the milk frother or any of its components. Let all parts dry thoroughly before use or before storage.

Part	Cleaning method and instruction
Lid	<ul style="list-style-type: none">• Remove lid from jug before cleaning.• Top-rack dishwasher safe.
Jug	<ul style="list-style-type: none">• After use, let frother cool completely. Remove jug from the base before cleaning.• With a cloth, hand wash the inside of the jug with hot water and dish soap. Then, rinse the inside of the jug with clean, warm water.• With a damp cloth, hand wash the outside of the jug and wipe dry to prevent streaking. Let jug dry completely before placing jug back onto base.• DO NOT rinse the jugs exterior.• DO NOT store liquids in the jug.
Frothing whisk	<ul style="list-style-type: none">• Remove from the jug before cleaning. Dishwasher safe.
Base	<ul style="list-style-type: none">• Disconnect the base from outlet before cleaning.• With a damp cloth, wipe visible particles from the base as needed.• Allow to dry thoroughly before placing the jug.
Power cord	<ul style="list-style-type: none">• With a barely damp cloth, wipe visible particles from the power cord as needed.• DO NOT fold the power cord when storing.

⚠ WARNING

The jug and base contain electrical components. To avoid fire, electric shock or personal injury, **DO NOT** machine wash, rinse or immerse the milk frother base, jug, power cord or plug in water or other liquids.

LEARN MORE

There's a whole world of Instant™ Milk Froth information and help just waiting for you. Here are some of the most helpful resources.

Register your product

instantbrands.com.au/pages/product-registration

Contact Consumer Care

instantbrands.com.au

supportau.instant@instantbrands.com

1800 251 643 or +61 2 9317 1000

Download the Instant Brands Connect App

- Recipes
- New User Tips
- Getting Started Videos



Join the community



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
Milk Frother 10 MB	10 ounces / 296 mL	500 watts	220-240V~, 50-60Hz	1.74 lbs 0.79 kg	6.1" L x 4.72" W x 8.66" H 22 H x 12 W x 15.5 D cm

WARRANTY

Limited Warranty

This Limited Warranty is issued by Instant Brands (Australia) Pty Ltd (Instant Brands Australia) and is effective for one year from the date of original consumer purchase. Proof of original purchase date and return of your appliance is required to obtain service under this Limited. Return of your appliance to us will be done in accordance with our instructions only. Provided that this appliance is operated and maintained in accordance with written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantbrands.com.au, Instant Brands Australia will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

We remind you the appliance you purchased is for personal use only (not commercial use).

Any modification/alteration or attempted modification/alteration to your appliance will void this Limited Warranty, unless such modification/alteration or attempted modification/alteration was expressly authorised by an Instant Brands Australia Representative in writing.

This Limited Warranty only covers Instant Brands Australia's appliances/products and is not extended to any other appliances, products, equipment, components, or devices that you use or may use in conjunction with the Instant Brands Australia's appliances.

To claim under this Limited Warranty:

1. Contact Instant Brands Australia at:
Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria, NSW 2015
Email: sales.australia@instantbrands.com
2. Provide a description of the appliance you believe has malfunctioned due to defective parts or workmanship.
3. If it is necessary for the appliance to be sent to Instant Brands Australia for repair or replacement, Instant Brands Australia will send you a pre-paid shipping label and you must send the appliance and your dated sales receipt to Instant Brands Australia along with the appliance. If you do not have your dated sales receipt, please advise Instant Brands Australia in advance, and Instant Brands Australia will attempt to verify your purchase.
4. If Instant Brands Australia determines that the appliance has malfunctioned due to defective parts or workmanship, and is covered under this Limited Warranty, Instant Brands Australia will repair and return the appliance, or send you a replacement appliance, at Instant Brands Australia's cost.
5. Any repaired or replaced appliance will be covered by this Limited Warranty for the remainder of the original warranty period or ninety (90) days following your receipt of the replacement or repaired appliance, whichever is greater.
6. If Instant Brands Australia confirms the appliance has not malfunctioned due to defective parts or workmanship, and/or is in working order, or if proof of purchase is not verified, Instant Brands Australia reserves the right to return the appliance to you at your pre-paid cost. If this cost is not met, Instant Brands Australia reserves the right to dispose of the appliance after 45 days' notice to you.

WARRANTY

Limitation and Exclusions

To the maximum extent permitted by law, the maximum liability of Instant Brands Australia, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance or part of the same age.

This Limited Warranty does not cover:

9. Damage resulting from accident, modification/alteration (unless expressly authorised by an Instant Brands Australia Representative in writing), misuse, abuse, neglect, unreasonable use, use contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on instantbrands.com.au, normal wear and tear, commercial use, improper assembly by you or anyone, disassembly by you or anyone, repair by you or anyone, failure to provide reasonable and necessary maintenance, force majeure event including but not limited to fire, flood, acts of God;
10. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on instantbrands.com.au; or
11. Use of unauthorised parts and accessories, or repairs to parts and systems resulting from unauthorised repairs or modifications/alterations made to your appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Instant Brands (Australia) Pty Ltd.
Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria, NSW 2015.
1800 251 643 or +61 2 9317 1000.
Email: sales.australia@instantbrands.com

©2023 Instant Brands (Australia) Pty Ltd.

Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria
NSW 2015, Australia.

instantbrands.com.au

© 2023 Instant Brands LLC.

INSTANT and INSTANT BRANDS are registered
trademarks of Instant Brands Holdings Inc.