

get started

INSTANT™ AIR FRYER 4L

Instant™

Welcome

to your new Instant™ Air Fryer!

This Instant Air Fryer can help you cook delicious meals with less oil and hassle, compared to traditional deep frying. We hope you fall in love with Instant air frying and enjoy it in your kitchen for years to come!

WARNING

Before using your new Instant Air Fryer, read all instructions, including the Safety and Warranty document. Failure to follow the safeguards and instructions may result in personal injury and/or property damage.

CONTENTS

Important safeguards	2
What's in the box	6
How to use	7
Initial setup	8
Cooking	9
Cleaning	11
Troubleshooting	12
Learn more	13
Warranty	15
Notes	17



IMPORTANT SAFEGUARDS



⚠️ WARNING

Read all instructions before using and only use this air fryer as described in this manual.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, personal injury, and/or property damage.

Placement

- **DO** place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.
- **DO NOT** place the appliance on or close to a hot gas or electric burner, or a heated oven.
- **DO NOT** use the appliance near water or flame.
- **DO NOT** use outdoors. Keep out of direct sunlight.
- **DO NOT** place on anything that may block the vents on the appliance.
- **DO** make sure all parts are dry and free of food debris before use.

General Use

- **DO NOT** touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot.
- **DO** use the appliance's handles and knobs.
- **DO** use oven mitts when removing accessories.
- **DO** place hot accessories on a heat-resistant surface or cooking plate.
- **DO NOT** cover basket with foil. This will cause airfryer to overheat. If using foil **DO** only use foil in bottom of cooking basket.
- **DO NOT** move the appliance while it is in use.
- **DO NOT** allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used near children and individuals with reduced capabilities. Children should not play with this appliance.
- **DO NOT** use the appliance for anything other than household use. It is not intended for commercial use.

⚠ WARNING

- **DO NOT** leave the appliance unattended while in use.
- **DO NOT** use the appliance for more than 60 minutes in a 2-hour period.

Air Frying Cautions

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face at a safe distance from the air vents and take extreme caution when removing hot accessories from the appliance. Failure to do so may result in personal injury and/or property damage.

While cooking, the internal temperature of the appliance reaches very high temperatures. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature.

- **DO NOT** use a ceramic-coated or stoneware pot (such as CorningWare stoneware) for air frying.
- **DO NOT** block the vents on the air fryer. Leave at least 13 cm of space around the air fryer when in use.
- **DO NOT** place the appliance on a stove.
- **DO NOT** operate the appliance on or near combustible materials such as tablecloths and curtains.
- **DO NOT** cover the air vents while the air fryer is in operation. Doing so will prevent even cooking and may cause damage to the appliance.
- **DO NOT** overfill the air fryer. Overfilling may cause food to contact the heating element, which may result in fire, property damage, and/or personal injury.
- **DO NOT** pour oil into the cooking container. If needed, spray food lightly with non-stick cooking spray. Using cooking oil could result in personal injury and/or property damage.
- **DO** use caution with cooking containers made of materials other than metal. Failure to do so may result in fire, personal injury, and/or property damage.

Should the unit emit black smoke during use, press Cancel and unplug the appliance immediately. Wait for smoking to stop before opening the door/basket, then clean thoroughly. For further information refer to 'Troubleshooting'.

⚠ WARNING

- **DO** use extreme caution when moving the appliance containing oils or other hot liquids.
- **DO** use extreme caution when removing the tray or disposing of hot grease.
- **DO NOT** use this appliance for deep frying foods.

Accessories

- **DO** use only accessories or attachments authorised by Instant Brands LLC. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of personal injury and/or property damage, fire or electric shock.
- **DO NOT** use the included accessories in a microwave, toaster oven, convection or conventional oven, or on a ceramic cooktop, electric coil, gas range or outdoor grill.

Care and Storage

- **DO** let the appliance cool to room temperature before cleaning or storage.
- **DO NOT** store any materials in the appliance when not in use.
- **DO NOT** place any combustible materials in the appliance, such as paper, cardboard, plastic, Styrofoam or wood.
- **DO NOT** clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or personal injury and/or property damage.

Power Cord

A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping. This appliance has a 3-prong grounding plug. To reduce the risk of electric shock:

- **ONLY** plug the power cord into a grounded electrical outlet.
- **DO NOT** remove ground.
- **DO NOT** let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.
- **DO NOT** use below-counter power outlets.
- **DO NOT** use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

⚠ WARNING

Electrical Cautions

The appliance contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock and/or death.

To avoid electrical shock:

 
To disconnect, cancel cooking, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

- **DO** allow unit to cool before adding or removing parts or accessories.
- **DO** regularly inspect the appliance and power cord.
- **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. For assistance, contact Customer Care by email at **support@instantpot.com.au** or by phone at **1800 251 643** or **02 9317 1000**.
- **DO NOT** attempt to dislodge food while the appliance is plugged into an electrical outlet, as this may cause electric shock, burns or personal injury and/or property damage.
- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, property damage, fire or personal injury, and will void the warranty.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in personal injury and/or property damage.
- **DO NOT** immerse power cord, plug or the appliance in water or other liquid.
- **DO NOT** rinse the appliance under tap.
- **DO NOT** use the appliance in electrical systems other than 220-240V~ 50-60Hz.

SAVE THESE INSTRUCTIONS


WHAT'S IN THE BOX

Air Fryer

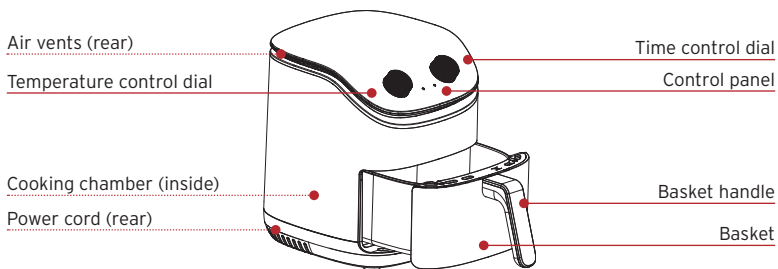

Parts + accessories

 Cooking tray




Illustrations are for reference only and may differ from the actual product.

HOW TO USE

Control panel

 We've designed this Instant Air Fryer to be our simplest and easiest air fryer to use. With just two knobs to control temperature and time, you can start cooking delicious meals right away.

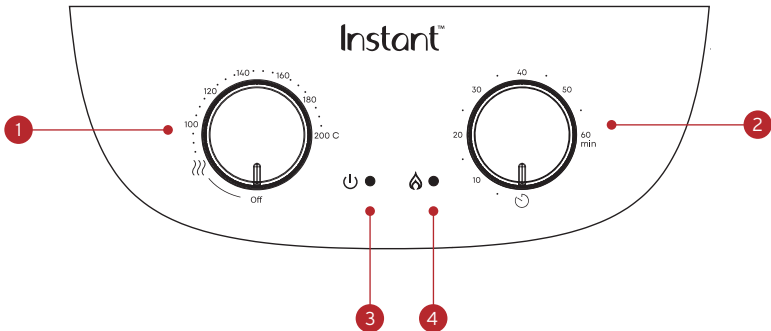

1. Temperature control knob
 - Off
 - 🌊 Warm (77°C)
 - 93°C - 200°C

2. Time control knob
 - 0 min - 60 min
3. Power light
4. Heat On light

INITIAL SETUP

Unpack

1. Remove the Instant Air Fryer from the box.
2. Remove all the packaging material from in and around the appliance.
3. Make sure to remove all the accessories from inside the cooking chamber.
4. **DO NOT** remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Wipe the internal cooking chamber and basket with a damp cloth – use a clean, soft cloth to dry.
2. Wash the cooking tray with hot water and dish soap. Rinse with warm, clear water and use a soft cloth to dry.

Placement

1. Place the air fryer on a stable, level surface, away from combustible material and external heat sources. **DO NOT** place the air fryer on top of another appliance.
2. Make sure to leave at least 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.

Test run

Before using your new Instant Air Fryer for the first time, you must perform a test run to ensure the cooker is working properly.

To perform a test run:

1. Plug the air fryer into an electrical outlet. The power light will turn on.
2. Insert the air frying basket into the cooker, but do not add food.
3. Rotate the temperature control dial to 200°C.
4. Rotate the time control dial to 15 minutes.
5. The heat on light will turn on during cooking. The air fryer will chime to let you know that timer has run out.
6. Let the unit cool.

Now you're ready to cook a meal in your Instant Air Fryer!

COOKING

The Instant Air Fryer uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavour of deep frying, with little to no oil.

⚠ WARNING

HOT SURFACES

The air fryer will be hot during and after cooking. Always exercise extreme caution when removing food from the hot cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, do not block air intake or air vents.

What to cook in

- Cooking tray is perforated to allow for airflow and should be used for most foods, like wings and cauliflower bites.

You can place food directly on the cooking tray, without using foil or other coverings.

Prep

Cut, chop, season, marinate or batter your ingredients according to your recipe.

Cook

1. Place your food into the air frying basket, according to your recipe.
2. Insert the air frying basket into the cooker.

When the air frying basket is inserted securely, the front of the basket is flush with the front of the cooker.

3. Turn the temperature control dial to the desired temperature setting.
4. Turn the time control dial to the desired time setting.

Finish

- The air fryer will chime to let you know that cooking is complete.

CLEANING

Clean your Instant Air Fryer after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

WARNING

To prevent electric shock, unplug before cleaning.

DO NOT immerse power cord, plug or the appliance in water or other liquid, which may result in electric shock.

Part	Cleaning instructions
Cooking tray	<ul style="list-style-type: none">• Dishwasher safe.*• The cooking trays have a non-stick coating. Avoid using metal utensils, steel wool pads or harsh cleansers when cleaning.
Removable air frying basket	<ul style="list-style-type: none">• Clean with a damp cloth and mild dish soap.• Dishwasher safe.*• Avoid using metal utensils, steel wool pads or harsh cleansers when cleaning.
Cooking chamber	<ul style="list-style-type: none">• Clean with a damp cloth and mild dish soap.• Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed.• Ensure the heating coil is dry before turning on the air fryer.• To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of baking soda and vinegar and wipe clean with damp cloth. For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean.
Exterior of cooker	<ul style="list-style-type: none">• Clean with a soft, damp cloth or sponge. Wipe dry.
Power cord	<ul style="list-style-type: none">• While the cooker is unplugged, use a barely damp cloth to wipe any particles off cord

**Some discolouration may occur after machine washing, but this will not affect the cooker's safety or performance.*

TROUBLESHOOTING

Problem	Cause	Solution
Air fryer will not turn on	The appliance is not properly plugged in.	Make sure the power cord is plugged into the outlet firmly.
	Outlet is not powered.	Plug another appliance into the same outlet to test the circuit.
	The air fryer basket is not fully inserted into the unit.	Make sure the air fryer basket is fully inserted.
Black smoke is coming from the air fryer	Using an oil with a low smoke point.	Cancel cooking, unplug the cooker and allow it to cool to room temperature. Choose a neutral oil with a high smoke point, such as Canola, Avocado, Soybean, Safflower, or Rice Bran.
	Food residue on the heating coil, in the cooking chamber or on the accessories.	Cancel cooking, unplug the cooker and allow it to cool to room temperature. Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly. For more information, see 'Cleaning' on page 11.
	Appliance malfunction.	Contact Consumer Care.
White smoke is coming from the air fryer	Cooking foods with a high fat content, such as bacon, sausage, and hamburger	Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying.
	Water is vaporising, producing thick steam.	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the cooking chamber when air frying.
	Seasoning on food has blown into element	Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick.

LEARN MORE

There's a whole world of Instant Air Fryer information and help just waiting for you. Here are some of the most helpful resources.

Download this manual online

instantpot.com.au

Register your product

instantpot.com.au/support/register

Contact Consumer Care

instantpot.com.au

support@instantpot.com.au

1800 251 643 or 02 9317 1000

Download the Instant Brands Connect App

- Recipes
- New User Tips
- Getting Started Videos



Join the community



Get started online with your new product!



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
AFB4002BK	4 Litres	1400-1600W	220-240V~ 50-60Hz	3.9 kgs	cm: 35.1 L x 25.2 W x 29.6 H

WARRANTY

Limited Warranty

This Limited Warranty is issued by Corelle Brands (Australia) Pty Ltd (Corelle Brands Australia) and is effective for one year from the date of original consumer purchase. Proof of original purchase date and return of your appliance is required to obtain service under this Limited. Return of your appliance to us will be done in accordance with our instructions only. Provided that this appliance is operated and maintained in accordance with written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantpot.com.au, Corelle Brands Australia will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

We remind you the appliance you purchased is for personal use only (not commercial use).

Any modification/alteration or attempted modification/alteration to your appliance will void this Limited Warranty, unless such modification/alteration or attempted modification/alteration was expressly authorised by a Corelle Brands Australia Representative in writing.

This Limited Warranty only covers Corelle Brands Australia's appliances/products and is not extended to any other appliances, products, equipment, components, or devices that you use or may use in conjunction with the Corelle Brands Australia's appliances.

To claim under this Limited Warranty:

1. Contact Corelle Brands Australia at:
Sydney Corporate Park
Level 1, 184 Bourke Road, Alexandria, NSW 2015
Email: sales.australia@instantbrands.com
2. Provide a description of the appliance you believe has malfunctioned due to defective parts or workmanship.
3. If it is necessary for the appliance to be sent to Corelle Brands Australia for repair or replacement, Corelle Brands Australia will send you a pre-paid shipping label and you must send the appliance and your dated sales receipt to Corelle Brands Australia along with the appliance. If you do not have your dated sales receipt, please advise Corelle Brands Australia in advance, and Corelle Brands Australia will attempt to verify your purchase.
4. If Corelle Brands Australia determines that the appliance has malfunctioned due to defective parts or workmanship, and is covered under this Limited Warranty, Corelle Brands Australia will repair and return the appliance, or send you a replacement appliance, at Corelle Brands Australia's cost.
5. Any repaired or replaced appliance will be covered by this Limited Warranty for the remainder of the original warranty period or ninety (90) days following your receipt of the replacement or repaired appliance, whichever is greater.

WARRANTY

6. If Corelle Brands Australia confirms the appliance has not malfunctioned due to defective parts or workmanship, and/or is in working order, or if proof of purchase is not verified, Corelle Brands Australia reserves the right to return the appliance to you at your pre-paid cost. If this cost is not met, Corelle Brands Australia reserves the right to dispose of the appliance after 45 days' notice to you.

Limitation and Exclusions

To the maximum extent permitted by law, the maximum liability of Corelle Brands Australia, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance or part of the same age.

This Limited Warranty does not cover:

Damage resulting from accident, modification/alteration (unless expressly authorised by a Corelle Brands Australia Representative in writing), misuse, abuse, neglect, unreasonable use, use contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantpot.com.au, normal wear and tear, commercial use, improper assembly by you or anyone, disassembly by you or anyone, repair by you or anyone, failure to provide reasonable and necessary maintenance, force majeure event including but not limited to fire, flood, acts of God;

Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantpot.com.au ; or

Use of unauthorised parts and accessories, or repairs to parts and systems resulting from unauthorised repairs or modifications/alterations made to your appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Corelle Brands (Australia) Pty Ltd.
Sydney Corporate Park
Level 1, 184 Bourke Road, Alexandria, NSW 2015.
1800 251 643 or (02) 9317 1000.
Email: sales.australia@instantbrands.com

©2022 Corelle Brands (Australia) Pty Ltd.

Distributed by Corelle Brands (Australia) Pty Ltd.

An Instant Brands Company.

Sydney Corporate Park
Level 1, 184 Bourke Road, Alexandria, NSW 2015, Australia.

[instantpot.com.au](https://www.instantpot.com.au)

©2022 Instant Brands LLC.