

get started

INSTANT™ VORTEX™
**PLUS CLEARCOOK AIR FRYER 5.7L
WITH TRAP & EXTRACT FILTERS**

Instant™

Welcome

to your new Instant™ Vortex™ Plus!

This Instant Vortex Plus ClearCook Air Fryer can help you cook delicious meals with less oil and less hassle. We hope you fall in love with Instant air frying and enjoy it in your kitchen for years to come!

⚠️ WARNING

Before using your new Vortex Plus, read all instructions, including the Safety, Maintenance and Warranty document. Failure to follow the safeguards and instructions may result in injury and/or property damage.

CONTENTS

| | |
|------------------------|----|
| Important Safeguards | 2 |
| What's in the box | 8 |
| Using your Vortex Plus | 9 |
| Initial set up | 12 |
| Cooking | 14 |
| Smart Programmes | 16 |
| Cleaning | 19 |
| Troubleshooting | 21 |
| Error Codes | 22 |
| Learn more | 23 |
| Warranty | 24 |

INSTANT™ VORTEX™ PLUS CLEARCOOK

AIR FRYER 5.7L

Safety Instructions

At Instant, we want you to feel comfortable using our products. This Instant™ Vortex™ Plus was designed with your safety in mind.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

Read all instructions before using and only use this appliance as described in the in-box materials. Failure to follow these safeguards and instructions may result in injury and/or property damage and can void your warranty.



IMPORTANT SAFEGUARDS



READ ALL INSTRUCTIONS

⚠️ WARNING

Placement

DO place the appliance on a countertop only. Always operate the appliance on a stable, non-combustible, level surface.

DO NOT place the appliance on or close to a hot gas or electric burner, or a heated oven.

DO NOT use the appliance near water or flame.

DO NOT use outdoors. Keep out of direct sunlight.

DO NOT place on anything that may block the vents on the appliance.

DO make sure all parts are dry and free of food debris before use.

General Use

DO NOT touch the appliance's hot surfaces, or any accessories during or immediately after cooking because they will be hot.

DO use the appliance's handles and knobs.

DO use oven mitts when removing accessories.

DO place hot accessories on a heat-resistant surface or cooking plate.

DO NOT cover the crumb tray or any part of the air fryer with foil. This will cause overheating of the air fryer.

DO NOT move the appliance while it is in use.

⚠ WARNING

DO NOT allow children or persons with reduced physical, sensory or mental capabilities to operate this appliance. Close supervision is necessary when any appliance is used near children and individuals with reduced capabilities. Children should not play with this appliance.

DO NOT use the appliance for anything other than household use. It is not intended for commercial use.

DO NOT leave the appliance unattended while in use.

DO avoid contact with moving parts. Failure to do so may result in injury.

DO NOT use the appliance for more than 60 minutes in a 2-hour period.

Air Frying Cautions

When the air fryer is in operation, hot air is released through the air vents. Keep your hands and face at a safe distance from the air vents and take extreme caution when removing hot accessories from the appliance. Failure to do so may result in injury or property damage.

While cooking, the internal temperature of the appliance reaches very high temperatures. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature.

DO NOT use a ceramic-coated or stoneware pot (such as CorningWare stoneware) for air frying.

DO NOT block the vents on the air fryer. Leave at least 13 cm of space around the air fryer when in use.

DO NOT place the appliance on a hot stove.

DO NOT operate the appliance on or near combustible materials such as tablecloths and curtains.

DO NOT cover the air vents while the air fryer is in operation. Doing so will prevent even cooking and may cause damage to the appliance.

⚠️ WARNING

DO NOT overfill the air fryer. Overfilling may cause food to contact the heating element, which may result in fire, property damage, and/or personal injury.

DO NOT pour oil into the cooking container. If needed, spray food lightly with non-stick cooking spray. Using cooking oil could result in personal injury and/or property damage.

DO use caution with cooking containers made of materials other than metal. Failure to do so may result in fire, personal injury, and/or property damage.

Should the unit emit black smoke during use, press Cancel and unplug the appliance immediately. Wait for smoking to stop before removing the lid, then clean thoroughly. For further information refer to 'Troubleshooting' in the User Manual.

DO use extreme caution when moving the appliance containing oils or other hot liquids.

DO use extreme caution when removing the tray or disposing of hot grease.

DO NOT use this appliance for deep frying foods.

Accessories

DO use only accessories or attachments authorised by Instant Brands LLC. The use of parts, accessories or attachments not recommended by the manufacturer may cause a risk of injury, fire or electric shock.

DO NOT use the included accessories in a microwave, toaster oven, convection or conventional oven, or on a ceramic cooktop, electric coil, gas range or outdoor grill.

⚠️ WARNING

Care and Storage

DO let the appliance cool to room temperature before cleaning or storage.

DO NOT store any materials in the appliance when not in use.

DO NOT place any combustible materials in the appliance, such as paper, cardboard, plastic, Styrofoam or wood.

DO NOT clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch the electrical parts, causing a risk of shock, burns or injury.

Power Cord

A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping. This appliance has a 3-prong grounding plug. To reduce the risk of electric shock:

ONLY plug the power cord into a grounded electrical outlet.

DO NOT remove ground.

DO NOT let the power cord hang over edges of tables or counters, or touch hot surfaces or open flame, including the stovetop.

DO NOT use below-counter power outlets.

DO NOT use with extension cords, power converters or adapters, timer switches or separate remote-control systems.

Electrical Cautions

The appliance contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock and/or death.

To avoid electrical shock:

To disconnect, select Cancel, then remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

⚠️ WARNING

DO allow unit to cool before adding or removing parts or accessories.

DO regularly inspect the appliance and power cord. **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at support@instantpot.com.au or by phone at 1800 251 643 or 02 9317 1000.

DO NOT attempt to dislodge food while the appliance is plugged into an electrical outlet, as this may cause electric shock, burns or injury.

DO NOT attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.

DO NOT tamper with any of the safety mechanisms, as this may result in injury or property damage.

DO NOT immerse power cord, plug or the appliance in water or other liquid.

DO NOT rinse the appliance under tap.


DO NOT use the appliance in electrical systems other than 220-240V~50-60Hz.



SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX

Air Fryer

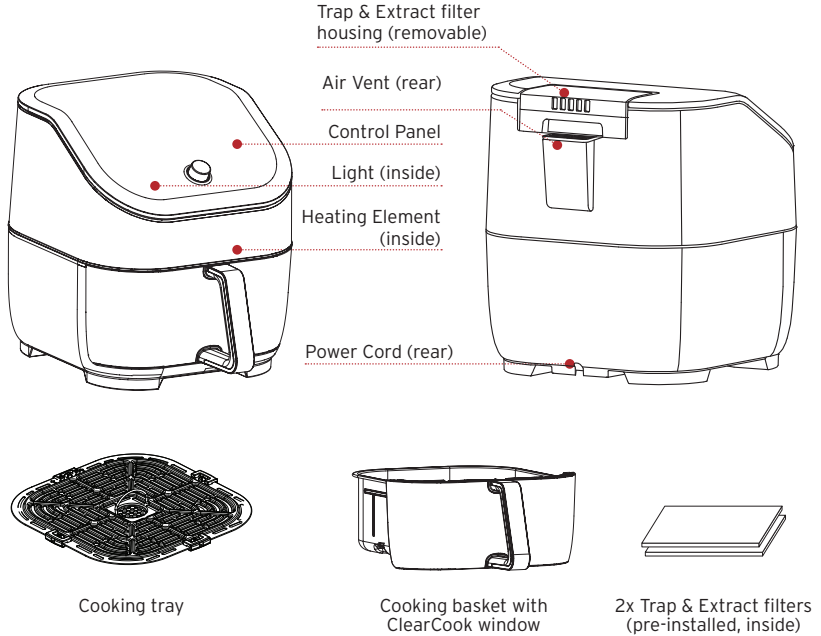

Illustrations are for reference only and may differ from the actual product.


Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this User Manual for reference.

USING YOUR VORTEX PLUS

Control panel

We've designed the control panel to be simple to use and easy to read.

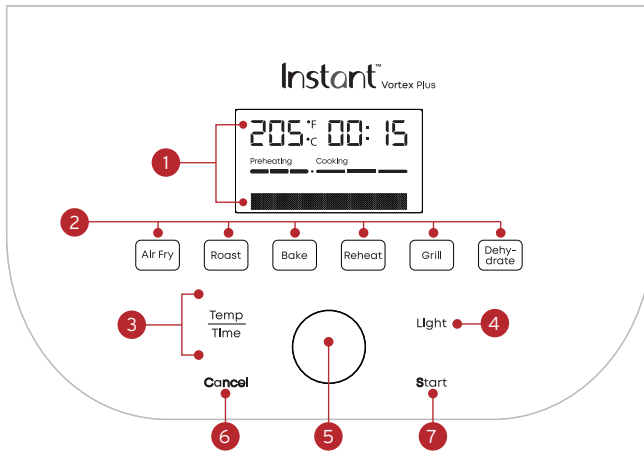

1. Display

- Cooking time
- Cooking temperature
- Messages

2. Smart Programmes

- Air Fry
- Roast
- Bake
- Reheat
- Grill
- Dehydrate

3. Temperature/Time Control

- Select temperature and time settings

4. Light

- Turn on or off the internal cooking light

5. Control Dial

6. Cancel

7. Start

Turning cooking light On/Off

- To turn the light on, press **Light**.
- To turn the light off, press **Light** again. The cooking light cannot be turned off in the last 60 seconds of a cooking programme.

Replace filter indicator

- When it's time to replace the Trap & Extract filter, the display will show Change Filter. See page 14 for replacement instructions.

Turning sound On/Off

- While in Standby mode, press and hold **Temp/Time** and **Light** for 5 seconds, until the display shows **Sound Off** or **Sound On**.

Audible safety alerts (beeps) cannot be turned off.

Choosing temperature unit

Choose which cooking temperature unit you would like to use, Celsius or Fahrenheit.

- While in Standby mode, press and hold **Temp/Time** for 5 seconds, until display shows °C or °F.

Save custom settings

You can set and save custom time and temperature settings for any of the six *Smart Programmes*.

1. Select the Smart Programme you want to set.
2. Press **Temp/Time** button and use the Control Dial to change the temperature and time.
3. Press **Start Button** to confirm change.

The next time you use that Smart Programme, the new temperature or time is used. Adjustments made after cooking begins are not saved.

Reset Smart Programmes to original settings

Reset individual Smart Programmes

4. With the cooker in Standby mode, press and hold one of the Smart Programme buttons until the cooker returns to Standby.

Reset all Smart Programmes

5. With the cooker in Standby mode, press and hold the **Control Dial** until the cooker beeps.

All Smart Programme cooking times and temperatures are restored to the factory default setting.

Cancel active cooking programme

You can cancel any cooking programme at any time.

- While in Standby, Preheating or active cooking programme, press **Cancel**. Depending on the temperature of the unit, the internal fan may keep running to cool the unit.

INITIAL SET UP

Unpack

1. Remove your new Vortex Plus from the box.
2. Remove all the packaging material from in and around the air fryer.
3. Make sure to remove all the accessories from inside the cooking chamber.
4. Don't remove the safety warning stickers or the rating label from the air fryer.

Clean before use

1. Wipe the interior with a damp cloth. Use a clean, soft cloth to dry.
2. Wash the accessories with hot water and dish soap. Do not put air fryer basket in dishwasher. Do not submerge air fryer basket in water when hand washing. Only use a damp cloth with warm soapy water and wipe the glass and interior of the basket. Use soft cloth to dry.

Placement

1. Place your Vortex Plus on a stable, level surface, away from combustible material and external heat sources. Do not place your Vortex Plus on top of another appliance.
2. Make sure to leave at least 13 cm of space above and around all sides of the appliance to allow for sufficient air flow.

Test run

Before using your new Vortex Plus for the first time, you must perform a test run to ensure everything is working correctly.

To perform a test run:

1. Follow the instructions for cooking on page 14.
2. Insert the cooking basket, but do not add food.
3. Select the Air Fry programme.
4. Change the cooking temperature to 205°C / 400°F.
5. Change the cooking time to 18 minutes.
6. Press **Start** and the air fryer starts the test run.
7. When the display shows **Add Food**, just remove and reinsert the cooking basket (do not add any food).
8. When the display shows **Turn Food**, wait 10 seconds for the programme to resume.
9. After the cooking programme ends, allow the unit to cool down.

Now you're ready to cook a meal in your Instant Vortex Plus!

COOKING

The Vortex Plus uses rapid air circulation to crisp or cook food, giving your meals all the rich, crispy flavour of deep frying, with little to no oil.

⚠ WARNING

HOT SURFACES

The air fryer will be hot during and after cooking. Always exercise extreme caution when removing food from the hot cooking chamber. Touching hot surfaces may result in personal injury, and/or property damage.

MUST ALLOW AIR FLOW

To prevent personal injury, do not block air intake or air vents.

What to cook in

The cooking basket with cooking tray is perforated to allow air to flow under and around your food, and should be used for most foods, like wings and cauliflower bites.

For the Baking programme only, you can use a metal baking dish to hold things like batter for cakes and dough for breads. Place the baking dish inside the cooking basket for baking.

You can place food right on the cooking tray, without using foil or other coverings.

Prep

Cut, chop, season, marinate or batter your ingredients according to your recipe.

Preheat

1. Insert the cooking basket into the air fryer. When the basket is inserted securely, the front of the basket is flush with the front of the air fryer.

2. If you want to select a smart programme other than Air Fry, press the button for the programme you want to use.

The default time and temperature are displayed for that smart programme..

3. Press **Temp/Time** and use the Control Dial to adjust the temperature and cooking time.
4. Press **Start** to begin. The display shows **Preheating** to indicate that the cooking programme has started.

See page 10 to adjust Smart Programme settings.

Add food

1. When the air fryer passes the preheating phase, the display shows **Add Food**.

Note: Add Food applies to Air Fry, Roast, Bake and Grill only.

2. Remove the basket. Carefully insert your food into the basket and reinsert it back into the air fryer.
3. Cooking begins and the cooking countdown timer starts.

Turn

1. Part way through the cooking cycle the display shows **Turn Food**.

*If you do not remove the basket after **Turn Food** displays, cooking will proceed after 10 seconds.*

2. Remove the basket and carefully turn, flip, or rotate your food.
3. Insert the basket again. Cooking continues.

Finish

- When the Smart Programme completes, the appliance beeps, and the display shows **End**.

*The "Food-Ready" beep will come up 1 minute later after **End** (10 beeps in 10 minutes total) if the basket/door is not open.*

SMART PROGRAMMES

Air Fry

You can air fry foods like fries, cauliflower bites, wings, nuggets and more.

| Setting | Default | Minimum | Maximum |
|--------------|-----------------------|---------------------|-------------------|
| Temperature | 196°C / 385°F | 82°C / 180°F | 205°C / 400°F |
| Cooking Time | 15 minutes (00:15) | 1 minute (00:01) | 1 hour (01:00) |

To air fry

- Follow the basic instructions for Cooking.
- Select “Air Fry” as the Smart Programme.

Roast

You can roast foods like beef, lamb, pork, poultry, vegetables and scalloped potatoes, for a deliciously tender inside and browned outside.

| Setting | Default | Minimum | Maximum |
|--------------|-----------------------|---------------------|-------------------|
| Temperature | 193°C / 380°F | 82°C / 180°F | 205°C / 400°F |
| Cooking Time | 18 minutes (00:18) | 1 minute (00:01) | 1 hour (01:00) |

To roast

- Follow the basic instructions for Cooking.
- Select “Roast” as the Smart Programme.

Bake

You can bake foods like breads, cakes, pastries and buns, with the Vortex Plus as your own “mini oven”.

| Setting | Default | Minimum | Maximum |
|--------------|-----------------------|---------------------|-------------------|
| Temperature | 185°C / 365°F | 82°C / 180°F | 205°C / 400°F |
| Cooking Time | 30 minutes (00:30) | 1 minute (00:01) | 1 hour (01:00) |

To bake

- Follow the basic instructions for Cooking.
- Select “Bake” as the Smart Programme.
- There is no need to turn the food partway through cooking.

Leave approximately 2.5 cm of space around all sides of the baking dish to allow heat to circulate evenly.

Grill

Grilling uses direct top-down heating, perfect for melting cheese on French onion soup, and nachos.

| Setting | Default | Minimum | Maximum |
|--------------|----------------------|---------------------|-----------------------|
| Temperature | 205°C / 400°F | 177°C / 350°F | 205°C / 400°F |
| Cooking Time | 6 minutes (00:06) | 1 minute (00:01) | 40 minutes (00:40) |

To grill

- Follow the basic instructions in Cooking.
- Select “Grill” as the Smart Programme.
- There is no need to turn the food partway through cooking.

Dehydrate

Dehydrating uses low heat over a long period of time to safely dry out food items, like dried fruit, jerky and dried veggies.

| Setting | Default | Minimum | Maximum |
|--------------|--------------------|-------------------|---------------------|
| Temperature | 54°C / 130°F | 35°C / 95°F | 79°C / 175°F |
| Cooking Time | 8 hours (08:00) | 1 hour (01:00) | 72 hours (72:00) |

To dehydrate

- Follow the basic instructions in Cooking.
- Select “Dehydrate” as the Smart Programme.
- There is no need to turn the food partway through cooking.

Reheat

Bring the crisp and crunch back to leftover fries, pizza and stale bread, in just a few minutes.

| Setting | Default | Minimum | Maximum |
|--------------|-----------------------|---------------------|-------------------|
| Temperature | 138°C / 280°F | 49°C / 120°F | 182°C / 360°F |
| Cooking Time | 10 minutes (00:10) | 1 minute (00:01) | 1 hour (01:00) |

To reheat

- Follow the basic instructions for Cooking.
- Select “Reheat” as the Smart Programme.

Once this Smart Cooking function starts, the display will show the target temperature and cooking time immediately, there's no preheating time.

CLEANING

Clean your Instant Vortex Plus after each use. Always unplug the unit and let all parts cool to room temperature before cleaning. Before use or storing, make sure all surfaces are dry.

⚠ WARNING

To prevent electric shock, unplug before cleaning.

DO NOT immerse power cord, plug or the appliance in water or other liquid, which may result in electric shock.

| Part | Cleaning instructions |
|----------------------------|---|
| Cooking tray | <ul style="list-style-type: none">• Dishwasher safe. *• The cooking trays have a non-stick coating. Avoid using metal utensils when cleaning. |
| Removable air fryer basket | <ul style="list-style-type: none">• Do not put air fryer basket in dishwasher. Do not submerge air fryer basket in water when hand washing. Only use a damp cloth with warm soapy water and wipe the glass and interior of the basket. |
| Cooking chamber | <ul style="list-style-type: none">• Clean with a damp cloth and mild dish soap.• Always check the heating coil and cooking chamber walls for oil spatter and food debris, and clean as needed.• Ensure the heating coil is dry before turning on the air fryer.• To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of baking soda and vinegar and wipe clean with damp cloth. For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean. |
| Power cord | <ul style="list-style-type: none">• Clean with a soft, damp cloth or sponge. Wipe dry. |

**Some discolouration may occur after machine washing, but this will not affect the cooker's safety or performance.*

Replacing Trap & Extract filter

Visit instantpot.com.au to purchase compatible filters, designed to work with your unit.

1. Unplug the Instant Vortex Plus from the electrical outlet.
2. Lift the filter housing up, from the top of the unit.
3. Remove the old filters and dispose of it properly. The filters are not recyclable.
4. Remove two (2) new filters from packaging and insert them into the filter housing.
5. Insert the filter housing back into the unit and plug the cooker back into the electrical outlet.
6. Press the button "Bake" and "Reheat" together to reset the filter. The filter LED on the top panel of the machine will be off. Now you're ready to cook.
7. The Trap & Extract filter will help reduce cooking odours and aerosolised grease while you cook.

TROUBLESHOOTING

| Problem | Cause | Solution |
|--|---|--|
| Air fryer will not turn on | The appliance is not properly plugged in. | <ul style="list-style-type: none"> • Make sure the power cord is plugged into the outlet firmly. |
| | Outlet is not powered. | <ul style="list-style-type: none"> • Plug another appliance into the same outlet to test the circuit. |
| | The oven door is open. | <ul style="list-style-type: none"> • Make sure the door is fully closed. |
| Black smoke is coming from the air fryer | Using an oil with a low smoke point. | <ul style="list-style-type: none"> • Cancel the Smart Programme, unplug the cooker and allow it to cool to room temperature. • Choose a neutral oil with a high smoke point, such as Canola, Avocado, Soybean, Safflower, or Rice Bran. |
| | Food residue on the heating coil, in the cooking chamber or on the accessories. | <ul style="list-style-type: none"> • Cancel the Smart Programme, unplug the cooker and allow it to cool to room temperature. • Remove all accessories from the cooking chamber and clean the cooking chamber and all accessories thoroughly. |
| | Appliance malfunction. | <ul style="list-style-type: none"> • Contact Consumer Care. |
| White smoke is coming from the air fryer | Cooking foods with a high fat content, such as bacon, sausage, and hamburger | <ul style="list-style-type: none"> • Avoid air frying foods with a high fat content. Check the cooking chamber for excess oil and/or fat and carefully remove as needed before air frying. |
| | Water is vaporising, producing thick steam. | <ul style="list-style-type: none"> • Pat dry moist food ingredients before air frying. • Do not add water or other liquid to the cooking chamber when air frying. |
| | Seasoning on food has blown into element | <ul style="list-style-type: none"> • Be mindful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick. |

ERROR CODES

If the control panel displays an error code from this list, there is an issue with the Vortex™ Plus. Here are the actions you should take to fix the problem.

| Problem | Cause | Solution |
|---------|-----------------------------------|--------------------------|
| E1 | Open circuit. | • Contact Consumer Care. |
| E2 | Temperature sensor short circuit. | • Contact Consumer Care. |

LEARN MORE

There's a whole world of Instant™ Vortex™ Plus information and help just waiting for you. Here are some of the most helpful resources.

Download this manual online

instantpot.com.au

Register your product

instantpot.com.au/support/register

Contact Consumer Care

instantpot.com.au

support@instantpot.com.au

1800 251 643 or 02 9317 1000

Download the Instant Brands Connect app

- 1500+ Recipes
- New User Tips
- Getting Started Videos



Join the community



Get started online with your new product!



Product specifications

| Model | Volume | Wattage | Power | Weight | Dimensions |
|-----------|------------|------------|----------------------|----------|-----------------------------|
| AFB6112SS | 5.7 Litres | 1450-1700W | 220-240V~ 50-60Hz | 5.95 kg. | cm: 39.2 D x 30 W x 33 H |

WARRANTY

Limited Warranty

This Limited Warranty is issued by Instant Brands (Australia) Pty Ltd (Instant Brands Australia) and is effective for one year from the date of original consumer purchase. Proof of original purchase date and return of your appliance is required to obtain service under this Limited. Return of your appliance to us will be done in accordance with our instructions only. Provided that this appliance is operated and maintained in accordance with written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantpot.com.au, Instant Brands Australia will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

We remind you the appliance you purchased is for personal use only (not commercial use).

Any modification/alteration or attempted modification/alteration to your appliance will void this Limited Warranty, unless such modification/alteration or attempted modification/alteration was expressly authorised by an Instant Brands Australia Representative in writing.

This Limited Warranty only covers Instant Brands Australia's appliances/products and is not extended to any other appliances, products, equipment, components, or devices that you use or may use in conjunction with the Instant Brands Australia's appliances.

To claim under this Limited Warranty:

1. Contact Instant Brands Australia at:
Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria, NSW 2015
Email: sales.australia@instantbrands.com
2. Provide a description of the appliance you believe has malfunctioned due to defective parts or workmanship.
3. If it is necessary for the appliance to be sent to Instant Brands Australia for repair or replacement, Instant Brands Australia will send you a pre-paid shipping label and you must send the appliance and your dated sales receipt to Instant Brands Australia along with the appliance. If you do not have your dated sales receipt, please advise Instant Brands Australia in advance, and Instant Brands Australia will attempt to verify your purchase.
4. If Instant Brands Australia determines that the appliance has malfunctioned due to defective parts or workmanship, and is covered under this Limited Warranty, Instant Brands Australia will repair and return the appliance, or send you a replacement appliance, at Instant Brands Australia's cost.
5. Any repaired or replaced appliance will be covered by this Limited Warranty for the remainder of the original warranty period or ninety (90) days following your receipt of the replacement or repaired appliance, whichever is greater.
6. If Instant Brands Australia confirms the appliance has not malfunctioned due to defective parts or workmanship, and/or is in working order, or if proof of purchase is not verified, Instant Brands Australia reserves the right to return the appliance to you at your pre-paid cost. If this cost is not met, Instant Brands Australia reserves the right to dispose of the appliance after 45 days' notice to you.

WARRANTY

Limitation and Exclusions

To the maximum extent permitted by law, the maximum liability of Instant Brands Australia, if any, for any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance or part of the same age.

This Limited Warranty does not cover:

1. Damage resulting from accident, modification/alteration (unless expressly authorised by an Instant Brands Australia Representative in writing), misuse, abuse, neglect, unreasonable use, use contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantpot.com.au, normal wear and tear, commercial use, improper assembly by you or anyone, disassembly by you or anyone, repair by you or anyone, failure to provide reasonable and necessary maintenance, force majeure event including but not limited to fire, flood, acts of God;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to the written operating instructions attached to or furnished with the appliance or published operating instructions on www.instantpot.com.au; or
3. Use of unauthorised parts and accessories, or repairs to parts and systems resulting from unauthorised repairs or modifications/alterations made to your appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by Instant Brands (Australia) Pty Ltd.
Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria, NSW 2015.
1800 251 643 or (02) 9317 1000.
Email: sales.australia@instantbrands.com

©2022 Instant Brands (Australia) Pty Ltd.

Sydney Corporate Park
Level 1, 182-184 Bourke Road, Alexandria,
NSW 2015, Australia.

instantpot.com.au

© 2022 Instant Brands LLC.