



# Digital airfryer 7L



BRUGERMANUAL  
CS-0237  
CS-1470

Casper  
Sobczyk

DANSK ..... SIDE 4  
ENGLISH ..... PAGE 10

DA

## 7 LITER DIGITAL AIR FRYER



Denne manual indeholder instruktioner til alle airfryerens funktioner og instruktioner til montering, betjening, rengøring og vedligeholdelse af enheden. Gem denne manual til fremtidig brug.

### VIGTIG INFORMATION

Læs alle instruktioner, før du bruger det enheden. Følgende grundlæggende forholdsregler skal altid følges:

1. Denne enhed er ikke beregnet til brug af børn eller personer med nedsatte fysiske, sensoriske eller mentale evner eller mangel på erfaring og viden, medmindre de er under opsyn.
2. Tæt opsyn er nødvendigt, når enheden bruges i nærheden af børn. Børn skal være under opsyn for at sikre, at de ikke leger med enheden. Rengøring og brugervedligeholdelse må ikke udføres af børn, medmindre de er under opsyn.
3. Kontroller, om den spænding, der er angivet på enheden, svarer til den lokale netspænding, før du tilslutter enheden.
4. Brug ikke enheden, hvis stikket, ledningen eller selve enheden er beskadiget. Sørg altid for, at stikket er sat korrekt i en stikkontakt.
5. Betjen ikke enheden med en beskadiget ledning eller stik, efter at enheden ikke fungerer, eller hvis enheden er blevet beskadiget på nogen måde. Returner enheden til det nærmeste autoriserede serviceværksted til undersøgelse, reparation eller justering.
6. Lad ikke ledningen hænge ud over kanten af bordet eller bordet, og lad den heller ikke røre varme overflader.
7. For at beskytte mod elektrisk stød må ledning, stik eller enheden ikke nedsænkes i vand eller anden væske.
8. Sæt ikke stikket i stikkontakten, og betjen ikke kontrolpanelet med våde hænder.
9. Forbind aldrig enheden til en ekstern timerkontakt eller separat fjernbetjeningsystem for at undgå en farlig situation. For at afbryde skal du slukke for enheden og derefter tage stikket ud af stikkontakten.

10. Anbring ikke enheden på eller i nærheden af brændbare materialer såsom en dug eller gardin. De tilgængelige overflader kan blive varme under brug. Må ikke placeres på eller i nærheden af en varm gas- eller elektrisk brænder eller i en opvarmet ovn.
11. Anbring ikke enheden mod en væg eller mod andre elektriske enheder. Efterlad mindst 10 cm fri plads på bagsiden og siderne og 10 cm fri plads over enheden. Anbring ikke noget oven på enheden.
12. Brug ikke enheden til andre formål end beskrevet i denne vejledning. Brug af tilbehør, der ikke er anbefalet af enhedens producent, kan forårsage skader.
13. Efterlad ikke enheden uden opsyn, når det er tilsluttet.
14. Der skal udvises ekstrem forsigtighed ved flytning af enheden, der indeholder varm olie eller andre varme væsker.
15. Rør ikke ved de varme overflader; brug håndtaget. Under luftstegning frigives varm damp gennem luftudløbsåbningerne. Hold dine hænder og ansigt på sikker afstand fra dampen og fra luftudtagsåbningerne. Pas også på varm damp og luft, når du fjerner kurven fra enheden.
16. Efter brug af enheden, undgå kontakt med det varme metal indeni. Træk stikket ud af stikkontakten, når det ikke er i brug, og før rengøring. Lad enheden køle af før rengøring.
17. Tag straks stikket ud af stikkontakten, hvis du ser mørk røg komme fra enheden. Vent på, at røgudslippet stopper, før du fjerner kurven fra enheden.
18. Må ikke bruges udendørs.
19. Kun til husholdningsbrug.

**SIKKERHED TIL LEDNING OG STIK**

- En kort strømforsyningsledning medfølger for at reducere risikoen for at blive viklet ind i eller snuble over en længere ledning.
- Forlængerledninger kan bruges, hvis der udvises omhu i deres brug.
- Hvis der bruges en forlængerledning
  - a. Forlængerledningens mærkede elektriske mærkning skal mindst svare til apparatets elektriske mærkning; og
  - b. Den længste ledning skal placeres, så den ikke falder over bordpladen eller bordpladen, hvor den kan trækkes i af børn eller snuble over.

Power:

220-240V~ 50/60Hz 1800W

**KEND DIN AIR FRYER**

Display / Control Panel



DA



Crisper Tray


Place the *crisper tray* into the *basket*.



Basket



## DISPLAY OG KONTROL PANEL

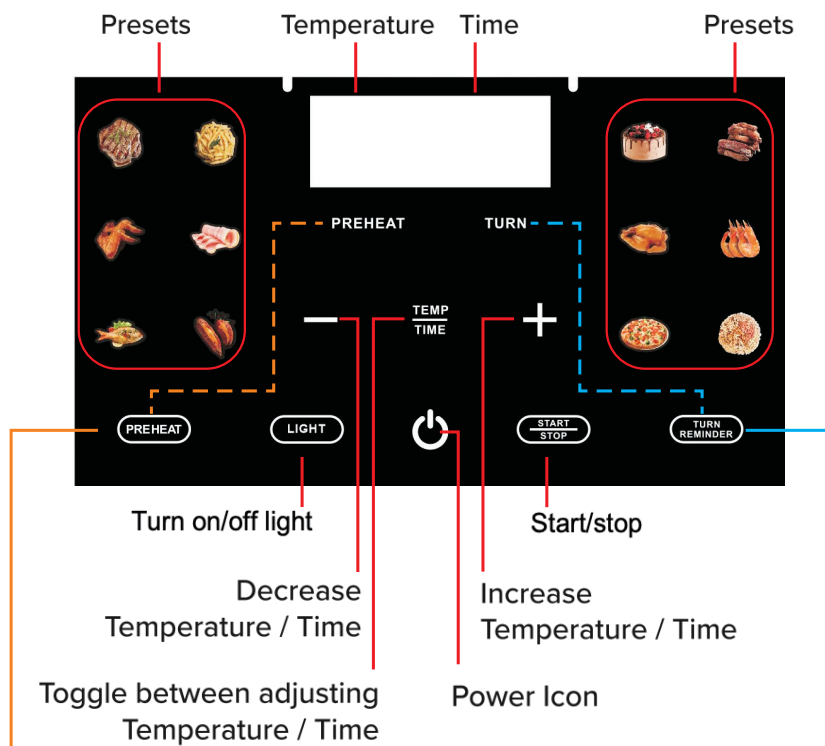

## FORVARM

Når dette er aktiveret, vil airfryeren forvarme og sige til, når maden kan tilføjes.

Tryk for "Preheat" for at aktivere eller deaktivere forvarmning, før du trykker på start. Når forvarmningen er aktiveret, vises "preheat" i rødt på displayet.

## PÅMINDELSE

Når dette er aktiveret, vil air fryeren komme med en påmindelse når maden skal vendes. Tryk på "turn reminder" for at aktivere eller deaktivere dette, før du trykker på start. Når "turn reminder" er aktiveret, vises "turn" i rødt på displayet.

## PRESETS CHART


	TEMPERATURE		TIME		PREHEAT		TURN REMINDER	
	DEFAULT	RANGE	DEFAULT	RANGE	DEFAULT	TOGGLE	DEFAULT	TOGGLE
 Bøf	176C	76-200C	25min	1-60 min	off	✓	on	✓
 Pommes frites	200C	76-200C	18min	1-60 min	on	✓	on	✓
 Kyllingevinger	200C	76-200C	25min	1-60 min	on	✓	off	✓
 Bacon	200C	76-200C	12min	1-60 min	on	✓	off	✓
 Fisk	180C	76-200C	10min	1-60 min	off	✓	off	✓
 Sedkartofler	180C	76-200C	30min	1-60 min	on	✓	on	✓
 Kage	150C	76-200C	25min	1min-2h	on	✓	on	✓
 Kød	200C	76-200C	25min	1-60 min	off	n/a	off	n/a
 Hel kylling	190C	76-200C	30min	1-60 min	off	n/a	off	✓
 Rejer	180C	76-200C	10min	1-60min	off	n/a	off	n/a
 Pizza	180C	76-200C	15min	1-60 min	off	n/a	off	n/a
 Nødder	200C	76-200C	15min	1-60 min	on	✓	off	✓

**FØR FØRSTE BRUG**

1. Fjern alt emballagemateriale, klistermærker eller etiketter.
2. Rengør kurven og kogeboardet med varmt vand, lidt opvaskemiddel og en ikke-slibende svamp. Disse dele er sikre at til at komme i opvaskemaskinen.
3. Tør indersiden og ydersiden af apparatet af med en karklud.

**ADVARSEL**

- Anbring ikke enheden mod en væg eller mod andre enheder. Efterlad mindst 10 cm fri plads på bagsiden og siderne og 10 cm fri plads over enheden.
- Anbring ikke noget oven på enheden.
- Fyld ikke kurven med olie, stegefedt eller anden væske - dette apparat fungerer ved at cirkulere varm luft.
- Når du sprøjter mad til en sprødere finish, anbefaler vi at bruge almindelig madolie i stedet for madlavningsspray, da dette kan beskadige nonstick-belægningen.

**Oil Mister / Spray Bottle****Cooking Spray**

DA

### BRUG AF DIN AIRFRYER

- Placer airfryeren på en stabil, jævn og varmebestandig overflade.
- Placer crispere-bakken i kurven og skub den ind i airfryeren.
- Sæt airfryeren i en stikkontakt.
- Tryk på strømkonket for at tænde for airfryeren.



- Tryk på den ønskede forudindstilling.



Displayet viser den forudindstillede temperatur og tid.

- Tryk på TEMP / TIME for at justere temperatur / tid. Tryk på + og - ikonerne for at øge og sænk temperatur/tid.



- Tryk på PREHEAT og TURN REMINDER for at aktivere eller deaktivere disse indstillinger. Disse vil lyse med rød, når det er aktiveret.



### HVIS FORVARMNING ER AKTIVERET

- Tryk på start

Displayet viser PrE xeat (Preheat), og airfryeren begynder at forvarme. Når den er forvarmet, bipper frituregryden, og displayet viser Tilføj mad (Tilføj mad).

**ADVARSEL:** Kurven bliver varm! Rør ikke ved varme overflader.

- Fjern forsigtigt kurven, læg mad indeni, og sæt den tilbage i airfryeren for automatisk at begynde tilberedningen.

**BEMÆRK:** Hvis kurven ikke fjernes, begynder tilberedningstiden.

### HVIS FORVARMNING ER DEAKTIVERET

- Fjern kurven, læg mad i, og sæt den tilbage i airfryeren.
- Tryk på start.



### HVIS "TURN REMINDER" ER AKTIVERET

- Halvvejs i tilberedningstiden bipper frituregryden, og displayet viser turn Food
- Fjern forsigtigt kurven og læg den på en varmebestandig overflade.

## DA

- Vend eller smid maden med en ikke-metal tang.
- Sæt kurven tilbage i airfryeren for automatisk at genoptage tilberedningen.

### ADVARSEL:

Vær altid forsigtig, når du fjerner kurven under/efter tilberedning - varm damp kan slippe ud!

ADVARSEL: Kurven og maden vil være varme! Rør ikke ved varme overflader.

Brug ikke skarpe eller metalredskaber, som kan ridse nonstick-overfladen.

Vend ikke kurven på hovedet, da overskydende olie, der har samlet sig på bunden af kurven, vil lække ud på maden.

### STOP / ANNULER TILBEREDNING



Tryk på LIGHT for at tænde lyset inden og tryk igen for at slukke lyset igen. Tryk på START/STOP at stoppe tilberedningen. Tryk igen for at genoptage tilberedningen.

### SLUK AIRFRYEREN



### RENGØRING OG VEDLIGEHOLDELSE

- Put ikke airfryeren i vand eller skyl airfryeren under vand på grund af det elektriske og varmekomponenter.
- Rengør airfryeren hver gang den er blevet brugt.
- Tag stikket ud af stikkontakten for at få enheden til at køle af.
- Påfør et ikke-slibende rensmiddel på en klud og tør det udvendige af.

- Påfør en mild flydende sæbe på en fugtig klud og tør det indre af. Fjern eventuelle rester med en fugtig klud.

**OPBEVARING**

Opbevares på et tørt sted.

**MILJØ**

Smid ikke enheden ud sammen med det almindelige husholdningsaffald, når det er brugt, men aflever det på officielt indsamlingssted til genbrug. Ved at gøre dette bidrager du til miljøbeskyttelse.

## AIRFRYEREN VIRKER IKKE

Problem	Mulig årsag	Løsning
Airfryeren virker ikke.	Airfryeren er ikke tilsluttet.  Timeren er ikke sat i gang	Sæt stikket i en jordet stikkontakt.  Sæt timeren i gang til den ønskede tid for at tænde for airfryeren.
Ingredienserne er ikke færdige når airfryeren stopper.	Der er fyldt for meget i airfryeren.  Temperaturen er sat for lav.	Put mindre portioner i airfryeren. Når portionerne er mindre, bliver varmen fordelt bedre.  Sæt temperaturen højere. Se afsnittet for temperaturjusteringer.
Ingredienserne steges ujævnt i airfryeren.	Nogle ingredienser skal rystes halvvejs.	Ingredienser der ligger ovenpå hinanden eller på tværs af hinanden, skal rystes halvvejs i tilberedningstiden.
Stegte snacks er ikke sprøde når de kommer ud af airfryeren.	Den valgte type snacks, skal tilberedes i en traditionel frituregryde.	Brug snacks der er beregnet til at komme i ovnen eller pensel lidt olie på for at snackene bliver mere sprøde.
Jeg kan ikke skubbe gryden korrekt ind i airfryeren.	Der er for mange ingredienser i gryden.  Kurven er ikke placeres korrekt i gryden.	Fyld ikke kurven over MAX-angivelsen.  Skub kurven ned i gryden, indtil du der kommer en kliklyd.
Der kommer røg ud af airfryeren.	Du forbereder fedtede ingredienser.  Airfryeren indeholder stadig fedtrest fra tidligere brug.	Når du tilbereder fedtede ingredienser i airfryeren, vil der være en stor mængde olie i bunden.  Røg skyldes, at fedtet opvarmes i airfryeren. Sørg for at rengøre airfryeren ordentligt efter hver brug.
Friske pomfritter steges ujævnt i airfryeren.	Der er ikke brugt en af de rigtige kartoffeltyper.  Kartoflerne er ikke skyllet ordentligt før de kom i airfryeren.	Brug friske kartofler og sørg for, at de holder sig faste under stegningen.  Skyl kartoflerne ordentligt for at fjerne stivelse fra kartoflerne.
Pomfritterne er ikke sprøde efter de har været i airfryeren.	Pomfritternes/kartoflernes sprødhed afhænger af mængden af olie og vand i pomfritterne.	Sørg for at tørre pomfritterne/kartoflerne ordentligt, inden du tilsætter olien.  Skær pomfritterne/kartoflerne mindre for et sprødere resultat. Tilsæt lidt mere olie for et sprødere resultat.

## SORTERINGSVEJLEDNING:

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt.

Produkter, der er mærket med "overkrydsede skraldespand", er elektrisk og elektronisk udstyr.

Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må



bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning

EN

# 7L DIGITAL AIR FRYER



USER MANUAL

**MADE IN CHINA**

**IMPORTANT  
RETAIN FOR FUTURE REFERENCE:  
READ CAREFULLY**

# IMPORTANT SAFEGUARDS

**Read all instructions before using the electric appliance.** The following basic precautions should always be followed:

1. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have supervision.
2. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are supervised.
3. Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.
4. **Do not** use the appliance if the plug, the main cord or the appliance itself is damaged. **Always** make sure that the plug is inserted properly into a wall outlet.
5. **Do not** operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. **Do not** let the cord hang over the edge of the table or counter, nor let it touch hot surfaces.
7. To protect against electric shock, **do not** immerse cord, plugs, or appliance in water or other liquid.
8. **Do not** plug in the appliance or operate the control panel with wet hands.
9. **Never** connect this appliance to an external timer switch or separate remote-control system in order to avoid a hazardous situation. To disconnect, turn off the appliance, then remove the plug from wall outlet.
10. **Do not** place the appliance on or near combustible materials such as tablecloth or curtain. The accessible surfaces may become hot during use. **Do not** place on or near a hot gas or electric burner, or in a heated oven.
11. **Do not** place the appliance against a wall or against other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance. **Do not** place anything on top of the appliance.
12. **Do not** use the appliance for any other purpose than described in this manual. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
13. **Do not** leave the appliance unattended when plugged in.
14. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
15. **Do not** touch the hot surfaces; use the handle. During air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the

basket from the appliance.

- 16.** After using the appliance, avoid contact with the hot metal inside. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before cleaning.
- 17.** Immediately unplug the appliance if you see dark smoke coming from

the appliance. Wait for the smoke emission to stop before you remove the basket from the appliance.

- 18.** Do not use outdoors.
- 19.** For household use only.

### CORD AND PLUG SAFETY

- A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use.
- If an extension cord is used:
  - a. The marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance; and
  - b. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Power:	220-240V~ 50/60Hz 1800W
--------	-------------------------

## KNOW YOUR AIR FRYER

### Display / Control Panel



— Crisper Tray


Place the *crisper tray* into the *basket*.



— Basket

# KNOW YOUR AIR FRYER

## DISPLAY AND CONTROL PANEL

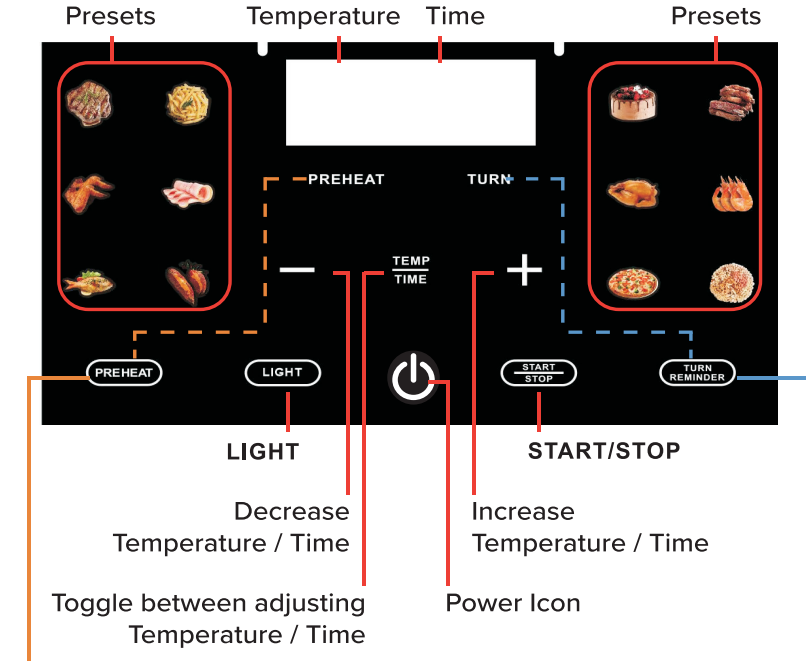

### PREHEAT

When enabled, air fryer will preheat and prompt you when to add food.

Tap **PREHEAT** to enable or disable preheating before tapping **START**.

When preheating is enabled, **PREHEAT** appears in red on the *display*.

### TURN REMINDER

When enabled, air fryer will prompt you to turn food halfway through cook time.

Tap **TURN REMINDER** to enable or disable *turn reminder* before tapping **START**.

When *turn reminder* is enabled, **TURN** appears in red on the *display*.

See the chart on page 11 for *presets* that have *preheat* and *turn reminder* on by default and those that have the option to toggle the settings on and off.

## DISPLAY, °C, & SOUND

Below are **display** indicators and notifications for **guided cooking prompts**.

### PREHEAT

Preheat is enabled.

PRE HEAT

The air fryer is preheating.

### TURN

Turn Reminder is enabled.

Add Food

The air fryer is preheated.

Turn Food

Reminder to turn or toss food.

End

The cook time has elapsed.

### TOGGLE °C

To toggle between displaying temperature in *Fahrenheit* and *Celsius*, press and hold **TEMP / TIME**.

**NOTE:** The air fryer will still beep for *guided cooking prompts*.

## PRESETS CHART

	TEMPERATURE		TIME		PREHEAT		TURN REMINDER	
	DEFAULT	RANGE	DEFAULT	RANGE	DEFAULT	TOGGLE	DEFAULT	TOGGLE
 Steak	176C	76-200C	25min	1-60 min	off	✓	on	✓
 Pommes frites	200C	76-200C	18min	1-60 min	on	✓	on	✓
 Chicken wings	200C	76-200C	25min	1-60 min	on	✓	off	✓
 Bacon	200C	76-200C	12min	1-60 min	on	✓	off	✓
 Fish	180C	76-200C	10min	1-60 min	off	✓	off	✓
 Sweet potato	180C	76-200C	30min	1-60 min	on	✓	on	✓
 Cake	150C	76-200C	25min	1min-2h	on	✓	on	✓
 meat	200C	76-200C	25min	1-60 min	off	n/a	off	n/a
 Chicken	190C	76-200C	30min	1-60 min	off	n/a	off	✓
 shrimp	180C	76-200C	10min	1-60min	off	n/a	off	n/a
 Pizza	180C	76-200C	15min	1-60 min	off	n/a	off	n/a
 nut	200C	76-200C	15min	1-60 min	on	✓	off	✓

**NOTE:** A check mark indicates *preheat* and *turn reminder* can be enabled or disabled by tapping **PREHEAT** / **TURN REMINDER** before tapping **START**.



## BEFORE FIRST USE

1. Remove all packaging stickers and labels from the air fryer, including the tape securing the **basket** to the unit.
2. To pull out the **basket** for cleaning, remove the tape securing it into place. Secure the unit with one hand and pull the handle straight back with the other hand.
3. Thoroughly clean the **basket** and **crisper tray** with hot water, dishwashing liquid, and a non-abrasive sponge.
4. Wipe the inside chamber and outside of the air fryer with a moist cloth.

**NOTE:** During the first few uses, there might be a “hot plastic” smell. This is perfectly normal in new air fryers as the material is heated for the first time. It will go away after the first few uses.

### WARNING:

**Do not** put anything on top of the air fryer.

**Do not** place the air fryer against a wall or against other appliances. It is important to leave at least 4 inches of free space around the back and sides, and 4 inches of free space above the air fryer to allow for proper ventilation.

**Do not** fill the **basket** with oil, frying fat, or any other liquid - this appliance works by circulating hot air.

When spraying food for a crispier finish, we recommend using regular cooking oil instead of cooking spray, as this may damage the nonstick coating.

#### Recommended



Oil Mister / Spray Bottle

#### Not Recommended




Cooking Spray

## USING YOUR AIR FRYER

1. Place the air fryer on a stable, level and heat-resistant surface.
2. Place the *crisper tray* into the *basket* and slide it into the air fryer.
3. Plug the air fryer into an outlet.
4. Tap the *power icon* to turn the air fryer on.



5. Tap the desired *preset*.

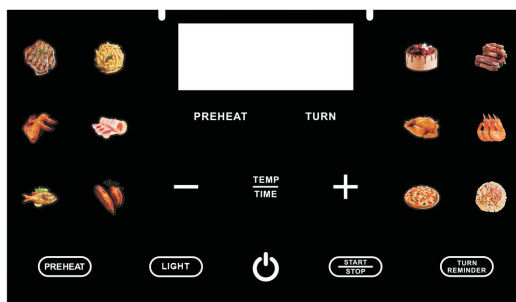

The *display* will show the *preset* temperature and time.

6. Tap **TEMP / TIME** to adjust temperature / time. Tap + and - icons to increase and decrease temperature / time.



7. Tap **PREHEAT / TURN REMINDER** to enable or disable these settings.

**PREHEAT / TURN** appear in red on the display when enabled.

*Preheat* and *turn reminder* are on by default for recommended presets.



## USING YOUR AIR FRYER

### 8. IF PREHEAT IS ENABLED

- a. Tap **START**.

The *display* will show **PRE HEAT** (Preheat) and the air fryer will begin preheating. Once preheated, the air fryer will beep and the *display* will show **Add Food** (Add Food).

**WARNING:** The *basket* will be hot! **Do not** touch hot surfaces.

- b. Remove the *basket* carefully, place food inside, and return it to the air fryer to automatically begin cooking.

**NOTE:** If the *basket* is not removed, the cook time will begin.

### 8. IF PREHEAT IS DISABLED

- a. Remove the *basket*, place food inside, and return it to the air fryer.
- b. Tap **START**.



### IF TURN REMINDER IS ENABLED

- a. Halfway through the cook time, the air fryer will beep and the *display* will show **TURN Food** (Turn Food).
- b. Remove the *basket* carefully and place it on a heat-resistant surface.
- c. Turn or toss the food using non-metal tongs.
- d. Return the *basket* to the air fryer to automatically resume cooking.

**NOTE:** If the *basket* is not removed, cooking will continue.

## USING YOUR AIR FRYER

When your selected cook time has elapsed, the air fryer will beep and the *display* will show **End** (End).

9. Remove the **basket** carefully and place it on a heat-resistant surface.
10. Remove food from the **basket** using non-metal tongs.

### CAUTION:

**Always** use caution when removing the **basket** during / after cooking - hot steam may escape!

**WARNING:** The **basket** and food will be hot! **Do not** touch hot surfaces.

**Do not** use sharp or metal utensils which can scratch the nonstick surface.

**Do not** turn the **basket** upside down, as any excess oil that has collected on the bottom of the **basket** will leak onto the food.

### LIGHT START / STOP COOKING

Tap **LIGHT** to turn on the light inside, and tap again to turn off the light. Tap **START/STOP** to stop cooking, and tap again to resume cooking.

Removing the **basket** from the air fryer during cooking will stop cooking. Returning the **basket** to the air fryer will automatically resume cooking.



### TURN OFF AIR FRYER

Press and hold the **power icon** to turn off the air fryer. Unplug the air fryer from the outlet when not in use.



## COOKING TIPS

- Air fryers perform similar to ovens; follow oven instructions on item packaging or recipe.
- Snacks that can be prepared in an oven can also be prepared in the air fryer.
- Smaller ingredients usually require a slightly shorter cook time than larger ingredients.
- Preheating the air fryer before adding food will generally deliver the best results (see **PREHEAT** on page 9).
- When cooking multiple batches in a row, only preheat before the first batch.
- Turning or tossing food halfway through cook time will deliver evenly browned and crispy results (see **TURN REMINDER** on page 9).
- Toss fresh potatoes with 1 tablespoon of oil for a crispy exterior. Air fry the ingredients within a few minutes after adding the oil.
- **Do not** cook foods that will produce a large amount of grease in the air fryer.
- Place a baking pan or an oven-safe dish or pan in the **basket** to bake a cake or quiche or to air fry fragile or filled ingredients.

## CLEANING & MAINTENANCE

### WARNING:

**NEVER** immerse cord, plug, or air fryer in water or any other liquid.

**Do not** use metal kitchen utensils or abrasive cleaning material to clean the **basket** or **crisper tray**, as this may damage the nonstick coating.

- Clean the air fryer after every use.
- Unplug the air fryer from the outlet before cleaning.
- Let the air fryer cool down completely before cleaning. Remove the **basket** from the air fryer to cool it down quicker.
- Clean the **basket** and **crisper tray** in the dishwasher's top rack only or with hot water, dish soap, and a non-abrasive sponge.
- If residue is stuck to the bottom of the **basket**, fill it with hot water and dish soap and let it soak.
- Wipe the outside of the air fryer with a moist cloth.
- Clean the inside of the air fryer with hot water, dish soap and a cleaning brush to remove any food residue.
- Ensure the air fryer is completely dry before using.

### STORAGE

- Unplug the appliance and let it cool down.
- Make sure all parts are clean and dry.
- Store the appliance in a clean and dry place.

### ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The air fryer does not work.	The air fryer is not plugged in.	Plug the main plug into a grounded wall socket.
	The timer has not been set.	Tap <b>+</b> and <b>-</b> icons to set the required cook time to turn on the air fryer.
	The <b>basket</b> is not put into the air fryer properly.	Slide the <b>basket</b> into the air fryer properly.
The <b>basket</b> does not fit inside the air fryer.	The <b>basket</b> is overfilled.	Do not fill the <b>basket</b> beyond max line.
The ingredients did not cook.	There are too many ingredients in the <b>basket</b> .	Put smaller batches of ingredients in the <b>basket</b> . Smaller batches are fried more evenly.
	The set temperature is too low.	Tap <b>+</b> and <b>-</b> icons to set the required temperature setting.
	The cook time is too short.	Tap <b>+</b> and <b>-</b> icons to set the required cook time.
The ingredients are fried unevenly.	Certain types of ingredients need to be shaken halfway through the cook time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the cook time (see <b>TURN REMINDER</b> on page 9).
Fried snacks are not crispy.	You used a type of snack meant to be cooked in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
White smoke comes out of the air fryer.	You are preparing greasy ingredients.	When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the <b>basket</b> . The oil produces white smoke and the <b>basket</b> may heat up more than usual. This does not affect the air fryer or the end result.
	The <b>basket</b> still contains grease residue from previous use.	White smoke is caused by grease heating up in the <b>basket</b> . Make sure you clean the <b>basket</b> properly after each use.
Fresh fries are fried unevenly.	Quality potatoes will give an even cook.	Use fresh potatoes and make sure they stay firm during frying.
	Potatoes are too starchy.	Rinse the potato sticks properly and dry to remove starch from the outside of the sticks.
Fresh fries are not crispy.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil. Cut the potato sticks smaller for a crispier result. Add slightly more oil for a crispier result.

## WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase and requires proof of purchase from an authorized seller. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at our discretion. In the event that repair isn't possible, we will replace the product/part. If product repair/replacement won't suffice, we have the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. We are not liable for any incidental or consequential damages incurred by such circumstances.

## Get cooking with us







# Digital airfryer 7L



BRUGERMANUAL  
CS-0237  
CS-1470