



GEMINI
OWNER'S MANUAL

IMPORTANT

Please read this manual thoroughly before using.

Your warranty does NOT cover damage due to misuse.

QUICK FAQs

Can I leave the chronograph function continuously running?

Doing so will cause premature wear and tear. We recommend using the chronograph function only when necessary.

Can I use the chronograph to time physical activities?

It is NOT advisable to use the chronograph function while the wearer is in motion. Mechanical chronographs were designed to be used while in stationary positions: e.g. in the cockpit of an automobile, aircraft or spacecraft, or on the sideline of a track.

Can I swim with this watch?

Your Gemini is tested for water resistance up to 50m/165ft. HOWEVER, while submerged, the pushers/buttons must NOT be touched, and the crown must stay pushed in. Seals and gaskets must also be checked every 5 years and replaced as necessary.

GENERAL CARE INSTRUCTIONS

* Always have the crown fully secured before submerging into water.

* Do **NOT** attempt to open caseback without prior approval from Lorier, as this will void your warranty.

* Do **NOT** use alcohol to clean your watch. Warm water will suffice.


* Scratches on the crystal can be buffed out using a soft cloth and a polishing compound such as Polywatch (not included). In a pinch, toothpaste will do as well.

* Scratches on the **brushed surfaces** of the case can be removed with a green 3M Scotchbrite pad (not included). Brush gently in one direction until the scratch is removed.

* Scratches on the **polished surfaces** of the case can be removed with a Cape Cod cloth (not included). Use caution NOT to make contact with brushed surfaces.

* Thoroughly rinse in fresh water after submerging in salt water.

WINDING/SETTING THE TIME

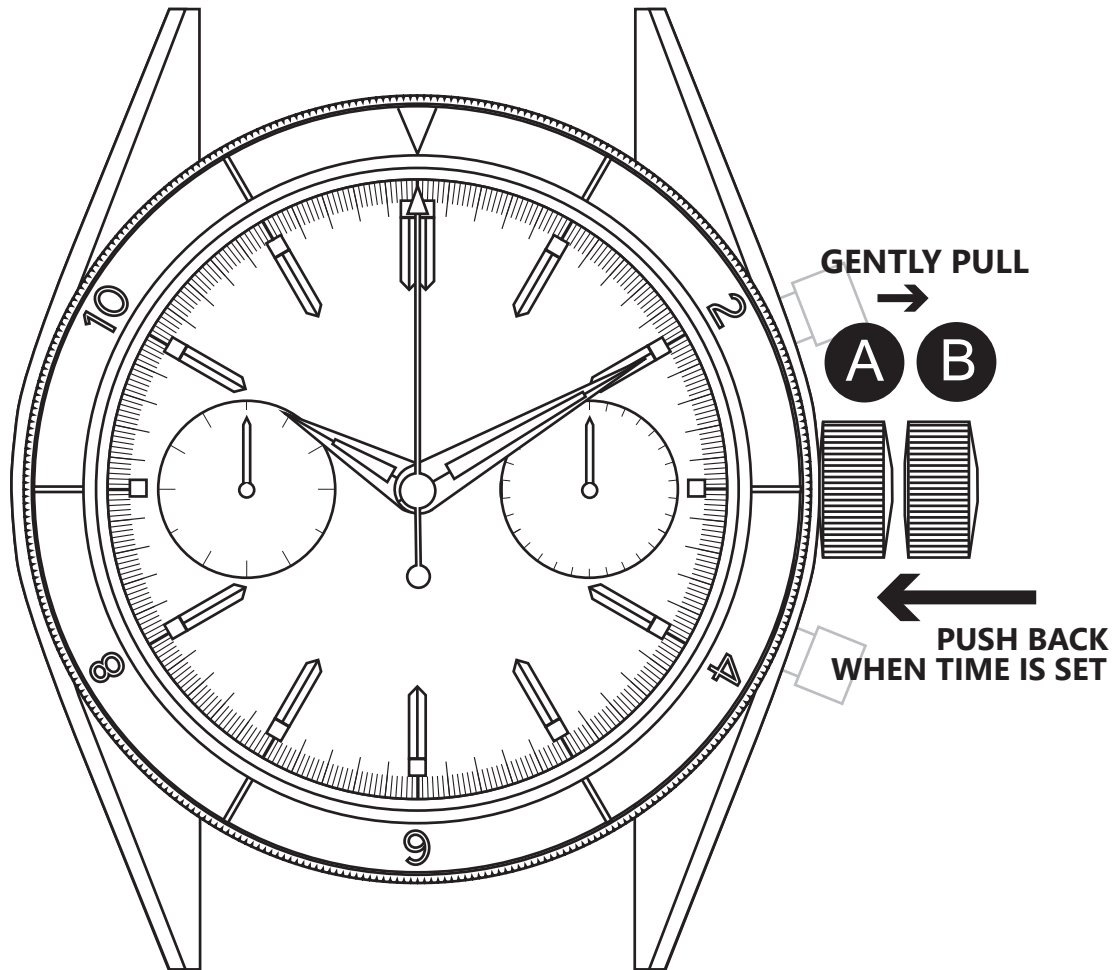

A

WINDING POSITION

Wind the movement by turning the crown clockwise until you feel a clear stopping point. This means the watch is fully wound. The movement's power reserve is 40 hours, but we recommend winding the watch every day it is worn for optimal timekeeping.

CAUTION


NEVER force turning the crown, as it will break the movement.

B

TIME SET POSITION

Set the time by gently pulling the crown to position B and turning clockwise. Push back once time is set.

OPERATING THE CHRONOGRAPH

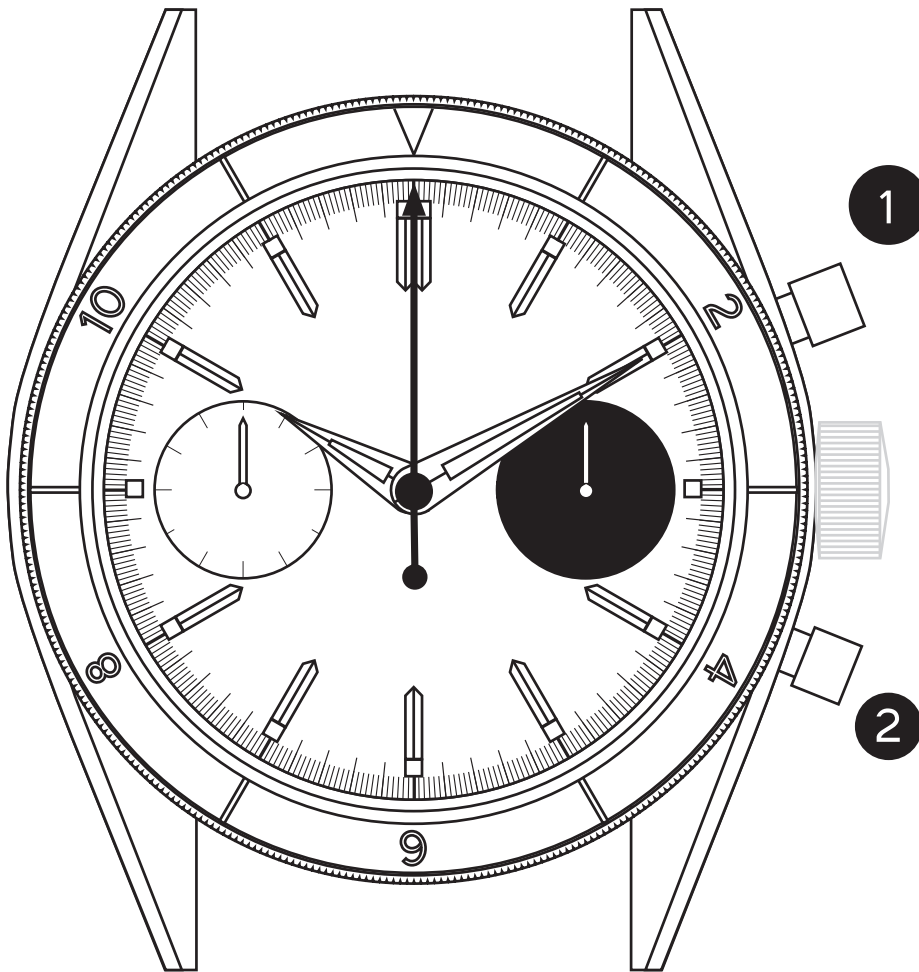

1

CHRONOGRAPH START/STOP BUTTON

Press to engage the chronograph function. **The chronograph running hand** will start. The **minutes subdial** will track minutes elapsed. Press again to stop/pause the chronograph function.

2


CHRONOGRAPH RESET BUTTON

Press to reset the chronograph function. The chronograph running hand and minutes subdial hand will return to their original positions.

CAUTION

The chronograph function **MUST BE STOPPED BEFORE** it is reset. Do **NOT** press the reset button while the chronograph is running.


OPERATING THE BEZEL (TRACKING HOURS ELAPSED)

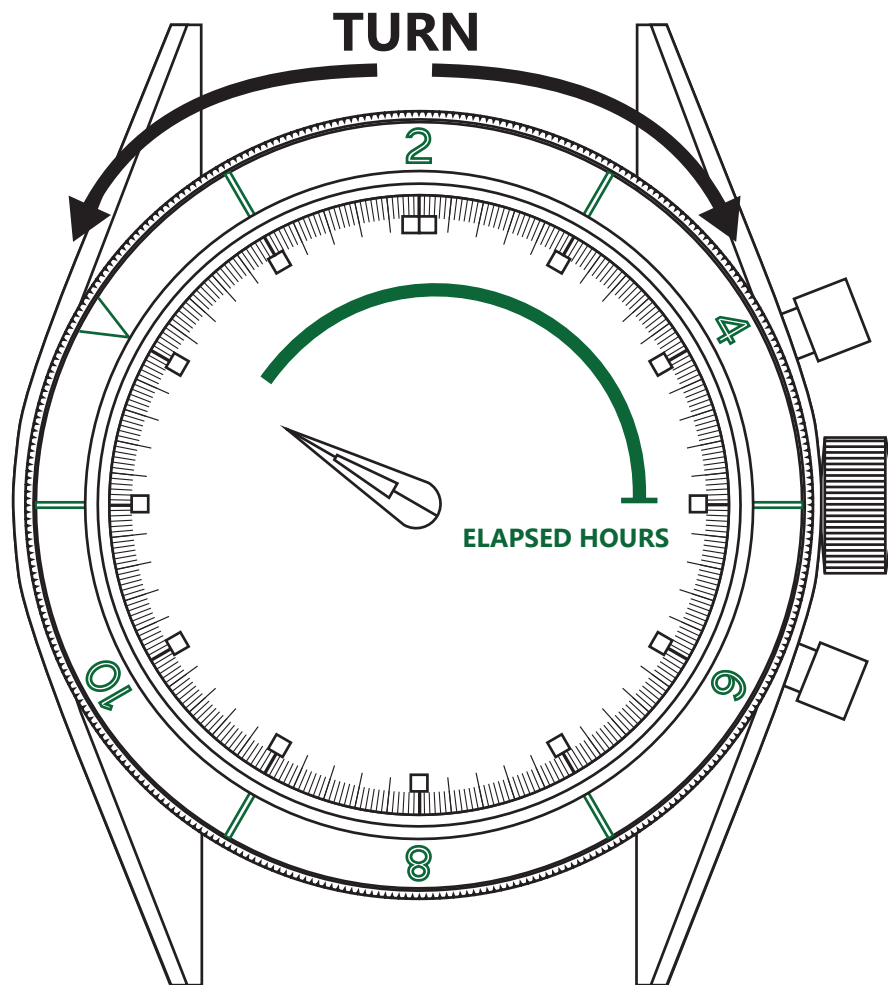

The Gemini's bezel rotates in both directions.

To track elapsed hours, place the bezel triangle to the position opposite the hour hand. The bezel will now indicate hours elapsed from this time.

OPERATING THE BEZEL (TRACKING A SECOND TIME ZONE)

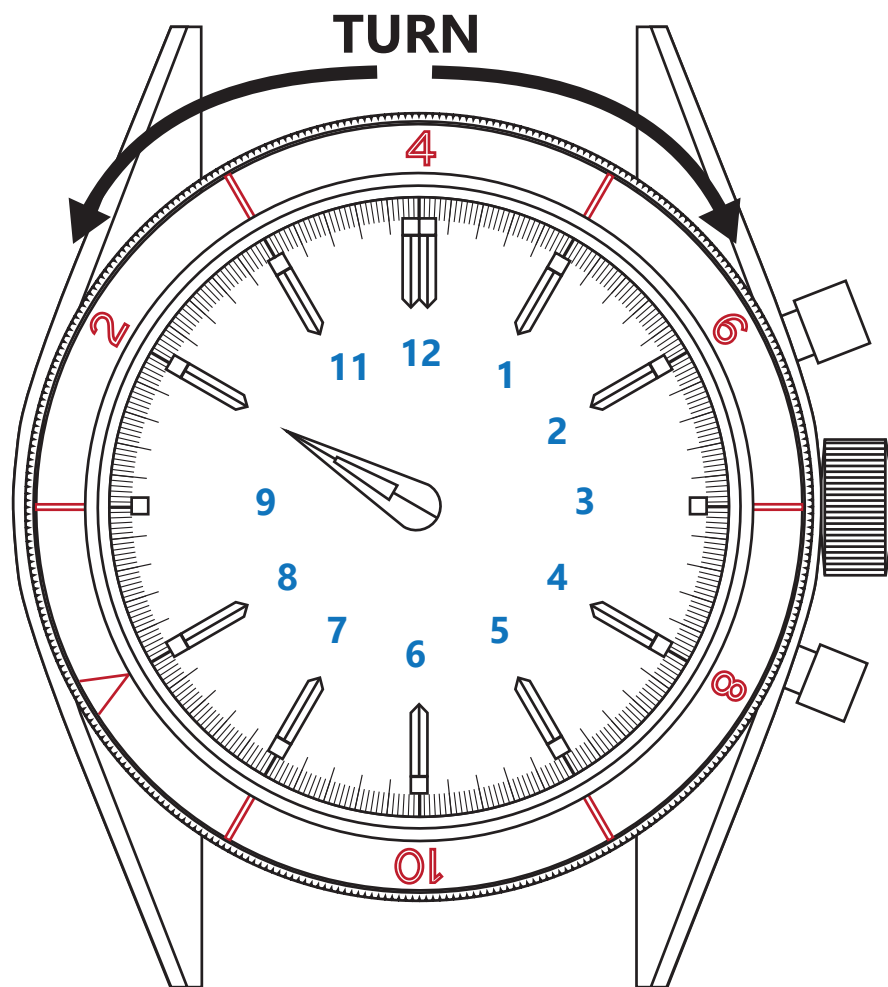


The Gemini's bezel rotates in both directions.

To track a second time zone, use the bezel markers as a second set of hour markers.

In the illustration, it is **10 o'clock in time zone A, as indicated on the dial**, and **2 o'clock in time zone B, as indicated on the bezel**.


RESIZING/CHANGING THE BRACELET

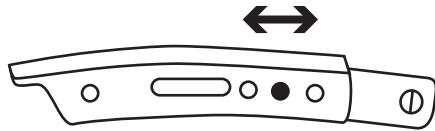

MICROADJUSTMENT

Use the round end of the strap changing tool (not included) to push in the clasp springbar, then move the springbar into the desired slot.

Make sure it is in the same slot on both sides of the clasp.

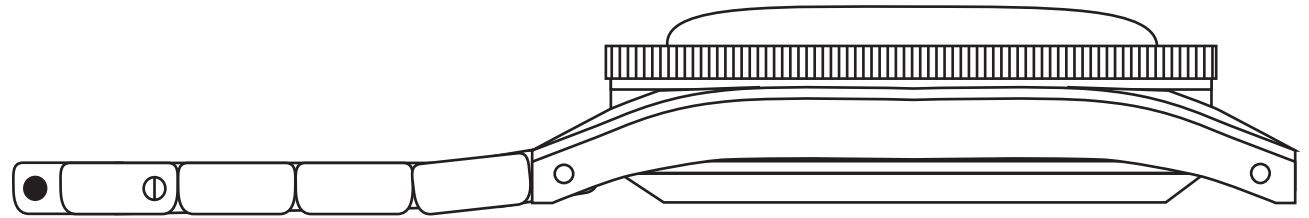

SIZING WITH LINKS

Use the screwdriver to remove and replace links as needed.

For a secure fit, we highly recommend applying low-strength threadlocker, such as Loctite 222/222MS (not included).



CHANGING STRAPS

Use the strap changing tool (not included) to remove and replace the springbar.

One side at a time, insert the round end into the lug holes and gently pull the bracelet so that both ends are out.

Place the springbar back into the holes for use with another strap.

**PLEASE USE CAUTION
WHEN REMOVING THE
SPRINGBAR AS IT COULD
FLY OUT**





For any other inquiries,
please contact

info@lorierwatches.com