
ZEITMESSER



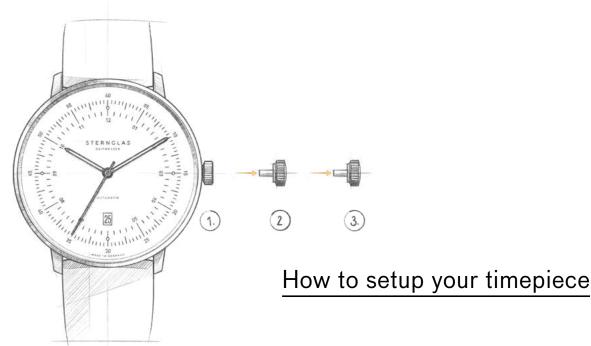

Before you can start, you need to wind up your timepiece. To do so, wind the crown (in position 1) clockwise about 15 times. If you notice a slight whirring sound, the movement starts working.




02

Now you are ready to <u>set the time</u>. To do so, pull the crown to position 3 and turn until the hands are in the correct position.



To <u>set the date</u>, push the crown in by one position so that it is in position 2. Turn the crown counterclockwise until the correct date is displayed. Now you can push the crown back to the starting position (position 1).

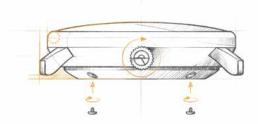

Note: Your date changes at noon? This is because the movement does not "know" if it is noon or midnight. If so, simply wind your timepiece forward by 12 hours.