




User Guide

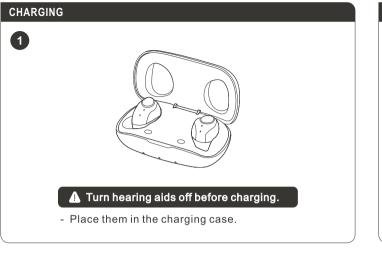


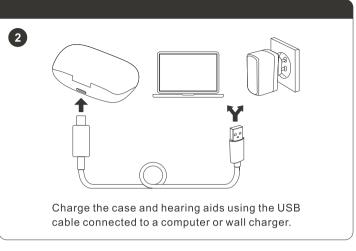


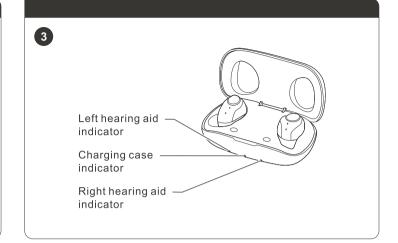


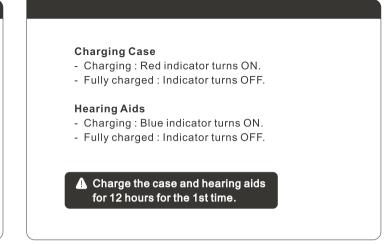


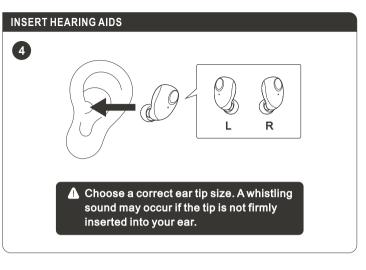

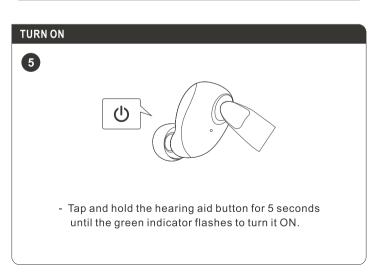

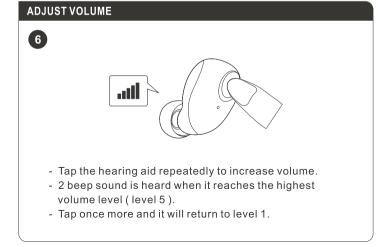

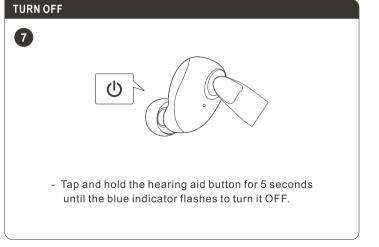

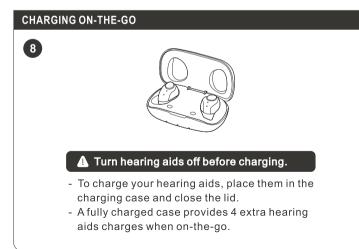

SAFETY INSTRUCTIONS

- 1. This device is suitable for mild to moderately severe hearing loss only, and not suitable for patients with tympanitis or ear pyogenesis.
- Avoid listening at high volume for a long period of time to avoid possible hearing damage.
- 3. Stop using immediately if you feel any discomfort.
- 4. Maintain your device all the time. Avoid the ear tip and microphone being blocked by foreign objects, as it will affect the result of sound amplification.
- 5. Avoid shaking or dropping your device.
- Do not keep your device in an environment of high humidity or high temperature.
- 7. Charge your device regularly to avoid battery overdischarge.
- 8. Keep out of reach of children.

Charging Time

Approx. 4 - 6 hours

Usage Time

Approx. 30 hours

Extra Charges by Charging Case

Approx. 4 times

hopewell / since 1985

hopewell-living.uk

hopewell-living.uk

hopewell-living.uk

hopewell-living.uk

hopewell-living.uk

hopewell-living.uk

hopewell-living.uk