


hopewell
Portable Digital
AM / FM Radio
RP-88D
User Guide

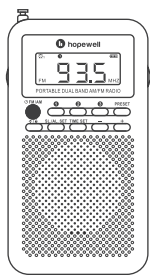

E

SAFETY INSTRUCTIONS

Thank you for purchasing this product. Please read and follow the instructions carefully and keep this manual for future reference.

- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety.
- Keep this device out of reach of children. Do not let them play with the device.
- In case of malfunction, get the device repaired by the authorised service centre.
- Make sure the batteries are installed according to the polarity (+/ -) indicated.
- Check regularly and replace the batteries immediately if they run out.
- Remove all batteries from the device when not in use or before cleaning.

GETTING STARTED

1

Insert batteries.

2

1. Long press to enter time setting mode.

2. Hour blinks. Rotate to set hour.

3. Short press once.

4. Minute blinks. Rotate to set minute.

5. Short press to complete time setting.

3

Plug in your headphones.
* Unplug to listen via speaker.

START LISTENING

4

1. Long press to switch power ON.
* Long press again to switch power OFF.

2. Pull antenna out for better reception.

5

1. Short press repeatedly to select FM or AM.

2. Long press to start channel auto-scan.

Auto-scan completes when the numbers stop flickering.

Channels have been stored automatically.

* Max. 50 channels can be saved

6

Short press to select next channel.

Short press to select previous channel.

Rotate to manually adjust frequency.

7

Rotate to adjust volume.

8

You can store 3 of your favourite channels to preset key 1 / 2 / 3.

1. Long press preset key 1, 2 or 3 to save the channel you are listening to the key.

2. To remove the saved channel from the preset key, press the preset key once, then long press the preset key again.

3. To replace the channel saved in the preset key with a new one, long press the key while listening to another channel.

TOGGING THE AUTO LIGHT / KEYPAD LOCK

9

Short press : Toggle auto light on display.

Long press : Enable keypad lock.

* Only the volume can be adjusted when the keypad is locked.

* Long press again to disable keypad lock.

SETTING THE SLEEP TIMER

10

1. Long press to turn sleep timer ON.

2. Short press repeatedly to set the period until the radio turns off : 30 / 60 / 90 / 120 mins.

SETTING THE ALARM CLOCK

11

Long press to switch power OFF.

12

1. Long press to enter alarm clock setting mode.

2. Hour blinks. Rotate to set hour.

3. Short press once.

4. Minute blinks. Rotate to set minute.

5. Short press once.

6. Short press to select the alarm sound "BUZ" or "UNE".

BUZ : buzzing sound
UNE : plays radio

7. Short press once.

8. Short press to select the alarm volume.

9. Short press again. Setting completes.

13

Short press to turn alarm clock ON. Display shows the alarm clock icon.

* Short press again to turn alarm clock OFF. The alarm clock icon disappears.

* Alarm clock can be turned ON or OFF in both power ON and power OFF state.

14

When the alarm goes off, short press to turn the alarm OFF.