



USER'S GUIDE

STZB402+

ELECTRONIC THERMOSTAT FOR THE SMART HOME





WARNING

Before installing and operating this product, the owner and/or installer must read, understand and follow these instructions and keep them handy for future reference. If these instructions are not followed, the warranty will be considered null and void and the manufacturer deems no further responsibility for this product. Moreover, the following instructions must be adhered to in order to avoid bodily harm or property damages, serious injuries and potentially fatal electric shocks. All electric connections must be made by a qualified electrician, according to the electric and building codes effective in your region.

Do NOT connect this product to a supply source other than 120 VAC or 240 VAC, and do not exceed the load limits specified. Protect the heating system with the appropriate circuit breaker or fuse. You must regularly clean dirt accumulations on the thermostat. Do NOT use fluid to clean thermostat air vent. Do not install thermostat in a wet place. However, installing it in insulated walls is allowed.

NOTE: When a part of the product specification must be changed to improve operability or other functions, priority is given to the product specification itself. In such instances, the instruction manual may not entirely match all the functions of the actual product.

Therefore, the actual product and packaging, as well as the name and illustration, may differ from the manual.

The screen/LCD display shown as an example in this manual may be different from the actual screen/LCD display.

DESCRIPTION

This thermostat is designed to control baseboard, convector and fan-forced heaters. It may be associated to a ZigBee network.

This thermostat is **NOT** compatible with the following installations

- Inductive load
- Central heating system
- Heating load outside the specified ratings (refer to the Technical Specifications section)

Parts supplied

- one (1) thermostat
- one (1) wall mounting plate located at the back of the thermostat
- two (2) mounting screws
- two (2) solderless connectors suitable for copper wires

INSTALLATION


Selection of the thermostat location


The thermostat must be mounted to a connection box on a wall facing the heating unit, at around 1.5 m (5 feet) above the floor level, on a section of the wall exempt from pipes or air ducts.

Do not install the thermostat in a location where temperature measurements could be altered. For example:

- close to a window, on an external wall, or close to a door leading outside
- exposed directly to the light or heat of the sun, a lamp, a fireplace or any other heat source
- close to or in front of an air outlet
- close to concealed ducts or a chimney
- in a location with poor air flow (e.g. behind a door) or with frequent air drafts (e.g. head of stairs)


Thermostat mounting and connection

1.  Cut off power supply on lead wires at the electrical panel in order to avoid any risk of electric shock.
2. If an existing thermostat is being replaced, remove the previous thermostat.
3. Ensure that the air vents of the Ki thermostat are clean and clear of any obstruction.
4. Using a screwdriver, loosen the screw retaining the mounting base of the thermostat (do not completely remove the screw).

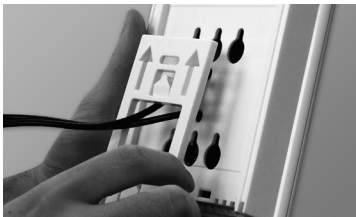


Then, remove the mounting base at the back of the thermostat by tilting it downward, then towards you.

5. Align and secure the mounting base to the connection box using the two screws supplied.

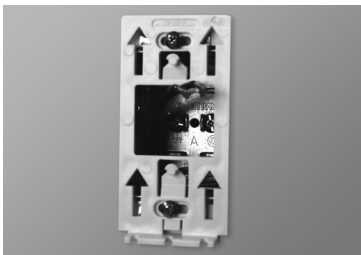


6. Pass the wires from the wall through the hole at the base of the mounting base and connect them using the solderless connectors supplied. When making the connection with aluminum wire, make sure that you are using connectors identified CO/ALR. Please note that the thermostat wires do not have polarity. Therefore, the way they are connected is not important.


2-WIRE INSTALLATION

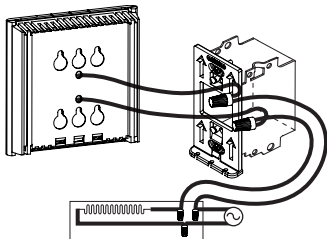

4-WIRE INSTALLATION

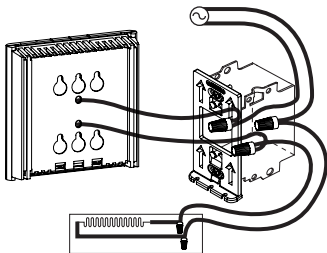


7. Place all the wires into the connection box.

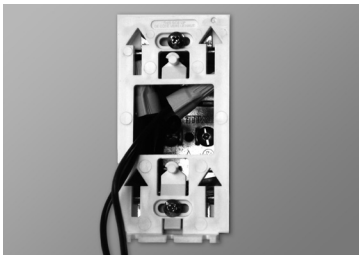


8. Align the little slots located on the top of the thermostat with those on the mounting base and secure the thermostat to the mounting base. Note that you can also position the thermostat on the left or the right side of the junction box (see below). Then tighten the screw at the bottom of the unit.

ALIGNMENT

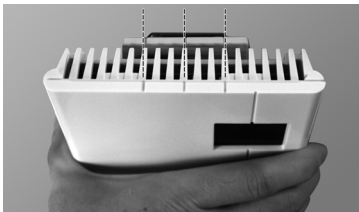

9. Turn the power on.

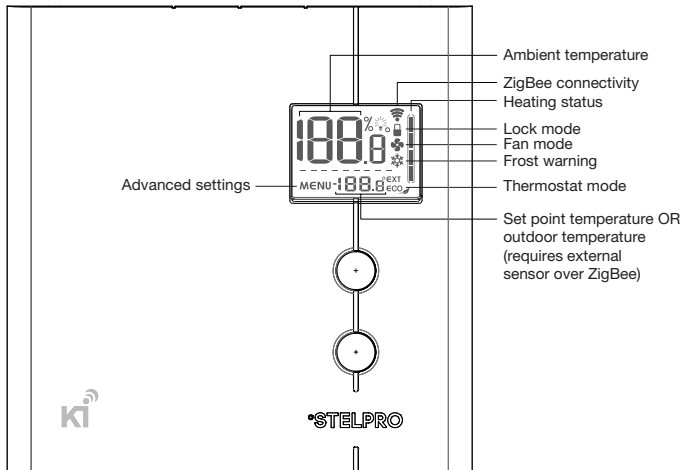

Ambient temperature

The temperature is displayed either in °C with a 0.5 °C resolution or in °F with a 1 °F resolution. The screen will display LO if the temperature drops below 0 °C (32 °F) and will display HI if the temperature rises above 50 °C (122 °F).

Temperature setpoints

The setpoint may be edited by the user using the UP and DOWN buttons located on the thermostat. The setpoint may also be modified through the ZigBee network.

The minimum setpoint is 5 °C (41 °F) and the maximum setpoint is 30 °C (86 °F).

NOTE: if the setpoint is set at 7 °C (45 °F) or below, the frost warning icon ❄️ will be displayed to warn the user that water pipes might be subject to freezing.

Heating power indicator

Whenever the thermostat is actively heating the room, the heating status graph will display the heating percentage.

▬	No bar: 0%
▬▬	1 bar: 1-25%
▬▬▬	2 bars: 26-50%
▬▬▬▬	3 bars: 51-75%
▬▬▬▬▬	4 bars: 76-100%

Thermostat mode


The thermostat has three modes: Comfort, Eco and Off. The first two modes have their own preestablished setpoint. Comfort: 21 °C (70 °F), Eco (ECO🍃): 17 °C (63 °F).


The user may change the setpoint to any value in the range described in the setpoint section.

When the Eco mode is active, the Eco icon (ECO🍃) is displayed on the LCD. When the Off mode is active, the frost warning icon ❄️ is displayed on the LCD and the setpoint is replaced by (--).

The thermostat mode may be changed locally on the thermostat by pressing the UP and DOWN buttons simultaneously for less than 3 seconds while on the main screen. The Eco setpoint is local to the thermostat and cannot be edited through the ZigBee network.

If a setpoint change is sent through the ZigBee network, the thermostat mode will automatically switch to Comfort mode.


NOTE 1: Even in Off mode , the thermostat is still powered and electric shock is still possible. Always cut off the power supply when cleaning or removing the thermostat.

NOTE 2: When in Off mode , the thermostat will not activate the heating element, therefore there is a risk of freezing.




Heating mode

The thermostat has two heating modes: Baseboard/convector heater and Fan-forced heater.

The Baseboard/convector heater mode will drive the load with a 15-second cycle while the Fan-forced heater mode will drive the load with a 5-minute cycle.

When the Fan-forced heater mode is selected, the fan icon  is displayed on the thermostat.





ZigBee connectivity ()

If the thermostat is associated to a ZigBee network, the connectivity icon  will be displayed on the LCD, if the device is removed from a ZigBee network, the connectivity icon  will disappear. The connectivity icon  may blink if there is an issue with the ZigBee radio circuit.

Advanced settings (MENU)

There are 7 advanced settings menus on the thermostat.

The advanced settings are the following:

1. ZigBee menu : used to associate or remove the thermostat from a ZigBee network
2. Display format: used to switch the temperature format between °C and °F
3. Heating mode : used to switch the heating mode between Baseboard/convector and Fan-forced heaters
4. Lock mode : used to lock the thermostat to prevent unauthorized tampering.
5. Outdoor temperature display **EXT**: used to switch the outdoor temperature display on or off (when available). When set to (On), the outdoor temperature will be displayed if it's available. When set to (Off), the outdoor temperature will not be displayed and the setpoint will always be displayed.
6. Backlight status $\% \text{  }$ while idle: used to set the backlight intensity when the thermostat is idle.
0%: the backlight will turn off after 15 seconds of inactivity
50%: the backlight will dim to 50% after 15 seconds of inactivity
100%: the backlight will always be at full intensity

7. °STELPRO information menu: used to gain information on the product

7.1: Thermostat version

7.2: ZigBee radio version

7.3: Day of production

7.4: Month of production

7.5: Year of production

7.6: Baseboard/convector control checksum

7.7: Fan-forced heater control checksum


- ZigBee node Id
- ZigBee network Id
- Reset to default

Modification of the settings:


- To gain access to the advanced settings root menu, press the UP and DOWN buttons simultaneously for 3 seconds.
- At this point each setting (1 to 7) may be accessed by using the UP and DOWN buttons.
- To edit a value, choose a setting then simultaneously press the UP and DOWN buttons once. Press the UP or DOWN button to edit the value.
- Confirm your choice by pressing the UP and DOWN buttons simultaneously one time at which point the icon will momentarily flash rapidly if a change has been made.
- To exit the advanced settings press the UP and DOWN buttons simultaneously for 3 seconds at any time. If the thermostat is left idle it will revert back to the main screen after 30 seconds

ZigBee network association ()

Association:

Make sure the ZigBee controller is in pairing mode (refer to your ZigBee controller instruction manual). To associate the thermostat to a ZigBee network, enter Menu 1 (ZigBee menu) and either select (On) or the specific ZigBee channel used by your ZigBee controller (11 to 26). Then press the UP and DOWN buttons to start the association process. During association, (On) or the specific channel will be blinking and the connectivity icon  will be animated in an increasing pattern. When the association process has been completed, the associated channel number will be displayed solid. If an error occurs, (Err) will be displayed for 3 seconds then the screen will revert to (Off).

Disassociation:

To remove the thermostat from the ZigBee network, enter Menu 1 (ZigBee menu) and select (Off). Then press the UP and DOWN buttons to start the disassociation process. During disassociation, (Off) will be blinking and the connectivity icon  will be animated in a decreasing pattern. When the disassociation process has been completed, (Off) will be displayed solid. If an error occurs, (Err) will be displayed for 3 seconds then the screen will revert to the associated ZigBee channel.

To achieve better network performance, it is recommended to always associate your ZigBee devices starting from the closest one to the farthest one.

Factory Reset

The thermostat may be manually reset to its original factory settings.

When this is performed, all parameters are reset to their default values and the thermostat is removed from the ZigBee network.

To reset the thermostat to its default settings:

- Enter the advanced settings
- Enter the °STELPRO menu (menu 7)
- Navigate to the (def) screen using the UP or DOWN buttons.
- Enter the (def) menu by pressing the UP and DOWN buttons for less than 3 seconds
- Select (yes) and confirm the selection by pressing the UP and DOWN buttons for less than 3 seconds.

The thermostat will then reset itself.

Power Outage

If a power outage occurs, the thermostat will stop working but all configuration is saved.

Outdoor Temperature (EXT)

When connected to a ZigBee network, the thermostat may display the outdoor temperature provided by an external sensor.

When available, the outdoor temperature is displayed instead of the setpoint, providing that the outdoor temperature display setting is set to (On).




If no temperature is received within a 4-hour timeframe, the outdoor temperature will disappear and the setpoint will be displayed.

In order to display the outdoor temperature, an external sensor needs to be part of the ZigBee network. It may be a physical sensor or a weather station app.

Refer to your ZigBee controller instructions manual to find how to associate both devices. On some ZigBee controllers, an app may be used to provide the outdoor temperature.

TROUBLESHOOTING

PROBLEM CODE	DEFINITION
LO	Temperature is below 0 °C (32 °F), heating will be always active
HI	Temperature is above 50 °C (122 °F), heating will be always inactive
--	Temperature sensor is defective, heating will always be inactive. Call technical support.
Err	The connection could not be established with the ZigBee network. Make sure the thermostat is within range of the ZigBee controller or a ZigBee repeater and make sure the ZigBee controller is in association mode.
E1	Secondary temperature sensor is defective. The thermostat will still control the temperature but performance may be diminished. Consider replacing the thermostat.

PROBLEM	SOLUTION
The thermostat is hot	<ul style="list-style-type: none"> In normal operating conditions, the thermostat housing may become hot at maximum load. That is normal and will not affect the effective operation of the thermostat.
Heating is always on	<ul style="list-style-type: none"> Check if the thermostat is properly connected. Refer to the installation section.
Heating does not run even if the thermostat indicates it is on	<ul style="list-style-type: none"> Check if the thermostat is properly connected. Refer to the installation section.
The display does not turn on	<ul style="list-style-type: none"> Check if the thermostat is properly connected. Refer to the installation section. Check the power supply at the electrical panel. Check if the heating unit has a switch. If so, ensure that this switch is turned on.
The display turns off a few minutes and then turns on again	<ul style="list-style-type: none"> The thermal protection of the heating unit has opened due to overheating. Check if the heating unit is in good operating condition and that clearance around the appliance is according to the manufacturer's specifications.
The displayed ambient temperature is incorrect	<ul style="list-style-type: none"> Check the presence of an air stream or a heat source near the thermostat, and correct the situation.
Fan-forced heater is cycling ON and OFF frequently	<ul style="list-style-type: none"> Make sure the heating mode is set to Fan 
The connectivity icon  is blinking on the main screen	<ul style="list-style-type: none"> There is an issue with the ZigBee radio. Reinitialize the thermostat.
Setpoint and mode cannot be changed	<ul style="list-style-type: none"> The thermostat is locked, turn OFF the lock mode 

N.B. If you are unable to solve the problem after having verified these points, please communicate with our customer service. Consult our website for contact information.

Supply voltage

120/240 VAC, 50/60 Hz

Minimum current with resistive load

1.25 A

300 W @ 240 VAC

150 W @ 120 VAC

Maximum current with resistive load

16.7 A

4000 W @ 240 VAC

2000 W @ 120 VAC

Temperature display range

0 °C to 50 °C (32 °F to 122 °F)

Temperature display resolution

0.5 °C (1 °F)

Temperature setpoint range

5 °C to 30 °C (41 °F to 86 °F)

Temperature setpoint increment

0.5 °C (1 °F)

Storage temperature

-50 °C to 50 °C (-58 °F to 122 °F)

Operating temperature (LCD performance might diminish below 0 °C (32 °F))

-20 °C to 50 °C (-4 °F to 122 °F)

ELECTRONIC THERMOSTAT

FOR SMART HOME



COMPATIBLE WITH HOME AUTOMATION SYSTEMS

Click on your system to access the [CONNECTIVITY GUIDE](#).

QUICK START GUIDE

Click here to access the [QUICK START GUIDE](#).

°STELPRO

CONNECTIVITY GUIDE




Access your “Get Vera” account from the getvera.com site, and follow these steps:


- 1 From the left-hand menu, click on the “Devices” tab and select “Add Device”.




- 2 From the “Select your device” list, choose “Generic ZigBee device”.

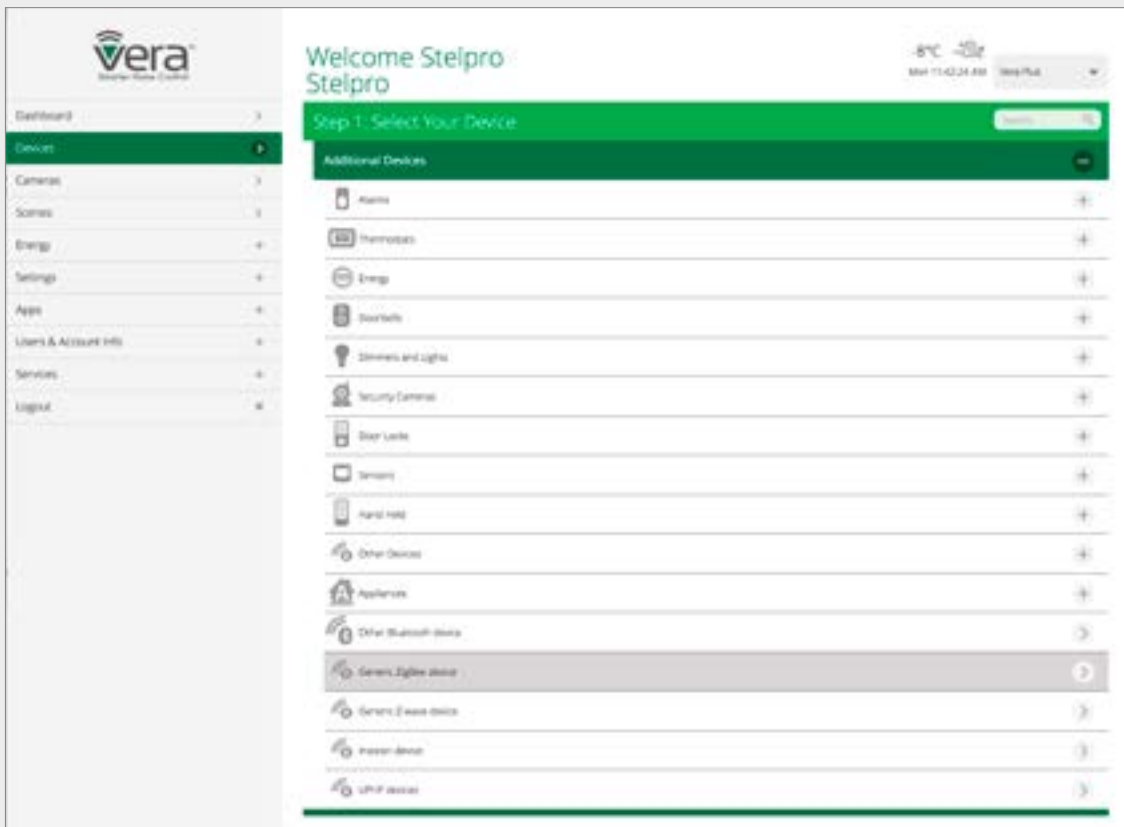


3 Click on “Next”.

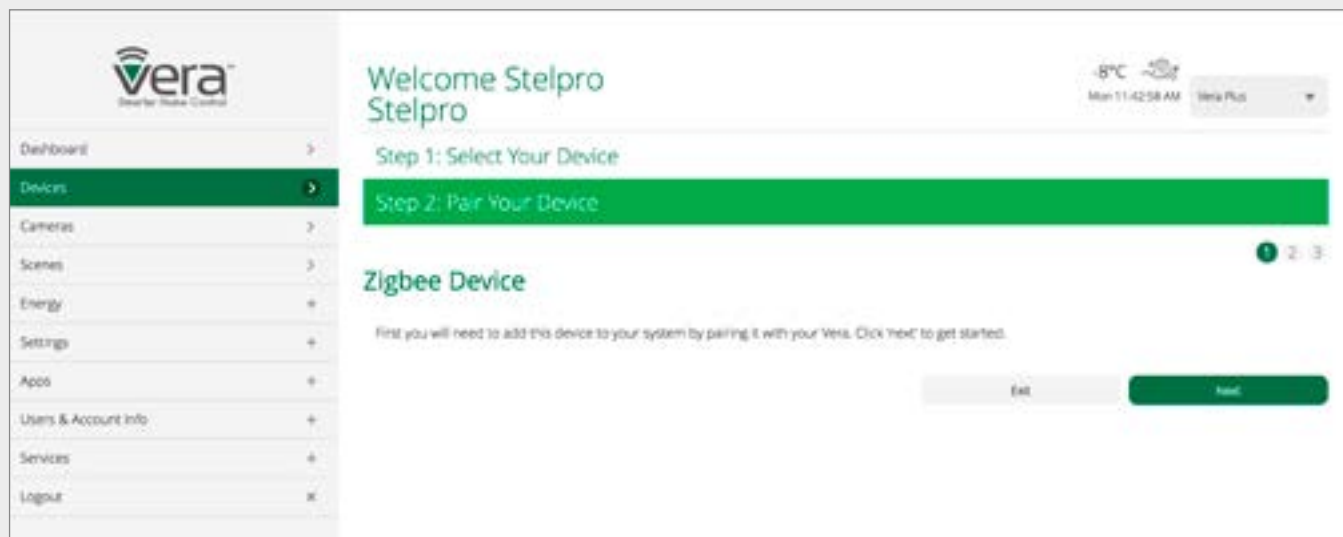


4 Click on “Next” again.

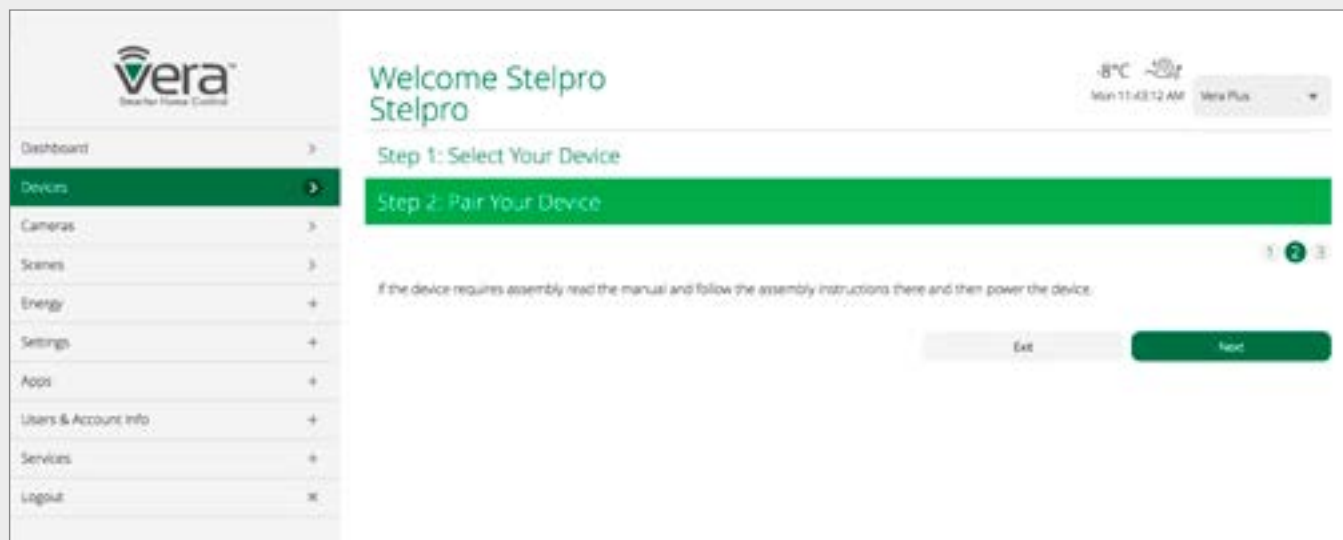

5 When the countdown starts, pair your ZigBee thermostat by choosing “On” from the thermostat’s first menu.

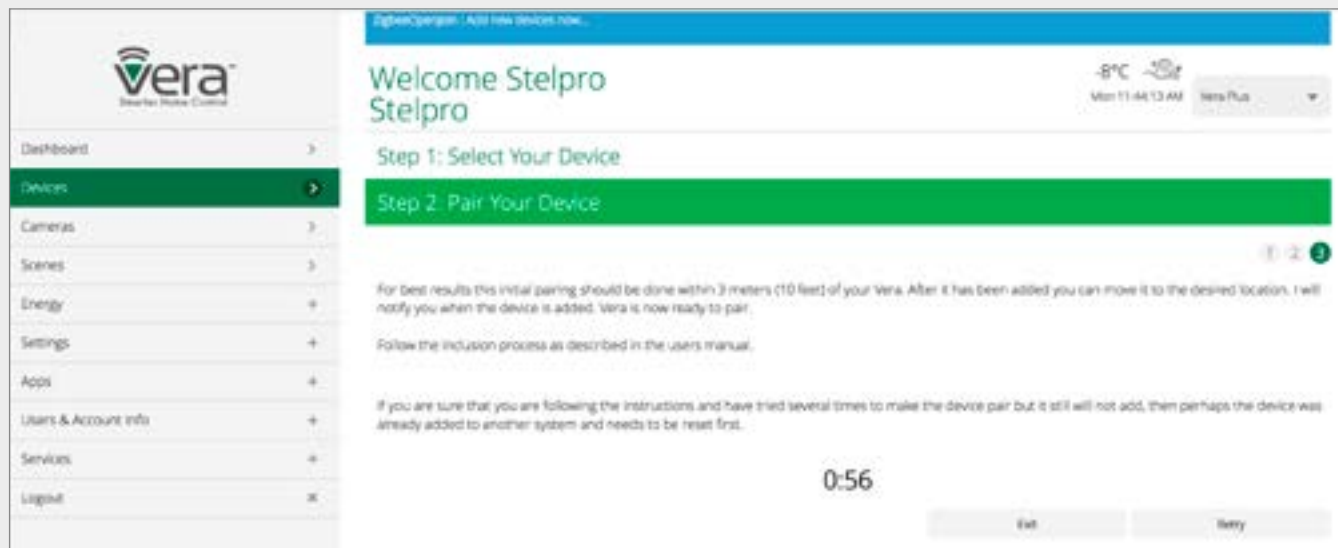

6 Your thermostat is now connected to your Vera Plus hub. Name the device. You can also add the device to your favourites and assign it to a specific room (optional). Once you are done, click on “Finish”.

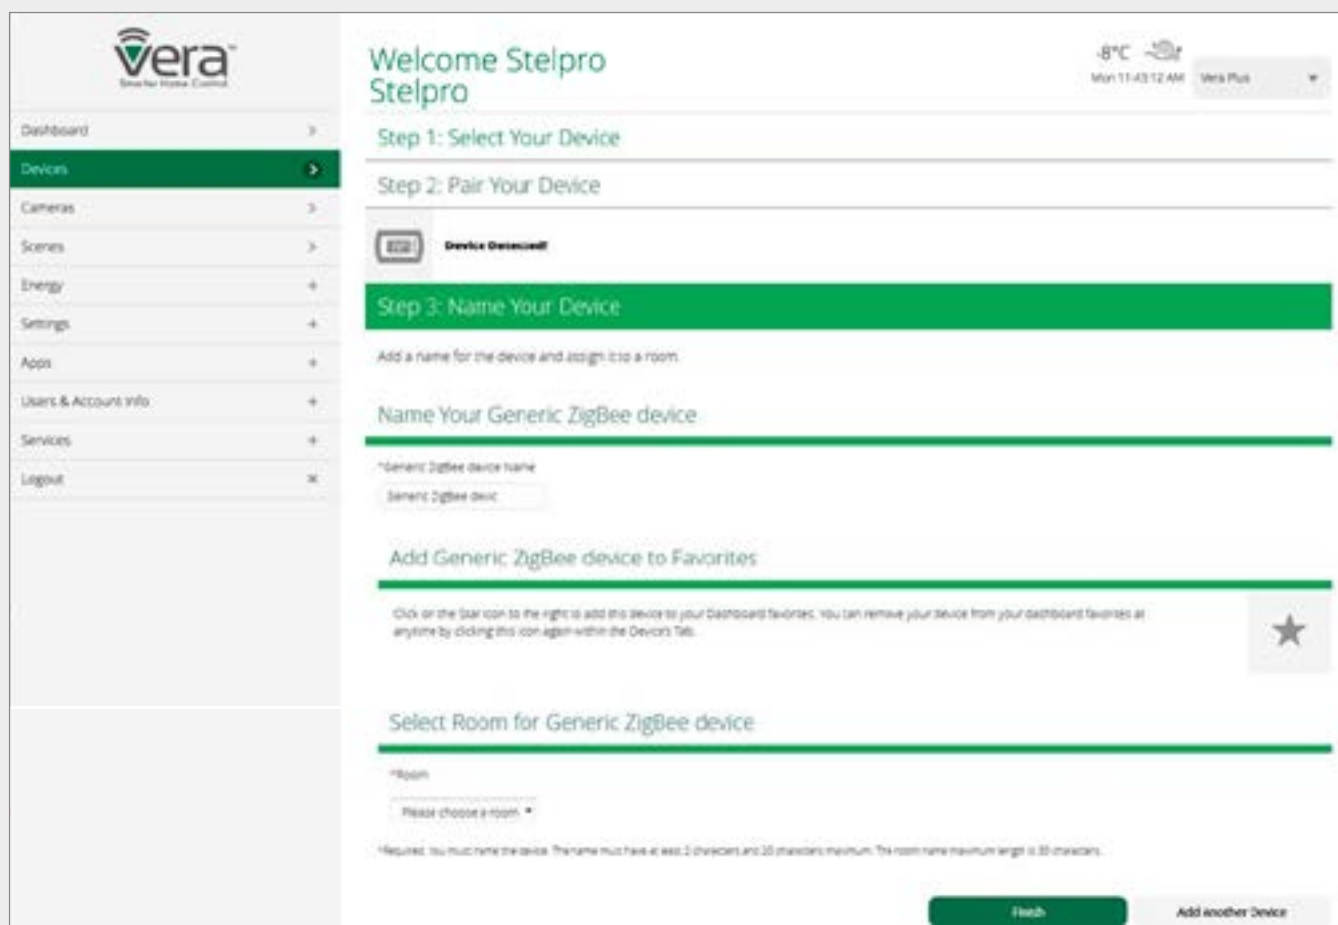

7 It will take a few seconds for Vera Plus to configure the device. Then, it will appear on the “Devices” page.

The screenshot shows the Vera Plus web interface. On the left is a sidebar menu with the following items: Dashboard, Devices (highlighted), Cameras, Scenes, Energy, Settings, Apps, Users & Account Info, Services, and Logout. The main content area has a header with the Vera logo and 'Welcome Stelpro Stelpro'. The current temperature is -8°C, and the time is Mon 11:40:38 AM. Below the header is a 'View by:' section with 'Room', 'Type', and 'List' options. A 'Click ☆ to select favorites.' prompt is followed by an 'Add Device' button. The 'No Room' section is currently selected, showing a 'Virtual Outdoor Temp.' of -8.0 °C. Below this, the 'Kitchen' room is selected, showing a 'Stelpro Orleans' device with an 'Inside' temperature of 24.5 °C and a current temperature of 22.5 °C. Control buttons for 'Off', 'Auto', 'Cool', and 'Heat' are visible.

QUICK START DÉMARRAGE RAPIDE



ADVANCED SETTINGS (MENU) PARAMÈTRES AVANCÉS (MENU)



ADVANCED SETTINGS can be accessed directly on the thermostat.

LES PARAMÈTRES AVANCÉS sont accessibles directement sur le thermostat.

ZIGBEE connectivity	1	Connectivité ZIGBEE
Display format (°C or °F)	2	Format d'affichage (°C ou °F)
HEATING mode (fan or baseboard)	3	Mode CHAUFFAGE (aéro-convecteur ou plinthe)
LOCK mode	4	Mode VERROUILLAGE
Outdoor temperature display	5	Affichage de la température extérieure
Backlight intensity	6	Intensité du rétroéclairage
°STELPRO menu	7	Menu °STELPRO

TO MODIFY AN ADVANCED SETTING POUR MODIFIER UN PARAMÈTRE

A Enter ADVANCED SETTINGS
Accédez au MENU PRINCIPAL



Press and hold both buttons for 3 seconds

Appuyez sur les deux boutons pendant 3 secondes

B Select desired menu (from 1 to 7)
Sélectionnez le menu souhaité (de 1 à 7)



Press and release the UP or DOWN button until desired menu is shown

Appuyez et relâchez le bouton du HAUT ou du BAS jusqu'à ce que le menu souhaité apparaisse


C Enter menu
Accédez au menu souhaité



Press and release both buttons

Appuyez et relâchez les deux boutons simultanément

D Change the setting value
Modifiez le paramètre

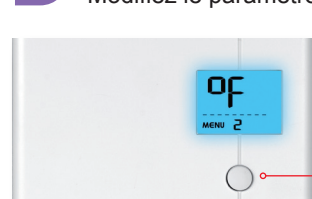

Press and release UP or DOWN button to select the desired setting value

Appuyez et relâchez le bouton du HAUT ou du BAS pour modifier la valeur

E Confirm selection
Confirmez la sélection



Press and release both buttons

Appuyez et relâchez les deux boutons simultanément

NOTE To exit the advanced settings press the UP and DOWN buttons for 3 seconds at any time. If the thermostat is left idle it will revert back to the main screen after 30 seconds.

Pour quitter les paramètres avancés, appuyez sur les deux boutons pendant 3 secondes à tout moment. Si le thermostat est resté inactif, il reviendra à l'écran principal après 30 secondes.

For further information or to consult the complete User Guide, please visit our website.

Pour obtenir de plus amples renseignements ou pour consulter le guide d'utilisateur complet, visitez notre site web.

www.stelpro.com

QSINS_STZB402_0516

WARNING AVERTISSEMENT



Before installing and operating this product, the owner and/or installer must read, understand and follow these instructions and keep them handy for future reference. If these instructions are not followed, the warranty will be considered null and void and the manufacturer deems no further responsibility for this product. Moreover, the following instructions must be adhered to in order to avoid bodily harm or property damages, serious injuries and potentially fatal electric shocks. All electric connections must be made by a qualified electrician, according to the electric and building codes effective in your region. Do NOT connect this product to a supply source other than 120 VAC or 240 VAC, and do not exceed the load limits specified. Protect the heating system with the appropriate circuit breaker or fuse. You must regularly clean dirt accumulations on the thermostat. Do NOT use fluid to clean thermostat air vent. Do not install thermostat in a wet place. However, installing it in insulated walls is allowed.


Avant d'installer ou d'utiliser ce produit, le propriétaire ou l'installateur doit lire et comprendre les présentes directives et les conserver pour référence ultérieure. Le fabricant n'assumera aucune responsabilité et la garantie ne sera pas valide si l'installateur et l'utilisateur ne les respectent pas. Le non-respect de ces directives pourrait entraîner des préjudices corporels, des dommages matériels, des blessures graves et des chocs électriques potentiellement mortels. Les raccordements électriques doivent être effectués par un électricien qualifié, selon les codes de l'électricité et du bâtiment en vigueur dans votre région. Ne raccordez PAS l'appareil à une source d'alimentation autre que 120 VAC ou 240 VAC et respectez les limites de charge. Protégez le système de chauffage à l'aide de disjoncteurs ou de fusibles appropriés. Nettoyez régulièrement la saleté accumulée sur l'appareil. N'utilisez PAS de liquide pour nettoyer les ouvertures d'aération du thermostat. N'installez pas le thermostat dans un endroit mouillé. Il est toutefois permis de l'installer sur des murs isolés.

INSTALLATION STEPS ÉTAPES D'INSTALLATION


NOTE Before installing the KI thermostat, ensure that the breaker has been turned off and proceed by removing the old thermostat if necessary.




Avant d'installer le thermostat KI, coupez l'alimentation provenant du panneau électrique et enlevez l'ancien thermostat si applicable.

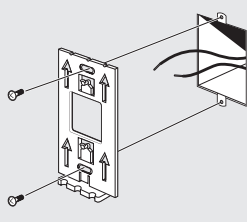

Fix back plate to connection box
Fixez la plaque murale à la boîte électrique

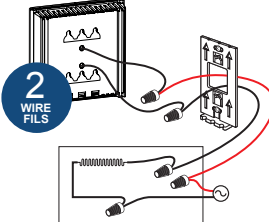


OR
OU

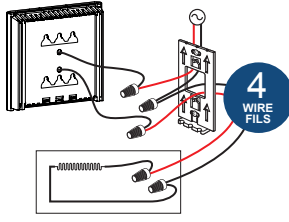

Connect the thermostat wires and properly place wires in the junction box

Effectuez les raccordements et placez les fils dans la boîte électrique

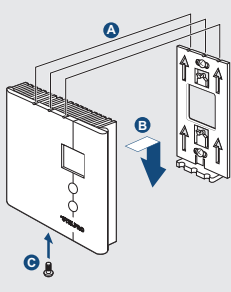

Align and secure the thermostat, then turn the breaker on

Alignez et fixez le thermostat, puis remettez l'installation sous tension




ZIGBEE NETWORK ASSOCIATION ASSOCIATION AU RÉSEAU ZIGBEE

1 Put your ZigBee hub in ASSOCIATION MODE (refer to your ZigBee hub instruction manual)

Ajustez votre contrôleur ZigBee en MODE ASSOCIATION (reportez-vous au manuel d'instructions du contrôleur ZigBee)



2 Enter thermostat ADVANCED SETTINGS
Accédez au menu des PARAMÈTRES AVANCÉS

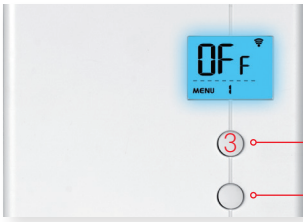


Press and hold both buttons for 3 seconds

Appuyez sur les deux boutons pendant 3 secondes

3 Enter ZIGBEE CONNECTIVITY SETTING (menu 1)

Accédez au PARAMÈTRE DE CONNECTIVITÉ ZIGBEE (menu 1)

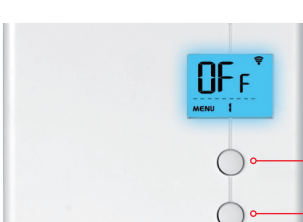


Press and release both buttons

Appuyez et relâchez les deux boutons simultanément

4 Select "ON" (or the channel number of your ZigBee network)


Sélectionnez « ON » (ou le numéro de canal de votre réseau ZigBee)

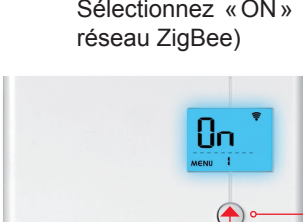

Press and release UP or DOWN button

Appuyez et relâchez le bouton du HAUT ou du BAS

5 Confirm selection
Confirmez la sélection

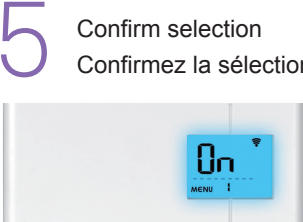

Press and release both buttons

Appuyez et relâchez les deux boutons simultanément

6 "ON" will blink for a few seconds and the connectivity icon will be animated. When the association process is complete, the ZigBee channel number will be displayed solid.



Le symbole « ON » clignotera et l'icône de connectivité sera animé. Lorsque le processus d'association sera terminé, le numéro du canal ZigBee sera affiché.

NOTE To exit the advanced settings press the UP and DOWN buttons for 3 seconds at any time. If the thermostat is left idle it will revert back to the main screen after 30 seconds.

Pour quitter les paramètres avancés, appuyez simultanément sur les deux boutons pendant 3 secondes à tout moment. Si le thermostat est resté inactif, il reviendra à l'écran principal après 30 secondes.