



6V/12V (AUTO) SENSING 1A WATERPROOF BATTERY CHARGER AND MAINTAINER For Standard, GEL and AGM Lead Acid Batteries

SAFETY INSTRUCTIONS

FOR MOTOBATT MODELS: PDCWB (Automatic Sensing for 6V and 12 Volt Batteries)

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS. PLEASE SAVE THESE INSTRUCTIONS. KEEP WITH OR NEAR CHARGER AT ALL TIMES.

1. WARNING – RISK OF EXPLOSIVE GASES.

- Working in the vicinity of a lead-acid battery can be dangerous. Batteries generate explosive gases during normal battery operation.
- For this reason it is of the utmost importance that prior to each use of your charger, you read and follow the instructions provided exactly.
- The appliance is not intended for use by young children or infirm persons without supervision. Young Children should be supervised to ensure that they do not play with the appliance.

To reduce risk of a battery explosion, follow these instructions and those marked on the battery.

- NEVER smoke or allow an open spark or flame in the vicinity of the battery or engine.
- CAUTION - To reduce the risk of injury, use the charger for charging a rechargeable lead-acid battery only. It is not intended to supply power to a low-voltage electrical system or to charge dry-cell batteries. Charging dry-cell batteries may cause them to burst and cause injury to persons and damage to property.
- Do not expose the charger to moisture, rain or snow. For indoor use only.
- Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
- CAUTION - To reduce the risk of injury, use the charger for charging a rechargeable lead-acid battery only. It is not intended to supply power to a low-voltage electrical system or to charge dry-cell batteries. Charging dry-cell batteries may cause them to burst and cause injury to persons and damage to property.
- Make sure cord is located so that it cannot be stepped on, tripped over, or otherwise subjected to damage or stress.
- Study all the battery manufacturer's specific precautions such as removing or not removing cell caps while charging and recommended rates of charge.
- Do not use the battery charger unless the battery voltage matches the output voltage rating of the charger.
- Do not operate the charger in a closed area or restricted ventilation in any way.
- An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure:
 - That pins on the plug of extension cord are the same number, size and shape as those of plug on charger;
 - That extension cord is properly wired and is in good electrical condition;
 - That wire size is as specified below.

Length of Cord (Feet)

AWG Size of Cord

25 50' 100' 150'

18 18 18 18

- Do not operate the charger with damaged cord or plug. If the supply cord cannot be replaced and the cord is damaged, the appliance should be scrapped.
- Do not operate the charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. Take it to a qualified repair station or MOTOBATT dealer.
- Do not disassemble the charger. Take it to a qualified repair station or MOTOBATT dealer when service or repair is required. Incompetent reassembly may result in a risk of electric shock or fire.
- To reduce risk of electric shock, unplug the charger from an outlet before attempting any maintenance or cleaning.

PERSONAL PRECAUTIONS:

- Someone should be within range of your voice or close enough to come to your aid when you work near a lead-acid battery.
- Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
- Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
- If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters an eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.

-1-

- NEVER smoke or allow a spark or flame in vicinity of battery or engine.
- Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause an explosion.
- Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuited current high enough to weld a ring or tie to metal, causing a severe burn.
- Use the charger for charging a lead-acid battery ONLY (standard flooded, sealed AGM and GEL). It is not intended to supply power to a low-voltage electrical system or to charge dry-cell batteries. Charging dry-cell batteries may cause them to burst and cause injury to persons and/or damage to property.
- NEVER charge a frozen battery.

PREPARING TO CHARGE

- If it is necessary to remove battery from vehicle to charge it, always remove grounded terminal from battery first. Make sure all accessories in the vehicle are off in order to prevent an arc.
- Be sure areas around battery are well ventilated while battery is being charged. Explosives can be forcefully blown away by using a piece of cardboard or other nonmetallic material as a fan.
- Clean battery terminals. Be careful to keep corrosion from coming in contact with eyes.
- If battery is not sealed, add distilled water in each cell until water level reaches level specified by battery manufacturer. Then it is safe to charge. Do not overfill. For a sealed battery or a battery without cell caps, carefully follow manufacturer's recharging instructions.
- Study all battery manufacturer's specific precautions such as removing or not removing cell caps while charging and recommended rates of charge.
- Determine voltage of battery by referring to vehicle owner's manual and make sure it matches output rating of the battery charger.

LOCATE CHARGER

- Locate the charger as far away from battery as the DC cables permit.
- Never place the charger directly above or below the battery being charged. Gases or fluids from the battery will corrode and damage the charger.
- Never allow battery acid to drip on the charger when reading voltage or filling battery.
- Do not operate charger in a closed-in area or restricted ventilation in any way.
- Do not set a battery on top of charger.

CONNECTION PRECAUTIONS

Connect and disconnect DC output clips only after setting the charger switches to off position and/or removing AC cord from the electric outlet. Never allow clips to touch each other.

- Follow these steps when battery is installed in a vehicle. A spark near battery may cause a battery explosion. To reduce risk of a spark near battery:
 - Position AC and DC leads to reduce risk of damage by hood, door or any moving engine parts.
 - Stay clear of fan blades, belts, pulleys, and other parts that can cause injury to persons.
 - Check polarity of battery posts. A positive (+) battery post may have a larger diameter than a negative (-) post.
 - Determine which post of battery is grounded (connected) to the chassis. If negative post is grounded to the chassis (as in most vehicles), see item (a) in positive post is grounded to the chassis, see item (f).
 - For a negative-grounded vehicle, connect the positive (red) clip from the battery charger to the positive (pos. +) post of battery first. Connect the negative (black) clip from the battery charger to the vehicle chassis or engine block remote from the battery and fuel line. Do not connect the clip to carburator, fuel lines, or sheet-metal body parts.
 - For a positive-grounded vehicle, connect the negative (black) clip from the battery charger to negative (neg. -) post of battery first. Connect the positive (red) clip from the battery charger to the vehicle chassis or engine block remote from the battery and fuel line. Do not connect clip to carburator, fuel lines, or sheet-metal body parts. Connect to a heavy gauge metal part of the frame or engine block.
 - If using permanently mounted eyelid lead SAE connector, simply connect to charger output lead.
 - Connect charger AC supply cord to an electric outlet.
 - When disconnecting the charger, disconnect AC cord, remove clip from vehicle chassis, and then remove clip from battery terminal.
 - See operating instructions for length of charge information.

- Follow these steps when battery is outside the vehicle. A spark near the battery may cause a battery explosion. To reduce risk of a spark near battery:
 - Check polarity of battery posts. A positive (pos. +) battery post may have a larger diameter than a negative (-) post.
 - Attach at least a 1.8m long 0.75mm² insulated battery output cable of charger to the negative (neg. -) battery post.

- Connect the positive (red) clip from the battery charger to the positive (pos. +) post of battery.
- Position yourself and the free end of cable as far away from battery as possible, then connect negative (black) clip from the battery charger to the end of cable.
- Do not touch battery when making final connection.
- Connect charger AC supply cord to an electric outlet.
- When disconnecting the charger, always do so in reverse sequence of connecting procedure and break first connection while standing as far away from battery as practical.
- A marine (boat) battery must be removed and charged on shore. Its charge on boat requires equipment specifically designed for marine use.

OPERATING INSTRUCTIONS:

AUTOMATIC MONITORING - Your new MOTOBATT battery charger is completely automatic and can be left on whenever input power is made available to the charger. The charger output depends on the condition of the battery it is charging. When the battery is fully charged, the indicating light will turn green and the charger will switch itself to a storage charge mode and will automatically monitor and maintain the battery at a full charge.

AUTO SENSING AND 12VOLT CHARGING

Your Modbat Waterpro Charger has the ability to automatically sense if it is connected to a 6 or 12 volt battery. It will sense the battery voltage in the Qualification Phase and self adjust to properly charge either a 12V or 6V battery.

CABLE CONNECTIONS

Your Modbat Waterpro Charger has the ability to automatically sense if it is connected to a 6 or 12 volt battery. It will sense the battery voltage in the Qualification Phase and self adjust to properly charge either a 12V or 6V battery.

For all battery types: Connect the red positive (+) lead to the positive terminal of the battery. Connect the black negative (-) lead to the negative terminal of the battery.

NOTE: If the charger is left connected to a battery for long periods of time, check water levels periodically as directed by the battery manufacturer to ensure electrolyte is maintained at the proper level.

ATTENTION: THE BATTERY CHARGER HAS A SPARK FREE CIRCUITRY. The clips will not spark when touched together. As a good practice, do not allow the two clips touch each other.

NOTE: If the charger is left connected to a battery for long periods of time, check water levels periodically as directed by the battery manufacturer to ensure electrolyte is maintained at the proper level.

ATTENTION: THE BATTERY CHARGER HAS A SPARK FREE CIRCUITRY. The clips will not spark when touched together. As a good practice, do not allow the two clips touch each other.

The Battery Charger will not produce voltage (turn on) until it recognizes at least two volts from the battery. The battery charger clips must be clipped to a battery in the correct polarity to initiate output voltage and begin charging.

If the charger is hooked up in reverse polarity, the red "Reverse Polarity" light will flash indicating that the connection has been made in reverse of the polarity of the battery and a charge has not been initiated. The clips must be re-connected in the proper polarity to start the charger. Red to Positive (+) and Black to Negative (-) to -.

NOTE: DO NOT TURN YOUR BATTERY CHARGER ON AND OFF REPEATEDLY (Plug and Unplug) WITHIN A SHORT PERIOD. IF THIS HAPPENS, UNPLUG BATTERY CHARGER FROM AC POWER, WAIT 20 MINUTE AND THEN RECONNECT THE CHARGER AGAIN TO RESTART CHARGING CYCLE.

TIME TO CHARGE ESTIMATION:

(BATTERY CAPACITY) ÷ (CHARGER CURRENT) = HOURS or (AMP HOURS) ÷ (AMPS) = EST. HOURS TO CHARGE

Suppose you have a 15 Amp-Hour Battery. Now let's say you have a 1.25 Amps Charger that will deliver 1.25 Amps for as long as it takes to get the battery charged up to its recharged level. So, how long will it take to actually charge the battery? You can make a pretty good guess by just dividing the numbers.

$$a.g. (15 \text{ AMP HOURS}) \text{ DIVIDED BY } (1.25 \text{ AMPS}) = 12 \text{ HOURS}$$

Some large capacity batteries may take up to 24 hours or even days to fully charge. Note: It is recommended that only one battery be charged at a time.

FULLY DISCHARGED BATTERIES:

If your battery is fully discharged (below 2 volts), the BATTERY CHARGER circuitry will not start due to its internal safety circuit. The internal safety circuit of the battery charger must sense more than 2 volts in the battery before it will allow the charging circuit to turn on. Otherwise, the charger is inoperative. In this case, the Bad Battery Indicator Light will flash, which means charging has not been initiated. To initiate charging on a battery that is below 2 volts, you must first let the battery charge circuitry by momentarily jumping the discharged battery to a known charged battery (above 2 volts). This will trick the charger into initiating the charging sequence.

NOTE: Unless the battery was rapidly discharged (lights left on overnight) most 12 volt lead acid batteries that are at a state of charge that is less than 9 volts are likely to be worn out or defective.

72-HOUR SAFETY FEATURE:

A 72 hour Safety Time will commence anytime the charger is on. This feature is designed to protect marginal batteries from over charging. If the battery voltage reaches the proper level within 72 hours, the charger will automatically switch to float mode. If your battery is marginal or defective, the Battery Charger will stop all the charging processes in order to protect the marginal battery from over charging. Please check battery condition as it could also indicate that a very large (high capacity) but good battery is simply not fully charged. When this happens, the bad battery indicator will be flashing. If this is the case, please contact your local MOTOBATT dealer and have the battery tested.

LIGHT INDICATION:


LED signal	Explanation	Indication
Power On (Yellow)	AC power is connected with the wall socket properly.	AC power is connected with the wall socket properly. Motobatt logo will be glowing.
Recovery (Red)	Battery Recovery processes will commence if the charger detects any charge acceptance problems. Motobatt Recovery processes include: Battery Rescue Phase, Pulse Mode Phase and Recondition Phases. Once the Recovery processes are complete, normal charge will resume immediately.	Battery Recovery processes will commence if the charger detects any charge acceptance problems. Motobatt Recovery processes include: Battery Rescue Phase, Pulse Mode Phase and Recondition Phases. Once the Recovery processes are complete, normal charge will resume immediately.
Charging (Red)	Normal charge processes are commenced. The charger is delivering constant current to the battery. To charge large capacity batteries the charger may remain on this mode for several hours or even days.	Normal charge processes are commenced. The charger is delivering constant current to the battery. To charge large capacity batteries the charger may remain on this mode for several hours or even days.
Absorption (Yellow)	The Battery Charger has determined that the battery has greater than 80% of its capacity available for use. At this stage of charge, the battery could be returned to service if absolutely necessary. It is recommended, however, that the battery remains connected to charger until the charge is completed and the full charged icon is glowing green.	The Battery Charger has determined that the battery has greater than 80% of its capacity available for use. At this stage of charge, the battery could be returned to service if absolutely necessary. It is recommended, however, that the battery remains connected to charger until the charge is completed and the full charged icon is glowing green.
Fully Charge / Maintenance (Green)	The charging process is completed and the battery is in maintenance mode. It can be returned to service if necessary or left safely connected to the charger indefinitely.	The charging process is completed and the battery is in maintenance mode. It can be returned to service if necessary or left safely connected to the charger indefinitely.
Bad Battery (Red)	The battery is worn out or is possibly defective. Suggest replacing battery with a MOTOBATT battery.	The battery is worn out or is possibly defective. Suggest replacing battery with a MOTOBATT battery.
Reverse Polarity (Red)	Battery is connected in reverse polarity, please check the battery connection(s) and correct reverse polarity condition. (Make sure Red "+" and Black to "-").	Battery is connected in reverse polarity, please check the battery connection(s) and correct reverse polarity condition. (Make sure Red "+" and Black to "-").

-4-

TROUBLE SHOOTING / MESSAGE LIGHTS CHECKLIST:

NO indicator lights are on	A. Disconnect the charger from the AC outlet. Check connections to battery and ensure they are good. B. Check to ensure that there is power at the AC outlet by plugging in a table lamp or power meter.
'Motobatt Logo' Power Light On but the charging light is off	A. Battery is not connected B. The battery may be damaged or below 2 volts, charge process will not begin. In this case the "Bad Battery" light will be on.
Red Battery Recovery Light - On	A. Battery recovery mode is in progress - 10 seconds B. The battery is being recovered, wait until the Recovery Red Light turns off, and then normal charging processes will begin.
Red Bad Battery Light - On	The battery is worn out or is possibly defective. Suggest replacing battery with a MOTOBATT battery.
The charger is charging but the GREEN Fully Charged / Maintenance light does not come on	A. The battery is worn out or is possibly defective. Suggest testing and/or replacing battery with MOTOBATT battery. B. The battery may have an excessive current draw caused by a potential short circuit. Disconnect battery from charger. Suggest testing and/or replacing battery with a MOTOBATT battery. C. The charged battery is larger than the charger marked capacity (shown in manual). Please recharge with larger capacity charger.

12V Battery Charging Curve - Motobatt 6 Stage Charge, Conditioning and Maintenance Process Map

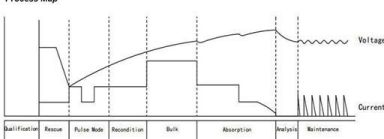


-5-

MOTOBATT 6 Stage Charge, Conditioning and Maintenance Process

- Qualification Phase:**
Initially ensures the battery is in good condition prior to launch of normal charge processes, as a safety measure charge processes will not begin if battery is below 2 volts.
- Battery Rescue Phase:**
MOTOBATT Battery Rescue starts if battery voltage has risen unusually high in the early portion of the recharge cycle. This is usually caused by plate sulfation. Once the battery rescue phase has successfully gotten the battery to accept power, normal battery charging will begin.
- Pulse Mode Phase:**
MOTOBATT Pulse mode provides a pulse charge to help the newly recovered battery to continue to accept charge as it enters the Reconditioning phase. To maintain the battery at a full state of charge.
- Recondition Phase:**
The Modbat Recondition phase follows when the Pulse Mode is completed, charging at a slightly higher voltage and amperage to "re-activate" the battery plates allowing for an improved charge acceptance and depth of charge.
- Bulk Charge Phase:**
With the battery now having gone through Qualification and Recovery phases as needed the MOTOBATT Bulk Charge phase gives the battery constant current, taking the battery up to 80% of its full capacity.
- Absorption Phase:**
In the MOTOBATT Absorption phase the battery is given constant voltage while current is reduced based on actions taken from ongoing battery monitoring until the battery is 100% charged.
- Analysis (Check) Phase:**
The Battery will now be checked to ensure that it is holding a charge properly and the charger will determine if the battery is ready for use or not.
- Maintenance Phase:**
The battery can be left safely connected to the charger indefinitely. The charger will constantly monitor the battery and "turn-on" again as needed to maintain the battery at a full state of readiness.

*Asterisk denotes a phase in Motobatt Battery Recovery Process

6V Battery Charging Curve - Motobatt 6 Stage Charge, Conditioning and Maintenance Process Map

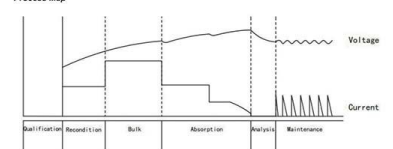

MOTOBATT 6 Stage Charge, Conditioning and Maintenance Process

- Qualification Phase:**
Initially ensures the battery is in good condition prior to launch of normal charge processes, as a safety measure charging will not begin if battery is below 2 volts.
- Battery Rescue Phase:**
The Modbat Recondition phase - here charging is at a slightly higher voltage and amperage to "re-activate" the battery plates allowing for an improved charge acceptance and depth of charge.
- Bulk Charge Phase:**
With the battery now having gone through Qualification and Reconditioning phases as needed the MOTOBATT Bulk Charge phase gives the battery constant current, taking the battery up to 80% of its full capacity.
- Absorption Phase:**
In the MOTOBATT Absorption phase the battery is given constant voltage while current is reduced based on actions taken from ongoing battery monitoring until the battery is 100% charged.
- Analysis (Check) Phase:**
The Battery will now be checked to ensure that it is holding a charge properly and the charger will determine if the battery is ready for use or not.
- Maintenance Phase:**
The battery can be left safely connected to the charger indefinitely. The charger will constantly monitor the battery and "turn-on" again as needed to maintain the battery at a full state of readiness.

-7-

Technical Specifications:

Model : PDCWB Waterpro 6V/12V Auto Sensing Battery Charger
Input: Auto-switching 100V - 240VAC 50/60Hz
Input Cable: 6' / 18AWG
U.S. SPT-2
EU - H03V
Aust/NZ - H03V
Output: 6VDC 1.0 Amps
12VDC 1.0 Amps
Max Charge Current : 1.0 Amps
Max Voltage: 7.5V (6V Battery)
14.9V (12V Battery)

Output Cable: 5/18 AWG SPT-2

Lug/Clamp Cable Length: 21718 AWG SPT-2

Fuse Protected Cables: 7.5A

Overcharge Protection: Yes

Reverse Polarity Protection: Yes

*Battery Capacity: Charging - 3-45Ah - Maintenance - up to 70 Ah

Short Circuit Protection: Yes

Spark Proof: Yes

*Charger Selection and Use

Charge and maintenance capacity ranges are suggested only as a guide for battery charger selection and application based on varied customer charging and maintenance requirements. Please be sure to follow safety and use information in user guide for correct product application and use.

-8-