


Belt Drive Battery Box Installation


Step 1: Remove exhaust side panel and push dart connector circled once side panel is removed.



Step 2: Locate the (2) factory mounting locations on the upper support tube inside the foot well.

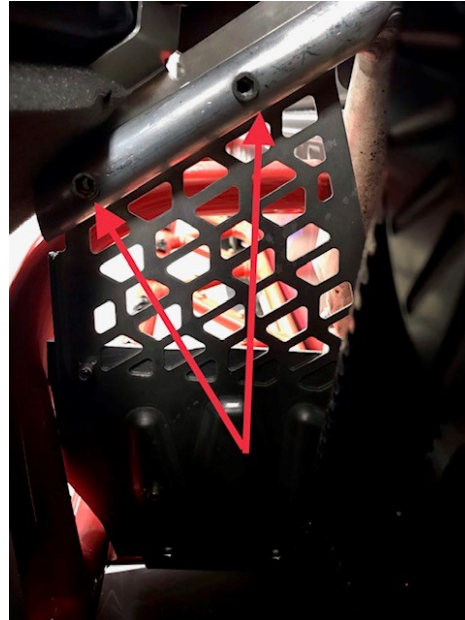

Step 3: Align the battery box bracket with the two factory mounting locations and use 3mm Allen wrench with the supplied M5 X .8 fastener to mount the battery box.

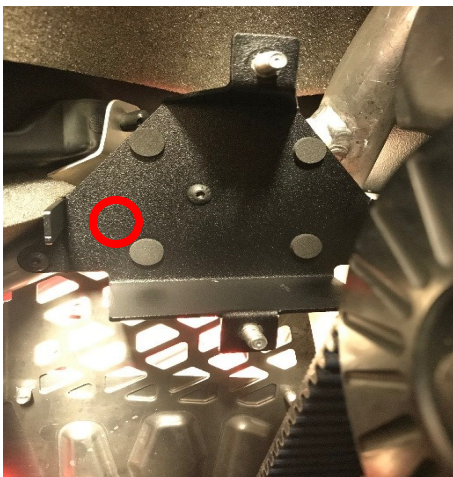

Step 4: Install Battery and Cover with supplied ¼-20 hex head locknuts. The top mounting flange may need to be bent down slightly to make the studs line up with the holes in the cover. This is normal because it was designed to slightly pinch the top of the battery to help it hold in its location.

**Due to Manufacturing Tolerances, In some installs you may need to use the foam that came with the battery to make sure the battery doesn't "float" in the battery box.

*Note: Also recommended is to drill 3/16" hole in factory tube using highlighted hole above as a guide and place a 3/16" rivet in that location.



Please contact Cole with any installation related questions at:
989-372-1723 or cole@cvcustoms.com