



Uno
High Chair "White"
Model # 044289-003

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

SAFETY PRECAUTIONS

Read all instructions before assembly and use of the high chair. Keep instructions for future use.

⚠ WARNING ⚠

FOLLOW THE MANUFACTURERS INSTRUCTIONS

DO NOT LEAVE CHILDREN UNATTENDED.

THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED - MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.

POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.

DO NOT USE THE HIGH CHAIR UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.

BE AWARE OF THE RISK OF OPEN FIRE AND OTHER SOURCES OF STRONG HEAT, SUCH AS ELECTRIC BAR FIRES, GAS FIRES ETC, IN THE VICINITY OF THE HIGH CHAIR.

DO NOT USE THIS HIGH CHAIR UNTIL THE CHILD CAN SIT UP UNAIDED.

Check that all safety locks are engaged before placing a child in the high chair.

Always keep child in view while in high chair.

Not recommended for a child under 6mths old.

The tray is not designed to hold the child in the high chair.

Use safety harness at all times.

Always secure your child in the restraint. Ensure that your child wears a correctly fitted and adjusted harness at all times.

Only use high chair on a flat, even and horizontal floor.

Do not elevate the high chair on any structure or table.

Do not allow children to stand on the seat or climb into or out of the high chair.

When adjusting the high chair, make sure that parts of your child's body are clear of any moving parts.

Do not carry the high chair with a child in it.

To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords. Position the high chair away from furniture when the high chair is not being used at a table with the tray removed.

The high chair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.

Periodically check that all parts of the high chair are in good working order.

Do not use the high chair if it is damaged or broken, contact CNP Brands for repair advice.

The weight of the child using this high chair should not exceed 15kgs.

Avoid crushing the high chair when storing or loading into a car.

Promptly replace worn out or broken parts.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service. In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.


Supplied loose in box:




Seat with Harness x1



Tray x1

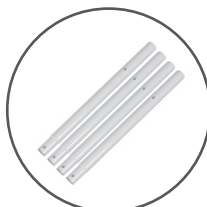

Top Legs x4

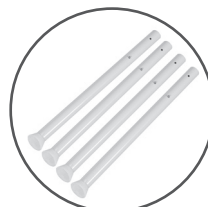

Lower Legs x4



Uno
High Chair "White"
Model # 044289-003


IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

ASSEMBLY OPERATING INSTRUCTIONS

To assemble legs onto seat...



1a. Slide the front top legs with grooves into the front holes of the seat, ensuring the grooves align correctly with internal tab. Depress spring pin and push leg into seat, ensuring pin pops into retaining hole on seat. Repeat for rear legs.

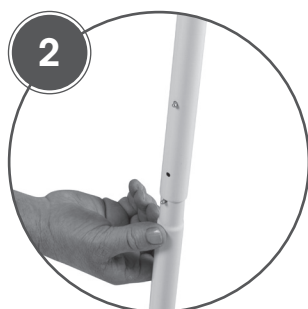

2a. Push the four lower leg bars onto the four top legs by depressing springpin and pushing each top leg in. Ensure spring pin pops out of retaining hole.

Attaching and removing tray...




1a. Hook in tray pegs into the positioning slots as shown in image. Push tray down until it firmly clips onto seat. Make sure tray is secured by grabbing and lifting tray.



2a. Grab the tray on the left or right in position shown. Whilst holding chair down, firmly lift and unhook tray and remove.


Harness restraints...

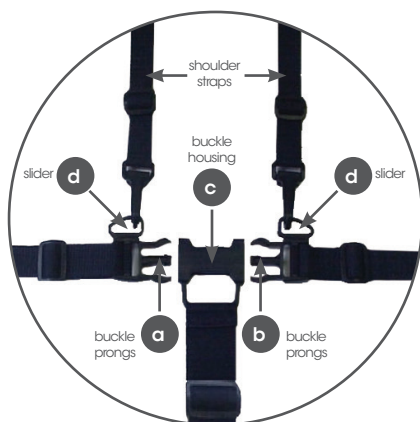

- To secure child in harness, push buckle (a) and (b) into the buckle housing (c) until the buckle prongs snap into position.
- Carefully adjust the harness by pulling the slider (d) until the desired fit is achieved in the lap, shoulder and crotch strap.
- To release the buckle, squeeze the top and bottom prongs until it disengages.

CAUTION: The harness must be used at all times and be correctly adjusted - most injuries from highchairs are caused by falls.

Removing harness from seat for cleaning...

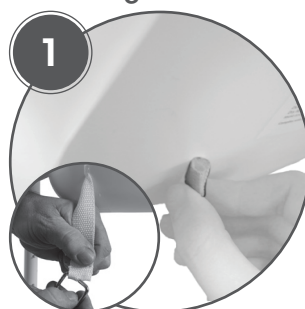

- Remove D ring from harness strap by sliding webbing through the slot in the D ring as shown.
- Push strap end through slot in seat and remove harness as shown.

CAUTION: ALWAYS re-fit harness after cleaning and before re-use.

Low chair mode...



- Remove the upper legs and insert 4 x lower legs directly into the seat base.

HOW TO CARE FOR YOUR CHILDCARE HIGH CHAIR

Cleaning

To ensure the long-lasting use of your highchair wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your highchair, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands.

If you have any difficulties in assembling the high chair, please contact our Service Department. In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

