

308-1911V2 FAQs

We are weather enthusiasts like you and know proper running equipment is important. These FAQs provide valuable information on setup, positioning, and troubleshooting your station. We recommend Adobe Reader version 10 or greater available at: <http://get.adobe.com/reader>

CONTENTS

308-1911v2 FAQs	1
Contents	1
GENERAL INFORMATION.....	1
BATTERIES: What do I need to know about batteries?.....	1
What are the power requirements for this station?	2
SETUP: How do I setup my station?.....	2
Button Functions.....	2
Where to I place my station?	3
How do I view HI LO temperature/Humidity readings?.....	3
Alert: How do I set my Humidity Alerts?	3
How do I Disarm Alerts?.....	4
How do I manually set the time?	4
WEEKDAY: How do I correct the day of the week?	5
Does this station have 12 hour and 24 hour time options?.....	5
Time ALarm: How do I set my Time Alarm?	5
How Do I Activate or Deactivate my Time Alarm?.....	5
How do I view Full Weekday or Day, Month, Date?	5
TROUBLESHOOTING.....	6
FACTORY RESET: How do I factory reset my station?.....	6
Why am I going through batteries quickly?	6
Why are parts of letters or number missing?.....	6
Why is My new station unreadable?	6

GENERAL INFORMATION

BATTERIES: WHAT DO I NEED TO KNOW ABOUT BATTERIES?

- Good fresh batteries are important for best performance in your sensors and as backup in your station.
- Batteries with an expiration date of 2020, were manufactured in 2010.

- We recommend batteries with an expiration date no more than 6 years in advance of the current year for best performance.
- A minimum voltage of 1.48 volt per battery is required for best performance.
- Lithium batteries may be used in outdoor sensors. Alkaline batteries for the station.

WHAT ARE THE POWER REQUIREMENTS FOR THIS STATION?

308-1911: 2-AAA batteries


SETUP: HOW DO I SETUP MY STATION?

1. Install batteries into the station.
2. Set time/date.

BUTTON FUNCTIONS

There are 5 function buttons on this projection clock.

SET | + (PLUS) | -(MINUS) | 🔔 (ALARM) | ALERT

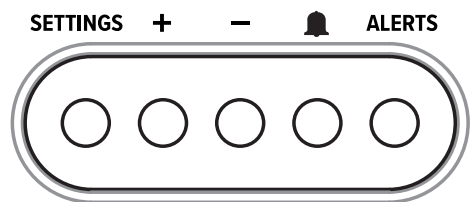

1. SET

Normal Time Display:

- Hold for 2 seconds to set time/calendar, etc.
- Press and release to toggle full day of the week or 3 letter day, month & date.

Setting mode:

- Press and release to move to next item.

2. + PLUS button

Normal Time Display:

- Press and release to view HI Temperature and HI Humidity records

Setting-

- Press to increase the values during setting.
- Hold 2 seconds to quickly adjust values.

Alerts-

Press and release to arm an alert.

3. - MINUS Button:

Normal Time Display:

- Press and release to view LO Temperature and LO Humidity records

Setting-

- Press to decrease values during setting.
- Hold 2 seconds to quickly adjust values.

Alerts-

- Press and release to disarm an alert.

4. **ALARM button (bell icon)**

Normal time display:

- Hold 2 seconds to enter alarm set mode
- Press and release to activate/deactivate alarm.

Alarm Mode:

- Press to move from hours to minutes setting.

5. **ALERT button**

Normal time display-

- Press and hold for 2 seconds to set Humidity Alerts

Alert Setting:

- Press and release to move through HI and LO alert settings.

WHERE TO I PLACE MY STATION?

Your station is designed for placement on a desk or countertop, or wall mounted.

- Best reception occurs when only one wall is between your station and your sensor outside.
- Position you station six feet from other electronics and wireless devices. If you suspect RF (radio frequency) interference, simply move your station a few feet.

HOW DO I VIEW HI LO TEMPERATURE/HUMIDITY READINGS?

- All HI | LO temperature/humidity records reset automatically at 12:00 (midnight).
 - From normal display, press the PLUS button to view HI temperature/humidity records
 - From normal display, press the MINUS button to view LO temperature/humidity records
- HI/LO records reset automatically at midnight. No manual reset.

ALERT: HOW DO I SET MY HUMIDITY ALERTS?

This station has programmable HI and LO indoor humidity alerts, no temperature alerts.

1. Hold the ALERTS button to enter alert set mode. The HI Humidity value will flash.
2. Use the + button to arm or the – button to disarm.
3. When the alert is ON the alert value will flash. Use the + button to adjust value. Press the ALERTS button to move to the LO alert.
4. Use the + button to arm or the – button to disarm.
5. When the alert is ON the alert value will flash. Use the + button to adjust value. Press the ALERTS button to confirm and exit.

HOW DO I DISARM ALERTS?

- When armed alert value is reached, station will beep 5 times each minute, until out of alert range.
- The flashing alert and icon will indicate alert is still active.
- Press any button to stop the temp alert sound.

Disarm Alerts

1. Hold the ALERTS button 2 second to enter alerts mode.
2. Then use the + button to arm or the – button to disarm.
3. Press the ALERTS button to move to the next alert or exit.

HOW DO I MANUALLY SET THE TIME?

- Hold the **SETTINGS button** to enter time set mode.
- Press the + or - button to adjust the values.
- Press the **SETTINGS button** to confirm adjustments and move to the next item.
- Press the **ALERTS button** at any time to exit.

Setting Order:

1. Language (English | Español | Francais)
2. Beep ON/OFF
3. Hour
4. Minutes
5. Year
6. Month
7. Date
8. Fahrenheit / Celsius

SETTINGS:

1. Hold the SETTING button for 2 seconds. **ENGLISH** will flash. Press the + or - button to select ESPAÑOL or FRANCAIS for language.
2. Press the SETTINGS button to move to **BEEP ON/OFF**. Use the + or - button to turn off the beep sound.
3. Press the SETTINGS button to set the **Hour**. Press the + or - button to adjust.
4. Press the SETTINGS button to set then set the **Minutes**. Press the + or - button to adjust. Hold to adjust quickly.
5. Press the SETTINGS button to set the **Year**. Press the + or - button to adjust.
6. Press the SETTINGS button to set the **Month**. Press the + or - button to adjust. Hold to adjust quickly.
7. Press the SETTINGS button to set the **Date**. Press the + or - button to adjust. Hold to adjust quickly.
8. Press the SETTINGS button to select **Fahrenheit** or Celsius temperature. Press the + or - button to select.

9. Press the **SETTINGS** button to confirm and exit.

WEEKDAY: HOW DO I CORRECT THE DAY OF THE WEEK?

- The day of the week will set when the Year, Month, and Date are set. If your day of the week is incorrect, yet the month and date are correct, please go the [program menu](#) and check the **YEAR** setting.

DOES THIS STATION HAVE 12 HOUR AND 24 HOUR TIME OPTIONS?

- No this station only has 12-hour time.

TIME ALARM: HOW DO I SET MY TIME ALARM?

1. Hold the **ALARM** button for 2 seconds to enter alarm time set mode. The hour will flash.
2. Press the + or - button to adjust the alarm hour.
3. Press the **ALARM** button to confirm and move to the minutes.
4. Press the + or - button to adjust the alarm minutes.
5. Press the **ALARM** button to confirm and exit.

HOW DO I ACTIVATE OR DEACTIVATE MY TIME ALARM?

Note: When you finish settings, the alarm is active. The bell icon will show.

- From normal time display, press and release the **ALARM** button to deactivate or to activate the alarm. The alarm time will show for 2 seconds.
 - When **bell** icon shows, one button press will deactivate
 - When **bell** icon is not showing, this one button push will activate
- When active the alarm clock icon will show.
- The bell icon will not show if the alarm is not active.

Note: One button press from normal time display will activate or deactivate alarm and view alarm time for 2 seconds. You will be able to see alarm time and activate or deactivate at the same time.

HOW DO I VIEW FULL WEEKDAY OR DAY, MONTH, DATE?

- Press and release the **SETTINGS** button to select Weekday or Day, Month, Date to be displayed.

TROUBLESHOOTING

FACTORY RESET: HOW DO I FACTORY RESET MY STATION?

A Factory Restart returns the station to its default settings (erases history) and to “out of the box” condition.

1. Remove batteries from your sensor and batteries from your station.
2. Press any button 20 times.
3. After 15 minutes insert fresh batteries into your sensor, and into your station.
4. Wait 15 minutes to establish a strong connection.
5. Place sensor outside.

WHY AM I GOING THROUGH BATTERIES QUICKLY?

- Test a new set of [batteries](#). Write down the date of installation and the voltage of the batteries.
- When the batteries fail, please note the date and voltage again. This is helpful in determining the problem.
- Check for leaking batteries, which may damage the station.

WHY ARE PARTS OF LETTERS OR NUMBER MISSING?

- This is generally a power related issue.
- [Batteries](#) may be overpowered or underpowered. Remove batteries from station.
- Press any button 20 times. Leave the station unpowered for 1-2 hours.
- Install fresh alkaline batteries with correct polarity.

WHY IS MY NEW STATION UNREADABLE?

- On a brand new station, check for thin plastic films of printed scratch guard that may be on the screen. This thin piece of plastic has printed numbers for store displays.
- With all power removed the station should be blank.
- If numbers still appear, please check for scratch guard.
- Check that the batteries polarity is correct.
- This is generally a power related issue.
- [Batteries](#) may be overpowered or underpowered. Remove batteries from Station.
- Press any button 20 times. Leave the batteries out of the display for 2 hours.