WAVE STYLE C

USER MANUAL

Music Control Some apps with different protocols might not work.

Find My Phone Tap on this icon to find your phone. Once enabled, your phone will start ringing and vibrating. Tap again to stop it.

Your watch Wave Style Call should be connected to your phone via Bluetooth and within its range for this feature to

Watch Faces Tap on this icon to change your watch face.

Screen Sleep

Tap on this to set screen sleep duration.

Tap on this to turn on vibration.

Do Not Disturb Tap on this to disable all notifications except alarms.

System

Tap on this to restart your watch.

Power off Tap on this to switch your watch off.

WAVE STYLE CALL

Thank you for choosing the boAt Wave Style Call as your fitness transformation companion.


hoat

Allow this manual to guide you through the functioning of your smartwatch. Please read it thoroughly before using it for a smooth sail. You may refer to these instructions for later use as well.

oAt Wave Style Call x1 JSB magnetic charging cable x User Manual x1 •Warranty Card x1

CHARGING THE WATCH

The smartwatch must be charged before initial use. It takes 2 hours to be fully charged. Connect and charge the watch with the image below as a reference, using a 5V/2A adapter.

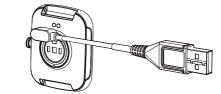

Note: Once your watch is at 10% battery, it will automatically switch to power saving mode which will disable all functions.

TURNING THE WATCH ON/ OFF

To turn the watch on/ off, long-press the side button for 3-5 seconds. You can wake the screen by lifting your wrist.

Factory Reset

Download app

About

Shows the device details

Tap on this to reset watch data

All data will be erased if watch is reset

Scan the QR code to download the app





not distu







Do not disturb

CONNECTING TO THE APP

1 Download the boAt Crest app on your phone.

Available on both App Store (iOS 13.0 and above) and Google Play Store (Android 6.0 and above)

Scan [QR CODE] (Also available on the watch)

2. Connect the device with the boAt Crest app

3. Select Wave Style Call on the home screen of the app and click pair to connect.

4. To use all features of your Wave Style Call seamlessly, tap on 'yes' to the 'connection' and 'grant access' system prompt.

5. Turn your phone's Bluetooth and GPS on.

6. Disable battery optimization



Note: To ensure connectivity throughout your journey, make sure the app is allowed to run in the background of your phone at all times.

iPhones will not prompt any information unless you complete Bluetooth pairing with WAVE Style Call.

Voice assistan

You can access Ok google and Siri on your phone with this feature. Make sure your dual connection is completed to use this feature. Phone has to be in unlock mode in order for this feature to work



Swipe down for shortcut menu

You can access DND, Alarms, Clock, Find My Phone, Brightness, Settings

Swipe left or right to access all data

You can access daily activity and Sp02, heart rate monitor, sleep monitor, notifications from

PRODUCT PARAMETERS:

el	boAt Wave Style Call
en Type	169" HD Display
ery Capacity	240 mAh
weight	46g
tooth version	Bluetooth 5.0 + BT3.0
king temperature	0° ~ 45° Celcius
rging time	about 2.5. hours
king time	up to 7 days in normal mode, up to 2 days on BT calling
imum transmission power	7.5dBm
uency band	2402 - 2480 MHz

SYNCING YOUR SMARTWATCH TO THE APP

Data Synchronization

Open the app on your phone. Make sure your Wave Style Call is connected to the app Synchronization will start automatically once you enter the app interface.

NAVIGATING THROUGH THE FUNCTIONS

SHORT PRESS THE SIDE BUTTON FOR MAIN MENU

To use the BT Calling feature, open the boAt Crest app and pair the watch.

Once paired you will get the pop-up on the app home screen to connect with Phone's Bluetooth.

Click on "pair" to connect with phone's Bluetooth.

Alternatively, you can go to phone's Bluetooth settings and pair "STYLECALLBT" to start the calling feature on your watch.

Note: Enable call alerts from the setting to get calls on the watch

Up to 20 contacts can be saved in the phonebook.

Call history will show the latest call details.

Use a dialer to dial any number.

Note: To optimize the battery performance. BT calling will be on standby mode if not in use, it will be active as soon as you get an incoming call or if you make an outgoing call.

Regularly clean your wrist and the strap of the smartwatch, especially after sweating during exercise or being exposed to substances such as soap or detergent, which may get stuck on the other end of the product.

Do not wash the strap with a household cleanser. Please use soap less detergent, rinse thoroughly and wipe with a piece of soft towel or napkin.

For spots or stains that are not easy to remove, scrub the area with rubbing alcohol and then follow the above procedure.

FAO

Search for the app to connect keeps failing

1 Keep the boAt Crest app updated to the latest version

- 2. Close all the programs on the watch \rightarrow Stop and restart Bluetooth and GPS \rightarrow Connect again 3. Check and enable notification functions of your phone and keep the phone and watch in close contact.
- Note: Make sure your phone system meets Android 7.0 and above and iOS 13.0 and above.

My Wave Style Call is receiving no alerts, texts, or phone calls

Make sure smart reminders on the app are on and synced to the Wave Style Call. Also make sure your notification center of the phone is displaying messages. Only then will your smartwatch also display those notifications

Make sure app is running in the background and battery optimization feature on the phone is disabled.

My Bluetooth keeps getting disconnected

1 Make sure there is not more than 7m distance between Bluetooth on the phone & the watch. 2. There is no obstacle in between the watch and the phone.

3. Make sure the app is running in background

Activities

Noto.

Click on the sports mode icon to choose from 10 different sports modes: Walking, Treadmill, Running, Badminton, Football, Basketball, Tennis, Yoga, Dancing, Indoor Cycling To pause or stop the exercise, press the home button, click finish to end the exercise.

*All records will be available on the app if you keep it synchronized.

Activity Records Tap to check Activity Records of the day.



ivity recon

Heart Rate Monitor

Wear the watch on your wrist, then click on the icon to start measurements. You can also view the data on the app.

Measurements are for reference only and not for medical purposes.

SpO2 monitoring

Wear the watch on your wrist, then click on the icon to start measurements. You can also view the data on the app.

Measurements are for reference only and not for medical purposes.

Which functions of the Wave Style Call need Bluetooth to work?

Call & Text Notifications, Find My Phone, music control, camera control, weather forecast, cloud and custom watch faces and need Bluetooth connectivity to work.

Will it be okay to take a bath wearing the Wave Style Call?

The IP68 water resistance will only work under the following conditions: 1) Maximum depth of water: 15m (2) Maximum time for exposure to water: 10 minutes The watch isn't suitable for hot baths, hot springs, saunas, snorkeling, diving, water skiing and other wading or deep-water activities with high-speed water flow.

SAFETY & PRODUCT INFORMATION

Do not disassemble, bore or damage the battery.

• Do not disassemble the built in batteries of non-replaceable battery devices.

Do not use sharp objects to remove the battery.

Health Warning

• If you are wearing a pacemaker or other implanted electronic devices, please consult your doctor before using the heart rate monitor of the watch.

• The optical heart rate sensor will glow green. If you suffer from epilepsy or are sensitive to blinking light sources, please consult your physician before wearing this device.

 The device tracks your daily activities through sensors. This data is intended to tell you about your daily activities such as steps, sleep, distance, heart rate and calories, but may not be completely accurate.

designed for fitness and not for medical purposes. They are not applicable to the diagnosis, monitoring, treatment or prevention of any diseases or symptoms. The heart rate and blood pressure data is for reference only. We're not responsible for any deviation in data.

Avoid wearing the watch too tightly. Make sure you keep your skin dry - the area that comes in contact with the watch. If symptoms such as redness or swelling appear on your skin, immediately stop using the watch and consult the doctor.

Sleep Monito

criteria is met.

Notes:

Guided Breathing Mode

with the instructions given to relax.

Notifications Tap on this icon to check notifications.

Stopwatch

- use are not covered by the warranty.

CAUTION

product content.

toxic substances.







Tap on the icon to review the sleep data of the previous night. Once the asleep criteria is met, your Wave Style Call will start recording from 8 pm at night to 10 am in the morning the next day. Once you lie down and watch detects no movement for 30 minutes, It will start recording, and will stop recording if it detects excessive movement. You can check the data on the app only after the awake



You can also track sleep scores on the boAt Crest app.

*For accurate sleep data recording, the asleep criteria has to be met which includes limited movement, wrist positions and angles, and more.

*The awake criteria will be met only after it records some noticeable movement

Click on the breath training icon to regulate your breathing



Tap on the icon to start the stopwatch.



Things to keep in mind

Sync data everyday days to avoid data loss.

 Water Resistance will not work for seawater, acidic and alkaline solutions, chemical reagents & other corrosive liquid. The damage or defects caused by misuse or improper

Sports modes support up to 6 hours of exercise at a time.

Avoid wearing the watch too tight in daily use. Keep the parts of skin touching the watch


• Keep your arm still while measuring data for accurate measurement.

Disclaimer: This product is an electronic monitoring product and is not intended as a medical reference. We reserve the right to modify or improve any of the functions described in this manual without any prior notice. At the same time, we hold the right to continuously update the

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT SUBSTITUTE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort you contribute to recycle valuable raw materials and treatment of

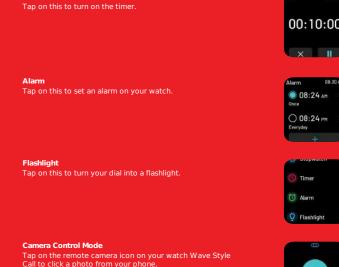

Furn the camera on from your phone to use this feature.

