



boat

WAVE STYLE CALL

Thank you for choosing the boAt Wave Style Call as your fitness transformation companion.

Allow this manual to guide you through the functioning of your smartwatch. Please read it thoroughly before using it for a smooth sail. You may refer to these instructions for later use as well.




WAVE STYLE CALL USER MANUAL

PACKAGE CONTAINS:

- boAt Wave Style Call x1
- USB magnetic charging cable x1
- User Manual x1
- Warranty Card x1

CHARGING THE WATCH


The smartwatch must be charged before initial use. It takes 2 hours to be fully charged. Connect and charge the watch with the image below as a reference, using a 5V/2A adapter.

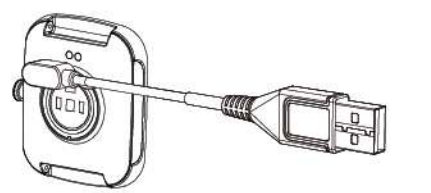

Note: Once your watch is at 10% battery, it will automatically switch to power saving mode which will disable all functions.

TURNING THE WATCH ON/OFF

To turn the watch on/off, long-press the side button for 3-5 seconds. You can wake the screen by lifting your wrist.

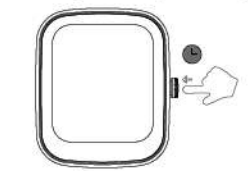

CONNECTING TO THE APP

1. Download the boAt Crest app on your phone.

Available on both App Store (iOS 13.0 and above) and Google Play Store (Android 6.0 and above)

OR

Scan [QR CODE] (Also available on the watch)

2. Connect the device with the boAt Crest app

3. Select Wave Style Call on the home screen of the app and click pair to connect.

4. To use all features of your Wave Style Call seamlessly, tap on 'yes' to the 'connection' and 'grant access' system prompt.

5. Turn your phone's Bluetooth and GPS on.

6. Disable battery optimization



Note: To ensure connectivity throughout your journey, make sure the app is allowed to run in the background of your phone at all times. iPhones will not prompt any information unless you complete Bluetooth pairing with WAVE Style Call.

SYNCING YOUR SMARTWATCH TO THE APP

Data Synchronization

- Open the app on your phone.
- Make sure your Wave Style Call is connected to the app.
- Synchronization will start automatically once you enter the app interface.

Note: Synchronize data at least once a day to avoid data loss in the watch.

NAVIGATING THROUGH THE FUNCTIONS

SHORT PRESS THE SIDE BUTTON FOR MAIN MENU

Call

To use the BT Calling feature, open the boAt Crest app and pair the watch.

Once paired you will get the pop-up on the app home screen to connect with Phone's Bluetooth.

Click on "pair" to connect with phone's Bluetooth.



Alternatively, you can go to phone's Bluetooth settings and pair "STYLECALLBT" to start the calling feature on your watch.

Note: Enable call alerts from the setting to get calls on the watch

Up to 20 contacts can be saved in the phonebook.

Call history will show the latest call details.

Use a dialer to dial any number.

Note: To optimize the battery performance, BT calling will be on standby mode if not in use, it will be active as soon as you get an incoming call or if you make an outgoing call.

Maintenance:

Regularly clean your wrist and the strap of the smartwatch, especially after sweating during exercise or being exposed to substances such as soap or detergent, which may get stuck on the other end of the product.

Do not wash the strap with a household cleanser. Please use soap less detergent, rinse thoroughly and wipe with a piece of soft towel or napkin.

For spots or stains that are not easy to remove, scrub the area with rubbing alcohol and then follow the above procedure.

FAQ

Search for the app to connect keeps failing

1. Keep the boAt Crest app updated to the latest version
2. Close all the programs on the watch→Stop and restart Bluetooth and GPS→Connect again
3. Check and enable notification functions of your phone and keep the phone and watch in close contact.

Note: Make sure your phone system meets Android 7.0 and above and iOS 13.0 and above.

My Wave Style Call is receiving no alerts, texts, or phone calls

Make sure smart reminders on the app are on and synced to the Wave Style Call. Also make sure your notification center of the phone is displaying messages. Only then will your smartwatch also display those notifications. Make sure app is running in the background and battery optimization feature on the phone is disabled.

My Bluetooth keeps getting disconnected

1. Make sure there is not more than 7m distance between Bluetooth on the phone & the watch.
2. There is no obstacle in between the watch and the phone.
3. Make sure the app is running in background

PRODUCT PARAMETERS:

Model	boAt Wave Style Call
Screen Type	1.69" HD Display
Battery Capacity	240 mAh
Net weight	46g
Bluetooth version	Bluetooth 5.0 + BT3.0
Working temperature	0° ~ 45° Celsius
Charging time	about 2.5 hours
Working time	up to 7 days in normal mode, up to 2 days on BT calling
Maximum transmission power	7.5dBm
Frequency band	2402 - 2480 MHz

Music Control

Some apps with different protocols might not work.



Find My Phone

Tap on this icon to find your phone. Once enabled, your phone will start ringing and vibrating. Tap again to stop it.



Notes:

Your watch Wave Style Call should be connected to your phone via Bluetooth and within its range for this feature to work.

Settings

Watch Faces
Tap on this icon to change your watch face.



Screen Sleep

Tap on this to set screen sleep duration.



Vibration

Tap on this to turn on vibration.



Do Not Disturb

Tap on this to disable all notifications except alarms.



System

Restart
Tap on this to restart your watch.



Power off
Tap on this to switch your watch off.

Factory Reset

Tap on this to reset watch data.

Notes:

All data will be erased if watch is reset



Download app

Scan the QR code to download the app



About

Shows the device details



Voice assistant

You can access Ok google and Siri on your phone with this feature. Make sure your dual connection is completed to use this feature. Phone has to be in unlock mode in order for this feature to work



Swipe down for shortcut menu

You can access DND, Alarms, Clock, Find My Phone, Brightness, Settings

Swipe left or right to access all data

You can access daily activity and SpO2, heart rate monitor, sleep monitor, notifications from here.

Activities

Tap on the sports mode icon to choose from 10 different sports modes: Walking, Treadmill, Running, Badminton, Football, Basketball, Tennis, Yoga, Dancing, Indoor Cycling. To pause or stop the exercise, press the home button, click finish to end the exercise.

Note:

All records will be available on the app if you keep it synchronized.



Activity Records

Tap to check Activity Records of the day.



Heart Rate Monitor

Wear the watch on your wrist, then click on the icon to start measurements. You can also view the data on the app.

Notes: Measurements are for reference only and not for medical purposes.



SpO2 monitoring

Wear the watch on your wrist, then click on the icon to start measurements. You can also view the data on the app.

Notes: Measurements are for reference only and not for medical purposes.



Sleep Monitor

Tap on the icon to review the sleep data of the previous night. Once the sleep criteria is met, your Wave Style Call will start recording from 8 pm at night to 10 am in the morning the next day. Once you lie down and watch detects no movement for 30 minutes, it will start recording, and will stop recording if it detects excessive movement. You can check the data on the app only after the awake criteria is met. You can also track sleep scores on the boAt Crest app.

Notes:

For accurate sleep data recording, the asleep criteria has to be met which includes limited movement, wrist positions and angles, and more. The awake criteria will be met only after it records some noticeable movement



Guided Breathing Mode

Click on the breath training icon to regulate your breathing with the instructions given to relax.



Notifications

Tap on this icon to check notifications.



Stopwatch

Tap on the icon to start the stopwatch.



Timer

Tap on this to turn on the timer.



Alarm

Tap on this to set an alarm on your watch.



Flashlight

Tap on this to turn your dial into a flashlight.



Camera Control Mode

Tap on the remote camera icon on your watch Wave Style Call to click a photo from your phone.

Notes: Turn the camera on from your phone to use this feature.



WAVE STYLE CALL