

## INTENDED USE:

Thanks for the purchase of electric slow cooker with HIGH HEAT CROCKERY POT.


This slow cooker is intended for household use only.

## IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be observed, including the following:


1. Read all instructions before use.
2. To protect against electrical shock, do not immerse cord, plug or whole cooker in water or other liquid.
3. Make sure the exterior of stone pot and interior of metal liner are completely dry before switching ON.
4. Do not use abrasive cleaners, it will damage the protective layers.
5. Unplug from outlet when not in use and before cleaning.
6. Do not let supply cord hang over edge of tables or counters, or touch hot surfaces.
7. Do not place the appliance on or near any heat sources such as a gas or electric burner.
8. Avoid sudden temperature changes, such as adding refrigerated foods into a heated crockery pot or wash crockery pot immediately after use. It will cause the pot to crack.
9. Care should be taken to avoid hitting the stone pot against water faucet, as all stone pots can be broken by a sharp blow.
10. If the supply flexible cord is damaged, the appliances must be returned to the manufacturer or appointed service centre for replacement of cord.

11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.

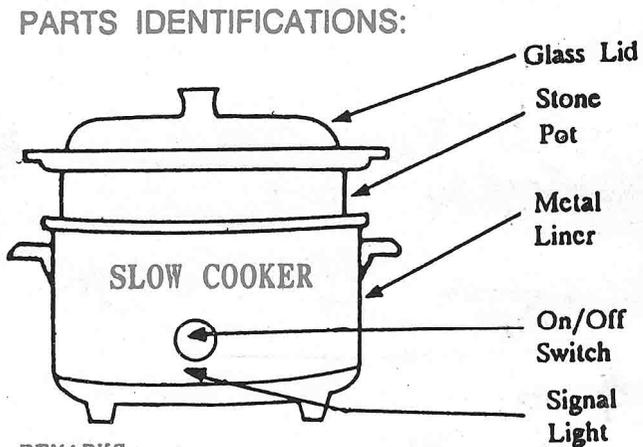

**REMARKS :**

THE HIGH HEAT STONE POT CAN BE USED ON THE FOLLOWING KITCHEN UTENSILS.

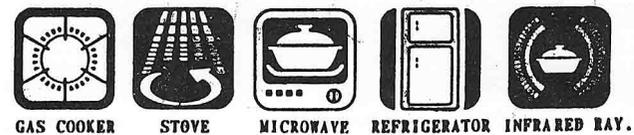

## USING YOUR SLOW COOKER

1. When recipe is prepared, place in stone pot and fit glass lid.
2. Set control dial to recommended setting and follow cooking times suggested in recipe. Timing is approximately 1 hour on high and 2-2½ hours on low but don't worry if you take longer as it is nearly impossible to overcook with your slow cooker.
3. Stone pot should be at least half full for best cooking results.
4. Stirring is not necessary when slow cooking and to prevent heat loss avoid removing glass lid.
5. Cooking time can be shortened by placing a sheet of aluminum foil between the stone pot and the glass cover.

## AUTOMATIC CONTROL

Your automatic slow cooker has a special feature which allows the cooker to start on HIGH heat and automatically shift to LOW heat after approximately 1½ hours.

Most recipes require initial cooking at high temperature and you must be present to reset the cooker to the low temperature. The automatic temperature reset does this without you being present, so you simply set your switch to AUTO and your slow cooker can be left unattended.

The AUTO setting provides the same heat as the HIGH setting.

The AUTO setting changes to low after approximately 1¾ hours.



## HIGH HEAT SLOW COOKER

MODEL: HH 1500A  
230V~ 50Hz 115W  
CAPACITY: 1.2L

MODEL: HH 3500A  
230V~ 50Hz 200W  
CAPACITY: 3.2L

MODEL: HH 5500A  
230V~ 50Hz 250W  
CAPACITY: 4.7L