



Two-Wire Indoor Station

Configuration Guide

Legal Information

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the company website Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks Acknowledgement

Trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". OUR COMPANY MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL OUR COMPANY BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF OUR COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND OUR COMPANY SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, OUR COMPANY WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.




Data Protection

During the use of device, personal data will be collected, stored and processed. To protect data, the development of our devices incorporates privacy by design principles. For example, for device with facial recognition features, biometrics data is stored in your device with encryption method; for fingerprint device, only fingerprint template will be saved, which is impossible to reconstruct a fingerprint image.

As data controller, you are advised to collect, store, process and transfer data in accordance with the applicable data protection laws and regulations, including without limitation, conducting security controls to safeguard personal data, such as, implementing reasonable administrative and physical security controls, conduct periodic reviews and assessments of the effectiveness of your security controls.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

Chapter 1 Typical Application	1
Chapter 2 Local Operation	2
2.1 Activate Indoor Station	2
2.2 Quick Operation	3
2.3 Configuration Settings.....	5
2.3.1 Set Indoor Station Network Parameters	5
2.3.2 Set Linked Device IP	6
2.3.3 Set Indoor Station No.....	8
2.4 Door Settings	9
2.5 Sound Settings.....	9
2.6 Restore Indoor Station	11
2.7 System Maintenance.....	11
2.8 Linked to the Mobile Client.....	13

Chapter 1 Typical Application

The typical application of the device is shown as below.

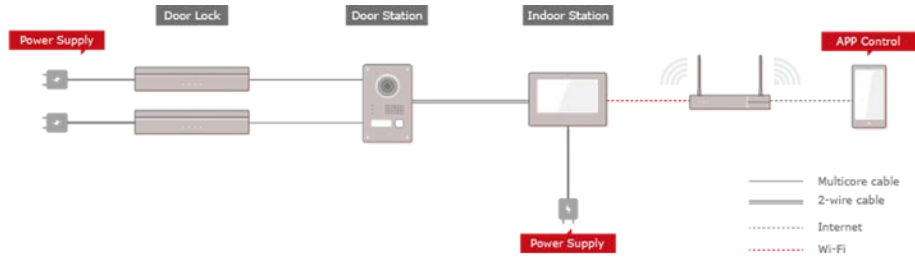


Figure 1-1 Typical Application

Wire the door station to the indoor station with 2-wire cables.

You can activate door station by indoor station.

Set the open duration and other parameters by indoor station.

Refers to the Indoor Station Configuration Guide for details.

Chapter 2 Local Operation

2.1 Activate Indoor Station

You can only configure and operate the indoor station after creating a password for the device activation.

Steps

1. Power on the device. It will enter the activation page automatically.

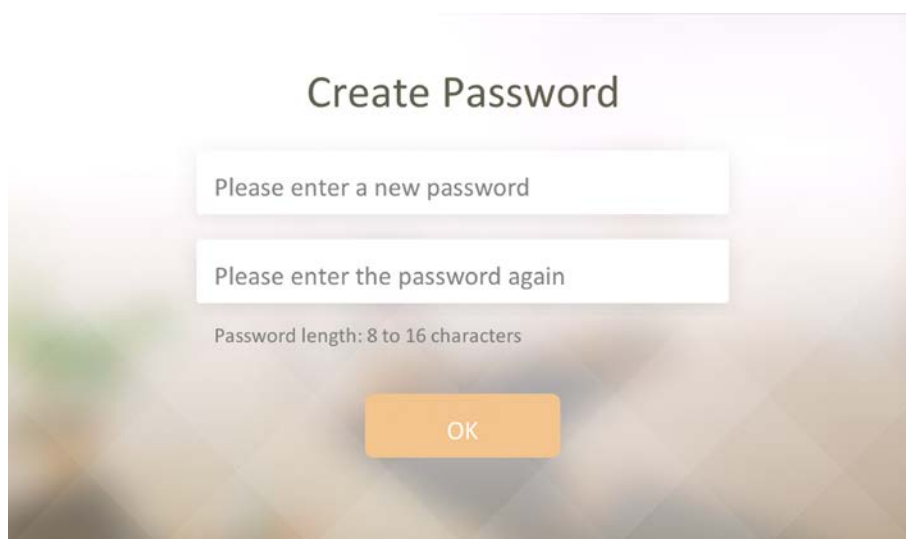


Figure 2-1 Activation Page

2. Create a password and confirm it.
3. Tap **OK** to activate the indoor station.

Note

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

2.2 Quick Operation

After device activation, the wizard page will pop up.

Steps

1. Choose Language and tap **Next**.

Figure 2-2 Language Settings

2. Set network parameters and tap **Next**
 - Edit **Local IP**, **Subnet Mask** and **Gateway** parameters.
 - Enable **DHCP**, the device will get network parameters automatically.

Wizard-Network 2/4

DHCP


Local IP	10.6.112.253
Subnet Mask	255.255.255.0
Gateway	10.6.112.254

Previous Next Skip

Figure 2-3 Network Parameters

3. Configure the indoor station.
 - 1) Choose **Indoor Station Type**.
 - 2) Edit **Floor** and **Room No.**
 - 3) Tap **Next**.

Two-Wire Indoor Station Configuration Guide

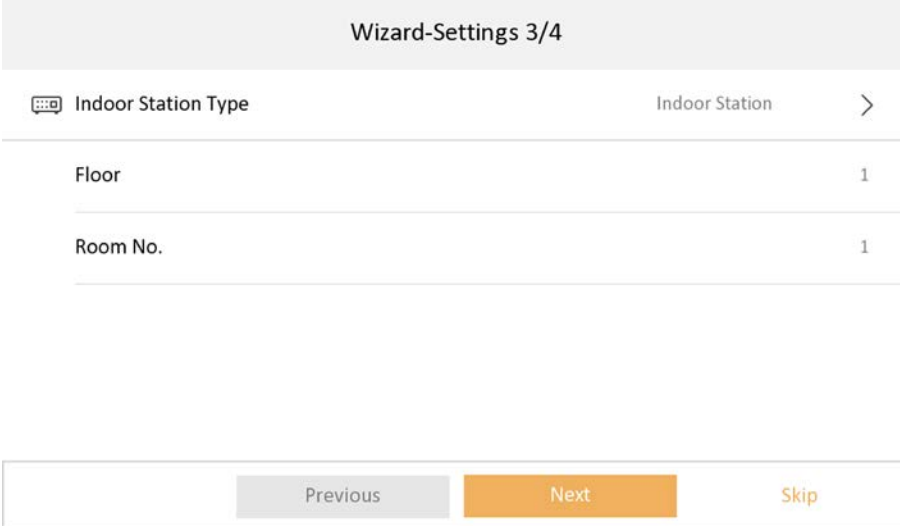


Wizard-Settings 3/4	
Indoor Station Type	Indoor Station
Floor	1
Room No.	1

Previous Next Skip

Figure 2-4 Indoor Station Settings

4. Linked related devices and tap **Next**. If the device and the indoor station are in the same LAN, the device will be displayed in the list. Tap the device or enter the serial No. to link.

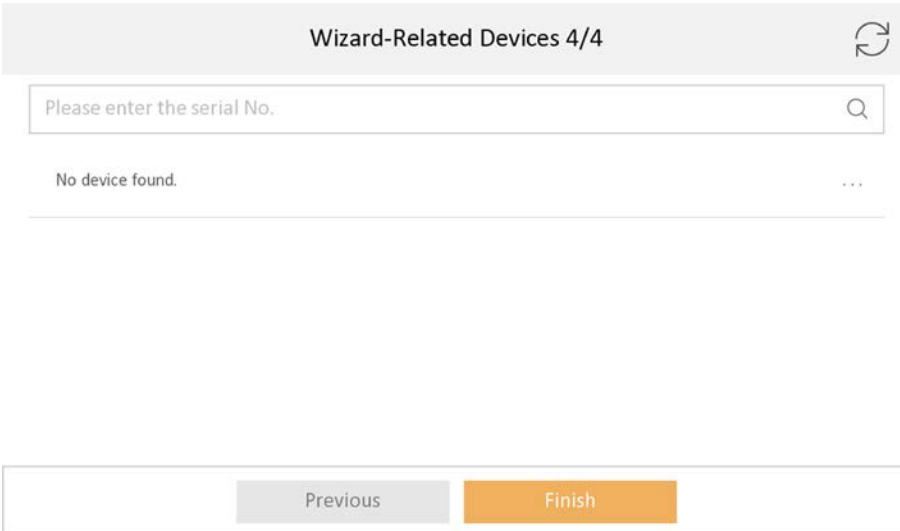

Wizard-Related Devices 4/4

Please enter the serial No.

No device found. ...


Previous Finish

Figure 2-5 Related Device

- 1) Tap the door station in the list to link.

Note

If the door station is inactive, the system will pop up the dialog to activate the door station.

- 2) Tap  to pop up the Network Settings page.
- 3) Edit the network parameters of the door station manually or enable **DHCP** to get the network parameters automatically.
- 4) Optional: Enable **Synchronize Language** to synchronize the language of door station with indoor station.

- 5) Tap **OK** to save the settings.
5. Tap **Finish** to save the settings.

2.3 Configuration Settings

Configuration settings is required before starting using the indoor station. It is necessary to set the indoor station network, room No., linked devices, device time display, and so on.

2.3.1 Set Indoor Station Network Parameters



Network connection is mandatory for the use of the indoor station. Set the network parameters after activating the indoor station. Only when the IP address of the indoor station is in the same network segment as other devices, it can work properly in the same system.

Steps

Note

The default IP address of the indoor station is 192.0.0.64.

Two ways are available for you to set IP address: DHCP, and set IP address manually.

1. Tap **Settings** →  → **Configuration** →  to enter the network settings page.

Note

Enter activate password as the admin password.

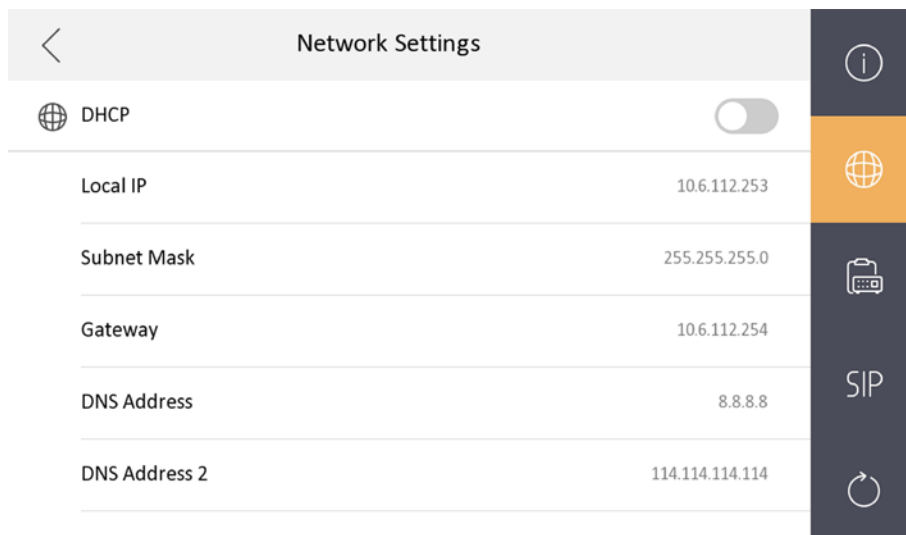


Figure 2-6 Network Settings

2. Enable **DHCP**, then the indoor station can search and get an IP address automatically.
-

Note

Skip the following steps if you have enabled DHCP.

3. Set the IP address manually.
4. Tap to select the **NIC Type**.

2.3.2 Set Linked Device IP

Linked network parameters refers to the network parameters of devices (like door station, doorphone, master station, center, etc.), to which the indoor station is linked. Linked devices for the indoor station refers to door station, center, master station, and doorphone.

With the private SIP protocol, intercom can be realized only when all these devices are in the same network segment with the indoor station.

With the standard SIP protocol, intercom can be realized when all these devices support the standard SIP protocol.

Steps

Note


- The doorphone does not support adding with the standard SIP protocol.
 - Here take door station network settings as example.
-

1. Tap **Settings** →  → **Configuration** →  to enter the device management page.
-

Note

Default admin password is the activation password.

Two-Wire Indoor Station Configuration Guide

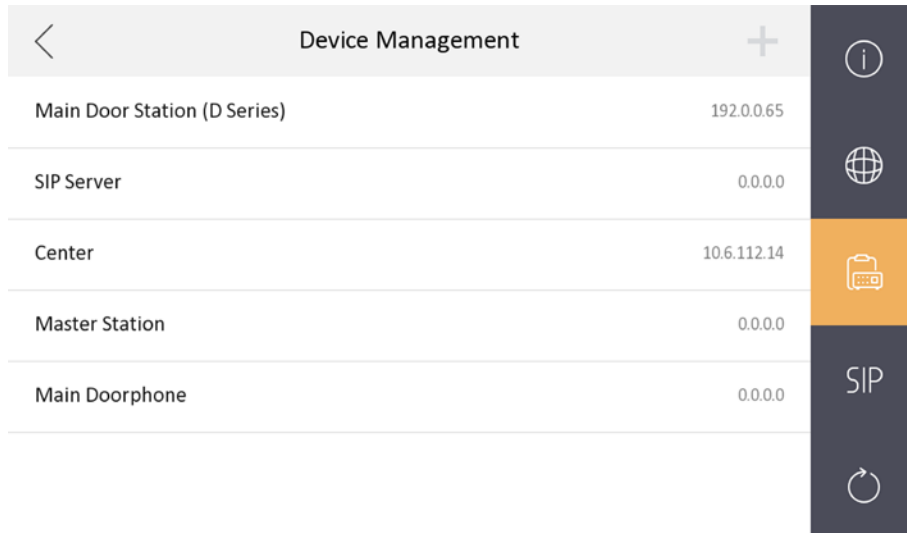

The screenshot shows a mobile application interface for 'Device Management' under 'Private SIP'. The title bar includes a back arrow, the text 'Device Management', and a plus sign. A vertical sidebar on the right contains icons for information, globe, a highlighted phone icon, 'SIP', and refresh. The main content is a table with five rows.

Main Door Station (D Series)	192.0.0.65
SIP Server	0.0.0.0
Center	10.6.112.14
Master Station	0.0.0.0
Main Doorphone	0.0.0.0

Figure 2-7 Device Management (Private SIP)




The screenshot shows a mobile application interface for 'Device Management' under 'Standard SIP'. The title bar includes a back arrow, the text 'Device Management', and a plus sign. A vertical sidebar on the right contains icons for information, globe, a highlighted phone icon, 'SIP', and refresh. The main content is a table with three rows.

Main Door Station (D Series)	192.0.0.65
Center	0.0.0.0
Master Station	

Figure 2-8 Device Management (Standard SIP)


2. Tap **Main Door Station** to pop up the device information dialog.

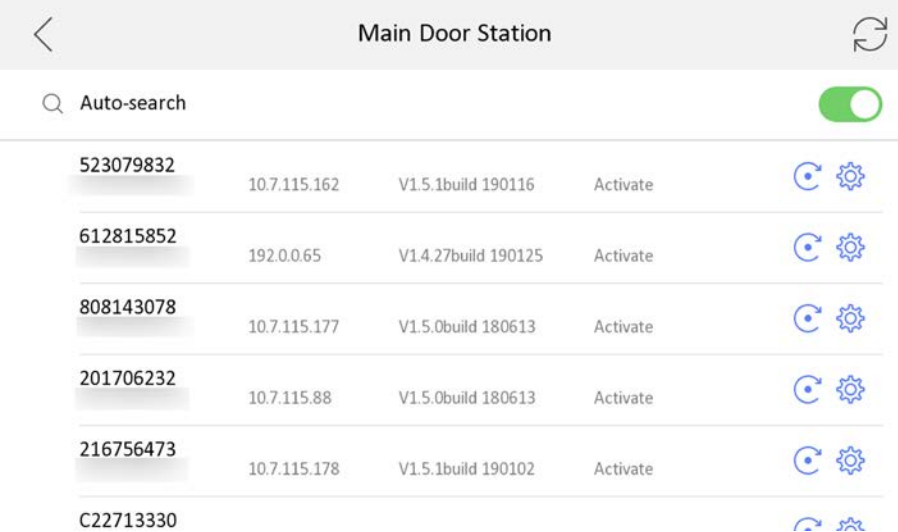

ID	IP Address	Firmware Version	Status	Actions
523079832	10.7.115.162	V1.5.1build 190116	Activate	Refresh, Settings
612815852	192.0.0.65	V1.4.27build 190125	Activate	Refresh, Settings
808143078	10.7.115.177	V1.5.0build 180613	Activate	Refresh, Settings
201706232	10.7.115.88	V1.5.0build 180613	Activate	Refresh, Settings
216756473	10.7.115.178	V1.5.1build 190102	Activate	Refresh, Settings
C22713330				Refresh, Settings

Figure 2-9 Device Information

Restore the door station via indoor station.

Tap  to restore the parameters of the door station.

Modify the IP address of the linked door station.

Tap  to modify the IP address of door station.

3. Select the device to link. Edit the network parameters.

2.3.3 Set Indoor Station No.

Indoor station No. and the indoor extension No. are numbers, which can be dialed by other devices to call the indoor station and the indoor extension in an intercom system. The indoor station No., is composed of the floor No. and the room No.

The indoor extension No. Should be a numeric from 1 to 5.

Up to 5 indoor extensions can be set for 1 indoor station.

Steps

1. Tap **Settings** →  → **Configuration** →  to enter the indoor station No. settings page.

Note

Default admin password is the activation password.

Two-Wire Indoor Station Configuration Guide

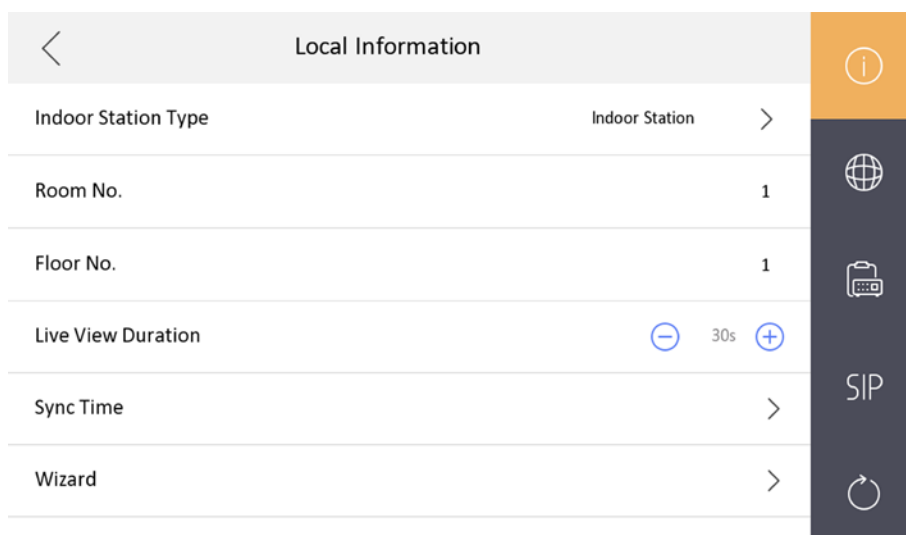



Figure 2-10 Set Indoor Station No.

2. Select **Indoor Station** to set the indoor station No. (Room No.) and the floor No.
3. Select **Indoor Extension** to set the indoor extension No. and the room name.

2.4 Door Settings

Steps

1. Tap **Settings** →  → **Door Settings** to enter the settings page.
2. Enable **Door No. 1** or **Door No. 2** according to your needs.
3. Set the **Open Duration** for the door.


Note

Open duration ranges from 1 to 5 seconds.

2.5 Sound Settings

You can set the ringtone, ring duration, call forwarding time, volume of microphone and loudspeaker, enable/disable touch sound and auto-answer function on call settings page.

Steps

1. Tap **Settings** →  to enter the call settings page.

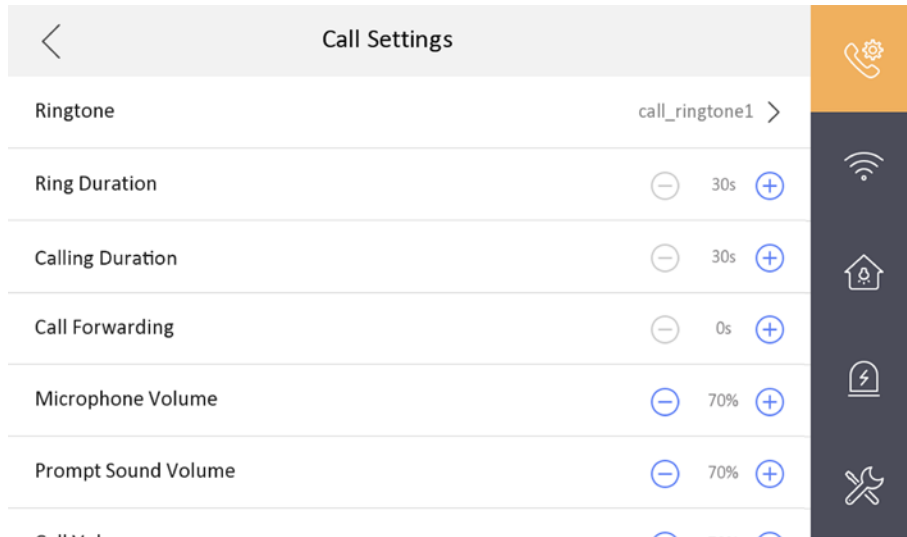


Figure 2-11 Call Settings

2. Set corresponding parameters.

Ringtone

There are 3 ringtones by default, and you can custom and import at most 4 ringtones via Batch Configuration Tool or Guarding Version Client Software.

Ringtone Duration: The maximum duration of indoor station when it is called without being accepted. Ringtone duration ranges from 30 s to 60 s.

Call Forwarding

The ring duration limit beyond which the call is automatically forwarded to the mobile phone designated by the resident. Call forwarding ranges from 0 s to 20 s.

Calling Duration

The call will end automatically when the actual calling duration is longer than the configured one. Calling duration ranges from 30 s to 60 s.

Auto-answer

After enabling the auto-answer function, the visitor can leave the voice message to the indoor station from the door station, the master station, or the client software automatically.

Note

Indoor Extension does not support the ring duration settings, call forwarding settings, or auto-answer function.

2.6 Restore Indoor Station

Steps

1. Tap **Settings** →  → **Configuration** →  to enter the restore default settings page.

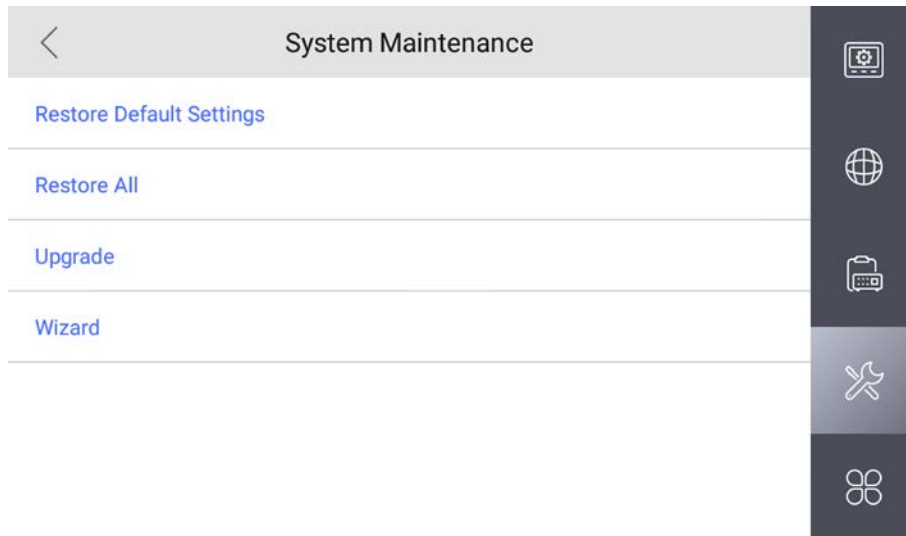



Figure 2-12 Restore Default Settings

2. Tap **Restore Default Settings** to restore the default settings and reboot the system.
3. Tap **Restore All** to restore all parameters and reboot the system.

2.7 System Maintenance

You can format or install TF card, clear the screen, view the version information of the indoor station and reboot the system on the system maintenance page.

Tap **Settings** →  to enter the system maintenance page.

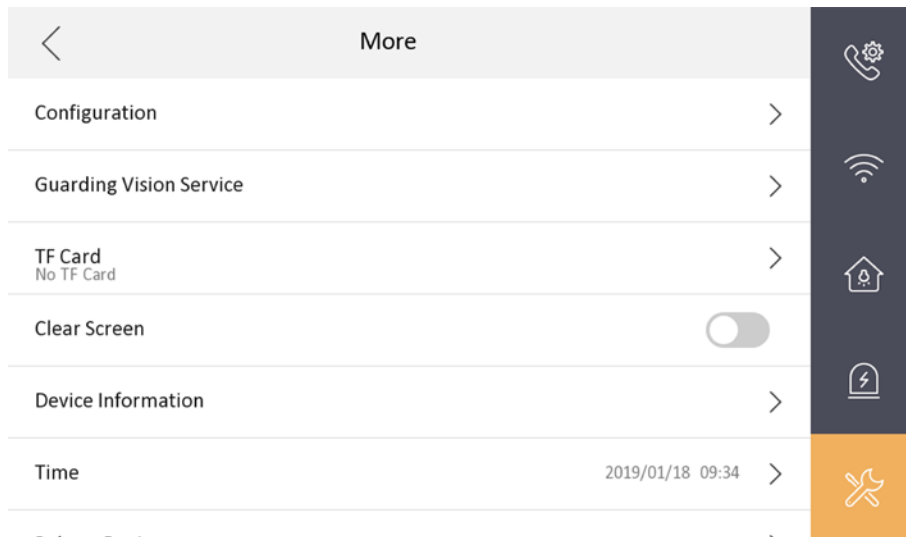


Figure 2-13 System maintenance

Clear Screen

Enable **Clear Screen** to clear the screen.

Note

- After enabling Clear Screen function, press and hold the Unlock key to exit the clear screen mode.
 - The device without unlock key will exit the clear screen mode automatically when the time is out.
-

Reboot Device

Tap **Reboot Device** to reboot the system.

Language

Tap **System Language** to change the system language.


Note

The indoor station supports 11 languages.

Brightness Adjustment

Tap + or - to adjust the brightness.

Upgrade Device

Tap **Configuration** →  to enter the restore default settings page.

Tap **Upgrade** to get the upgrade package.

Do Not Disturb

Tap **Settings** →  to enter the call settings page.

Tap **Do Not Disturb** to choose **Close**, **All Day** or **Schedule**.

Note

If you choose the **Schedule**, you should set the start time and end time.

2.8 Linked to the Mobile Client

Steps

1. Tap **Settings** →  → **Guarding Vision Service** to enter the settings page.

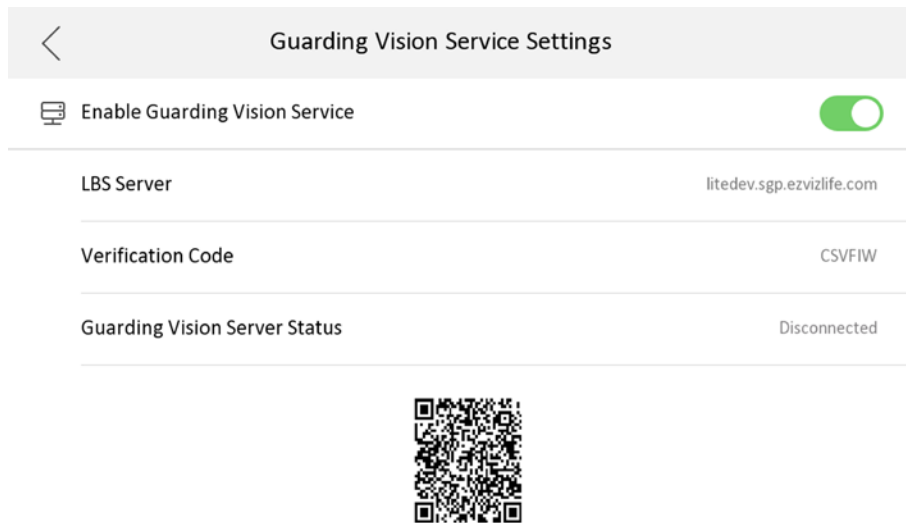


Figure 2-14 Guarding Vision Service Settings

2. Enable **Enable Guarding Vision Service**.
 3. Edit **LBS Server** and **Verification Code**.
-

Note

Verification code is used to add the device to mobile client.

4. Optional: Scan QR code on the screen to add the device to the mobile client.

