

USER MANUAL

VIRTUAL PINBALL

COMBO 2 IN 1 WITH ARCADE GAMES



CONTENS

1.Setting Up

2.Powering Up

3.Controls

4.To play a game

5.To disable FX Tables

6.To disable the “Coin Button”

7.To change the Volume


8.Adjusting the feet

9.Fixing the 32” screen’s cabinet

10. Adjusting the screen

11. Troubleshooting

Setting Up

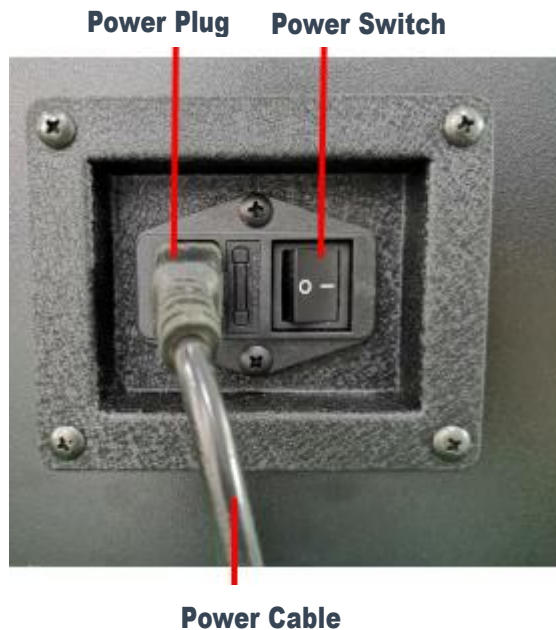

Powering Up

To switch the unit on, plug the power cable into a wall socket, then the connecting lead into the Power Plug on the side of the machine. Power the machine on by flipping the power switch to on. The machine will power on, and load up the games menu.

The bottom of cabinet's switches instruction:



The left button is the computer's button. Press this button to power on the computer or off. The right **Red Button** is the whole machine's power button. More convenient to power on the machine or off. The right **Green Button** is the the game system's changing button. 6292 Arcade Game system or 1107 pinball Game system.

Warm Tip:Unplug the plug, when you don't use the machine, for the environment protection.

Controls



1. **LMSave**: Left MagnaSave(game playing) Nudge Left(FX); Previous page



2. **Flipper**: Left Flipper; Previous game(game exploring)



3. **Left**: Left Tilt (game playing)



4. **Right**: Right Tilt (game playing)



5. **Up**: Fwd Tilt (game playing)



6. **Down**: Mech Tilt (game playing)



7. **Start**: Select Game List/Game Menu(game exploring),Start game (game playing)



8. Plunger:



Trackball:



9. **Coin**: Coin button to insert coin, for free play



10. **Exit**



11. **RMSave**: **Start Game**/Right MagnaSave/**Fire&Next page**(game playing) Nudge Right(FX)



12. **Flipper**: Right Flipper ; Next game(game exploring)



To play a game

Note: FX2&FX3 Table games are free play games. Can be disabled.

When you would like to start a new game, you can press the “Flipper”, “LMSave”, “RMSave” button to choose the game. Then press the “Start” button to enter the game, press the “Coin” button to get credit or insert coins to get credits. When you get credits, you can press the “Start” or “RMSave” button to start game. Finally, pull the plunger or press “Start” button to launch and press the left and right “Flipper” button to play games.


If you want to play arcade game, just choose one game then press “Start” Button. You will see a dialog box on the screen. Choose the dialog box’s “Lists” and enter. Many game tables on it, then you should choose “Arcade games Tables ” and enter it. Now you can choose a game to play. Hope you have a good time.

Note:

- 1.Free Play Mode: To play a game, you must enter the game first, then press the “Coin” Button for free play.
- 2.Coin Operated Mode: To play a game, you must enter the game first, then insert coins to play game.

To disable FX Tables:


1. Power off the machine.
2. Open the back door and pull out the usb stick.
3. Prepare usb mouse and plug in the computer.
4. Power on the machine.
5. Double left click "DISABLE FX" When Windows desktop comes out.
6. Use mouse to shutdown the computer.
7. Take off the usb mouse and plug in the usb stick.
8. Power on the computer.

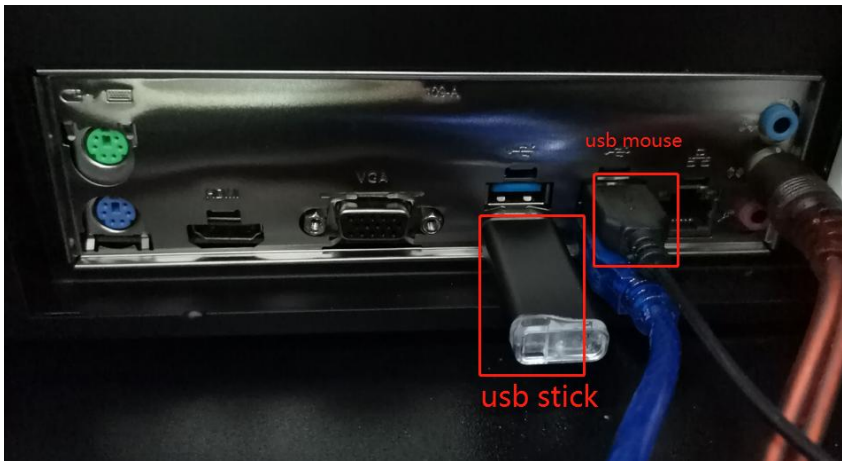


To disable "Coin Button":

Coin Button can work or not :

1. Turn on the machine , open the coin door.
2. A red button as PICTURE 1 shown, on the right side of the coin door. **(This button for pinball games)**
3. Turn on the machine , open the back door.
4. A red button as PICTURE 2 shown, near the arcade game board. **(This button for 6296 arcade games)**
5. Press red button to "I", the coin button will work, now it is free play mode. You can get credits for the games by pressing the "Coin Button"
6. Press red button to "O", the coin button won't work , now it is coin operated mode. You can only get credits for the games by inserting coins to the coin acceptor.

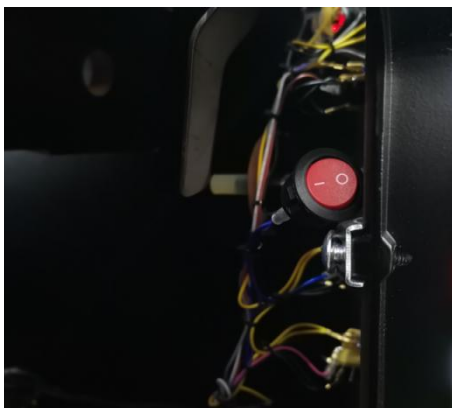

PICTURE 1

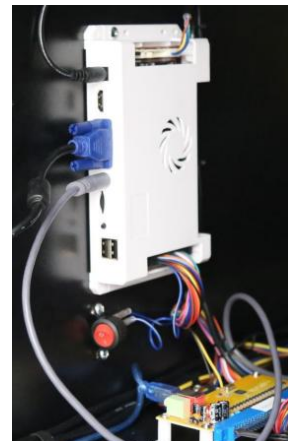

PICTURE 2

To change the Volume:

1. Open the coin door.
2. The amplifier controls can be just inside of the machine as seen above. The large central dial changes the volume, and the smaller dials will alter the bass and treble respectively. You can adjust the amplifier as you like.
3. When done, you can simply close the coin door and lock up again.



Adjusting the Feet:

The virtual pinball's feet can each be individually adjusted.

To adjust the feet, simply twist the feet in either direction to move up or down. If needed, you can use a 22 mm spanner to turn the nut to the desired level.



Fixing the 32" screen's cabinet:



1. Lift up the cabinet.
 2. Open the cabinet's back door.
 3. Tighten the screws. As the picture show.
- Note:** The screws are in a bag for you.

Adjusting the Screen:

1. Open the back door, you can see a setting board on the screen. As picture show:



2. **"MENU"** button: means Confirm or Enter ; **"ENTER"** button: means Enter or Exit

" + " and **"UP"** button: means Add or On

" - " and **"DOWN"** button: means Decrease or Off

"AUTO" button: means Exit or Automatic adjust the screen.



When you press **"MENU"** button first, then press **"AUTO"** button. The **"AUTO"** button means Exit.

When you just press **"AUTO"** button, the **"AUTO"** button means Automatic adjust the screen. This function could be use when the screen don't display full or the screen have something wrong.

"POWER" button: means Power On or Off the screen

3. How to adjust the screen:

Step 1: Press **"MENU"** to enter the screen's background setting. As picture show:

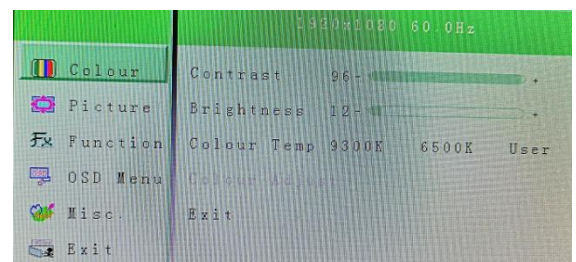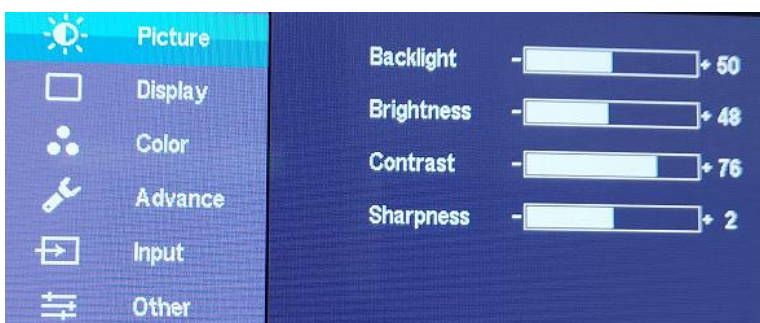

Step 2: Press **" + "** **" - "** **"UP"** **"DOWN"** button to choose the parameter which you want to adjust.

Step 3: Press **"MENU"** or **"ENTER"** to Enter the parameter, press the **" + "** **" - "** **"UP"** **"DOWN"** button to change parameter's size.

Note: When you adjust something, the screen will automatically save the change.

Troubleshooting

No Sound:

If there is no sound on your pinball machine, please check if the amplifier on the system is switched on, turned up and that the cabling going into the amplifier system is securely connected.

If problem persists after these checks, contact us.

Blank Screen:

Check the indicated light of the back screen. As picture show:



1.If the LED light is green, and the screen without image display:

It means that this screen is broken. Need to exchange an another screen.

2. If the LED light is red:

First, need to check the VGA wire connect well or not.

If has checked the wires connect well and has tried to connect them again carefully, the screen still have no image. In this time, to check the graphics card's fan and the PC power's fan. To see that if they work normally.

If the graphics card's fan and the PC power's fan doesn't work well. Need to exchange their fan.

3. If the LED light is not working:

First, need to check the screen's power cord. To see that if it connect well or not.

If the power cord is plug tightly then please try to connect another power wire which is good to see if the screen power is bad.

If the power cord has no problem, it means that the screen is broken. Need to exchange another screen.

If problem persists after these checks, contact us.

Have fun!



VIRTUAL — — **PINBALL**

COMBO 2 IN 1 WITH ARCADE GAMES