



CHILDREN'S FOLDING GYMNASTIC BAR

OWNER'S MANUAL & ASSEMBLY INSTRUCTIONS

SAFETY & PRECAUTIONS

IMPORTANT:

TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING PRECAUTIONS BEFORE USING THE ADJUSTABLE WEIGHT BENCH. RETAIN OWNER'S MANUAL FOR FUTURE REFERENCE.

For the Player

For safety concerns, a player should consult an instructor or a physician before using the equipment. The adult's supervision is recommended. Please also follow the guidelines as instructed.

- Make sure the equipment is free of any obstructions in all directions when using the equipment.
- Make sure no one else is around except for the player when using the equipment.
- Make sure all the screws are tightened before each use.
- Warm up about 5 10 minutes before each use.
- Dress appropriately when using the equipment.
 For example, do not wear jewelry.
- Take a rest and drink some water regularly.
- Stop using the equipment once you feel pains, uncomfortable, or get tired.
- Stop using the equipment once you feel something unusual happened to the equipment.

For the Equipment

Ensuring the equipment is in good condition is a critical part of safety instructions. Besides setting the structure somewhere is flat and even at all times and storing it in a dry place with good ventilation, please also follow the guidelines as instructed to protect the equipment in daily care.

- Do not use the equipment in a moisture place.
- Do not hit the equipment with hard objects.
- Do not clean the equipment with volatile oils, thinners, or other organic solvents.
- Do not stick sticky materials (tape, rubber, etc.) on the equipment.

PRODUCT USE AND MAINTENANCE

Repair of the Kangaroo Hoppers® Children's Folding Gymnastic Bar should be performed only by authorized persons. NEVER modify the Kangaroo Hoppers® Children's Folding Gymnastic Bar or attempt to make adjustment(s) to, or the repair of, the unit equipment without first calling our Customer Service Department. Always notify authorized personnel to make such repairs.

WARRANTY

CHILDREN'S FOLDING GYMNASTIC BAR WARRANTY

What's Covered Under Kangaroo Hoppers LLC's Basic Warranty?

- Basic Warranty.

A. Who Is Covered?

You are covered by the Basic Warranty if you are a purchaser for use of the Kangaroo Hoppers Children's Folding Gymnastic Bar.

B. What's Covered?

The Basic Warranty covers the cost of all parts and labor needed to repair any item on your Kangaroo Hoppers Children's Folding Gymnastic Bar when it left the manufacturing plant that is defective in material, workmanship or factory preparation. These warranty repairs or adjustments will be made by Kangaroo Hoppers at no charge, using new or remanu factured parts.

C. When It Begins?

The Basic Warranty begins on the day of order.

D. When It Ends?

The Basic Warranty lasts for 12 months from the date it begins.

E. What's Not Covered?

Please note that while the standard Basic Warranty applies to defects in material and/or workmanship, it does not cover the Children's Folding Gymnastic Bar's matte finish appearance. Maintaining the matte finish appearance is solely the responsibility of the owner. Basic Warranty doesn't cover damage caused by environmental factors such as airborne fallout, insect damage, chemicals, salt, and ocean spray. Nor do your warranty cover damage caused by hailstorms, windstorms, tornadoes, sandstorms, lightning, floods, and earthquakes. Your warranty does not cover conditions resulting from anything impacting the Children's Folding Gymnastic Bar.

F. How to Contact Us?


To ensure you receive the best technical support, please visit www.kangaroohoppers.com and register your warranty. Customers with registered warranties are given a profile that allows for easier support and for us to contact you with important product notifications. If any parts are missing, worn, damaged or broken before the assembly, or you ever need to replace the parts, please contact us at support@kangaroohoppers.com.

BEFORE YOU BEGIN

Thank you for selecting the versatile Kangaroo Hoppers® Children's Folding Gymnastic Bar. It is designed and manufactured to optimize users' workout perfirmance and minimize adjustment or set-up time for user.


For your benefit, read this manual carefully before using the Folding Gymnastic Bar. If you have additional questions, please call our Customer Service Department at +1315 636 0959, 9:00 am - 5:00 pm PST (Mon.-Fri.).


BEFORE READING FURTHER, PLEASE REVIEW THE DRAWING BELOW AND FAMILIAR-IZE YOURSELF WITH THE PARTS THAT ARE LABELED.

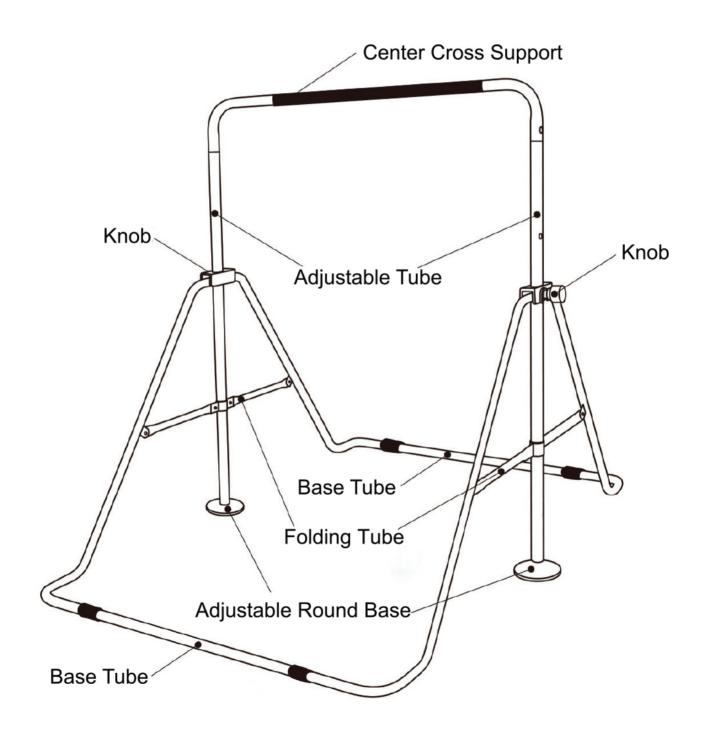


PARTS IST

No.	Description	Quantity
1	Main Frame	2
2	Spring-detent Knob	2
3	Adjustable Tube	2
4	Adjustable Round Base	2
5	Center Cross Support	1
6	Base Tube	2
7	Screw	6
8	Allen Wrench	1

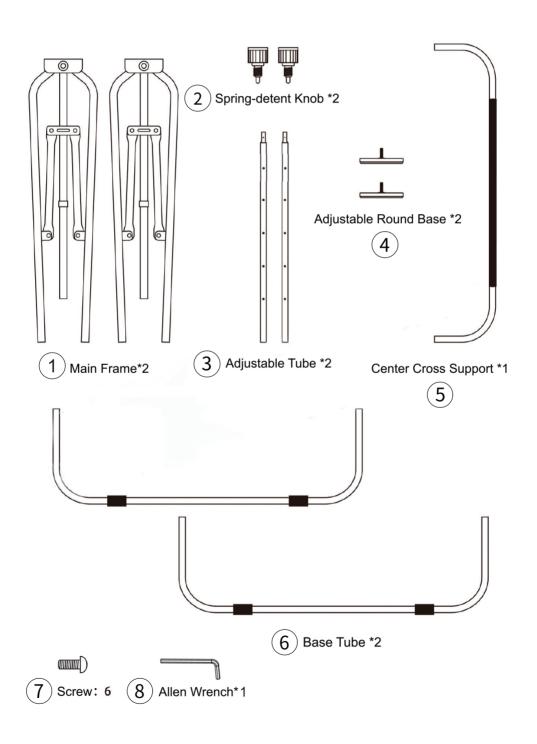

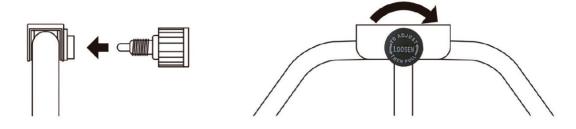


Screw The Knob

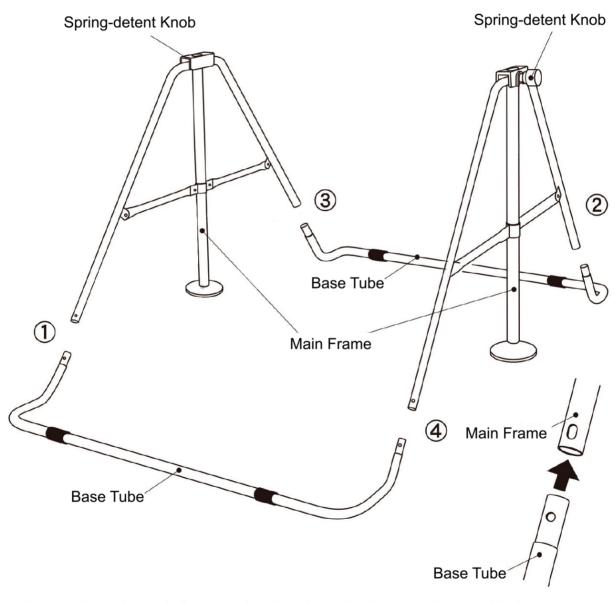


• Notice: Please let main frame and spring-detent knobs toward to outside, if not, the adjustable tube can't be install.

Please install these 4 parts follwing this order ①.②.③.④

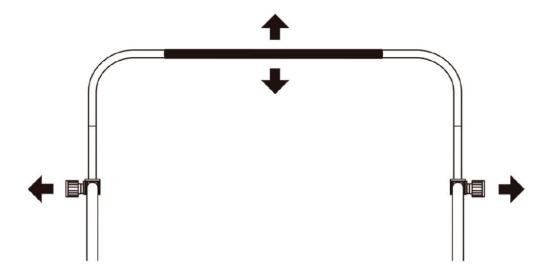


• Knobs: release two knobs, then pull it when the adjustable tube can be turned.

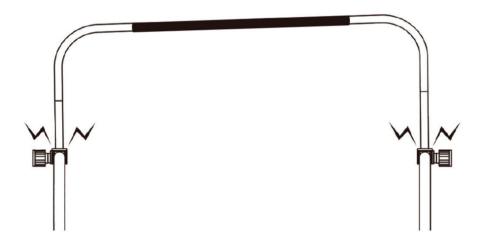

 \triangle


After both sides of the adjustment are at the same level (refer to scale) push knobs and screw them.

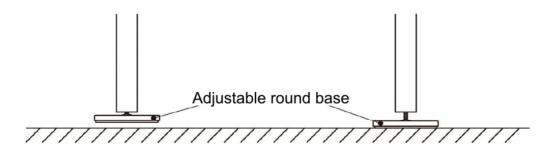

 Adjustable round base: If ground is not flat, you can adjust round base to make gymnastic bar more stable.

Congratulations!

You have assembled the Children's Folding Gymnastic Bar!

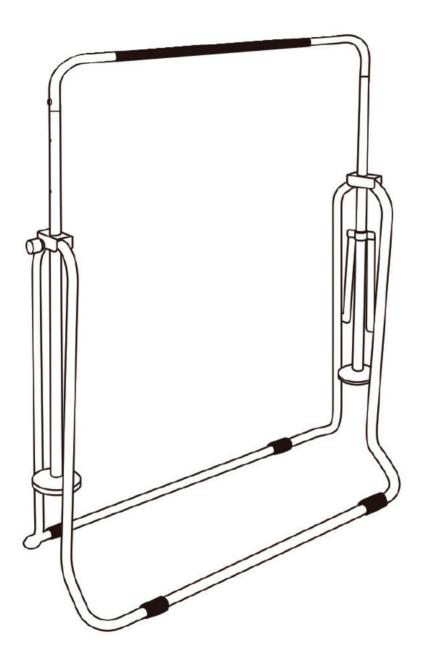





Kangaroo Hoppers



kangaroohoppers.official



Kangaroo hoppers

Q

www.kangaroohoppers.com