




Wood Stove Owner's Manual

Part 2 of 2

OSBURN 950

(OB00950 model)

INSTALLATION AND OPERATION REQUIREMENTS

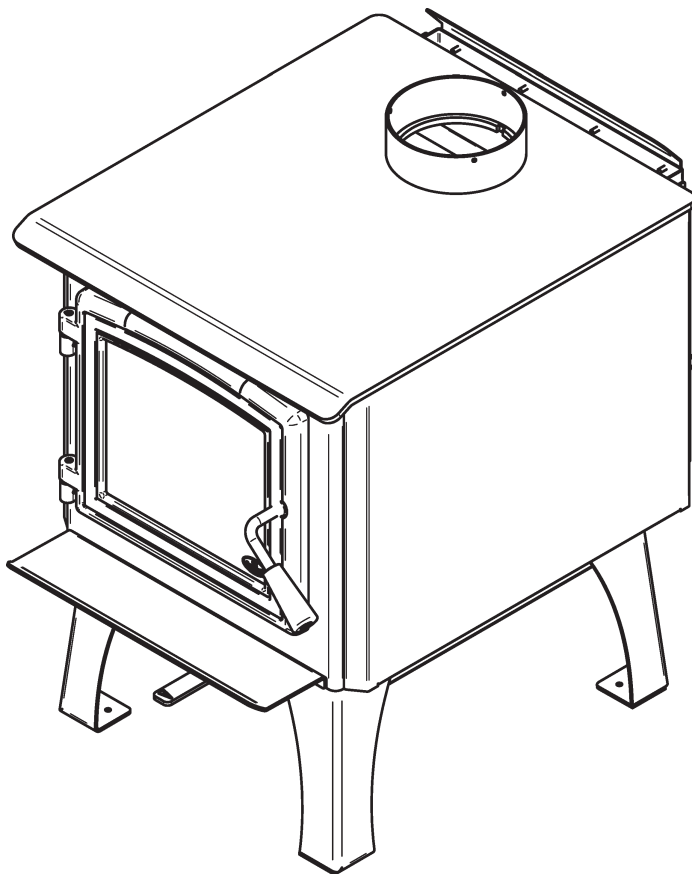

US Environmental Protection Agency
phase II certified wood stove compliant
with 2020 cord wood standard

EPA
 ≤ 2.5 g/h

Safety tested according to ULC S627,
UL 1482 and UL 737 standards by an
accredited laboratory.



CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION REQUIREMENTS
IN LOCAL AREA.

READ THIS ENTIRE MANUAL BEFORE INSTALLATION AND USE OF THIS WOOD STOVE. FAILURE TO FOLLOW THESE
INSTRUCTIONS COULD RESULT IN PROPERTY DAMAGE, BODILY INJURY OR EVEN DEATH.

READ AND KEEP THIS MANUAL FOR REFERENCE

Dealer: _____

Installer: _____

Phone Number: _____

Serial Number: _____

TABLE OF CONTENT

| | |
|---|-----------|
| 1. Certification Plate | 4 |
| 2. General Information | 5 |
| 2.1 Performances | 5 |
| 2.2 Specifications | 6 |
| 2.3 Dimensions | 7 |
| 2.3.1 Stove Dimensions | 7 |
| 2.3.2 Combustion Chamber Dimensions | 8 |
| 2.4 EPA Loading | 9 |
| 2.4.1 Air control | 9 |
| 2.4.2 High burn rate (primary air control open) | 9 |
| 2.4.3 Medium and low burn rate | 9 |
| 3. Clearances to Combustible Material | 10 |
| 3.1 Clearances | 10 |
| 3.1.1 With Heat Shield AC02762 | 12 |
| 3.1.2 With Lowered Ceiling | 13 |
| 3.1.3 With Heat Shield AC02762 and Lowered Ceiling | 14 |
| 3.1.4 Inside a Combustible Alcove | 15 |
| 3.1.5 Mobile Home | 15 |
| 3.1.6 Mobile Home With Heat Shield AC02762 | 16 |
| 4. Floor Protection | 17 |
| 5. Reducing Wall and Ceiling Clearances Safely | 18 |
| 5.1 Shield Construction Rules | 18 |
| 6. Installation of options on your product | 21 |
| 6.1 Decorative Panels | 21 |
| 6.2 Optional Fresh Air Intake Kit Installation | 22 |
| 6.3 Optional Fire Screen Installation | 23 |
| 6.4 Optional Blower And Thermodisc Installation | 24 |
| 6.5 Air Tubes And Baffle Installation | 25 |
| 6.6 Mobile Home Installation | 27 |
| 7. Maintenance/Parts Replacement | 28 |
| 7.1 Replacement | 28 |
| 7.2 Gasket | 29 |
| 7.3 Door | 29 |
| 7.3.1 Adjustment | 29 |
| 7.3.2 Door Alignment | 30 |
| 7.3.3 Gasket | 31 |
| 8. Exploded Diagram and Parts List | 32 |
| 9. Osburn Limited Lifetime Warranty | 35 |

ENGLISH

1. Certification Plate



Intertek
June/Juin 2021
Control number: 4002461

REFER TO INTERTEK'S DIRECTORY OF BUILDING PRODUCTS FOR DETAILED INFORMATION
SE RÉFÉRER AU RÉPERTOIRE DES PRODUITS HOMOLOGUÉS D'INTERTEK POUR PLUS D'INFORMATION

STANDARDS / NORMES D'ESSAI:
Certified to/Certifié selon ULC S627
Certified to/Certifié selon UL 1482
Certified to/Certifié selon UL 737
Certified to/Certifié selon CSA B415.1-10
Certified to/Certifié selon ASTM E3053-17
Certified to/Certifié selon ASTM E2515-11 (R2017)

LISTED SOLID FUEL BURNING APPLIANCE

POÊLE À COMBUSTIBLE SOLIDE HOMOLOGUÉ

MODEL / MODÈLE :

OSBURN 950

Serial Number / No. de Série: **1**

Clearances to combustibles / Déagements aux combustibles

| CANADA | | U.S.A. | |
|---|---|---|---|
| Single wall connector Tuyau à paroi simple | Double wall connector Tuyau à paroi double | Single wall connector Tuyau à paroi simple | Double wall connector Tuyau à paroi double |
| A: 14 in./po. (356 mm) | A: 6 in./po. (152 mm) | A: 12 in./po. (305 mm) | A: 6 in./po. (152 mm) |
| B: 12 in./po. (305 mm) | B: 12 in./po. (305 mm) | B: 12 in./po. (305 mm) | B: 12 in./po. (305 mm) |
| C: 11 in./po. (279 mm) | C: 6 in./po. (152 mm) | C: 11 in./po. (279 mm) | C: 6 in./po. (152 mm) |
| D: 18 in./po. (457 mm) | D: 9.25 in./po. (235 mm) | D: 16 in./po. (406 mm) | D: 9.25 in./po. (235 mm) |
| E: 18 in./po. (457 mm) | E: 18 in./po. (457 mm) | E: 18 in./po. (457 mm) | E: 18 in./po. (457 mm) |
| F: 18 in./po. (457 mm) | F: 12.875 in./po. (327 mm) | F: 18 in./po. (457 mm) | F: 12.875 in./po. (327 mm) |

MOBILE HOME
MAISONS MOBILES
Double wall connector
Tuyau à paroi double
A: 6 in./po. (152 mm) D: 9.25 in./po. (235 mm)
B: 12 in./po. (305 mm) E: 18 in./po. (457 mm)
C: 6 in./po. (152 mm) F: 12.875 in./po. (327 mm)

Protection de plancher/Floor protection
CANADA U.S.A.
G: 8 in./po. (203 mm) I: 16 in./po. (406 mm)
H: 8 in./po. (203 mm) J: 8 in./po. (203 mm)
K: 36 in./po. (914 mm)

* See owner's manual for other clearances with lowered ceiling / voir manuel d'installation pour autres déagements avec plafond abaissé

Floor-ceiling/plancher-plafond: 84 in./po. (213cm)

PREVENT HOUSE FIRES

- Install and use only in accordance with the manufacturer's installation and operating instructions.
- Contact local building or fire officials about restrictions and installation inspection in your area.
- Use listed 152 mm / 6 in. diameter single or double wall connectors with prefabricated chimneys approved UL 103 HT (US) and ULC S629 (CAN) suitable for solid fuels or lined masonry chimneys.
- See local building code and manufacturer's Instructions for precautions required for passing a chimney through a combustible wall or ceiling.
- Do not pass connector through combustible wall or ceiling.
- Do not connect this unit to a chimney serving another appliance.
- For use with solid fuel only. Do not use other fuels.
- Operate only with door closed or door open with firescreen installed. Open door or remove firescreen to feed the stove only.
- Do not obstruct the space underneath the stove.
- Do not use grate or elevate fire. Build fire directly on hearth.
- Do not overfire. If heater or chimney connector glows, you are overfiring.
- Inspect and clean chimney frequently. Under certain condition of use, creosote buildup may occur rapidly.
- Replace glass with ceramic type only.
- Install unit on a non-combustible material extending as shown above on this label.
- Suitable for mobile-home installation.
- Combustion air openings shall not be obstructed.
- This wood heater needs periodic inspection and repair for proper operation. Consult the owner's manual for further information. It is against US federal regulations to operate this wood heater in a manner inconsistent with the operating instructions in the owner's manual.

PRÉVENEZ LES INCENDIES

- Installer et utiliser conformément au manuel d'utilisation du fabricant.
- Contacter les autorités de votre localité ayant juridiction concernant les restrictions et inspections d'installation.
- Utiliser des tuyaux d'évacuation à parois simple ou double homologués d'un diamètre de 6 po. (152 mm) avec une cheminée préfabriquée approuvée UL 103 HT (US) et ULC S629 (CAN) pour utilisation au bois ou une cheminée de maçonnerie galinée.
- Voir les codes locaux et le manuel d'installation du fabricant pour le passage de la cheminée à travers un mur ou un plafond combustible.
- Ne pas traverser un plafond ou un mur combustible avec un tuyau d'évacuation.
- Ne pas raccorder cet appareil à une cheminée desservant un autre appareil.
- Pour l'usage avec du combustible solide seulement. Ne pas utiliser d'autres combustibles.
- Garder la porte fermée ou le pare-étincelle en place en tout temps. Ouvrir la porte ou retirer le pare-étincelle que lors du chargement.
- Ne rien entreposer sous l'appareil.
- Ne pas utiliser de grilles ou de chenets pour surélever le feu. Préparer le feu directement sur lâtre.
- Ne pas surchauffer. Si l'appareil ou le tuyau rougit, il y a surchauffe.
- Inspecter et nettoyer la cheminée fréquemment. Sous certaines conditions, l'accumulation de crésote peut être rapide.
- Remplacer la vitre seulement avec un verre de céramique.
- Installer l'appareil sur une plaque non combustible tel qu'indiqué sur l'étiquette.
- Poêle approuvé pour maison mobile.
- Les entrées d'air servant à la combustion ne doivent pas être obstruées.
- Cet appareil de chauffage requiert des inspections et réparations périodiques. Consulter le manuel de l'utilisateur pour plus d'information. Opérer cet appareil de chauffage de façon inconsistante par rapport au manuel de l'utilisateur consiste une violation de la loi fédérale (USA).

Optional blower: (115V, 0.8A, 60Hz)

Option ventilateur: (115V, 0.8A, 60Hz)

U.S. ENVIRONMENTAL PROTECTION AGENCY Certified to comply with 2020 particulate emission standards using cordwood.
AGENCE DE PROTECTION DE L'ENVIRONNEMENT DES É.-U. Conforme aux normes d'émission de particules de 2020 avec bûche de bois.

Weighted average emission rate / Moyenne pondérée des émissions : 1.8 g/h
Tested and certified in compliance with CFR 40 part 60, subpart AAA, section 60.534(a)(1)(ii)

WARNING: This product can expose you to carbon monoxide, which is known to the State of California to cause cancer, birth defects or other reproductive harm. (For more information go to www.p65warnings.ca.gov)



CAUTION

- HOT WHILE IN OPERATION.
- DO NOT TOUCH. KEEP CHILDREN, CLOTHING AND FURNITURE AWAY.
- CONTACT MAY CAUSE SKIN BURNS. SEE NAME-PLATE AND INSTRUCTIONS

ATTENTION

- CHAUD EN FONCTIONNEMENT.
- NE PAS TOUCHER. GARDER LES ENFANTS, LES VÊTEMENTS ET LES MEUBLES ÉLOIGNÉS.
- UN CONTACT AVEC LA PEAU PEUT OCCASIONNER DES BRÛLURES. VOIR LES INSTRUCTIONS.

Made in St-Augustin-de-Desmaures (Qc), Canada
04/06/2021 (# test)



Fabricant de poêles international
Stove Builder International

Fabriqué à St-Augustin-de-Desmaures (Qc), Canada
04/06/2021 (# test)

27862

ENGLISH

2. General Information

2.1 Performances

Values are as measured per test method, except for the recommended heating area, firebox volume, maximum burn time and maximum heat output.

| | | |
|---|--|-------------------------|
| Model | Osburn 950 (OB00950) | |
| Type of combustion | Non-catalytic | |
| Fuel Type | Dry Cordwood | |
| Recommended heating area (sq. ft.) ¹ | 250 to 1,200 ft ² (23 to 111 m ²) | |
| Total firebox volume | 1.7 ft ³ (0.0481 m ³) | |
| Loading volume EPA | 1.55 ft ³ (0.0439 m ³) | |
| Maximum burn time ¹ | 5 hours | |
| Maximum heat output (dry cordwood) ² | 45,000 BTU/h (13.2 kW) | |
| Overall heat output rate (min. to max.) ^{2 3} | 12,124 BTU/h to 26,700 BTU/h (3.55 kW to 7.83 kW) | |
| Average overall efficiency ³ (Dry cordwood) | 74 % (HHV) ⁴ | 79 % (LVH) ⁵ |
| Optimum efficiency ⁶ | 80 % | |
| Optimum overall efficiency ⁷ | 79 % | |
| Average particulate emissions rate ⁸ | 1.8 g/h (EPA / CSA B415.1-10) ⁹ | |
| Average CO ¹⁰ | 74 g/h | |

¹ Recommended heating area and maximum burn time may vary subject to location in home, chimney draft, heat loss factors, climate, fuel type and other variables. The recommended heated area for a given appliance is defined by the manufacturer as its capacity to maintain a minimum acceptable temperature in the designated area in case of a power failure.

² The maximum heat output (dry cordwood) is based on a loading density varying between 15 lb/ft³ and 20 lb/ft³. Other performances are based on a fuel load prescribed by the standard. The specified loading density varies between 7 lb/ft³ and 12 lb/ft³. The moisture content is between 19% and 25%.

³ As measured per CSA B415.1-10 stack loss method.

⁴ Higher Heating Value of the fuel.

⁵ Lower Heating Value of the fuel.

⁶ Optimum overall efficiency at a specific burn rate (LHV).

⁷ The optimum heat transfer efficiency is for the low burn rate and represents the appliance's ability to convert the energy contained in the wood logs into energy transferred to the room in the form of heat and does not take into account the chemical losses during combustion.

⁸ This appliance is officially tested and certified by an independent agency.

⁹ Tested and certified in compliance with CFR 40 part 60, subpart AAA, section 60.534(a)(1)(ii) and ASTM E3053-17 based on the ALT-125 sent by EPA on February 28th, 2018.

¹⁰ Carbon monoxide.

2.2 Specifications

| | |
|---|--------------------------------------|
| Recommended log length | 16 in (406 mm) north-south |
| Maximum log length ¹¹ | 17 in (432 mm) north-south |
| Flue outlet diameter | 6 in (150 mm) |
| Recommended connector pipe diameter | 6 in (150 mm) |
| Type of chimney | ULC-S629, UL 103 HT (2100 °F) |
| Minimum chimney height | 12 feet |
| Baffle material | C-Cast or equivalent |
| Approved for alcove installation | Yes |
| Approved for mobile home installation ¹² | Yes |
| Type of door | Simple, glazed, with cast iron frame |
| Type of glass | Ceramic glass |
| Blower | Optional (up to 100 CFM) |
| Particulate emission standard ¹³ | EPA / CSA B415.1-10 |
| USA standard (Safety) | UL 1482, UL 737 |
| Canada standard (Safety) | ULC-S627 |

¹¹ North-south: ends of the logs visible, East-west: sides of the logs visible.

¹² Mobile homes (Canada) or manufactured homes (USA): The US Department of Housing and Urban Development describes “manufactured homes” better known as “mobile homes” as follows; buildings built on fixed wheels and those transported on temporary wheels/axles and set on a permanent foundation. In Canada, a mobile home is a dwelling for which the manufacture and assembly of each component is completed or substantially completed prior to being moved to a site for installation on a foundation and connection to service facilities and which conforms to the CAN/CSA-Z240 MH standard.

¹³ Tested and certified in compliance with CFR 40 part 60, subpart AAA, section 60.534(a)(1)(ii) and draft ASTM WK47329-14. Based on ALT-125 sent by EPA on February 28th, 2018.

2.3 Dimensions

2.3.1 Stove Dimensions

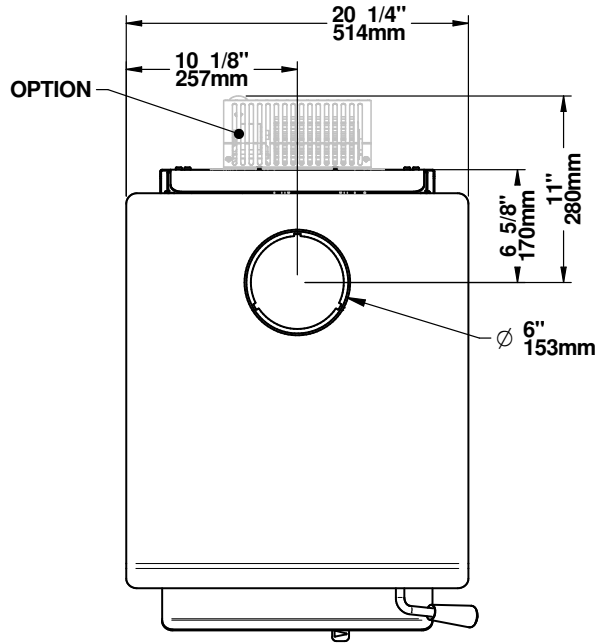


Figure 1: Top View

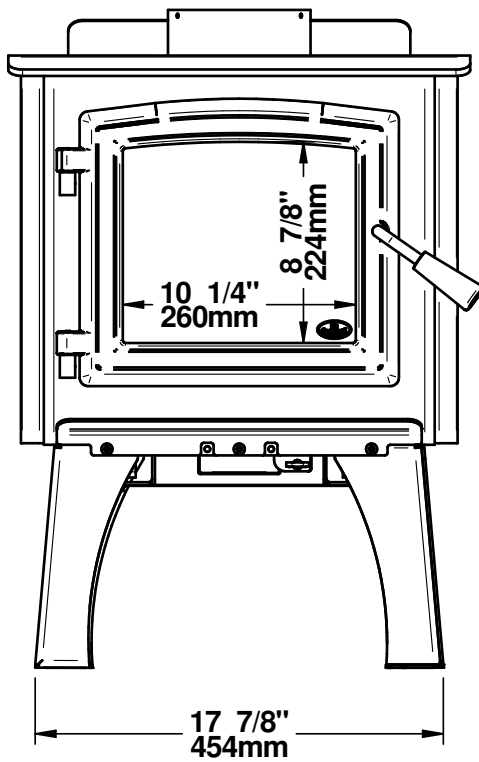


Figure 2: Front View

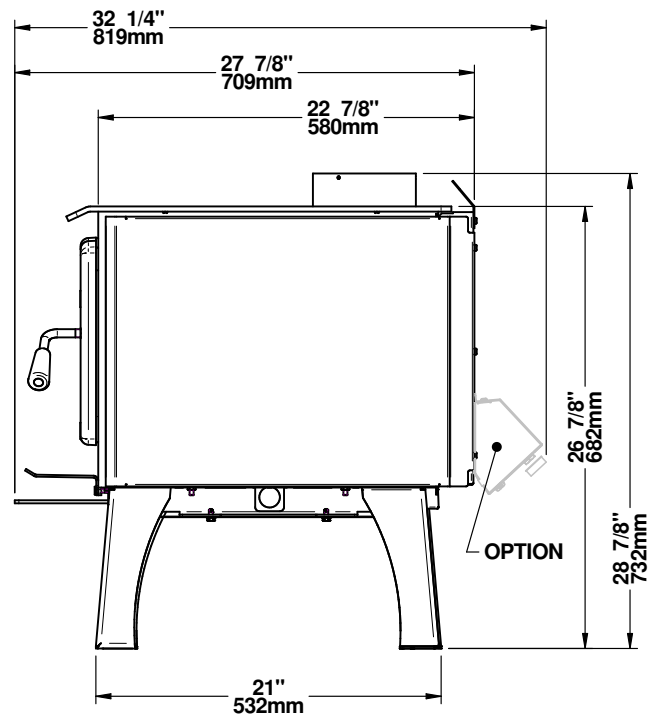


Figure 3: Side View

2.3.2 Combustion Chamber Dimensions

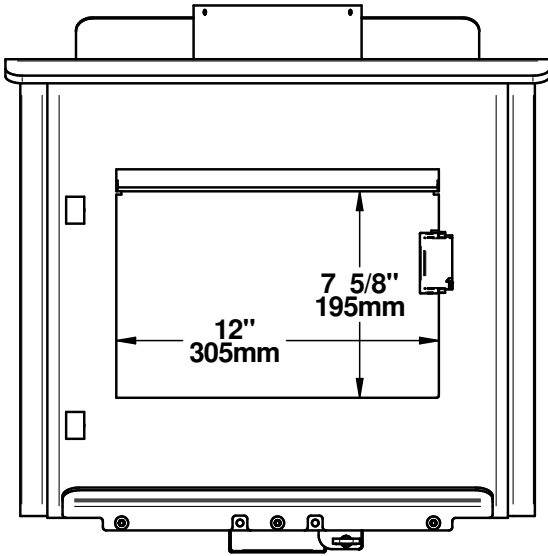


Figure 4: Door Opening

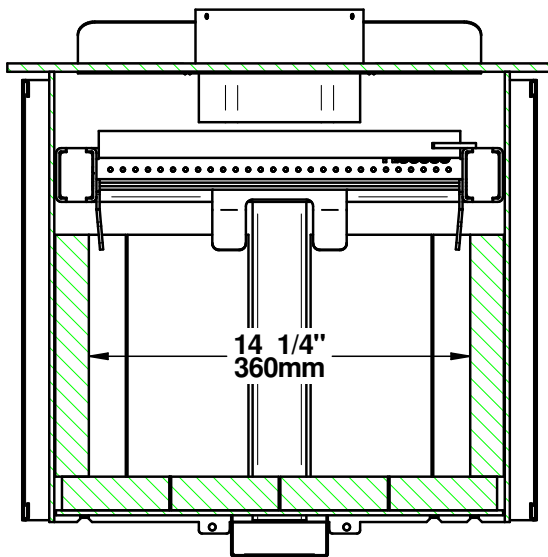


Figure 5: Front View - Combustion Chamber

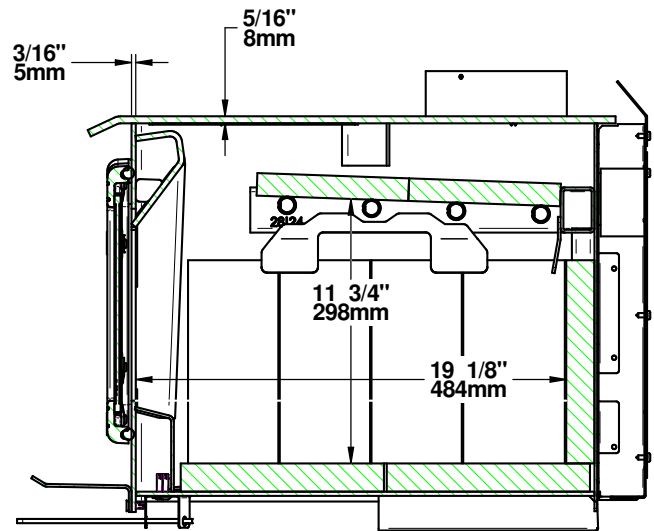



Figure 6: Side View - Combustion Chamber

2.4 EPA Loading

The loading methods shown below are those that were used during emissions certification.

2.4.1 Air control

The air control is located underneath the ash shelf. To open the air control, push the air control handle completely to the left (High). This will increase the burn rate. To close the air control, push the air control handle completely to the right (Low). This will decrease the burn rate.

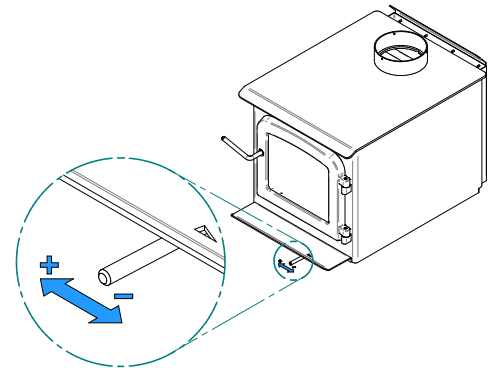

2.4.2 High burn rate (primary air control open)

Open the air control completely. Place six small pieces (2"x2") of wood in the firebox crossing them at the greatest possible angle. Criss cross fifteen kindling wood pieces on the small pieces of wood in three layers at the greatest possible angle. Tie knot with five sheets of paper and place them on top of the kindling wood. Light up the paper and let the door ajar at 90° until all the kindling wood is on fire and the first row of small pieces of wood is on fire too. Close the door.

When there is no more fire in the front of the firebox and there are only faint flames on the wood in the back of the firebox, break ashes, level the coal bed and put four logs in the firebox. Place the biggest log (about 5"x5") and a medium log (about 4"x4") on the coal bed with a north-south orientation. Place two other medium logs on the first two with the greatest possible angle. Their should be air space between each logs and between the logs and the bricks. Let the door ajar at 90° for approximately two minutes and then close the door.

2.4.3 Medium and low burn rate

On a 2" coal bed that is still slightly red, place five logs of approximately 4"x4" or 3"x3" with a north-south orientation. Place three logs on the coal bed and the other two on top with the greatest possible angle. Their should be air space between each logs and between the logs and the bricks. Let the door ajar at 90° for approximately 5 min. Then, close the door with the primary air control open. Leave to burn with the primary air control open for approximately 10 minutes and then close the primary air control completely for the low burn rate and halfway for the medium burn rate.

3. Clearances to Combustible Material

The clearances shown in this section have been determined by tests according to procedures set out in safety standards ULC S627 (Canada), UL 1482 (U.S.A.) and UL 737 (U.S.A.). When the stove is installed so that its surfaces are at or beyond the minimum clearances specified, combustible surfaces will not overheat under normal and even abnormal operating conditions.

No part of the stove or flue pipe may be located closer to combustibles than the minimum clearance figures given.

The clearances to combustible walls may be slightly different in Canada and the U.S.A. and may also differ depending on whether single or double wall flue pipe is used. Make sure to choose the correct clearance for the stove location and type of flue pipe.

The clearances of the appliance and the flue pipes must be met individually, meaning the appliance cannot be installed closer to the combustible materials than the single or double wall pipe allows. For a safe way to reduce clearances refer to section "5. Reducing Wall and Ceiling Clearances Safely" of this manual.

3.1 Clearances

| | APPLIANCE CLEARANCES WITH SINGLE WALL PIPE CONNECTOR | |
|----------|--|--------------|
| | Canada | USA |
| A | 14" (356 mm) | 12" (305 mm) |
| B | 12" (305 mm) | 12" (305 mm) |
| C | 11" (279 mm) | 11" (279 mm) |

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|--------------|
| | Canada | USA |
| A | 6" (152 mm) | 6" (152 mm) |
| B | 12" (305 mm) | 12" (305 mm) |
| C | 6" (152 mm) | 6" (152 mm) |

If the above clearances are met, then the distances measured from the flue outlet will be:

| | DISTANCES ¹³ FROM PIPE CONNECTOR WITH SINGLE WALL PIPE CONNECTOR | |
|----------|---|--------------|
| | Canada | USA |
| D | 18" (457 mm) | 16" (406 mm) |
| E | 18" (457 mm) | 18" (457 mm) |
| F | 18" (457 mm) | 18" (457 mm) |

| | DISTANCES ¹⁴ FROM PIPE CONNECTOR WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|---|------------------|
| | Canada | USA |
| D | 9 ¼" (235 mm) | 9 ¼" (235 mm) |
| E | 18" (457 mm) | 18" (457 mm) |
| F | 12 7/8" (327 mm) | 12 7/8" (327 mm) |

¹⁴ The pipe distances listed in this table refer to the distances obtained when the stove is installed in accordance with the appliance clearances above mentioned.

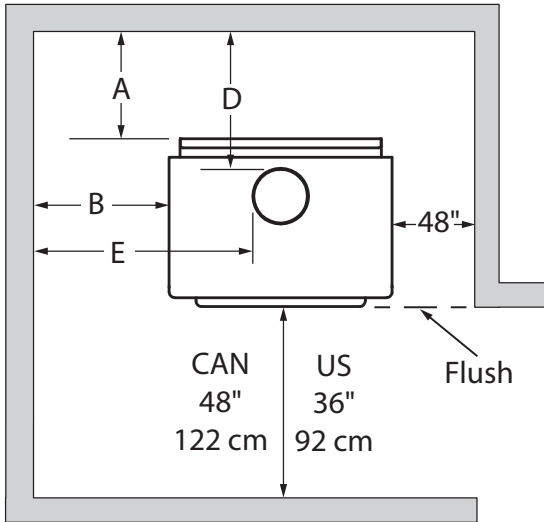


Figure 7: Clearances - Top

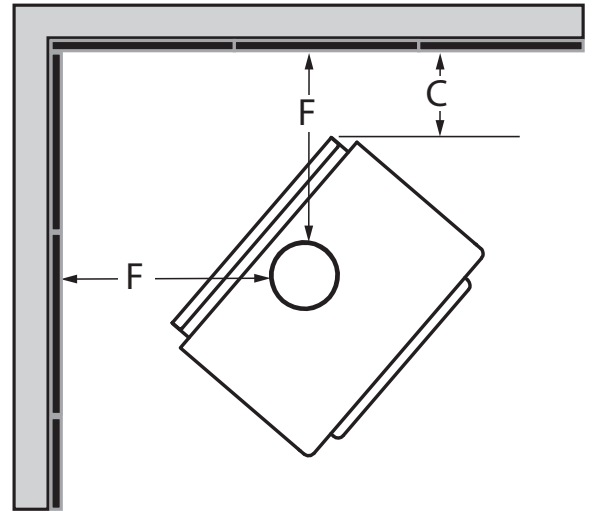


Figure 8: Clearances - Corner

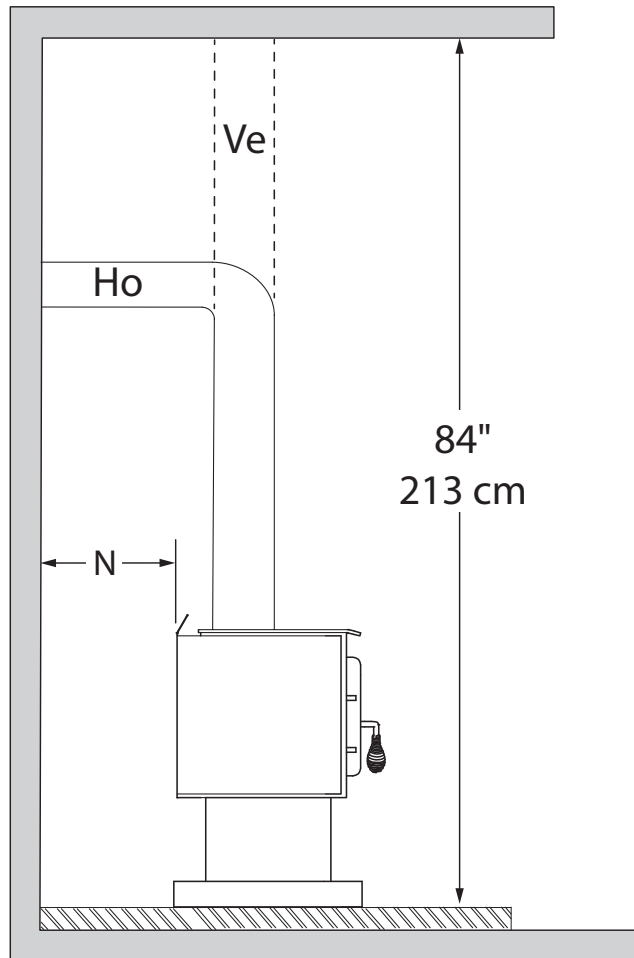




Figure 9: Clearances - Side

3.1.1 With Heat Shield AC02762¹⁵

To reduce the clearances of an appliance using a single wall pipe connector, the use of a heat shield certified with the single wall pipe connector to be used as close as 6" from combustible materials must be used. Only in this case, the same clearances as a certified double wall pipe connector can be used. Refer to the booklet in the screen options to obtain the dimensions to be respected.

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|--------------|
| | Canada | USA |
| A | 2 ½" (64 mm) | 2 ½" (64 mm) |
| B | 2 ½" (64 mm) | 2 ½" (64 mm) |
| C | 2 ½" (64 mm) | 2 ½" (64 mm) |

| | DISTANCES ¹⁶ FROM DOUBLE WALL PIPE CONNECTOR | |
|----------|---|-----------------|
| | Canada | USA |
| D | 5 ¾" (146 mm) | 5 ¾" (146 mm) |
| E | 8 ½" (216 mm) | 8 ½" (216 mm) |
| F | 9 3/8" (238 mm) | 9 3/8" (238 mm) |

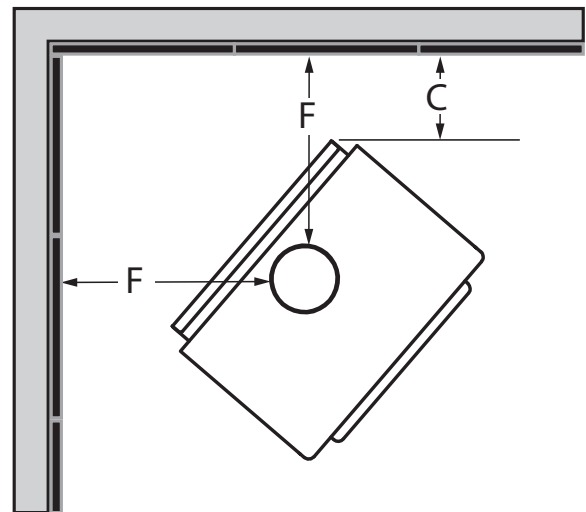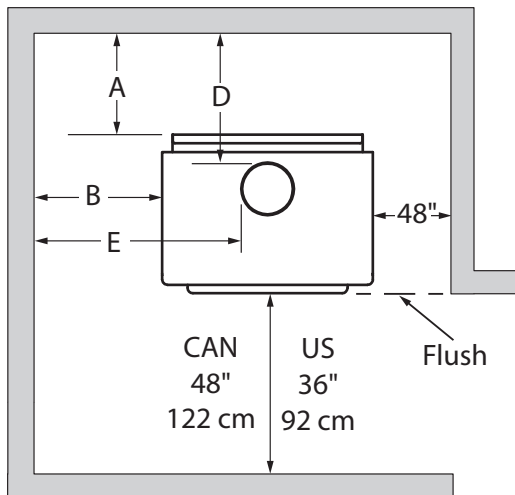

If the clearance reduction is on the same side as the door handle, position the stove at a minimum of 6 inches from the side wall (clearance B), otherwise it may be located at the clearance shown in the table above.


¹⁵ Note that to reduce the clearances of an appliance using a single wall pipe connector, the use of a heat shield certified with the single wall pipe connector to be used as close as 6" from combustible materials must be used. Only in this case, the same clearances as a certified double wall pipe connector can be used.

¹⁶ The pipe distances listed in this table refer to the distances obtained when the stove is installed in accordance with the appliance clearances above mentioned.

3.1.2 With Lowered Ceiling

| | APPLIANCE CLEARANCES WITH SINGLE WALL PIPE CONNECTOR | |
|----------|--|---------------|
| | Canada | USA |
| A | 14" (356 mm) | 14" (356 mm) |
| B | 13" (330 mm) | 13" (330 mm) |
| C | 11" (279 mm) | 11" (279 mm) |
| L | 72" (1829 mm) | 72" (1829 mm) |

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|---------------|
| | Canada | USA |
| A | 6" (152 mm) | 6" (152 mm) |
| B | 13" (330 mm) | 13" (330 mm) |
| C | 6" (152 mm) | 6" (152 mm) |
| L | 72" (1829 mm) | 72" (1829 mm) |

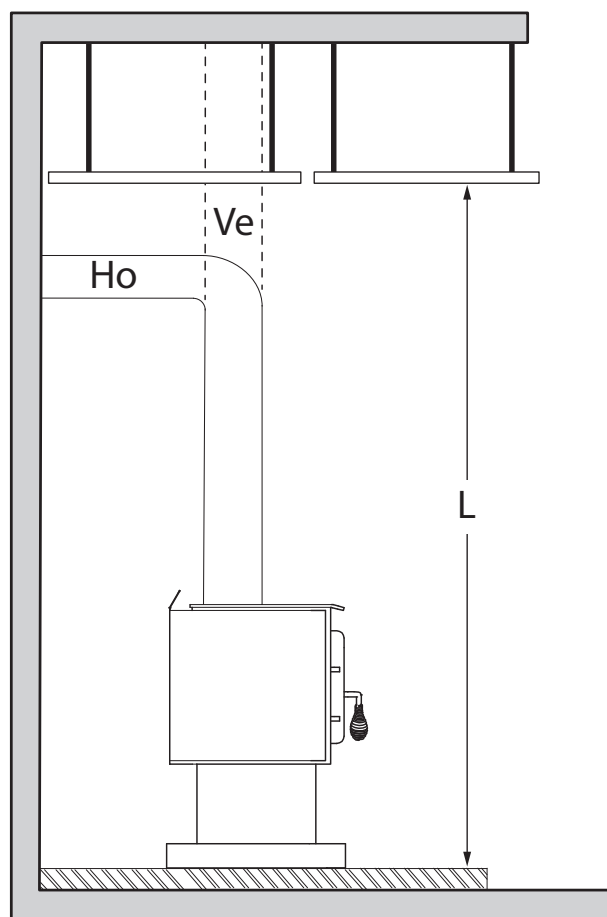

If the above clearances are met, then the distances measured from the flue outlet will be:

| | DISTANCES ¹⁷ FROM PIPE CONNECTOR WITH SINGLE WALL PIPE CONNECTOR | |
|----------|---|--------------|
| | Canada | USA |
| D | 18" (457 mm) | 18" (457 mm) |
| E | 19" (483 mm) | 19" (483 mm) |
| F | 18" (457 mm) | 18" (457 mm) |

| | DISTANCES ¹⁷ FROM PIPE CONNECTOR WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|---|------------------|
| | Canada | USA |
| D | 9 ¼" (235 mm) | 9 ¼" (235 mm) |
| E | 19" (483 mm) | 19" (483 mm) |
| F | 12 7/8" (327 mm) | 12 7/8" (327 mm) |




¹⁷ The pipe distances listed in this table refer to the distances obtained when the stove is installed in accordance with the appliance clearances above mentioned.

3.1.3 With Heat Shield AC02762 and Lowered Ceiling

To reduce the clearances of an appliance using a single wall pipe connector, the use of a heat shield certified with the single wall pipe connector to be used as close as 6" from combustible materials must be used. Only in this case, the same clearances as a certified double wall pipe connector can be used. Refer to the booklet in the screen options to obtain the dimensions to be respected.

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|---------------|
| | Canada | USA |
| A | 2 ½" (64 mm) | 2 ½" (64 mm) |
| B | 2 ½" (64 mm) | 2 ½" (64 mm) |
| C | 2 ½" (64 mm) | 2 ½" (64 mm) |
| L | 74" (1880 mm) | 74" (1880 mm) |

| | DISTANCES ¹⁸ FROM PIPE CONNECTOR WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|---|-----------------|
| | Canada | USA |
| D | 5 ¾" (146 mm) | 5 ¾" (146 mm) |
| E | 8 ½" (216 mm) | 8 ½" (216 mm) |
| F | 9 3/8" (238 mm) | 9 3/8" (238 mm) |

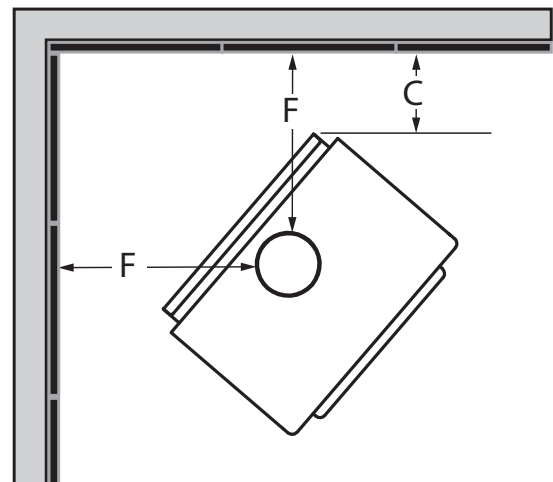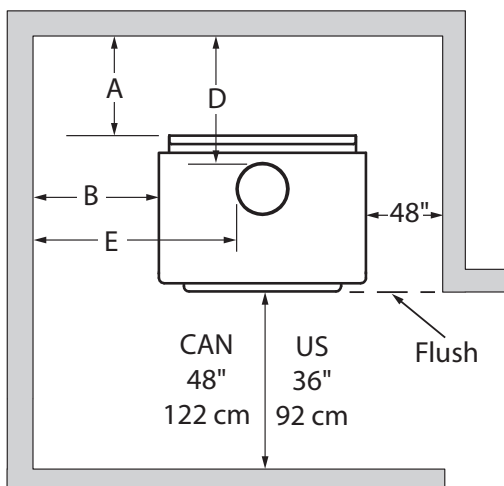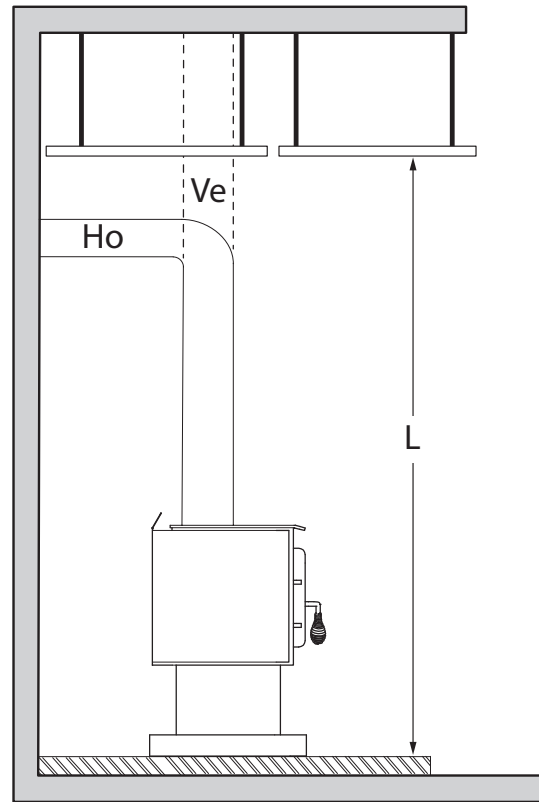

If the clearance reduction is on the same side as the door handle, position the stove at a minimum of 6 inches from the side wall (clearance B), otherwise it may be located at the clearance shown in the table above.


¹⁸ The pipe distances listed in this table refer to the distances obtained when the stove is installed in accordance with the appliance clearances above mentioned.

3.1.4 Inside a Combustible Alcove

See section 3.1 for the single wall pipe installation.

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|---------------|
| | Canada | USA |
| A | 6" (152 mm) | 6" (152 mm) |
| B | 13" (330 mm) | 13" (330 mm) |
| K | 48" (1219 mm) | 36" (914 mm) |
| L | 72" (1829 mm) | 72" (1829 mm) |

| | DISTANCES ¹⁹ FROM PIPE CONNECTOR WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|---|---------------|
| | Canada | USA |
| D | 9 ¼" (235 mm) | 9 ¼" (235 mm) |
| E | 19" (483 mm) | 19" (483 mm) |

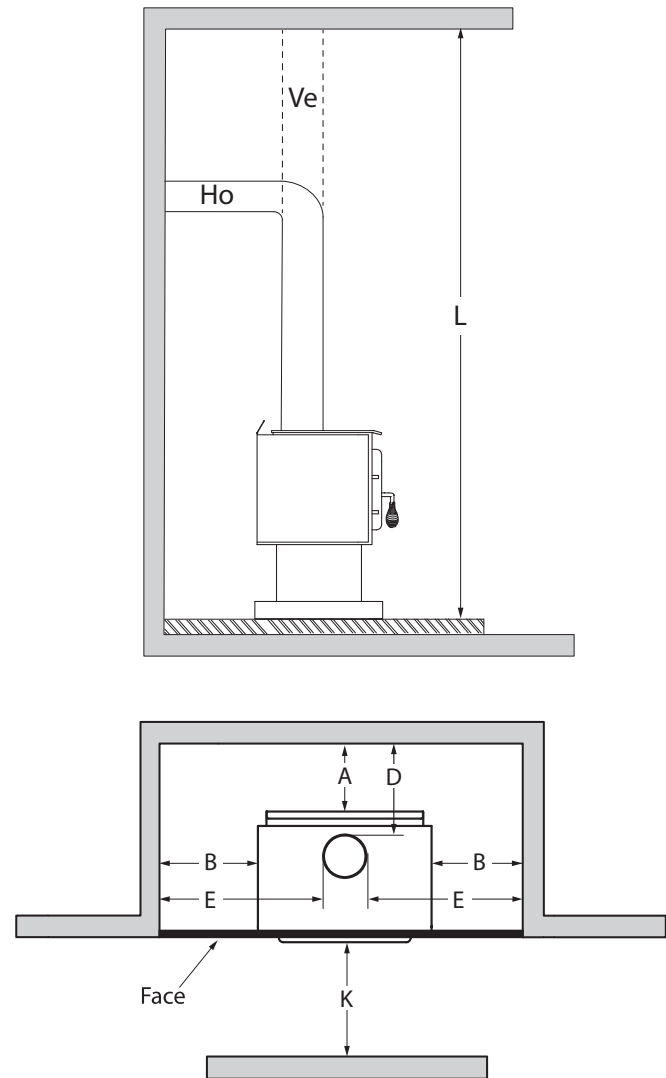

3.1.5 Mobile Home

It is strictly **forbidden** to install a unit with a **single wall pipe** in a **mobile home**.

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|--------------|
| | Canada | USA |
| A | 6" (152 mm) | 6" (152 mm) |
| B | 12" (305 mm) | 12" (305 mm) |
| C | 6" (152 mm) | 6" (152 mm) |

| | DISTANCES ¹⁹ FROM PIPE CONNECTOR WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|---|------------------|
| | Canada | USA |
| D | 9 ¼" (235 mm) | 9 ¼" (235 mm) |
| E | 18" (457 mm) | 18" (457 mm) |
| F | 12 7/8" (327 mm) | 12 7/8" (327 mm) |


¹⁹ The pipe distances listed in this table refer to the distances obtained when the stove is installed in accordance with the appliance clearances above mentioned.

3.1.6 Mobile Home With Heat Shield AC02762

It is strictly **forbidden** to install a unit with a **single wall pipe** in a **mobile home**.

| | APPLIANCE CLEARANCES WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|--|------------|
| | Canada | USA |
| A | 3" (76 mm) | 3" (76 mm) |
| B | 3" (76 mm) | 3" (76 mm) |
| C | 3" (76 mm) | 3" (76 mm) |

| | DISTANCES ²⁰ FROM PIPE CONNECTOR WITH DOUBLE WALL PIPE CONNECTOR | |
|----------|---|-----------------|
| | Canada | USA |
| D | 6 ¼" (159 mm) | 6 ¼" (159 mm) |
| E | 9" (229 mm) | 9" (229 mm) |
| F | 9 7/8" (251 mm) | 9 7/8" (251 mm) |

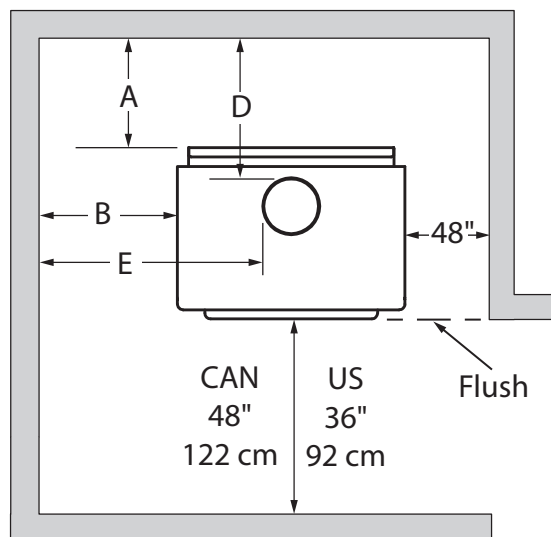

If the clearance reduction is on the same side as the door handle, position the stove at a minimum of 6 inches from the side wall (clearance B), otherwise it may be located at the clearance shown in the table above.

ENGLISH

²⁰ Les distances de tuyau listées dans ce tableau se réfèrent aux distances obtenues lorsque le poêle est installé en accord avec les dégagements de l'appareil mentionnés ci-dessus.

4. Floor Protection

This stove is designed to prevent the floor from overheating. However, it must be placed on a non-flammable surface to protect the floor from hot embers that may fall during loading.

The floor protection must be a continuous, non combustible material, such as steel with a minimum thickness of 0.015" (0.38 mm) or ceramic tiles sealed together with grout. Cement board, brick, or any other approved or listed material suited for floor protection. No R factor required.

Any type of tile will require a continuous non combustible sheet beneath to prevent the possibility of embers falling through to the combustible floor if cracks or separation should occur in the finished surface. Check local codes for approved alternatives.

No protection is required if the unit is installed on a non-combustible floor (ex: concrete).

| | FLOOR PROTECTION | |
|-----------------------|--------------------------------|--------------------------------|
| | Canada | USA |
| G²¹ | 8" (203 mm) | N/A |
| H | 8" (203 mm) | N/A |
| I | 18" (457 mm) From door opening | 16" (203 mm) From door opening |
| J | N/A | 8" (203 mm) |
| K | 36 ¼" (921 mm) | 31 1/8" (791 mm) |
| N²² | N/A | See note 22 |
| S | 48 ¾" (1238 mm) | 38 ¾" (984 mm) |
| T | 34 ½" (876 mm) | 27 ½" (699 mm) |
| U | 36 ¼" (921 mm) | 31 1/8" (791 mm) |
| V | 66 7/8" (1699 mm) | 54 3/8" (1380 mm) |



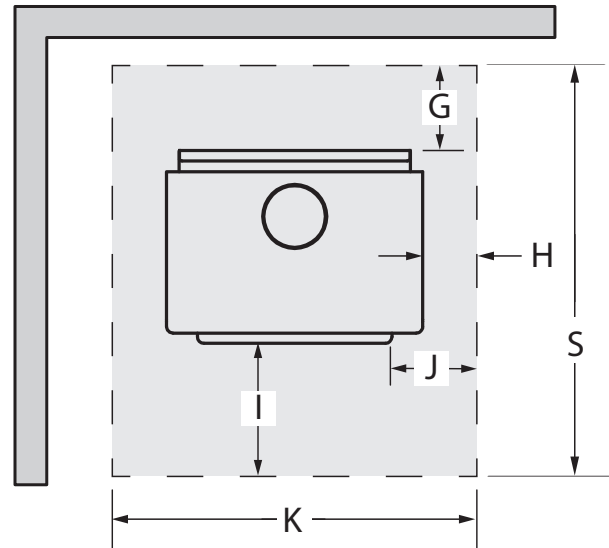


Figure 10: Floor Protection

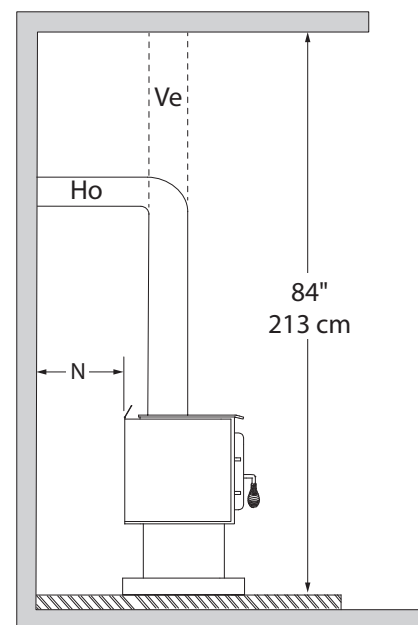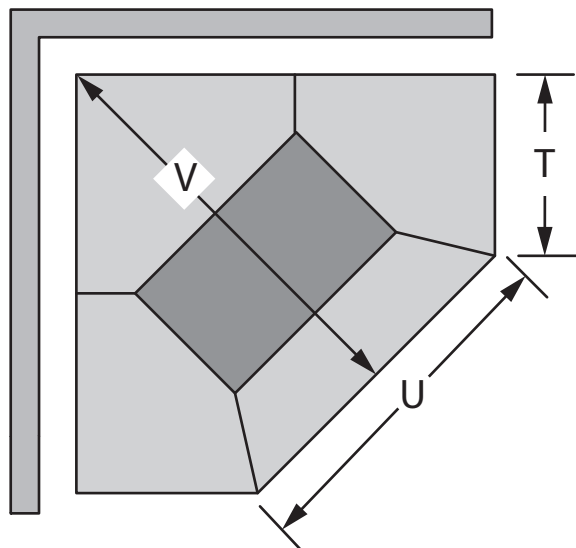


²¹ The floor protection at the back of the stove is limited to the stove's required clearance if such clearance is smaller than 8 inches (203 mm).

²² Only required under the horizontal section (Ho) of the connector. Must exceed each side of the connector by at least 2 inches (51 mm).

5. Reducing Wall and Ceiling Clearances Safely

It is often desired to use as little space as possible when installing a wood stove. To do this, it is possible to reduce the clearances safely and install the stove closer to the walls by permanently installing a heat shield between the stove and the flammable material.

The rules for heat shields are sometimes complicated. Read and apply the instructions carefully. Some regions may have different regulations. Consult the local building code or contact the fire department for restrictions, inspection and installation requirements in the area.

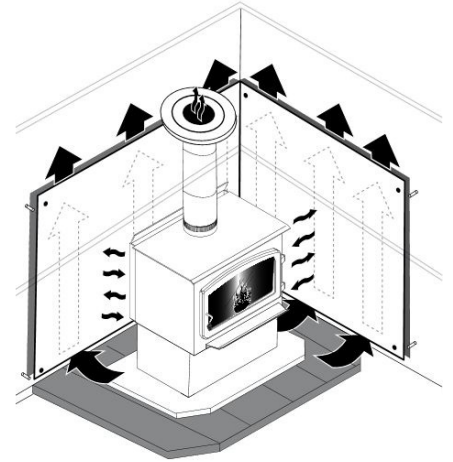

5.1 Shield Construction Rules

- Adhesives used in shield construction must not ignite or lose adhesive qualities at temperatures likely to be encountered.
 - Mounting hardware which extends from the shield surface into combustibles may be used only at the edges of the shield.
 - Mounting hardware must allow full vertical ventilation.
- A) Minimum clearance between the appliance top and an unshielded combustible ceiling: 47 ¼" (1200 mm)
 - B) Shield extension above the appliance: 20" (500 mm)
 - C) Minimum space behind the shield: 1" (25 mm). In Canada 7/8" (21 mm)
 - D) Clearance along the bottom of the shield: minimum 1" (25 mm) and maximum 3" (75 mm)
 - E) Minimum clearance along the top of the shield: 3" (75 mm)
 - F) Mounting hardware must not be located closer than 8" (200 mm) from the vertical centre line of the appliance.
 - G) Edge clearance for ceiling shields to side and back walls: 3" (75 mm)
 - H) Shield extension beyond each side of the appliance: 18" (450 mm)

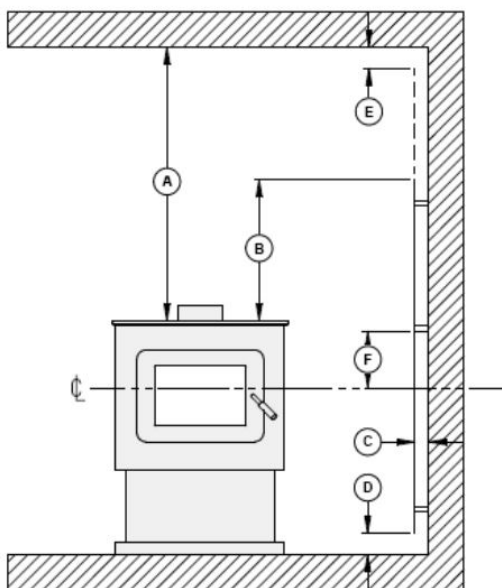


Figure 11: Heat shield clearances

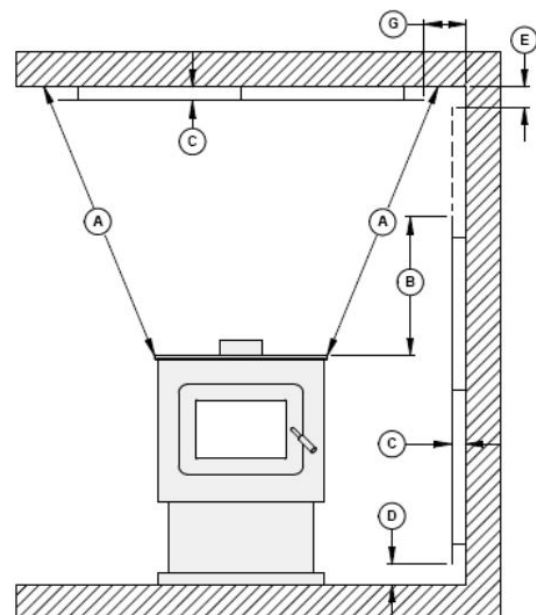


Figure 12: Heat shield clearances

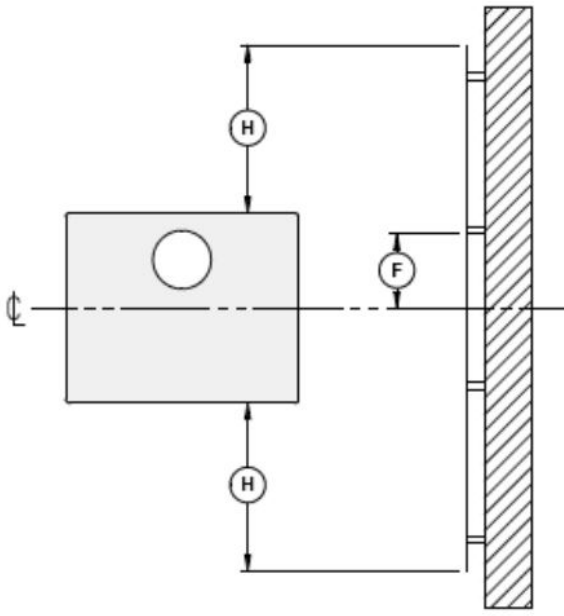


Figure 13: Heat shield clearances

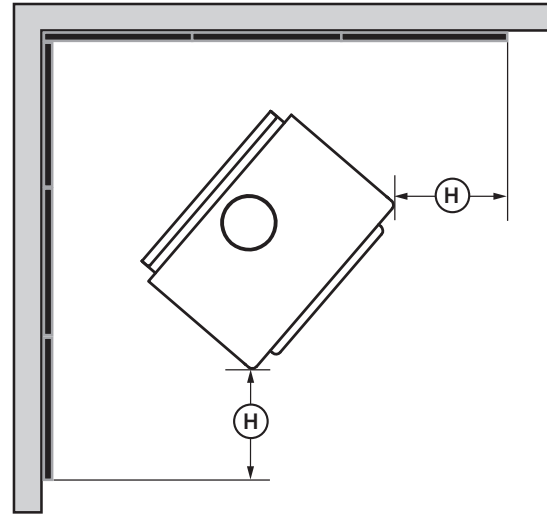
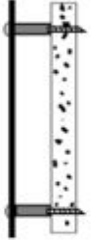
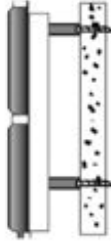

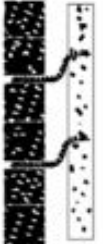
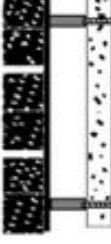


Figure 14: Heat shield clearances

| TYPE OF SHIELD | CLEARANCES MAY BE REDUCED BY THESE PERCENTAGES | | | | |
|--|--|-----------------|---------------|-----------------|---|
| | SIDES AND REAR | | TOP (CEILING) | | |
| | CAN / USA (%) | USA MIN. | CAN / USA (%) | USA MIN. | |
| Sheet metal, a minimum of 24 gauge (0.61 mm) in thickness , spaced out at least 1" (25 mm)* by non-combustible spacers | 67 | 12" (305 mm) | 50 | 18" (457 mm) |  |
| Ceramic tiles, or equivalent non-combustible material, on non-combustible board spaced out at least 1" (25 mm)* by non-combustible spacers | 50 | 18" (457 mm) | 33 | 24" (610 mm) |  |
| Ceramic tiles, or equivalent non-combustible material, on non-combustible board, with a minimum of 24 gauge (0.61 mm) sheet metal backing spaced out at least 1" (25 mm)* by non-combustible spacers | 67 | 12" (305 mm) | 50 | 24" (610 mm) |  |
| Brick, spaced out at least 1" (25 mm)* by non-combustible spacers | 50 | 18" (457 mm) | N/A | N/A |  |
| Brick, with a minimum of 24 gauge (0.61 mm) sheet metal backing, spaced out at least 1" (25 mm)* by non-combustible spacers | 67 | 12" (305 mm) | N/A | N/A |  |


* In Canada this space can be 7/8" (21 mm)

6. INSTALLATION OF OPTIONS ON YOUR PRODUCT

6.1 Decorative Panels

THE IMAGES SHOWN ARE FOR GUIDANCE ONLY AND MAY BE DIFFERENT FROM YOUR PRODUCT, BUT THE ASSEMBLY REMAINS THE SAME.


To remove the decorative panel **(A)**, remove the screws **(B)** and push forward on the panel to unhook it from the bracket **(E)**.

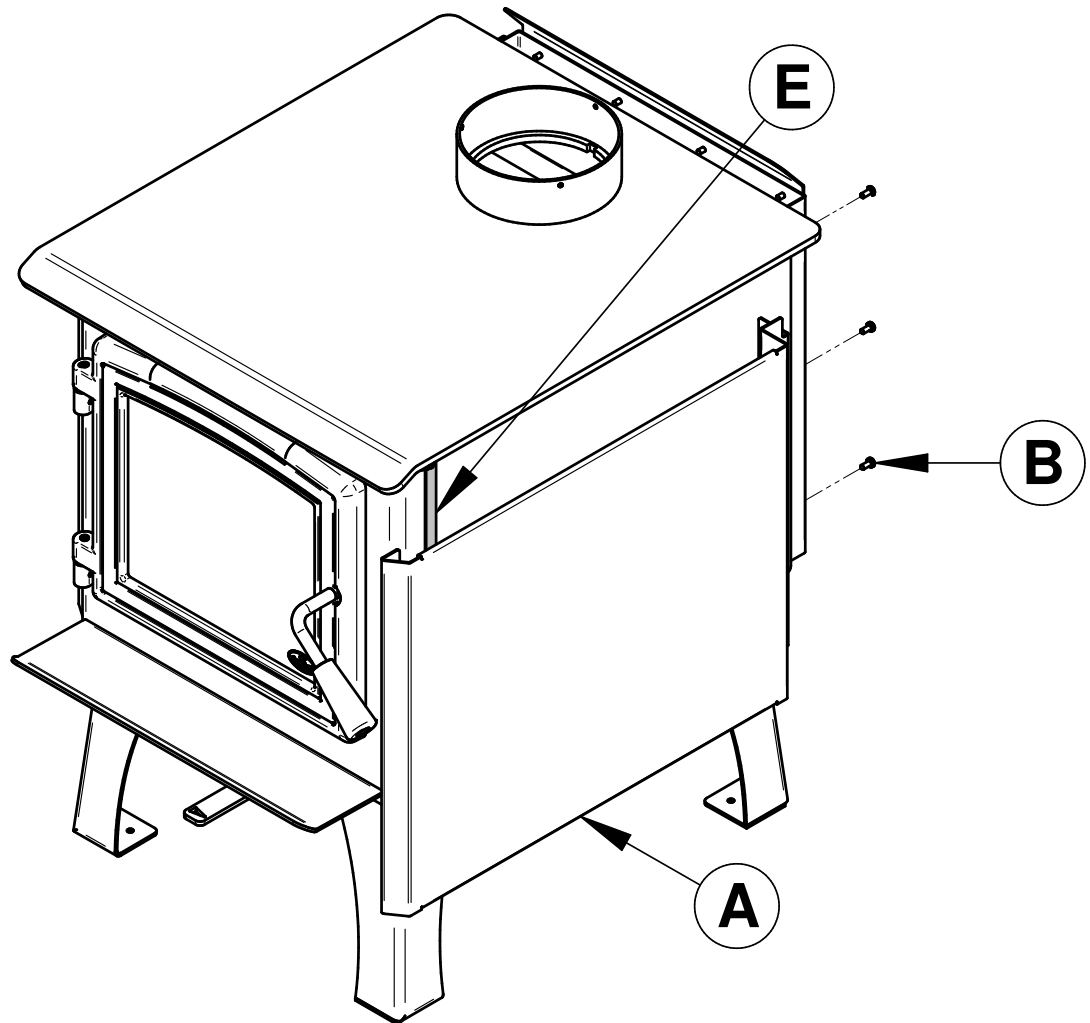

6.2 Optional Fresh Air Intake Kit Installation

THE IMAGES SHOWN ARE FOR GUIDANCE ONLY AND MAY BE DIFFERENT FROM YOUR PRODUCT, BUT THE ASSEMBLY REMAINS THE SAME.

This mobile home approved stove requires the installation of a fresh air intake kit **(A)** and an insulated fresh air intake pipe (HVAC type, must meet ULC S110 or UL 181 class 0 or class 1) **(B)**, sold separately. Refer to air intake kit installation instructions for more details.

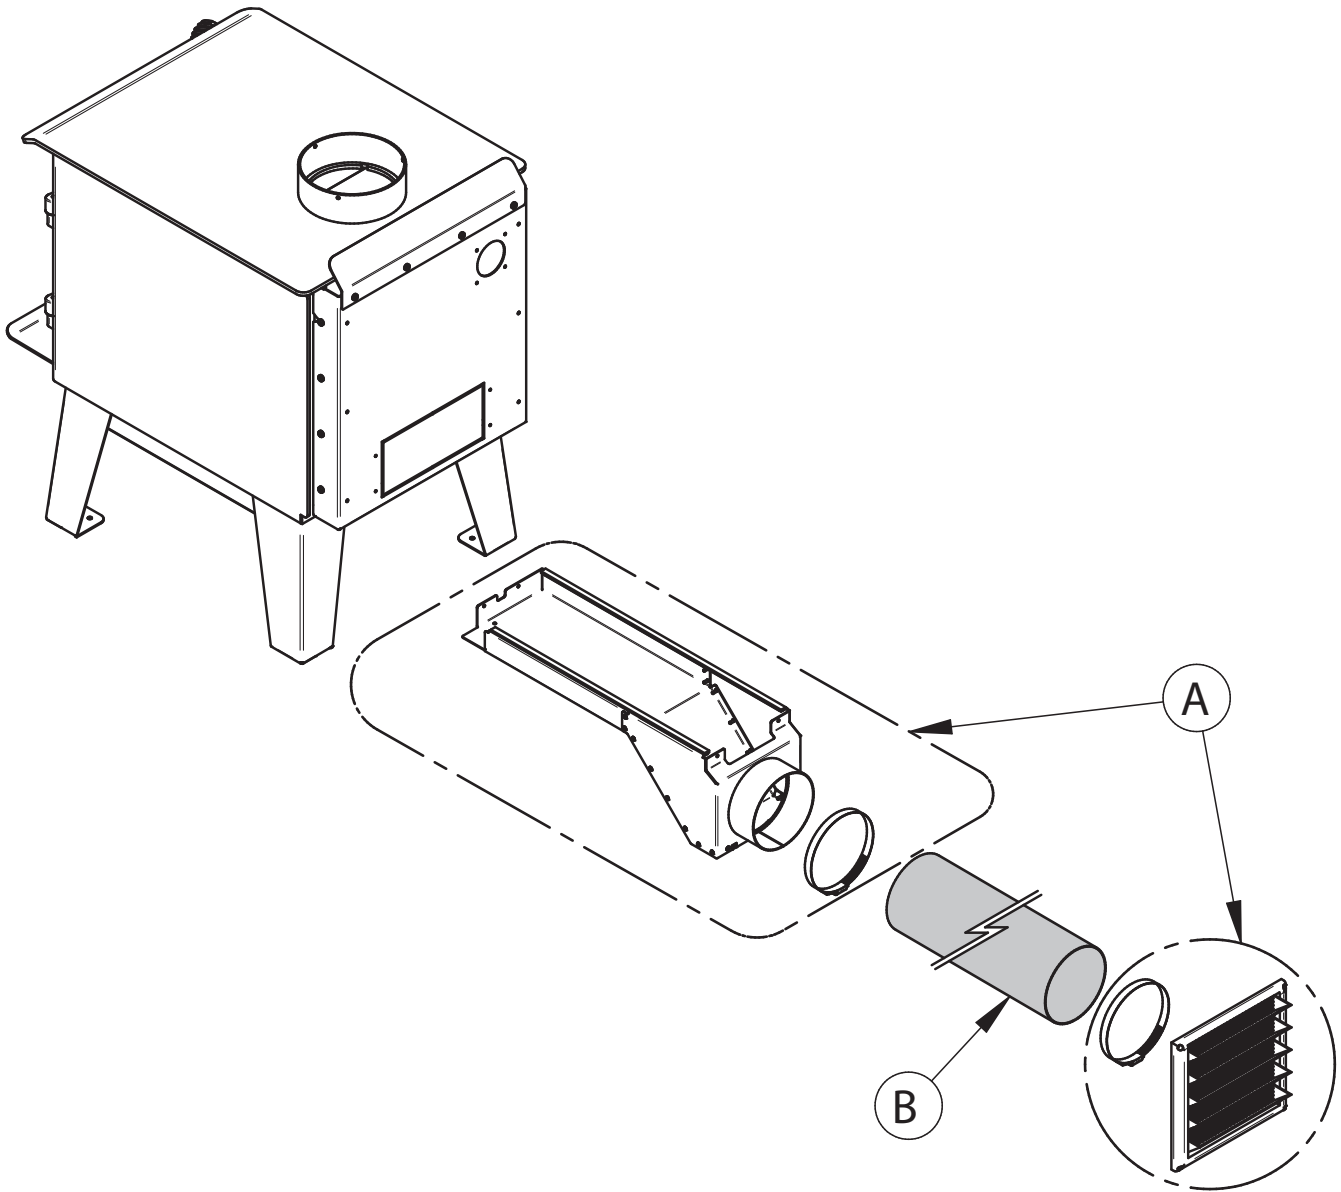


6.3 Optional Fire Screen Installation

THE IMAGES SHOWN ARE FOR GUIDANCE ONLY AND MAY BE DIFFERENT FROM YOUR PRODUCT, BUT THE ASSEMBLY REMAINS THE SAME.


In the United States or in provinces with a particulate emission limit (eg. US EPA), the use of wood stoves with the door open with a rigid firescreen is prohibited.

It is prohibited to use this wood stove with a fire screen in a mobile home.

1. Open the door.

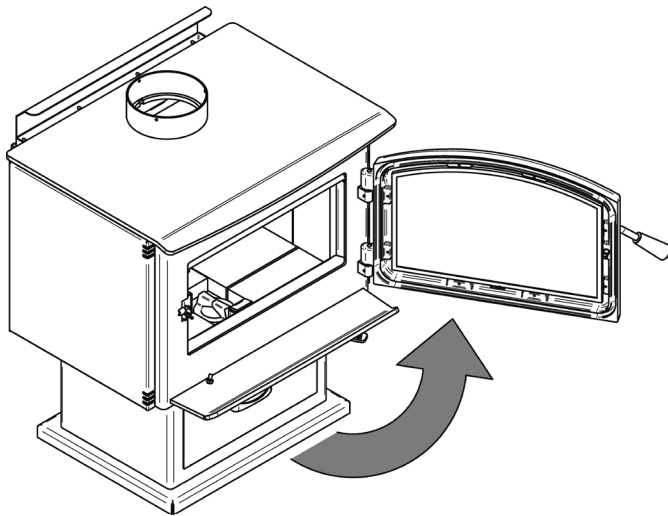


2. Hold the fire screen by the two handles and bring it close to the door opening.

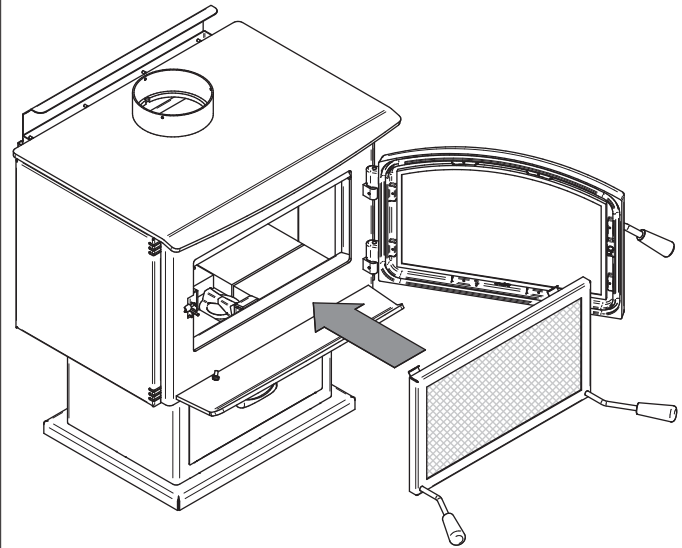

3. Lean the upper part of the fire screen against the top door opening making sure to position the top fire screen brackets behind the primary air deflector.

4. Lift the fire screen upwards and push the bottom part towards the stove then let the fire screen rest on the bottom of the door opening.

Warning: Never leave the stove unattended while in use with the fire screen.

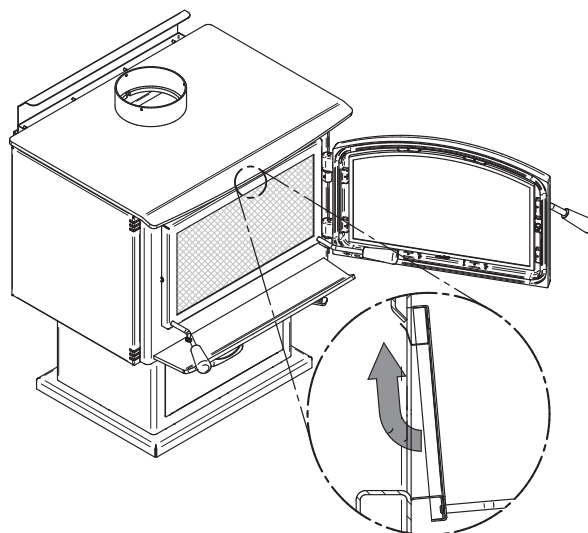


6.4 Optional Blower And Thermodisc Installation


THE IMAGES SHOWN ARE FOR GUIDANCE ONLY AND MAY BE DIFFERENT FROM YOUR PRODUCT, BUT THE ASSEMBLY REMAINS THE SAME.

A blower and a thermodisc, sold separately, can be installed on the stove. The installation of the blower is identical for a stove on legs or pedestal. Thermodisc allows the blower to operate only when the stove is hot enough. See the instructions provided with the thermodisc for more details.

1. Remove the backplate by cutting the knockouts with pliers.

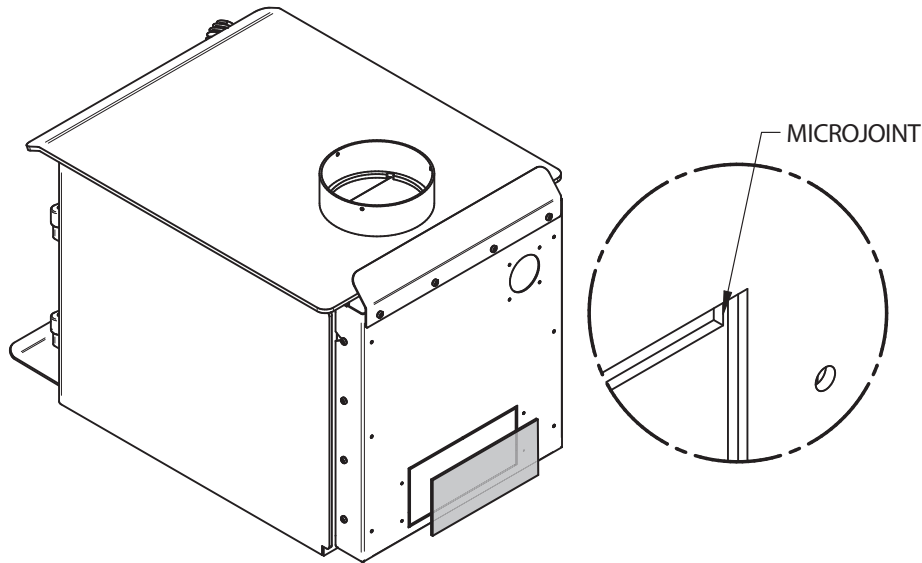


2. Screw the blower **(D)** in place using the screws **(C)** included in the installation manual. Screw the thermodisc **(A)** with the screws **(B)** supplied with the thermodisc on the back of the stove. **Ensure that the blower's power cord is not in contact with any surface of the stove to prevent electrical shock or fire damage. Do not run the power cord beneath the stove.**

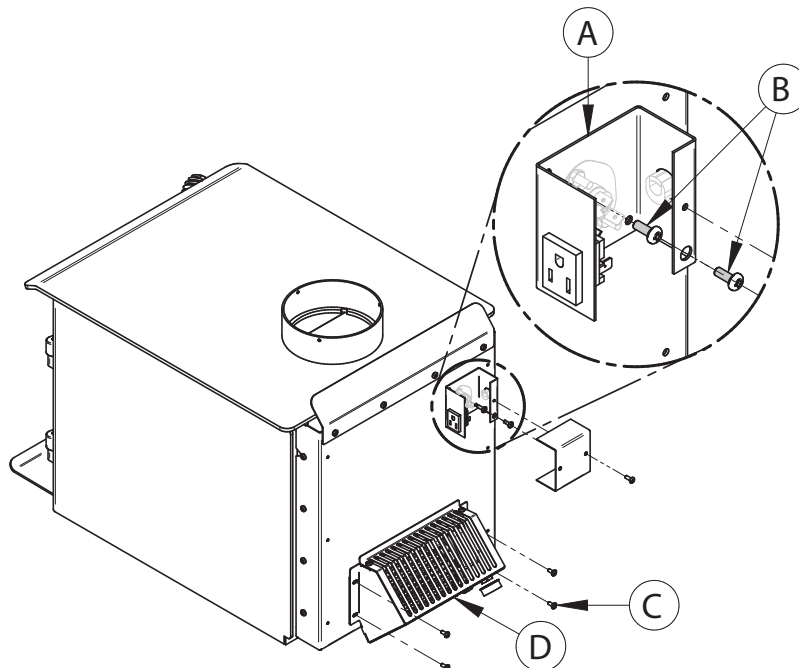


6.5 Air Tubes And Baffle Installation

1. Starting with the rear tube, lean and insert the right end of the secondary air tube into the rear right channel hole. Then lift and insert the left end of the tube into the rear left channel.


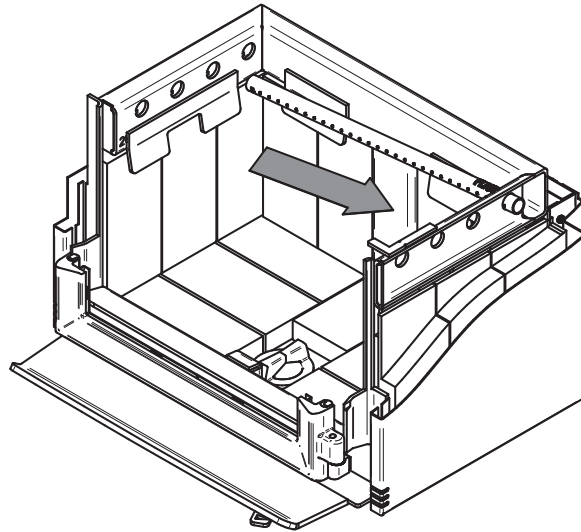


2. Align the notch in the left end of the tube with the key of the left air channel hole. Using a « Wise grip » hold the tube and lock it in place by turning the tube as shown. Make sure the notch reaches the end of the key way.

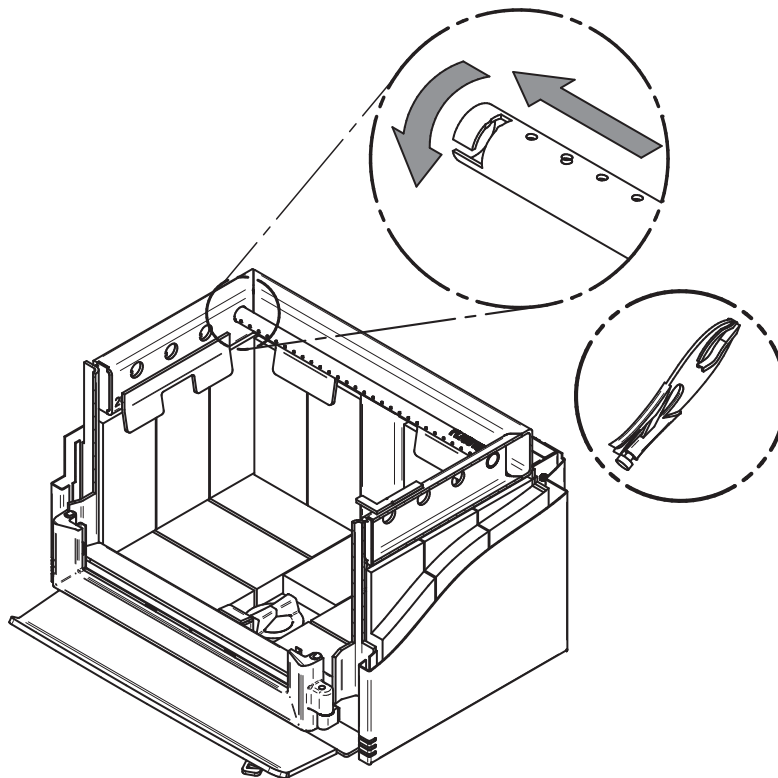

3. Put the baffle in place.
4. Repeat steps 1 and 2 for the three other tubes.
5. To remove the tubes use the above steps in reverse order.


Note that secondary air tubes (B) can be replaced without removing the baffle board (A) and that all tubes are not necessarily identical (look at the part number on the tube).

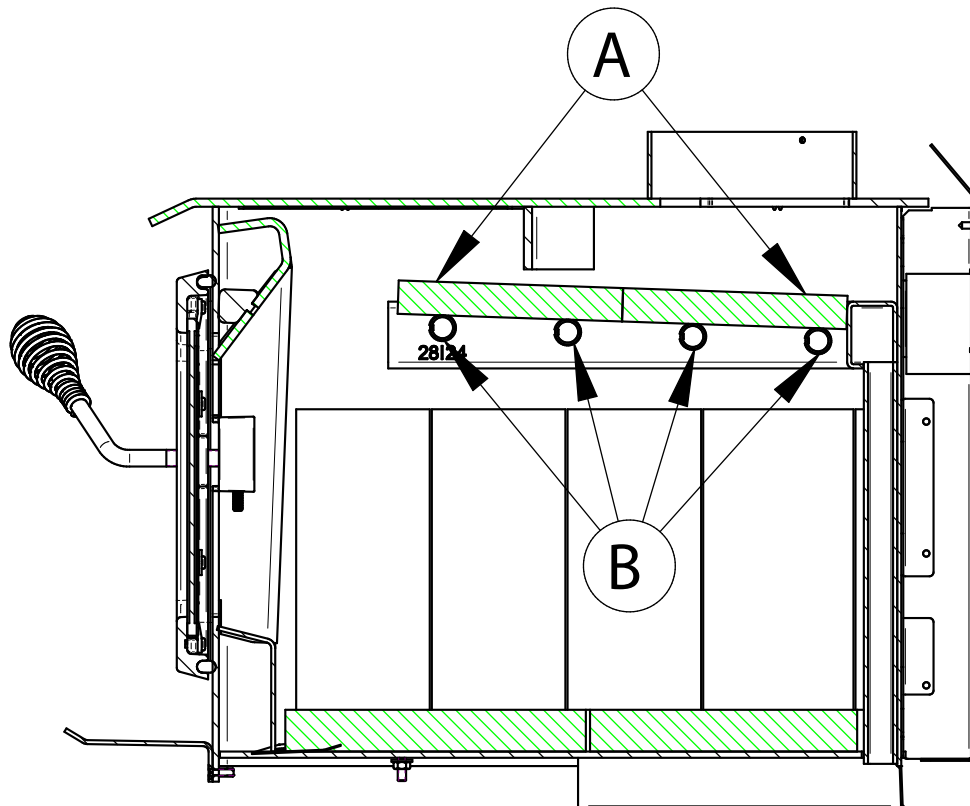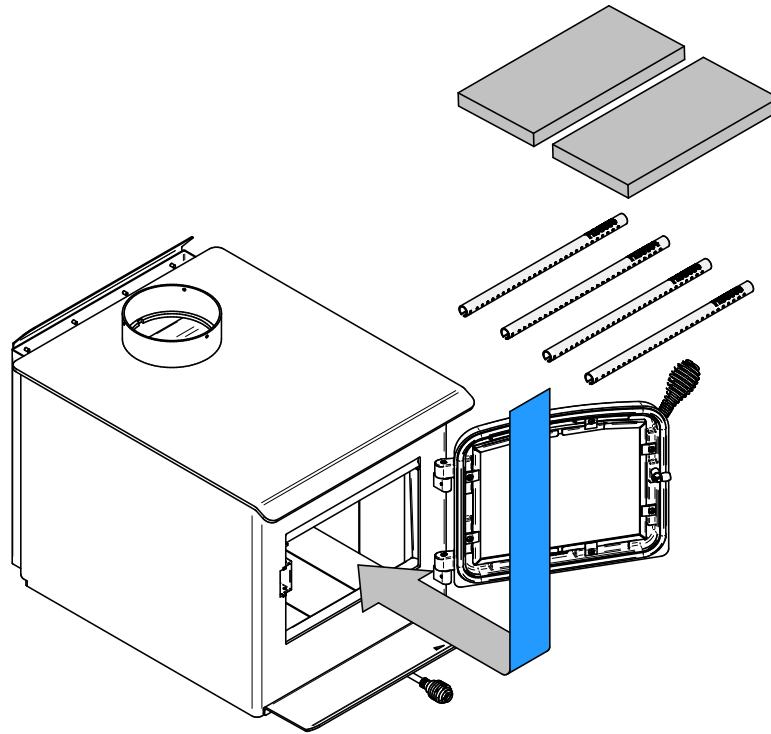


6.6 Mobile Home Installation

THE IMAGES SHOWN ARE FOR GUIDANCE ONLY AND MAY BE DIFFERENT FROM YOUR PRODUCT, BUT THE ASSEMBLY REMAINS THE SAME.

Screw the legs on the floor with the proper hardware **(A)**.

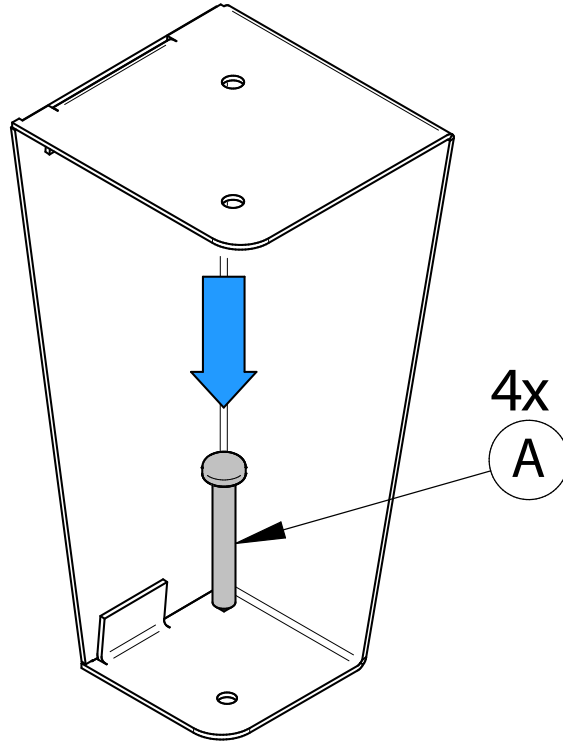

7. Maintenance/Parts Replacement

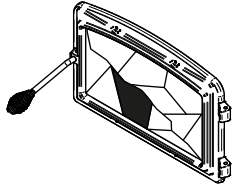

Do not clean the glass when the stove is hot.

Do not abuse the glass door by striking or slamming shut.


Do not use the stove if the glass is broken.

7.1 Replacement

The glass used is a ceramic glass, 5/32" (4 mm) thick, tested to reach temperatures up to 1400° F. If the glass breaks, it must be replaced with one having the same specification.

To remove or replace the glass (D):

THE IMAGES SHOWN ARE FOR GUIDANCE ONLY AND MAY BE DIFFERENT FROM YOUR PRODUCT, BUT THE ASSEMBLY REMAINS THE SAME.

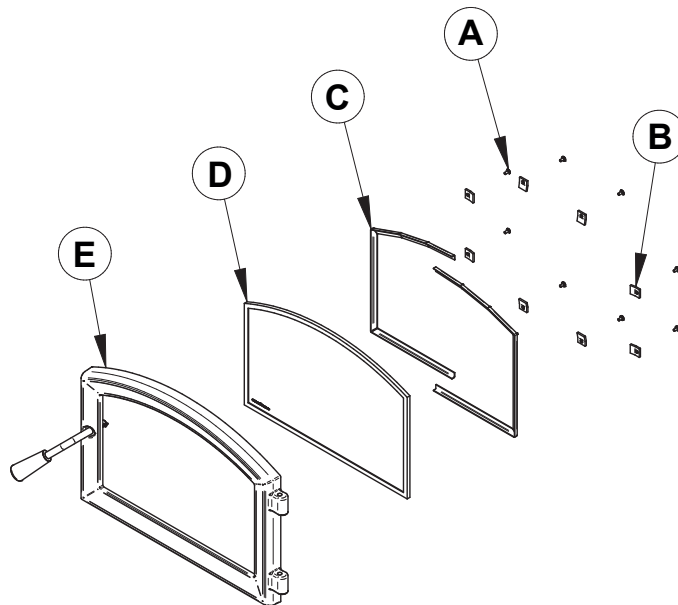

1. Remove the door **(E)** from its hinges and lay it on a soft, flat surface.
2. Remove the eight screws **(A)**, the eight glass retainers **(B)**, and the metal frames **(C)**.
3. Remove the glass **(D)**. If it is damaged install a new one in place. The replacement glass must have a gasket all around (see procedure below).
4. Reinstall the glass, being careful to centre the glass in the door and not to over-tightening the retaining screw.

The two main causes of broken door glass are uneven placement in the door and over-tightening the retaining screws.

7.2 Gasket


The glass gasket is flat, adhesive-backed, woven fibreglass. The gasket must be centred on the edge of the glass.

1. Follow the steps of the previous section to remove the glass.
2. Remove the old gasket and clean the glass thoroughly.
3. Peel back a section of the paper covering the adhesive and place the gasket on a table with the adhesive side up.
4. Stick the end of the gasket to the middle of one edge, then press the edge of the glass down onto the gasket, taking care that it is perfectly centred on the gasket.
5. Peel off more of the backing and rotate the glass. The gasket must not be stretched during installation.
6. Cut the gasket to the required length.
7. Pinch the gasket onto the glass in a U shape, all around the glass.



7.3 Door

In order for the stove to burn at its best efficiency, the door must provide a perfect seal with the firebox. The tightness of the door seal can be verified by closing and latching the door on a strip of paper. The test must be performed all around the door. If the paper slips out easily anywhere, either adjust the door or replace the gasket.

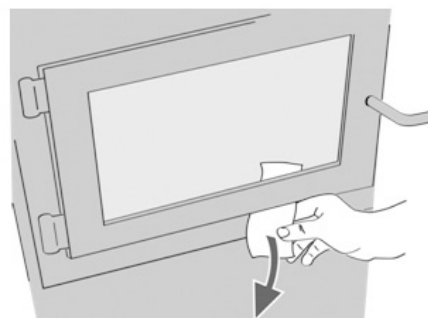

7.3.1 Adjustment

In order for the stove to burn at its best efficiency, the door must provide a perfect seal with the firebox. Therefore, the gasket should be inspected periodically to check for a good seal. The gasket seal may be improved with a simple latch mechanism adjustment:

1. Remove the split pin by pulling and turning it using pliers.
2. Turn the handle one counterclockwise turn to increase pressure.
3. Reinstall the split pin with a small hammer.

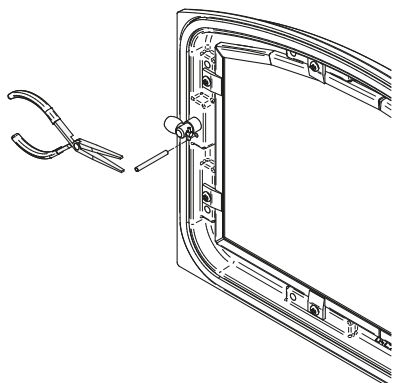


Figure 15: Removing the split pin


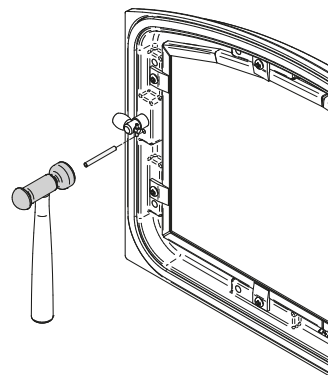


Figure 16: Installing the split pin



7.3.2 Door Alignment

To align, open the door and loosen the pressures screws located on the lower and upper hinges of the door using a 3/32" Allen key to free the adjustable hinge rods.

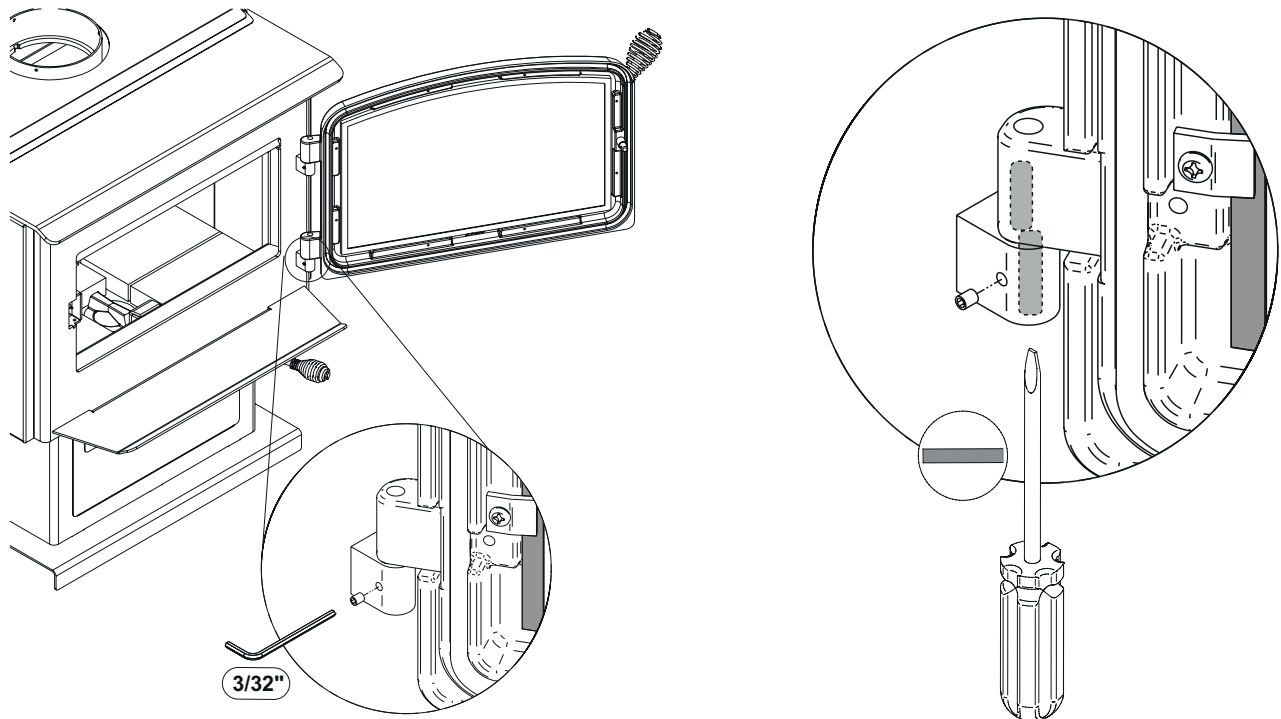

Using a flat screwdriver, turn the adjustable hinge rods in the direction shown to adjust the doors. Tighten all door hinge pressure screws when they are at the desired positions. Configurations 1-2-3-4-5-6, show in which direction these act on the adjustment of the door.


| ① | ② | ③ | ④ |
|---|---|---|---|
| | A | | A |
| | B | | B |

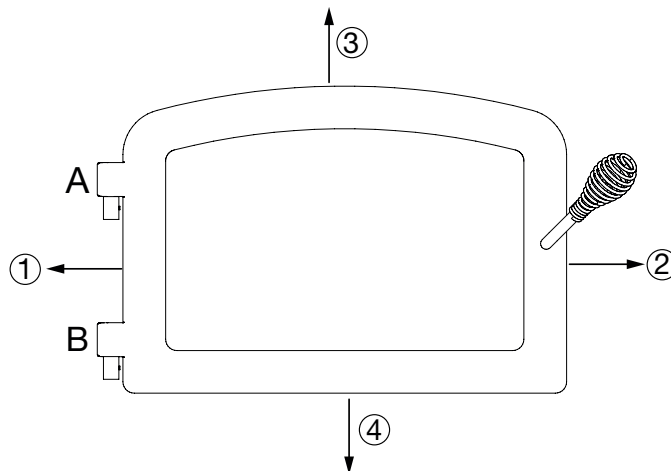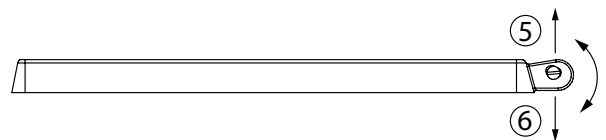


7.3.3 Gasket

It is important to replace the gasket with another having the same diameter and density to maintain a good seal.

1. Remove the door and place it face-down on something soft like a cushion of rags or a piece of carpet.
2. Remove the old gasket from the door. Use a screwdriver to scrape the old gasket adhesive from the door gasket groove.
3. Apply a bead of approximately 3/16" (5 mm) of high temperature silicone in the door gasket groove. Starting from the middle, hinges side, press the gasket into the groove. The gasket must not be stretched during installation.
4. Leave about 1/2" long of the gasket when cutting and press the end into the groove. Tuck any loose fibers under the gasket and into the silicone.
5. Close the door. Do not use the stove for 24 hours.

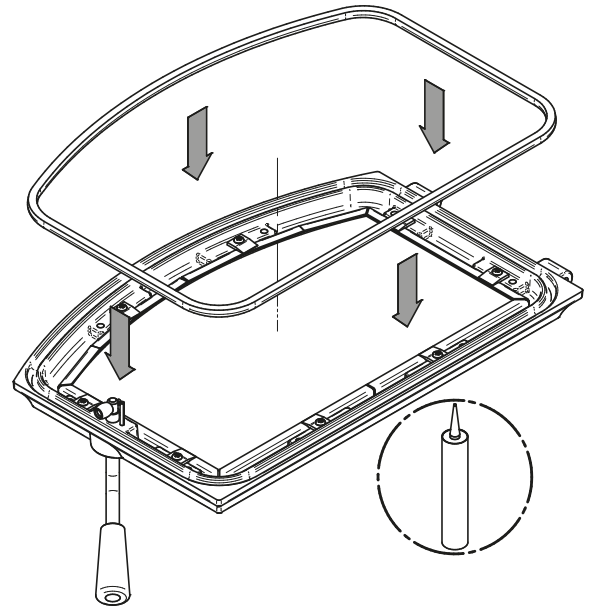

8. Exploded Diagram and Parts List

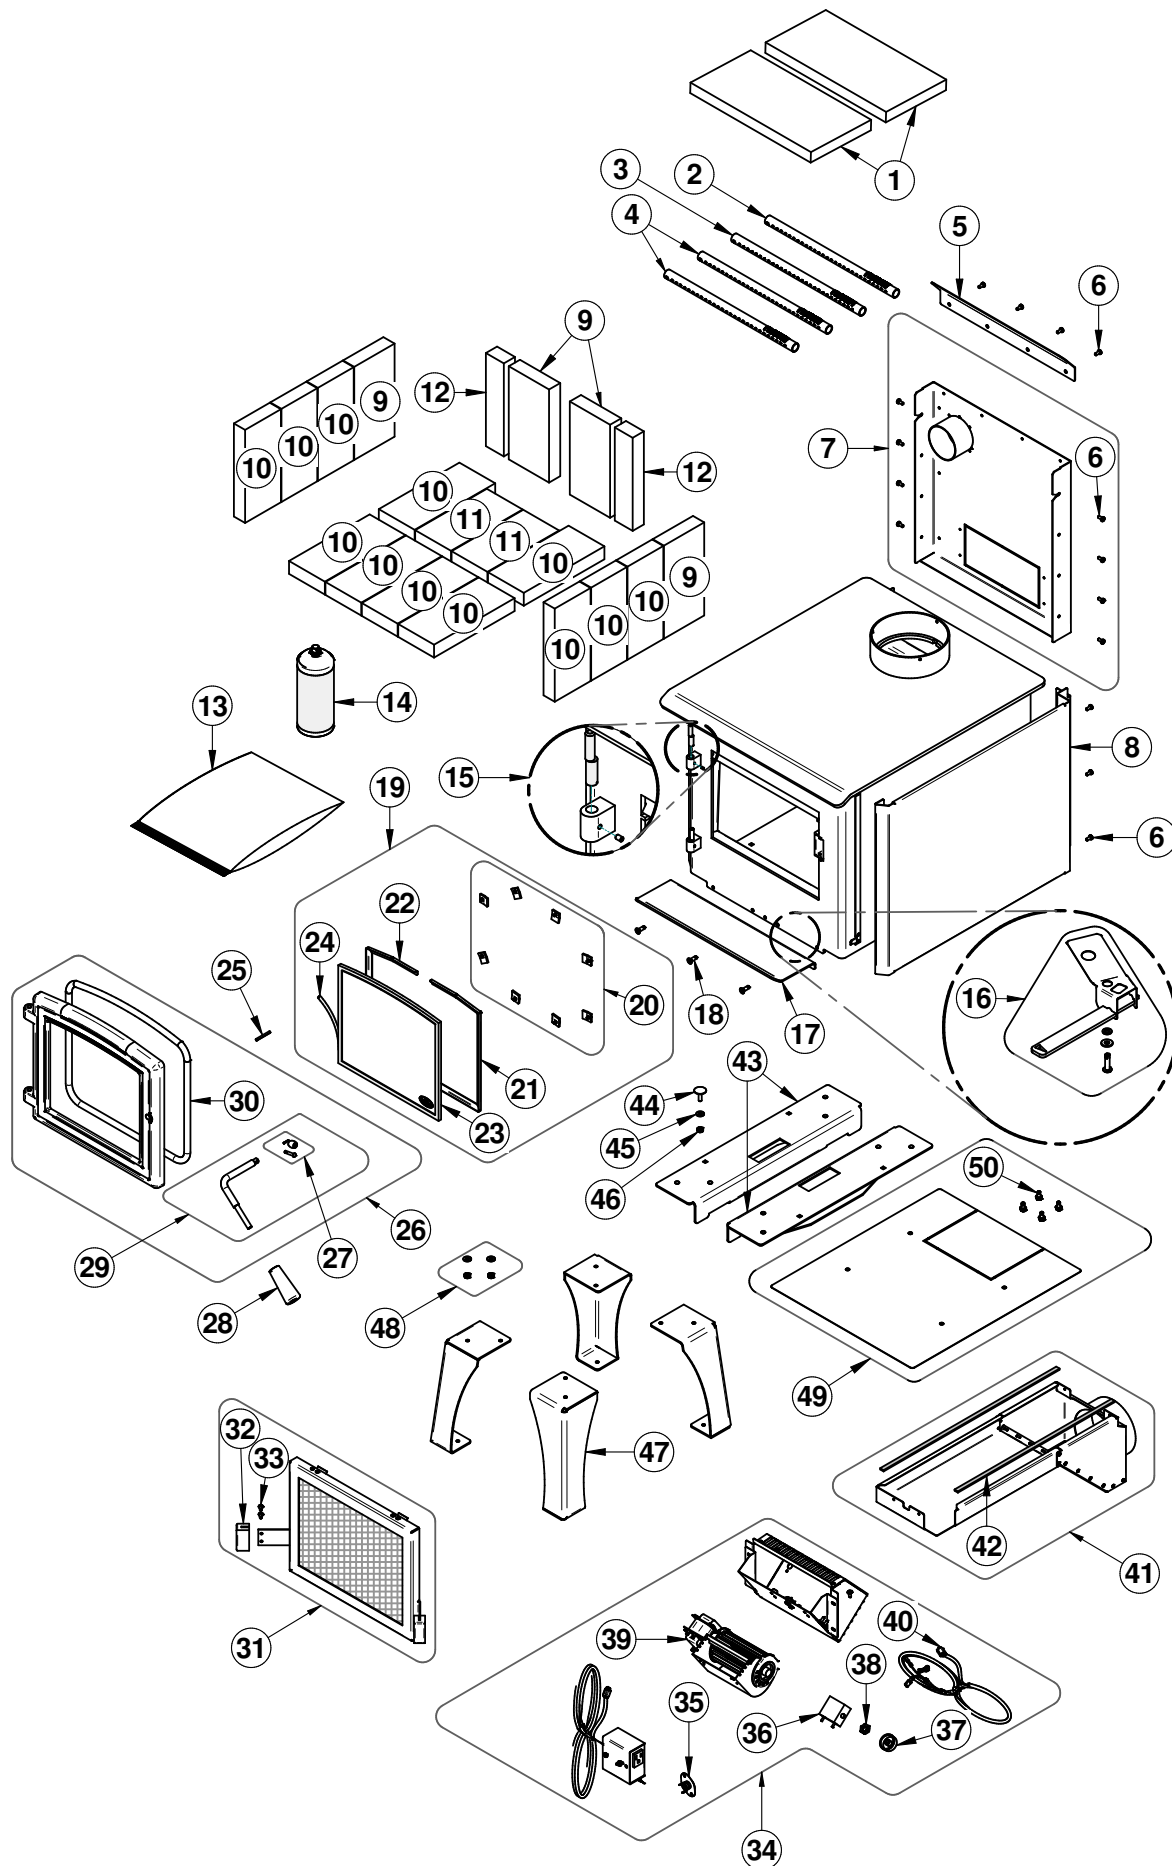

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your unit, please provide the model number and the serial number. We reserve the right to change parts due to technology upgrades or availability. Contact an authorized dealer to obtain any of these parts. Never use substitute materials. Use of non-approved parts can result in poor performance and safety hazards.

| # | Item | Description | Qty |
|----|---------|--|-----|
| 1 | 21631 | C-CAST BAFFLE 13-7/16" X 6-3/4" X 1" | 2 |
| 2 | PL66833 | REAR SECONDARY AIR TUBE | 1 |
| 3 | PL66834 | REAR CENTER SECONDARY AIR TUBE | 1 |
| 4 | PL66835 | FRONT AND CENTER SECONDARY AIR TUBE | 2 |
| 5 | PL74264 | AIR DEFLECTOR | 1 |
| 6 | 30154 | BLACK SCREW #10 X 5/8" QUADREX #2 TYPE A | 18 |
| 7 | SE74262 | BACK HEAT SHIELD ASSEMBLY | 1 |
| 8 | PL74297 | DECORATIVE PANEL | 2 |
| 9 | 29020 | 4 1/2" X 9" X 1 1/4" REFRACTORY BRICK HD | 4 |
| 10 | 29011 | 4" X 9" X 1 1/4" REFRACTORY BRICK HD | 12 |
| 11 | 29001 | 4" X 8" X 1 1/4" REFRACTORY BRICK HD | 2 |
| 12 | PL36056 | 2" X 9" 1 1/4" REFRACTORY BRICK HD | 2 |
| 13 | SE46262 | OB00950 INSTRUCTION MANUAL KIT | 1 |
| 14 | AC05959 | METALLIC BLACK STOVE PAINT - 342 g (12oz) AEROSOL | 1 |
| 15 | SE74167 | DOOR HINGE REPLACEMENT KIT | 1 |
| 16 | SE74366 | ASSEMBLY AIR CONTROL HATCH KIT | 1 |
| 17 | PL74343 | ASH TRAY | 1 |
| 18 | 30507 | BLACK TORX SCREW WITH FLAT HEAD TYPE F 1/4-20 X 3/4" | 3 |
| 19 | SE74367 | OSBURN 950 GLASS, GASKET AND MOLDING KIT | 1 |
| 20 | SE53585 | GLASS RETAINER KIT WITH SCREWS (12 PER KIT) | 1 |
| 21 | PL74345 | RIGHT GLASS FRAME | 1 |
| 22 | PL74346 | LEFT GLASS FRAME | 1 |
| 23 | SE74340 | GLASS WITH GASKET 11 13/16" X 9 7/8" | 1 |
| 24 | AC06400 | 3/4" X 6' FLAT BLACK SELF-ADHESIVE GLASS GASKET | 1 |
| 25 | 30101 | SPRING TENSION PIN 5/32"Ø X 1 1/2"L | 1 |
| 26 | SE24351 | CAST IRON DOOR WITH HANDLE AND GASKET | 1 |
| 27 | AC09185 | DOOR LATCH KIT | 1 |
| 28 | 30898 | ROUND WOODEN BLACK HANDLE | 1 |
| 29 | SE65018 | REPLACEMENT HANDLE WITH LATCH KIT | 1 |
| 30 | AC06500 | SILICONE AND 5/8" X 8' BLACK DOOR GASKET KIT | 1 |
| 31 | AC01420 | RIGID FIRESCREEN | 1 |
| 32 | PL06728 | PAINTED AIR CONTROL HANDLE | 2 |
| 33 | 30129 | METAL SCREW #10 X 1/2" PAN QUADREX ZINC "A" TYPE | 2 |

ENGLISH

| # | Item | Description | Qty |
|----|---------|---|-----|
| 34 | AC02023 | BLOWER WITH THERMODISC | 1 |
| 35 | 44028 | CERAMIC THERMODISC F110-20F | 1 |
| 36 | 44080 | RHEOSTAT WITHOUT NUT (MODEL KBMS-13BV) | 1 |
| 37 | 44085 | RHEOSTAT KNOB | 1 |
| 38 | 44087 | RHEOSTAT NUT | 1 |
| 39 | 44073 | CROSSFLOW BLOWER 115V-60Hz-39W 100 CFM | 1 |
| 40 | 60013 | POWER CORD 96" X 18-3 type SJT (50 pcs per carton) | 1 |
| 41 | AC01421 | 5"Ø FRESH AIR INTAKE KIT FOR WOOD STOVE ON LEGS | 1 |
| 42 | AC06810 | SELF ADHESIVE BLACK GASKET KIT 1/8" X 3/8" X 6' | 1 |
| 43 | PL74355 | LEG SUPPORT | 2 |
| 44 | 30536 | LEVELING BOLT 1/4 - 20 X 1" | 4 |
| 45 | 30185 | 17/64" AA TYPE WASHER BLACK | 4 |
| 46 | 30100 | BLACK HEX NUT 1/4 - 20 (NON-OILED) | 4 |
| 47 | PL74337 | OSBURN 1.4 LEG | 4 |
| 48 | 30141 | LEG KIT HARDWARE BAG | 1 |
| 49 | SE74368 | BOTTOM HEAT SHIELD KIT | 1 |
| 50 | 30060 | THREAD-CUTTING SCREW 1/4-20 X 1/2" F HEX STEEL SLOT WASHER C102 ZINC | 4 |