


2nd Gen Pinnacle Quick Start Guide

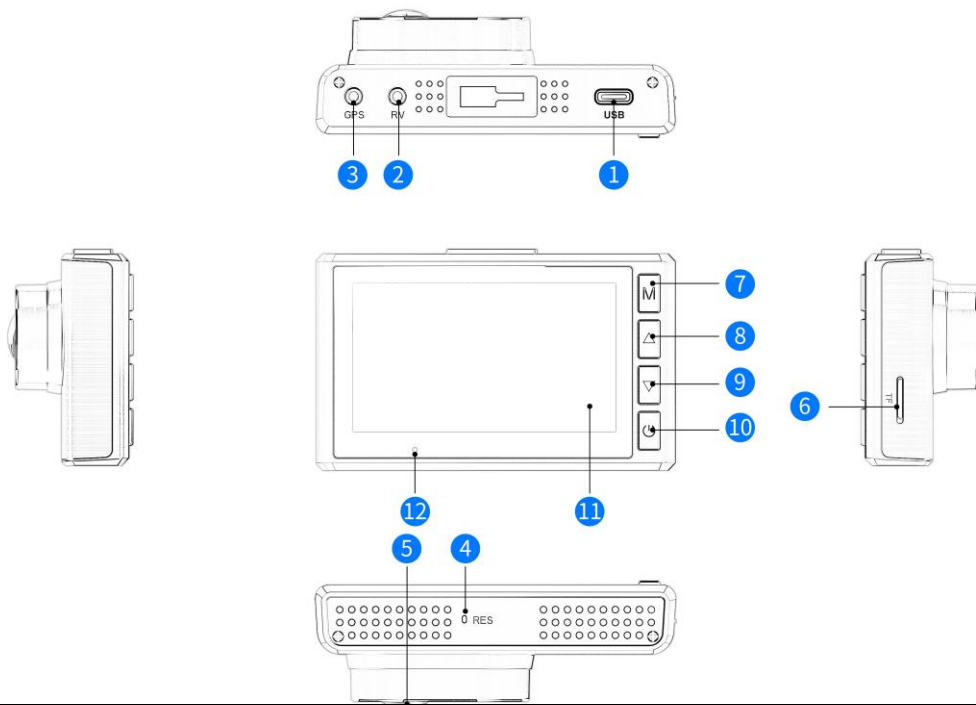

No.	Part description
1	Type-C Power port
2	2nd camera port
3	GPS port
4	Reset button, MIC
5	Front camera lens
6	Micro SD card slot - Class 10 or higher
7	M button (menu, enter, file lock & unlock)
8	Menu up button (Long press to turn on/off Wi-Fi, short press to turn on/off Mic)
9	Menu down button
10	Power button(Long press to turn on/off dash cam, short press to confirm)
11	Main Camera _ Menu Display
12	Indicating light(Charging, recording)

Button name**Function definition**

POWER	Short press to power ON, long press to power OFF
OK/REC	Confirm/REC by short press
MENU	Menu setting
MODE	Switch Mode by long press
SOS	Lock current footage when recording
UP/DOWN	Navigate menu options
WIFI	Long press to ON/OFF WIFI
MUTE	Short press to mute when recording
VISION SWITCH	Short press to switch the display mode
RESET	Reset

FORMAT SD CARD BEFORE USE

1. Turn on Dash Cam – Long Press of Power Button
2. Confirm Record Mode is OFF
3. Short Press M Button to enter Menu.
4. Press Down Arrow Button 1x to enter System Settings Menu.
5. Next Either touch press the System Settings Icon or press Power(OK) button to select
6. Next press the down arrow 6x
7. Next Either touch press the Format Icon or press press the down arrow 4x followed by pressing Power(OK) button to select
8. Press Down button 1x and select Yes. Either touch check mark or press Power(OK) button to delete all data and FORMAT sd card
9. Once formatted, press M button 2x to get back to main camera view
10. Press Power(OK) button to start recording

Setup Time and Date:

1. Turn on Dash Cam – Long Press of Power Button
2. Confirm Record Mode is OFF by short pressing Power(OK) Button
3. Short Press M Button to enter Menu.
4. Press Down Arrow Button 1x to enter System Settings Menu.
5. Short Press Down button 4 times to select Date/Time icon followed by pressing Power(OK) Button or touch press Date/Time icon
6. Short Press Power(OK) Button to change time and date
7. Short Press Power Button(OK) to navigate to next column and use up/down arrows to change #'s
8. press M button 3x to get back to main camera view and correct time and date will be displayed on top left of the screen
9. Press Power(OK) button to start recording

Setup G-Sensor:

1. Turn on Dash Cam – Long Press of Power Button
2. Confirm Record Mode is OFF by short pressing Power(OK) Button
3. Short Press M Button to enter Menu.
4. Recording Setting is highlighted-Short Press Power(OK) Button
5. Short Press Down button 5 times to find G-Sensor icon followed by pressing Power(OK) Button or touch press G Sensor Icon
6. Short Press Down Button 1x to select level LOW.
7. Short Press Power Button to Confirm.
8. press M button 2x to get back to main camera view
9. Press Power(OK) button to start recording

RESET:

If system becomes inoperable during use, Dash Cam can be reset. Simply find Reset Button (Small hole in housing) and insert thin needle to reset dash cam.