

MOTOPOWER®

OBDII CODE READER SCANNER USER'S MANUAL

MP69040



Table of Contents

1. Safety Precautions	1
2. About the Code Reader	2
3. On-Board Diagnostics (OBD) II	3-4
4. Diagnostic Trouble Codes (DTCs)	5
5. Location of the Data Link Connector	6
6. Using the Code Reader - Connection	7-8
7. Using the Code Reader - Read Codes	9-11
8. Using the Code Reader - Erase Codes	12
9. Freeze Frame Data	13-15
10. I/M Readiness	16-17
11. View Vehicle Information	18-19
12. View Live Data	20-21
13. Mode 6	22
14. Oxygen sensor test	23
15. DTC Lookup	24
16. Review	25
17. Voltage Test & Set Up	26
18. Update & Print	27
19. Warranty & Service	28
20. FAQ	29
21. Specification & Trademark	30

1. Safety Precautions

This manual describes common test procedures used by experienced service technicians. Many test procedures require precautions to avoid accidents that can result in personal injury, and/or damage to your vehicle or test equipment. Always read your vehicle's service manual and follow its safety precautions before and during any test or service procedure. Always observe the following general safety precautions:



When an engine is running, it produces carbon monoxide, a toxic and poisonous gas. To prevent serious injury or death from carbon monoxide poisoning, operate the vehicle **ONLY** in a well-ventilated area.



To protect your eyes from propelled objects as well as hot or caustic liquids, always wear approved safety eye protection.



When an engine is running, many parts (such as the coolant fan, pulleys, fan belt etc.) turn at high speed. To avoid serious injury, always be aware of moving parts. Keep a safe distance from these parts as well as other potentially moving objects.



Engine parts become very hot when the engine is running. To prevent severe burns, avoid contact with hot engine parts.



Before starting an engine for testing or troubleshooting, make sure the parking brake is engaged. Put the transmission in park (for automatic transmission) or neutral (for manual transmission). Block the drive wheels with suitable blocks.



Connecting or disconnecting test equipment when the ignition is **ON** can damage test equipment and the vehicle's electronic components. Turn the ignition **OFF** before connecting the Code Reader from the vehicle's Data Link Connector (DLC).



The vehicle's battery produces highly flammable hydrogen gas. To prevent an explosion, keep all sparks, heated items and open flames away from the battery.


2. About the Code Reader



- 1. CABLE** - Connects the Code Reader to the vehicle's Data Link Connector (DLC).
- 2. LCD Display** - Displays test results, Code Reader functions and Monitor status information.
- 3. Up** **5. Left** **7. Down** **10. Right**
- 4. DTC** - Diagnostic Trouble Codes
- 8. Enter** - Confirm the selection in the menu.
- 9. Exit / No / Back**
- 6. IM** - Vehicle Emissions Inspection and Maintenance
- 11. LDS** - Living Data Stream
- 12. LED indicators** -
 — — Fault Codes Detected
 — — Connection Failed
 — — Connection Succeeded

3. On-Board Diagnostics (OBD) II

What is OBD?

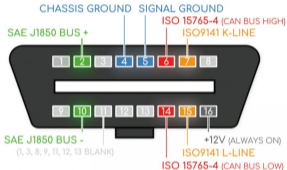

On-Board Diagnostics (OBD) is an automotive electronic system, which is capable of a self-diagnosis, indicating and reporting the possible problem within the vehicle. It gives you or the technician the opportunity to easily access the information about the 'health' of your car and solve the problem.

3. On-Board Diagnostics (OBD) II

The OBD II system is designed to monitor emission control systems and key engine components by performing either continuous or periodic tests of specific components and vehicle conditions. When a problem is detected, the OBD II system turns on a warning lamp (MIL) on the vehicle instrument panel to alert the driver typically by the phrase "Check Engine" or "Service Engine Soon". The system will also store important information about the detected malfunction so that a technician can accurately find and fix the problem. Here below follow three pieces of such valuable information:

- 1) Whether the Malfunction Indicator Light (MIL) is commanded on or off.
- 2) Which, if any, Diagnostic Trouble Codes (DTCs) are stored.
- 3) Readiness Monitor Status.

How Does it Work?

There are multiple sensors in your vehicle and each sensor sends signal to your vehicle's computer - the Electronic Control Unit (ECU). The ECU uses the signal/information and adjusts different elements in order.

4. Diagnostic Trouble Codes (DTCs)

Diagnostic Trouble Codes (DTC Look Up)

OBDII Diagnostic Trouble Codes are codes that are stored by the on-board computer diagnostic system in response to a problem found in the vehicle. These codes identify a particular problem area and are intended to provide you with a guide as to where a fault might be occurring within a vehicle. OBDII Diagnostic Trouble Codes consist of a five-digit alphanumeric code. The first character, a letter, identifies which control system sets the code. The other four characters, all numbers, provide additional information on where the DTC originated and the operating conditions that caused it to be set.

Below is an example to illustrate the structure of the digits:

DIAGNOSTIC TROUBLE CODES EXAMPLE


SYSTEMS	TYPE OF CODE	DEFINE THE EXACT FAULT CODE IN QUESTION
B = Body C = Chassis P = Powertrain U = Network	0 = Standardised (SAE) fault codes 1 = Manufacturer specific codes	

P 0 2 0 2

WHICH OF THE CAR SYSTEMS IS AT FAULT

1 = Fuel and Air Metering	5 = Vehicle Speed Control and Idle Controls
2 = Fuel and Air Metering	6 = Computer Output Circuits
3 = Ignition System or Engine Misfire	7 = Transmission Controls
4 = Auxiliary Emission Controls	8 = Transmission Controls

5. Location of the Data Link Connector (DLC)

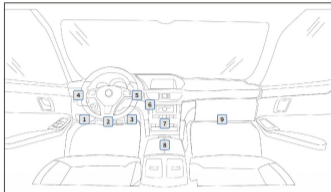

The DLC (Data Link Connector or Diagnostic Link Connector) is the standardized 16-cavity connector where diagnostic scan tools interface with the vehicle's on-board computer. The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles. If the Data Link Connector is not located under the dashboard, a label should be there revealing its location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access the connector. If the DLC cannot be found, refer to the vehicle's servicemanual for the location.

6. Using the Code Reader - Connection

CODE RETRIEVAL PROCEDURE

Never replace a part based only on the DTC definition. Each DTC has a set of testing procedures, instructions and flow charts that must be followed to confirm the location of the problem. This information is found in the vehicle's service manual. Always refer to the vehicle's service manual for detailed testing instructions.



Check your vehicle thoroughly before performing any test.




ALWAYS observe safety precautions whenever working on a vehicle. See Safety Precautions on page 1 for more information.

1. Turn the ignition off.
2. Locate the vehicle's 16-pin Data Link Connector (DLC).
3. Connect the Code Reader's cable connector to the vehicle's DLC. The cable connector is keyed and will only fit one way.



6. Using the Code Reader - Connection

- If you have problems connecting the cable connector to the DLC, rotate the connector 180° and try again.



If you still have problems, check the DLC on the vehicle and on the Code Reader. Refer to your vehicle's service manual to properly check the vehicle's DLC.


- After the Code Reader's test connector is properly connected to the vehicle's DLC, the screen will turn on to confirm a good power connection.
4. Turn the ignition on. DO NOT start the engine.
 5. Enter the DIAGNOSE menu to connect the Code Reader with the vehicle's computer.




7. Using the Code Reader - Read Codes

- If the LCD display is blank, it indicates there is **no power** at the vehicle's DLC. Check your fuse panel and replace any burned-out fuses.

If replacing the fuse(s) does not correct the problem, see your vehicle's repair manual to locate the proper computer (PCM) fuse/circuit. Perform any necessary repairs before continuing.

- **If connection is made**, the Code Reader will retrieve and display the system status that are in the vehicle's computer memory. (Green LED  turns on.)



- If the connection fails, it means that the Code Reader is unable to communicate with the vehicle's computer. (Red LED  turns on.)

Do the following:


- Turn the ignition key off, wait for 5 seconds and turn the key back on to reset the computer.
- Make sure your vehicle is OBD2 compliant.

7. Using the Code Reader - Read Codes

6. Read and interpret the Diagnostic Trouble Codes using the LCD display.




Select **Read DTC** to detect the fault codes stored in the vehicle's computer.

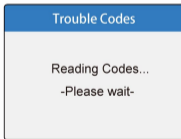





7. Using the Code Reader - Read Codes



If there're no fault codes stored in the vehicle's computer.



If there're fault codes detected, (Yellow LED  turns on.) follow the next step to select the vehicle brand accordingly.



Visit the manufacturer's website for Fault Code Definitions. Match the retrieved DTC(s) with those listed. Read the associated definition(s), and see the vehicle's service manual for further evaluation.


8. Using the Code Reader - Erase Codes

ERASING DIAGNOSTIC TROUBLE CODES (DTCs)



When the Code Reader's ERASE function is used to erase the DTCs from the vehicle's on-board computer, "Freeze Frame" data and manufacturer-specific enhanced data are also erased.

If you plan to take the vehicle to a Service Center for repair, **DO NOT** erase the codes from the vehicle's computer. If the codes are erased, valuable information that might help the technician troubleshoot the problem will also be erased.



Erasing DTCs does not fix the problem(s) that caused the code(s) to be set. If proper repairs to correct the problem that caused the code(s) to be set are not made, the code(s) will appear again (and the check engine light will illuminate) as soon as the vehicle is driven long enough for its Monitors to complete their testing.

9. Freeze Frame Data

What is Freeze Frame Data?

In simple words, whenever the computer detects a fault and illuminates the CEL, it also clicks and stores freeze frame data related to the issue. This data is essentially a snapshot from a number of components and sensors. You can view this information to find the cause of the problem. It is also a legal requirement in some cases to capture and store emission-related information. This captured data is known as freeze frame data.



9. Freeze Frame Data

View Freeze Frame 1/17	
DTCFRZF	P0278
FUELSYS1	OL
FUELSYS2	OL
LOAD_PCT(%)	2.7
ETC(°C)	25
SHRTFT1(%)	82.0

Viewing OBD2 Freeze Frame Data

Viewing OBD2 freeze frame data can be complicated for people who do not know much about OBD scan tools. The information will help you identify why the engine light is on so you can come up with a solution. The data will tell you a lot about your vehicle at the time of the error. This includes the condition of the engine – whether it was warmed up or cold. It may also give information regarding the fuel. You can use this data to go in the right direction.

9. Freeze Frame Data

How to Read Freeze Frame Data?

Your vehicle talks to you in a language of its own. You will need to understand this language to be able to read freeze frame data.

You can search online for specific codes or try the DTC feature.

How can I Clear Freeze Frame Data Using an OBD2 Scan Tool?

The system will automatically remove DTC data once your vehicle completes a specific number of good trips, i.e: trips without faults.

You will also lose freeze frame data if there is no power supply to the PCM. Also, you can manually choose to delete this information by going into the system and delete the data with the scan tool.

10. I/M Readiness

What is I/M Readiness?

Signals or codes for emission testing which state that all the vehicle's on-board emissions diagnostics have been run.



How do I check my I/M readiness?

To check if the readiness codes are set, turn the ignition switch to the ON (II) position, without starting the engine. The MIL will come on for 20 seconds. If it then goes off, the readiness monitors are set. If it blinks five times, the readiness monitors are not set.

Since DTCs Cleared	1/2
MIL Status	ON
Misfire Monitor	OK
Fuel System Mon	OK
Comp.Component	OK
Catalyst Mon	INC
Htd Catalyst	N/A

10. I/M Readiness

What are the monitors?

- Misfire Monitor
- Fuel System Monitor
- Comprehensive Component Monitor
- Catalyst Monitor
- Heated catalyst Monitor
- Evaporative system monitor
- Secondary air system monitor
- A/C Refrig monitor
- Oxygen sensor monitor
- Oxygen sensor heater monitor
- EGR and/or VVT system monitor



Meaning of the results

- OK - Means the monitoring test is completed.
- INC - Means the monitoring test is not completed.
- N/A - Means the device doesn't support monitoring test.

What are MIL codes?

The Malfunction Indicator Lamp (MIL) or CHECK ENGINE light as it is more commonly called, is essentially an emission warning light. If the light comes on, it means the On-board Diagnostics II system (OBD II) has detected an emissions-related problem.


11. View Vehicle Information

Vehicle Identification Number (VIN)

VIN stands for Vehicle Identification Number. A unique set of 17 numbers and letters, your VIN holds all kinds of information about your car, including the manufacturer, where and when the car was built and information about the car, including the transmission.



Turn ignition on with engine off. (Press start button to turn ignition on, but don't start the engine.)

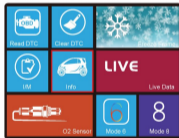

Automatically read VIN. No need to choose car brands. For some old cars, the scanner may not support. These issues include an incompatible scanner tool, bad fuses, damage in the circuit board, ECU, and failed computer.

11. View Vehicle Information

Vehicle Info.	1/3
Vehicle ID Number	
Calibration ID	
Cal. Verif. Number	



What does the VIN - Vehicle Identification Number stand for?



12. View Live Data

Real-time data view of vehicle operating condition

Live data gives you real-time feedback on some of the functions of your car. These include fuel trim and operating temperature values. This is one of the most useful features of OBD2 scanners.

1- Data Stream / Live Data



Data Stream	1/118
DTC_CNT	0
DTCFRZF	P0105
FUELSYS1	N/A
FUELSYS2	N/A
LOAD_PCT(%)	65
ETC(°C)	86


12. View Live Data

2- Real-time graphic view


Data Stream 1/118	
DTC_CNT	0
DTCFRZF	P0105
FUELSYS1	N/A
FUELSYS2	N/A
LOAD_PCT(%)	65
ETC(°C)	86



Select one of the datas and press Enter button to see the data in the real-time graphic view.

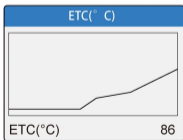

13. Mode 6

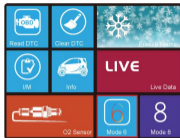

Select mode 6 to enter on-board monitoring test.

On-board monitor 1/24	
Exhaust gas sensor monitor bank 1 - sensor 1	
Exhaust gas sensor monitor bank 1 - sensor 2	
No support OBDMIN 20	



Select on-board monitoring options to enter Sensor monitor and check detailed Sensor Value

Sensor monitor 1/6	
No support Test Id 132	
No support Test Id 280	
Rich to lean sensor threshold voltage (constant)	

Sensor value 0/0	
Test value	4096
Min Limit	0
Max Limit	0
Status	Fail
Unit	--

14. Oxygen sensor test

■ O2 Sensor

When entering the oxygen sensor test item, the oxygen sensor value of the tested vehicle will be read to determine whether the various test data are normal.



O2 monitor test 1/8	
O2 bank1 sensor1	
O2 bank1 sensor2	
O2 bank2 sensor1	
O2 bank2 sensor2	
O2 bank3 sensor1	
O2 bank3 sensor2	

O2 Bank1 Sensor1 1/10	
Rich-lean threshold	
Lean-rich threshold	
Low for switch	
High for switch	
Rich-lean threshold	
Lean-rich threshold	

Rich-lean threshold	
Test value	0.500
Min Limit	0.250
Max Limit	0.000
Status	Fail
Unit	V

■ Mode 8 - EVAP test



Component test	
Evaporative system leak test	


15. DTC Lookup

■ Diagnostic Trouble Codes Lookup


1) - Select the **DTC Lib** option to enter the function.



2) - Input the codes you would like to check as instruction.



3) - Press ENTER button to check the code meaning.




16. Review

■ Review detected Codes and Data Stream.

1) - Select the **Review** option to enter the function.



2) - Select the **Review DTC** or **Review Data Stream** to check the stored datas.



Review DTC	
Pending Codes	SF111 TOYOTA
P1030	
Exhaust gas recirculation cooler flow insufficient detected	

Review Data Stream 1/118	
DTC_CNT	0
DTCFRZF	P0105
FUELSYS1	N/A
FUELSYS2	N/A
LOAD_PCT(%)	65
ETC(°C)	86

17. Voltage Test , Cloud Print & Set Up

■ View the Battery Voltage / Alternator output voltage
Select the **Voltage** option to enter the function.



■ Cloud Print - Get testing report directly on your phone



1- Select Cloud Print

2- Choose the content to print

3- QR Code generated

4- Scan the QR Code with your phone to get the testing report



■ Set Up

Select the **Setup** option to enter the function.



System Setup 1/8	
Language	
Unit of Measure	
Contrast	
Beep	
Color Scheme	
About	


18. Update & Print Via PC

- 1) - Download the Update File (if any) by visiting our website at www.motopowers.com - *Software download*
- 2) - Run the file to open the program.
 - *Close anti-virus software before running the Update File.*
 - *Support Windows system only.*
- 3) - Connect the device with the computer via a Type-C cable.
 - *USB connected notification display at the bottom if connection is made.*



- 4) - Press **Start update** button to initiate the update program.
 - *Do not disconnect the connection until the update is finished.*
 - *Check the File version to see if any update before starting the update.*
- 5) - Review DTC/Data stream.
 - *If no data was stored, the program will exit if the options are selected.*
- 6) - Print

*Copy the DTC
/Data stream for
printing directly.*

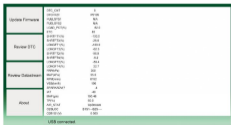

19. Warranty & Service

■ Limited Two Years Warranty

THIS WARRANTY IS EXPRESSLY LIMITED TO PERSONS WHO PURCHASE THE MOTOPOWER MP69040 CODE READER FOR PURPOSES OF RESALE OR USE IN THE ORDINARY COURSE OF THE BUYER'S BUSINESS.

MOTOPOWER MP69040 CODE READER IS WARRANTED AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP FOR TWO YEARS FROM THE DATE OF PURCHASE.

This warranty does not cover any part that has been abused, altered, used for a purpose other than for which it was intended, or used in a manner inconsistent with instructions regarding use. The exclusive remedy for any automotive meter found to be defective is repair or replacement, and MOTOPOWER MP69040 code reader shall not be liable for any consequential or incidental damages.

■ Service Procedures

If you have any questions, please contact our customer service team directly.

20. FAQ

■ Is the Scanner Powered by built-in battery?

No. It doesn't include any battery inside. It's powered by the OBD2 port of the vehicle directly. Just plug into the OBD2 port for operation.

■ Why does the screen not turn on when plug-in?

Check your fuses to see if any have gone bad. A blown-out fuse is one of the usual reasons why an OBD2 port isn't communicating. Remember that your car might have more than one fuse box.

■ If my OBD2 has power but won't connect, what should I do?

Most OBD2 won't connect because it has no power. However, if it has power but won't connect, you may want to check its connection to your entire system. In most cases, it can be a cabling problem, or the OBD2 itself isn't working. If the problem cannot be solved after reconnection, contact the MOTOPOWER customer service for assistance.

■ Does the obd2 scanner support abs, airbag/SRS, oil codes?

It is able to read and clear check engine information which is part of OBDII system, but it cannot work with non-OBDII systems, including ABS / Airbag / Oil Service Light, etc.

■ Why the detected error codes cannot be erased?

When you find the fault codes, please fix the problem before erasing the codes. If the codes erased without the problem fixed, the engine fault light may turn on again in the future.

■ Check engine light came on, but after hooking this up, it reads no codes. Why it can't find them?

- 1- The scanner is not compatible with the make or model of the car.
- 2- The vehicle is emitting emissions which are higher than the Environmental Protection Agency mandates.
- 3- There were codes erased without the problems were fixed. And the ECM was disabled and prevented from storing codes.

21. Specification & Trademark

■ Specification

- 1- Input Voltage: 12-16Volts DC
- 2- Screen Display: 2.8Inch TFT color LCD
- 3- Working Temperature: -20 °C to 65 °C
- 4- Storage Temperature: -30 °C to 70 °C
- 5- Compatibility: Supports 9 protocols compatible with most cars since 1996 US, 2003 EU and 2008 Asian.
- 6- Protocols Supported:
 - 1)- SAE J1850 PWM (41.6Kbaud)
 - 2)- SAE J1850 VPW (10.4Kbaud)
 - 3)- ISO9141-2(5 baud init, 10.4Kbaud)
 - 4)- ISO14230-4 KWP (5 baud init, 10.4 Kbaud)
 - 5)- ISO14230-4 KWP (fast init, 10.4 Kbaud)
 - 6)- ISO15765-4 CAN (11bit ID, 500 Kbaud)
 - 7)- ISO15765-4 CAN (29bit ID, 500 Kbaud)
 - 8)- ISO15765-4 CAN (11bit ID, 250 Kbaud)
 - 9)- ISO15765-4 CAN (29bit ID, 250 Kbaud)

■ Trademarks

MOTOPOWER is the registered brand and trademark of MOTOPOWER INC and its affiliates.

All other marks are trademarks or registered trademarks of their respective holders.

■ Copyright information

©2024 MOTOPOWER INC. All rights reserved.

■ Disclaimer

The information, specifications and illustrations in this manual are based on the latest information available at the time of printing. MOTOPOWER reserves the right to make changes at any time without notice.



Need Any Technical Support or Service?



Email us at customerservice@motopowers.com



Instruction Manual
Guide de l'utilisateur
Benutzerhandbuch
Guida utente
Guía del usuario



www.motopowers.com/pages/manuals

MOTOPower INC.
16192 COASTAL HWY,
LEWES, DE 19958, USA
www.motopowers.com

EC REP

EVATMASTER CONSULTING GMBH
BETTINASTR. 30, 60325 FRANKFURT AM MAIN
GERMANY

UK REP

EVATOST CONSULTING LTD.
SUITE 11, FIRST FLOOR,
MOY ROAD BUSINESS CENTRE, TAFFS WELL,
CARDIFF, WALES, CF15 7QR, GB



RoHS



Printed in China