
Filabot Vermont, USA, Earth 1-802-505-6772

Filabot Filameasure

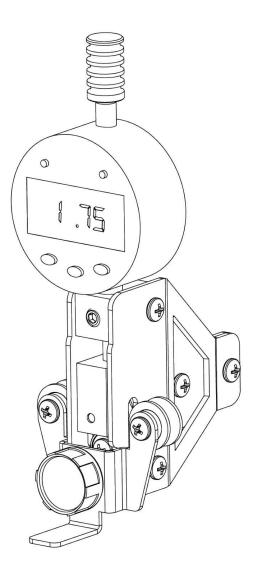

User Manual

This manual applies to the Filabot Filameasure.


Triex LLC, Barre, VT 05641, USA

General Specifications

Weight: 13 Oz

Dimensions: 13cm L x 6 cm W x 18.5 cm H

Parts Included

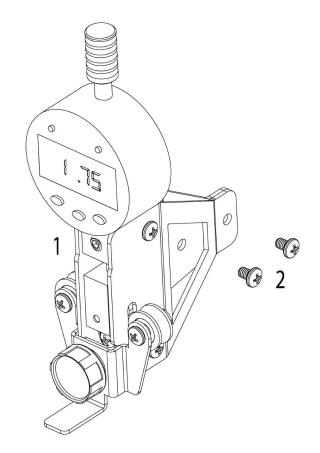


Parts Included:

1.Filameasure Assembly2.Screws 8-32 x ³/₈" Phillips Head screws (2)

Tools Required: 3/32 Allen Key #2 Phillips Head Screw Driver


Recommended: Filabot Spooler

Contact Filabot at Filabot.com for additional/replacement parts

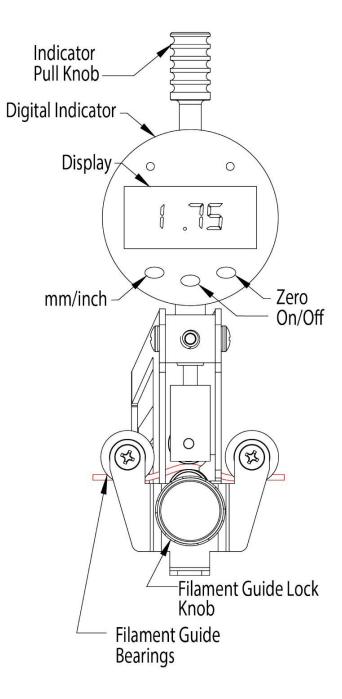

Refer to the indicator manual for detailed operations


Installation

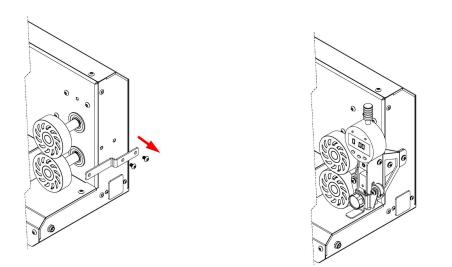

- 1. Remove the two original screws and filament guide from the side of the unit using a 3/32 Allen Key or a #2 screwdriver.
- 2. Line the two mount holes on the Filameasure up with the holes on the spooler where the filament guide was mounted.
- 3. Install the included Phillips head screws using a Phillips head screwdriver to mount the filameasure to the side of the spooler and tighten the screws.

Video Tutorial for installation can be found on our youtube channel: <u>https://www.youtube.com/watch?v=tOcStstMZNY</u>

- 1. Turn Unit ON
- 2. Next press the zero button. *Note: When zeroing the indicator the display should read 0.00 when correctly zeroed. There cannot be Filament in the Filameasure.*

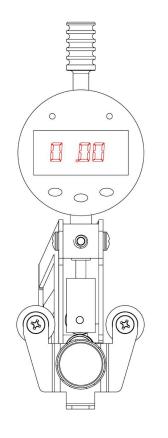

Refer to indicator manual for detailed operations.

First Use- Feeding Filament

- 1. Loosen the *Filament Guide Knob* and raise the filament guide bearings.
- 2. Then pull up on the Indicator Pull Knob.
- 3. Using a clean-cut piece of filament feed the filament through the first *Filament Guide Bearing,* feed through the top of the guide in the center, then back under the second *Filament Guide Bearing.*
- 4. Release the *Indicator Pull Knob;* Push the guide bearings down so the filament bends slightly then tighten the *Filament Guide Knob.*

