

Remote Control User Guide

WholeBody® ROVE

MANUAL HEIGHT ADJUST — After the AcuPoint® Detection has completed its scan, should you wish to adjust the vertical massage range differently, press and hold the arrows to do so.

POWER / RESTORE — Press to activate the tablet remote. Press again to stop all function and restore the chair to the upright position.


AUTO — Tap repeatedly to toggle through the massage programs.

DEMO — Tap to start the Demo program.

POSITION — Press and hold to adjust the backrest and foot and calf massager positions to exactly where you need it.

ZEROG® — Tap to recline the chair to the zero gravity position for maximum spinal relief.

See page 2 to learn more about the on-screen indicators

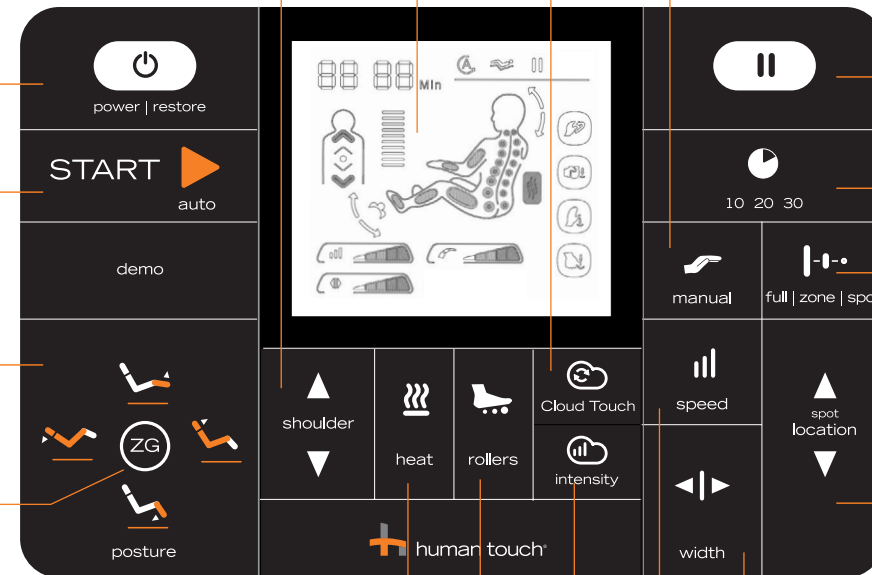

CLOUD TOUCH ACCUPRESSURE — In manual mode, tap repeatedly to toggle through three Cloud Touch zones (Full, Upper, or Lower).

MANUAL — Tap repeatedly to toggle through five massage techniques.

PAUSE — Press to pause all functions immediately. Press again to resume.

DURATION — Tap repeatedly to toggle through massage timer settings (default is 20 minutes).

RANGE — In manual mode, tap repeatedly to toggle between a Full, Zone, or Spot massage Range.

SPOT — When using Spot manual mode, press and hold to adjust the vertical massage roller position.


HEAT — Tap to turn Heat On/Off.

ROLLERS — Tap to turn Foot Rollers On/Off.

CLOUD TOUCH INTENSITY — Tap repeatedly to adjust the Cloud Touch intensity.

WIDTH — In manual mode, tap repeatedly to adjust the massage roller Width (except in Kneading modes).

SPEED — In manual mode, tap repeatedly to adjust the massage Speed (except in Rolling mode).

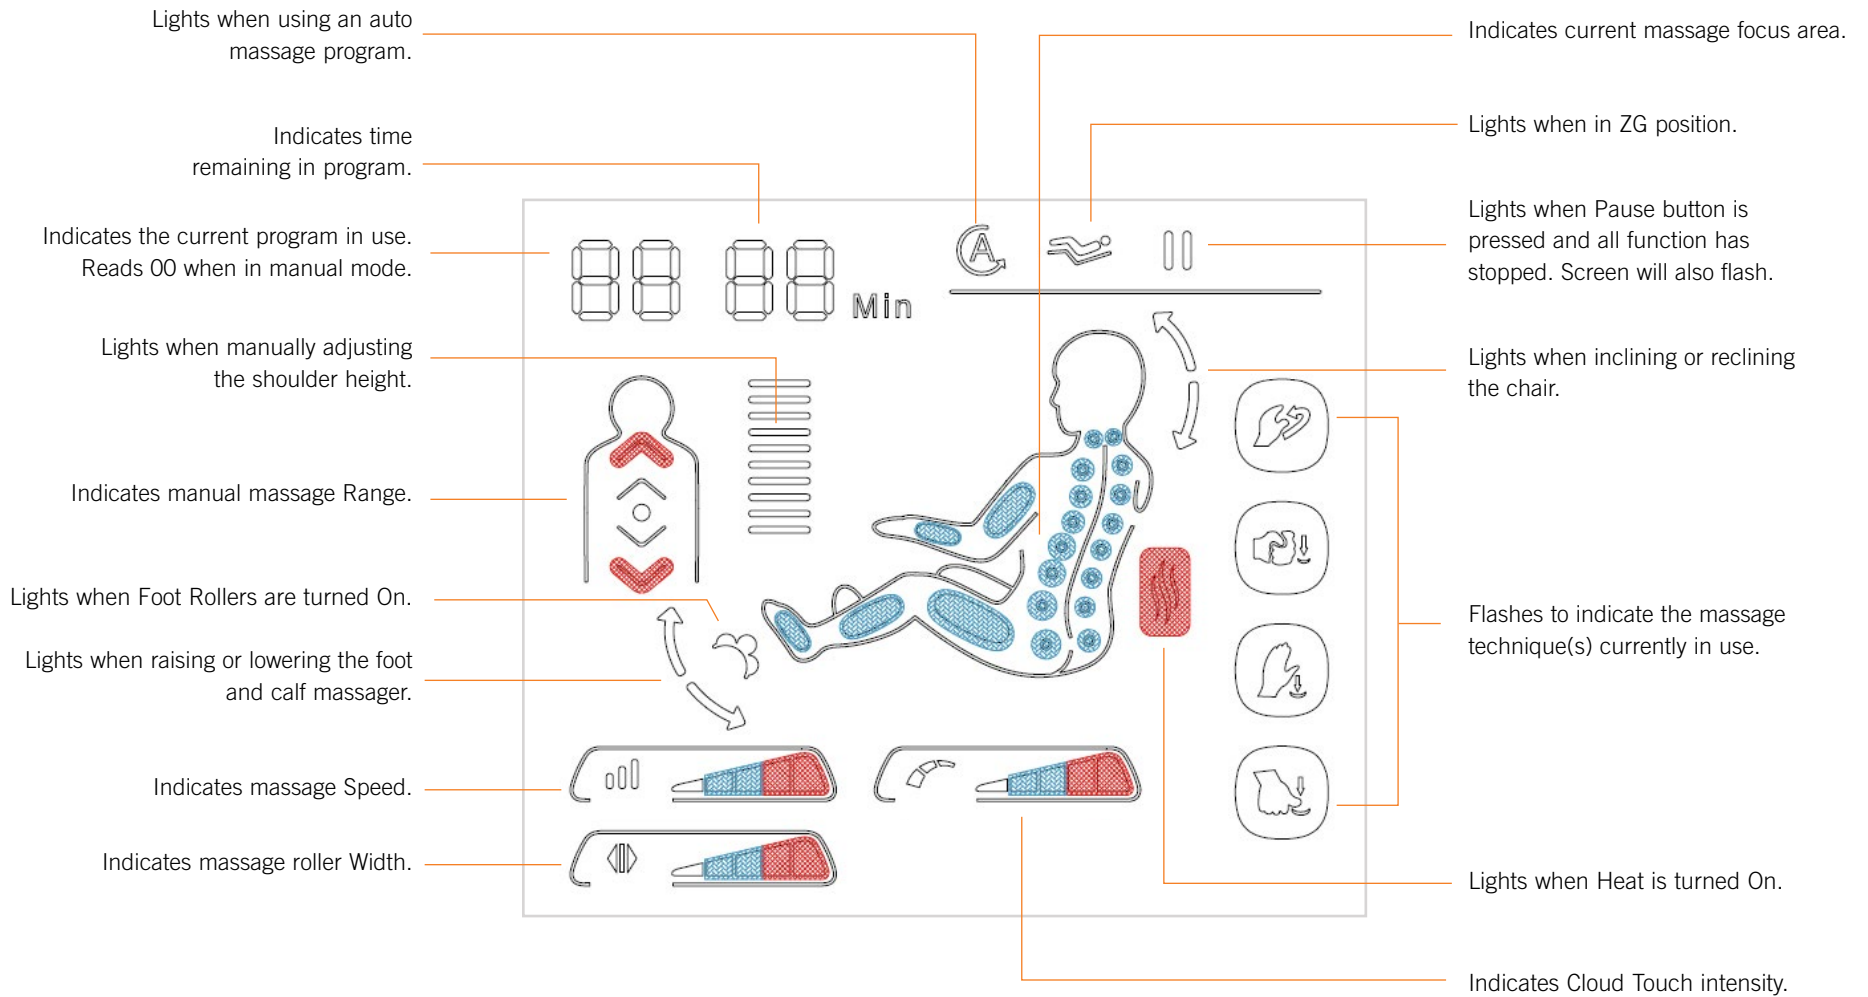

For more detailed operation instructions, please see the Use and Care Manual.