



## 39mm Extended Fork Tube Installation Guide

Your motorcycle and our parts both deserve top-notch installation. Use this guide in conjunction with a Harley-Davidson service manual. Work diligently—your safety depends on it. Happy choppering!

### Kit Contents

You will receive the following items in your kit.


- 2 fork legs
- 2 fork spring spacers
- 2 fork cap sealing rings
- 2 damper rod bolts
- 2 damper rod bolt crush washers
- 4 damper rod seals
- 2 fork seals
- 2 drain screw sealing washers
- 2 seal wipers
- 2 seal retainers



# Fork Disassembly

Drain fork tubes by removing the damper bolts and crush washers.

- TC Tip: Use an extended 6mm hex bit to loosen the damper bolts. If the damper bolt just rotates, an impact tool will usually release it.

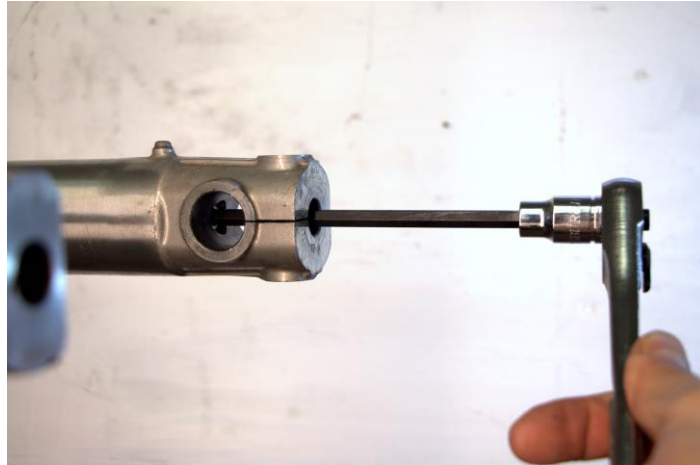

Don't disturb the drain screws.

- TC Tip: New drain screw sealing washers are included in your fork kit. The damper bolts permit the tubes to be drained. If your drain screws are not leaking, it is not necessary to remove the drain screws. Retain the new ones for a future fork oil exchange.

Loosen the fork caps. Do not remove them at this time.

- TC Tip: By following this sequence of steps, loosening the fork caps is made easier. The fork tubes remain stationary. A 35mm socket is required to remove most factory fork caps. To minimize tool marks, a 1 3/8" socket may be used with a few wraps of tape around the fork cap.



Raise the motorcycle. Remove fork tubes from triple tree. Remove wheel, brake calipers, and the mud guard or fork brace.

- TC Tip: Fork pinch bolts using a Torx fastener require a T45 bit. Most others require an 8mm hex bit.

Remove fork caps completely and remove springs.

- TC Tip: The fork springs may be under compression even with the suspension unloaded. Use gloves and eye protection during fork cap removal. Exert downward pressure as you unscrew the fork caps to prevent damage or injury. This will also prevent damage to threads.

Drain fork tubes completely by moving the tubes through their stroke several times. Use a small flathead screwdriver to carefully pry up the dust boots and seal wipers.



Free the seal retaining rings from their grooves in the lower leg.

Remove damper rods and rebound springs. Remove fork seals. Separate the inner fork tube and outer leg. (Extend the fork tube rapidly and briskly several times. The captive bushings will drive the seal from the fork lower.) Once the legs are separated, remove the damper rod bases from the lower leg.

- TC Tip: Make sure to account for both damper rod bases. Surface tension from the fork oil can trap them in the lower leg.

Remove the fork damper rod seals from the damper rods. Clean and dry the insides of the lower legs, fork springs, damper rods, rebound springs, and damper rod bases. After cleaning, inspect all items to be reused for wear.

- TC Tip: If you are “shaving” your fork legs, now is the time to do it. Be sure to clean everything again after machining is complete.

# Fork Assembly

Transfer fork tube bushings (the lower bushing when fork is upright) to new fork tubes. Replace if worn. Use a small screwdriver to gently pry the bushing ends apart enough to free the bushing from its retaining groove.



Install slider bushings (the upper bushing when fork is upright) and backup rings onto fork tubes from the top.

Install new fork seals onto the fork tube.

- TC Tip: Orient the seals with the correct side facing upwards, shown in image. Prior to installing seals, apply grease to seal lips. Use care to prevent compromising fork seal integrity.



Install new sealing rings on the damper rods.



Install rebound springs onto damper rods. Insert damper assemblies into fork tubes. Return damper rod bases to the lower legs. Slide each tube into its corresponding lower leg.




Install new damper rod bolts and new damper rod crush washers to factory torque specification.

- TC Tip: The damper rod bolt crush washer seals the fork from leaks. Install carefully.

Slide seals carefully down the fork tube until they contact the lower legs. Install fully with seal driver tool.

- TC Tip: 1 ½" PVC tubing may be fashioned into a tool for 39mm forks. Slipping a section that is a few inches longer than your new fork tubes protrude. Using a hammer, drive the seal home evenly. You'll know you're getting close to fully seated when the groove for the seal retaining ring is visible.

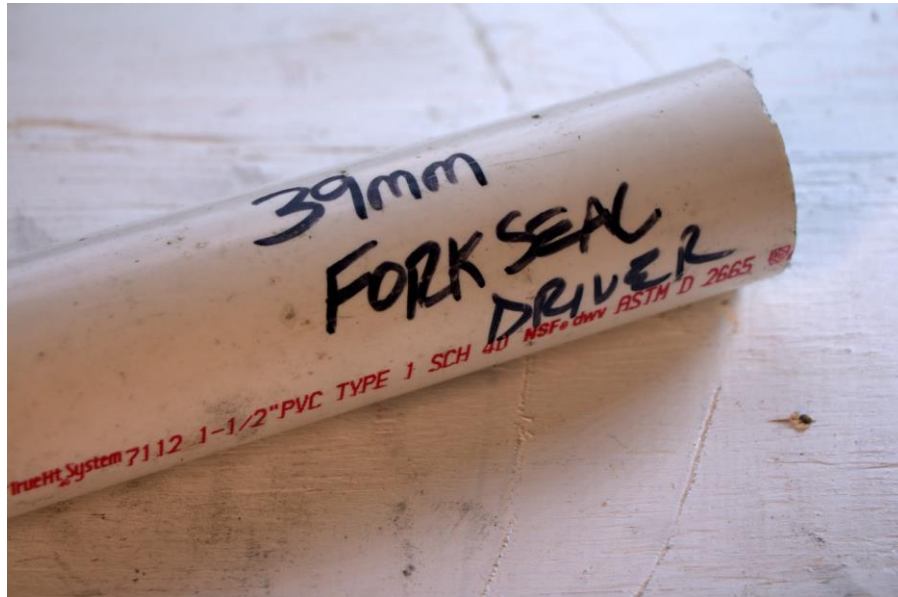

Reinstall seal retaining rings, new seal wipers, and dust boots.



Install fork tubes into the triple trees. Be sure fork tube protrudes slightly above the top tree. Tighten to recommended torque specification. Extend the tubes fully.

The following image is for reference only. Use it to double check your assembly, as it shows all bushing and seal components in relation to one another when installed.



Measure correct fluid quantity, and pour into the fork tubes. Check for leaks at the damper rod bolt. If leaks are found, re-check torque at bolts, drain tubes, and fill again with the correct quantity of fluid.

- TC Tip: Fluid quantity is critical to fork feel and performance. Use a graduated measuring cup or syringe for accurate measuring. Fill with factory recommended fluid specification. Longer tubes do not change fluid specifications.

Your manual may list two specifications. Use the dry specification for initial installation. If leaks are present, refill to wet specification. If you do not have a manual, use the fill specification in the chart on the next page.

Year	Model	Capacity (oz.)
1988-2003	All Sportster Models (exc. 1992-1998 XL883H)	10.2
1992-1998	Sportster XL883H	12.1
2004-2010	All Sportster Models (exc. XL883L, XL1200L, XL883N, XL1200N)	11.6
2004-2013	XL883L (exc. 2009-10), XL883R (2011-2013 only), XL1200L, XL1200N (2007-2008 only), XL1200V, XL1200C (2011-2013 only)	12.3
2009-2013	XL883L (2009-2010 only), XL883N, XL1200N	13.6
2014-2015	All Sportster Models	14
1991-1998	All Dyna Models except FXDWG	10.2
1999	All Dyna Models except FXDWG	9.2
2000-2005	Dyna FXD, FXDL, FXDLI	10.6
2000-2005	Dyna FXDS-CONV	11.5
1987-1999	FXR, FXRS, FXLR, FXR2, FXR3	10.2
1988-1994	FXRT, FXRS-SP, FXRS-CON	11.5

Install new fork cap sealing rings onto the fork caps.



Reinstall springs. Place the new spring spacers on top of the springs inside the new fork tubes.





Install fork caps, using factory torque specifications.

- TC Tip: Be careful when reinstalling the fork cap. Protect the motorcycle and use personal protective equipment. You will need to exert downward pressure in order to engage the threads and tighten the fork cap.

Reinstall wheel, caliper(s), mudguard, fork braces, and all other items removed. Lower your motorcycle. Ride carefully; your motorcycle will exhibit different handling and performance characteristics.



---

TC Bros.  
502 Jackson Street  
Archbold, OH 43502  
USA