

## ALICE CARRY HANDLE INSTRUCTIONS



1. Disconnect the ALICE shoulder straps from the top of the frame. While the Carry Handle can be attached with the pack still on the frame, it is easier to attach with the pack removed.



2. Orient the Carry Handle so the metal slider is facing upward. Route the angle-cut end of the Carry Handle through the shoulder strap slot at the top of the frame.




3. Slide the angle-cut end through the metal slider.

## ALICE CARRY HANDLE INSTRUCTIONS



4. Grabbing the metal slider and angle-cut strap end, walk the metal slider towards the frame until reasonably snug.

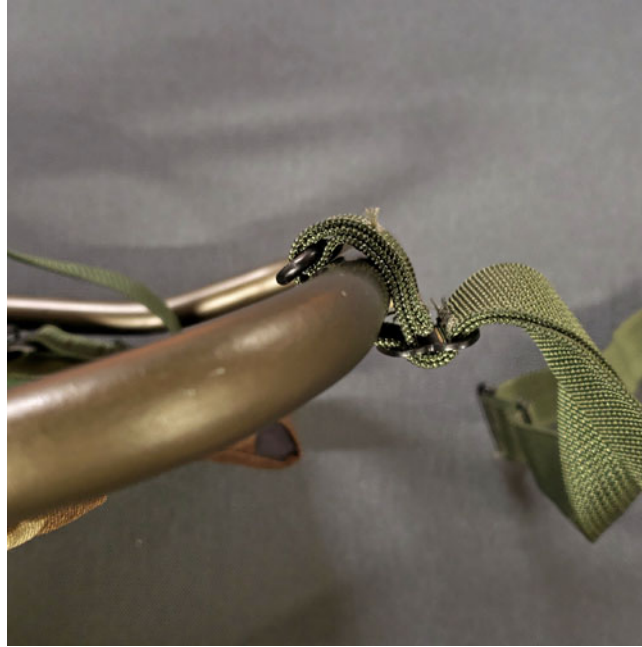

5. The Carry Handle does not need to be tight against the frame, just snug, as shown above.



6. Repeat steps 1-4 for the other side of the Carry Handle. Ensure the Carry Handle isn't twisted between the two frame slots.



## ALICE CARRY HANDLE INSTRUCTIONS



7. Slide the angle-cut strap end over and back through the metal slider, doubling the strap back on itself to eliminate the possibility of slippage.



8. Snug the angle-cut end tightly. Repeat steps 7-8 on the other side of the Carry Handle.



9. Connect the ALICE shoulder straps to the metal oval rings on the Carry Handle, in the same manner as if attaching them to the ALICE frame.

## ALICE CARRY HANDLE INSTRUCTIONS



10. If desired, the free ends of the upper shoulder strap adjustment straps can be routed back through the metal oval rings. This will position them out of the way, behind the ALICE pack frame pocket once the pack is attached.