

nutribullet®

SLOW JUICER



User guide.

! Save these instructions!

● FOR HOUSEHOLD USE ONLY

Important safeguards & cautionary information.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet® Slow Juicer. When using any electrical appliance, basic safety precautions should always be observed, including the following **important information.**

PERSONAL SAFETY

WARNING! AVOID CONTACT WITH MOVING PARTS.

JUICER SCREEN IS SHARP! HANDLE CAREFULLY. TAKE CAUTION WHEN ASSEMBLING, DISASSEMBLING, AND DURING CLEANING.

This juicer system has moving parts, and is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, or who lack experience and knowledge of its safe operation. Such persons require close supervision and thorough instruction on its proper use and safe operation.

Close supervision is necessary when any appliance is used

WARNING! by or near children. Children should be supervised to ensure that they do not play with the appliance. Keep cord out of reach of children. This appliance is not a toy.

To protect against fire, electrical shock and injury to persons, **do not** immerse the appliance, motor base, cord, or plug in water or any other liquid.

The use of attachments not recommended or sold by NutriBullet® may cause fire, electric shock, or injury.

This appliance is for household use only. **Do not** use this appliance for anything other than its intended use. **Do not** use outdoors. Misuse may cause injury.

DO NOT LEAVE THE APPLIANCE UNATTENDED WHEN IN USE.

Keep hands, fingers, hair, clothing, as well as spatulas and other utensils, away from the feed chute opening during operation.

Do not push food into the feed chute with your fingers or utensils. Always use the food pusher provided. **Do not** place hand or fingers into the feed chute when it is attached to the appliance. If food becomes lodged in the feed chute, use the food pusher provided to push it down.

To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.

PRODUCT SAFETY

Always make sure the juice bowl cover is securely in place and locked to the juice bowl before the motor is turned on.

Do not attempt to unlock the juice bowl cover from the juice bowl while the juicer is in operation.

Always make sure the juicer is properly and completely assembled before connecting to a power outlet and operating.

Do not use appliance if the auger is damaged.

Do not operate juicer for more than 15 minutes at a time when juicing at a rapid rate or with firm pressure. Allow the motor to rest for 1 (one) minute between each use.

This juicer is only designed to juice fresh fruits and vegetables.

Do not use any frozen fruits or vegetables.

Do not juice stone fruit unless pits of the seed stone has been removed.

Ensure that the surface where the appliance operates is stable, level, clean, and dry.

Do not put any NON-food items into the feed chute.

Vibration may occur during normal operation.

Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.

When using this appliance, provide adequate air space, at least 200mm, above and on all sides for circulation.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner.

Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning or attempting to move the appliance.

To unplug, grasp the plug and pull from the outlet. **Never** pull from the power cord.

Regularly inspect the power cord, plug, and entire appliance for any damage.

Do not let the power cord hang over the edge of a table or countertop.

Do not let the power cord touch hot surfaces, including stove, or become knotted or tangled.

Remove and safely discard any packaging material or promotional labels before using the juicer for the first time.

Keep the appliance clean. Refer to the Care and Cleaning section for tips and best practices.

Do not attempt to repair or service this juicer yourself. Contact NutriBullet® Customer Service for assistance.

! If any of the contained instructions or warnings are not understood, please contact NutriBullet® Customer Service for assistance at **www.bulletbrands.com.au** / **www.bulletbrands.co.nz**. Or call the Customer Service team at: **1300 285 538 (AUS) / 0800 232 633 (NZ)**.




Contents.


- 08 What's included**
- 09 Assembly Guide**
- 10 Before first use**
- 11 Assembly**
- 14 Usage instructions**
- 17 Juicing tips**
- 19 Troubleshooting**
- 20 Disassembly**
- 22 Care and maintenance**
- 23 Replacement parts**
- 23 How to store**
- 24 NutriBullet® Slow Juicer one-year limited warranty**

Thank you for purchasing the NutriBullet® Slow Juicer.


What's included.

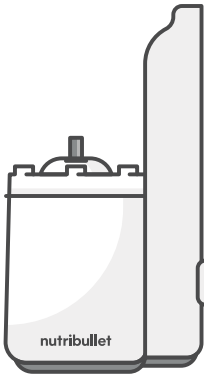

150 WATT MOTOR BASE

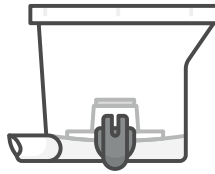

JUICE BOWL

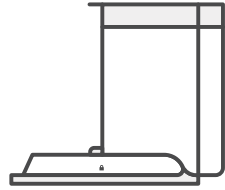

JUICE BOWL COVER



STEEL-TIPPED AUGER



JUICING SCREEN



ROTATING BOWL BRUSH




PULP CONTAINER



700 ML JUICE CONTAINER




FOOD PUSHER

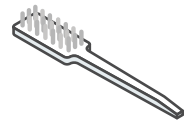

CLEANING BRUSH

Assembly guide.

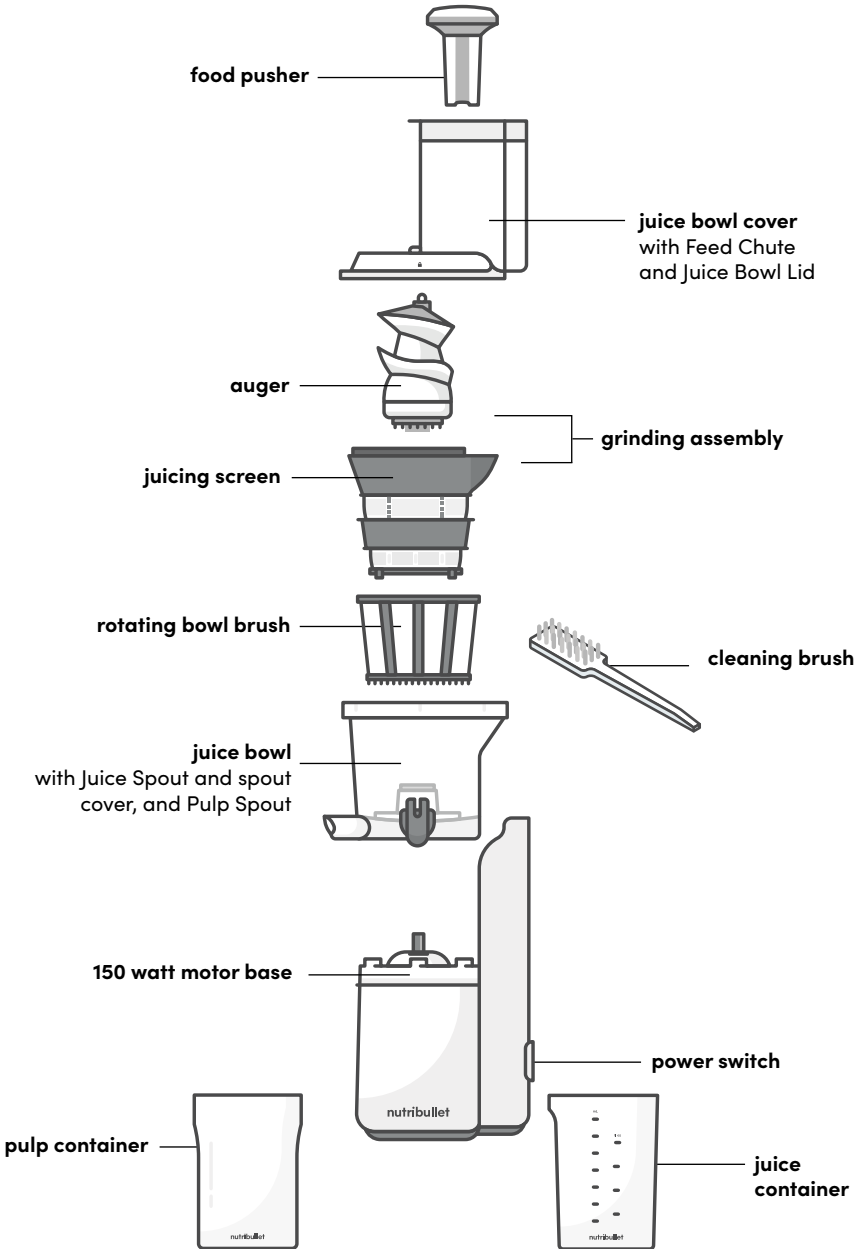

Before first use.

Before using your juicer for the first time, please take a moment to perform the steps below.


UNPACK

Open the box and remove the appliance with its various components, placing all parts on a flat, level surface.

SEPARATE

A few parts will be packed together. Separate them using the following 3 steps (see image):

- a. Lifting up, remove Grinding Assembly and Rotating Bowl Brush together from the Juice Bowl.
- b. Detach Rotating Bowl Brush by moving it down.
- c. Lifting up, remove the Auger from Juicing Screen.

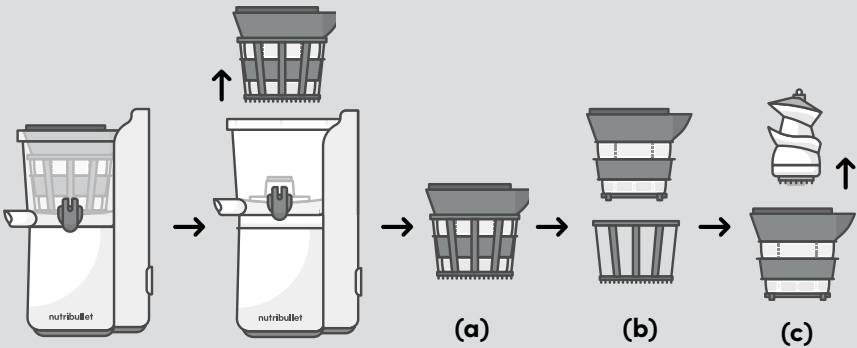


CLEAN

Immerse all detachable parts and accessories (not the base) in warm, soapy water. Rinse and dry.

Clean the outside of the base with a clean, damp cloth.

WARNING: Never submerge the Motor Base in water or any other liquid.


Assembly.

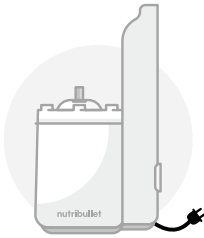

- 1 Before starting assembly, check that the appliance is unplugged and the power switch is off.**




- 2 Check the position of the pulp plug.** Look at the bottom of the **Juice Bowl**. Make sure the pulp plug is positioned properly in the pulp spout (see image).

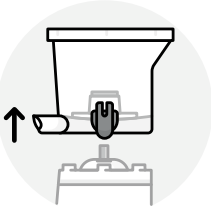

- 3 Attach Juice Bowl to Motor Base.** Position the **Juice Bowl** on top of the **Motor Base** and push downwards, making sure the bowl is tightly fastened to the base and locked securely in place. The **Juice Bowl** must be attached in its proper position or the appliance will not operate.




- 4 Put the Juice Screen into the Rotating Bowl Brush.**

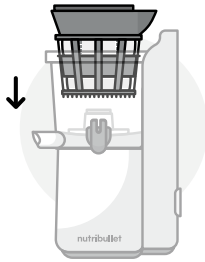

- 5** Place the screen and brush assembly into the **Juice Bowl**.


NOTE: You may need to turn it slightly before it seats properly.

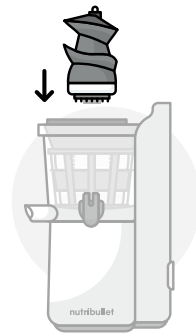

- 6** Put the **Auger** into the strainer and ensure the **Auger** is positioned properly onto the center axis. Turn and press down on the head until it is seated securely into place.




- 7** Place the **Juice Bowl Cover** on top of the **Juice Bowl**, making sure the “unlocked” symbol on the lid aligns with the up-triangle symbol on the bowl. Rotate cover clockwise to lock it in place.

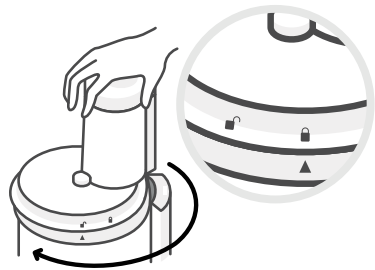


NOTE: To ensure the Juice Bowl Cover is fully locked, rotate it until the “locked” symbol on the Juice Bowl Cover aligns with the up-triangle symbol on the Juice Bowl (see closeup image).


Make sure the Juice Bowl Cover is fully locked in position, or the appliance will not operate. (To remove the Juice Bowl Cover from the Juice Bowl, rotate it counter-clockwise.)

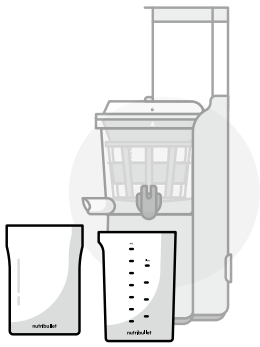

8 Place **Juice and Pulp Containers** under spouts.

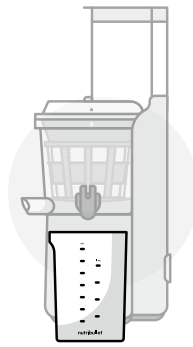


8a Position the **Juice Container** below the juice spout, this is on the right side of the **Juice Bowl** with the spout cover.

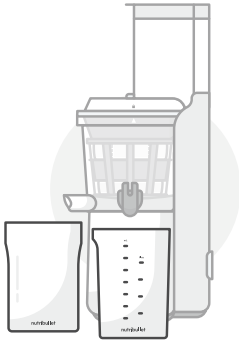


8b Place the **Pulp Container** below the pulp spout.

NOTE: The juice and Pulp Containers must be in their proper positions before juicing. During operation, juice will flow into the Juice Container from the juice spout, while pulp will be ejected from the pulp spout and collected by the Pulp Container.

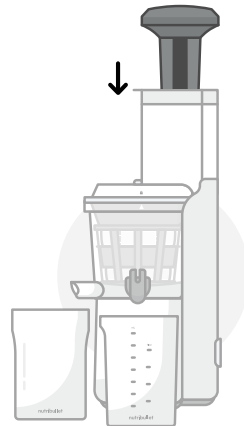


9 Put the **Food Pusher** into the feed chute. The juicer is now ready to operate.

Usage instructions.

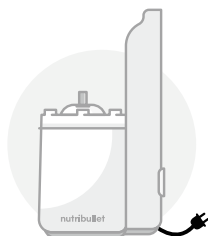


- 1** Prepare foods for juicing, and make sure non-juiceable foods are not used.
 - Remove any hard seeds, pits, and skin – for example, peel and pits should be removed from oranges, lemons, grapefruits, and melons.
 - Cut foods into smaller pieces if needed to fit into the feed chute.
 - **Do not attempt to process thick or hard foods that don't contain any juice to extract (for example, it is not recommended to process bananas, avocados, coconuts, or similar hard foods, since these may damage the motor).**


- 2** Before plugging the power cord into an outlet, make sure the power switch is in the **"OFF"** position.

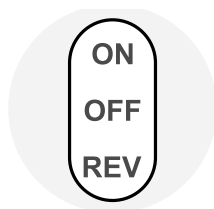


- 3** The power switch has three settings. Pressing the power switch to the **"ON"** position activates the motor and starts making juice; pressing the power switch to **"OFF"** turns off the machine; and **"REV"** means reverse rotation, only used when something is stuck and you need to unclog the unit.

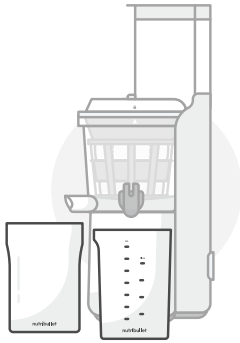

- 4** Make sure the juice and **Pulp Containers** are in their proper positions.

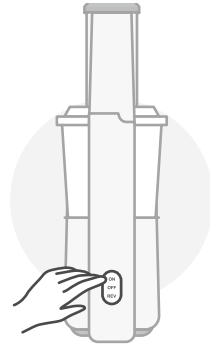


- 5** Plug the juicer into the power outlet, then press the power switch to the "ON" position.

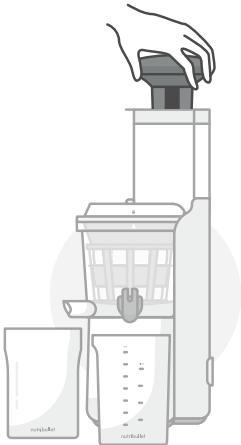

- 6** Drop the prepared fruits or vegetables into the feed chute and gently push the items down into the grinding assembly, using the **Food Pusher**.


CAUTION: Never place your finger or hand into the feed chute. Always use the food pusher provided.

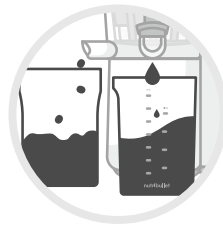


- 6a** The appliance will start to process the food items. After a few moments, the juice will flow out.

NOTE: For efficient juicing, alternate feeding soft foods and harder foods into the feed chute. For example, follow leafy greens with an apple slice, or orange with a carrot. The harder produce will help with processing the softer produce and extract more juice.

CAUTION: The auger must stop rotating before changing from "ON" to "REV". Do not turn the power switch from "ON" to "REV" or from "REV" to "ON" without pressing the power switch to "OFF" first. Once the appliance is "OFF" and has stopped running completely then turn the power switch from "OFF" to "REV" or from "OFF" to "ON".

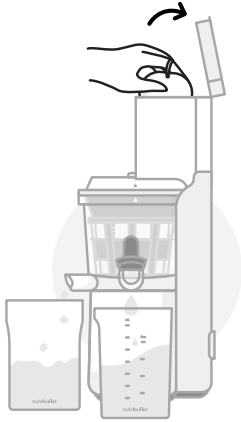

- 7** While you are juicing, you may choose to open the wide chute lid, which will open the chute to 3-inches. This will accommodate larger pieces of fruits and vegetables. When the wide chute lid is in the open position, the motor will pause and the **Auger** will stop rotating. After you have inserted fruits and vegetables into the large chute, close the wide chute lid to restart the motor and continue juicing.

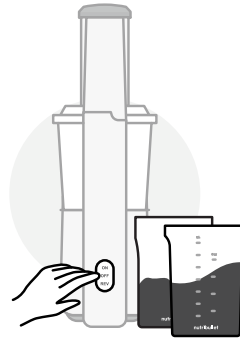

- 8** Once the **Juice Container** is full, or all food has been processed, turn the power switch to “**OFF**”. If you have more food to process, empty the Juice and Pulp Containers before starting a new round of juice extracting.

NOTE: Do not insert too much food to extract at one time. During operation, once the Juice Container is full, you must stop the appliance and empty the Juice and Pulp Containers before the next juicing cycle.

CAUTION: During operation, if the Juice Bowl Lid is disconnected from the Juice Bowl, the motor will stop.

Juicing tips.

PROPER PRODUCE PREP

Prepare fruit and veggies before inserting them into the juicer:

- **Clean produce properly.** Rinse with lukewarm water, produce wash, or water and apple cider vinegar.
- **Peel or remove skin as needed.** Foods with thick or hard skin must be peeled before being put into the juicer.
- **Remove rind from all citrus fruits before juicing.**
- **Remove large pits and seeds from stone fruit before juicing.** Stone fruit may be used only if the seeds or pits have been removed. Fruit with hard cores must be pitted. The cores of peach, plum, mango, and apricot should not be put into the feed chute, to avoid any potential malfunction.
- **Chop food items down to the right size** – small enough to fit easily into the feed chute, without having to force pieces down with the **Food Pusher**.
- **Foods with less moisture and harder fibers:** Cut into slices.
- **Leafy vegetables and foods with long, harder fibers** (such as celery and kale): Cut the stems into 4 inch pieces and then roll up the leaves well.
- **For efficient juicing,** alternate feeding soft foods and hard foods into the feed chute. For example, follow leafy greens with an apple slice, or an orange with a carrot. The harder produce will help with processing the softer produce and extract more juice.
- **Frozen food items** can be put in the juicer after being defrosted.

FEED CHUTE

- **Never place your hand, fingers, utensils, or other foreign objects into the feed chute while it is attached to the appliance.**
- Do not overload the feed chute. Insert food gradually, at a pace the juicer can keep up with.
- Use only the provided **Food Pusher** to push food into

the feed chute. Never use fingers, utensils, or any other apparatus.

- Never use excessive force to push items into the feed chute.
- After inserting food, ensure all items have moved down the feed chute before adding more.
- If any food gets stuck in the feed chute, use the **Food Pusher** to move it down the chute.
- For best taste, consume fresh juice and pulp within 72 hours of juicing.

CAUTION: Do not operate the unit without feeding food into it, to avoid damaging the grinding assembly.

FOODS THAT CANNOT BE JUICED:

- Foods that do not contain juice to extract (for example, bananas, avocados, coconuts)
- Stone fruits that have large pits or seeds that have not been removed
- Hard fruits or thick vegetables rich in fiber and starch
- Frozen fruits or vegetables

Troubleshooting.

PROBLEM: PARTS ARE DIFFICULT TO DISASSEMBLE

Solution: After finishing juicing, in order to detach and clean parts more easily, continue to run the juicer for about **30 seconds** without adding any additional food in order to process any food that might be stuck in the **Auger and Juicing Screen**.

Another tip: after you are done extracting juice, pouring some water in the feed chute to clean it can help make it easier to disassemble.

PROBLEM: JUICER IS STUCK AND WON'T OPERATE

Solution: If the juicer is stuck and not operable, press the power switch to the **"OFF"** position. Then press the **RESET** switch, which is located at the bottom of the base (see image).



Next, press and hold the power switch in the **"REV"** position for few seconds, then try operating again.


If this reverse function does not work, turn off the machine, unplug, and reassemble it, using the instructions given earlier in this guide. After reassembly, try turning on the machine to see if normal function has been restored.

PROBLEM: THE JUICER TURNED OFF IN THE MIDDLE OF JUICING.


If the motor overheats, the juicer will turn off.

Solution: If the juicer is overheated and stops working, unplug it and allow it to cool down for at least fifteen minutes before attempting to use again.


Disassembly.

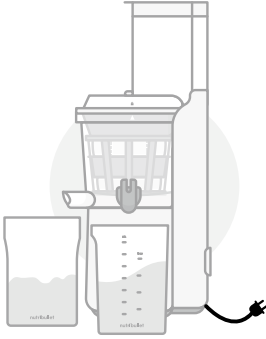


- 1** Make sure the juicer is powered OFF, cooled down completely, and unplugged before starting disassembly. Ensure that the motor has completely stopped, the grinding assembly has stopped moving, and all moving parts have stopped before disassembling juicer.

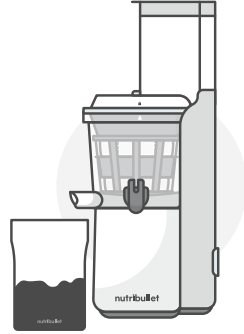


- 2** Remove the Juice Container from under the juice spout. To prevent drips, use the spout cover to close the juice spout.

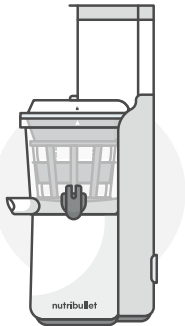


- 3** Remove the Pulp Container from under the pulp spout.

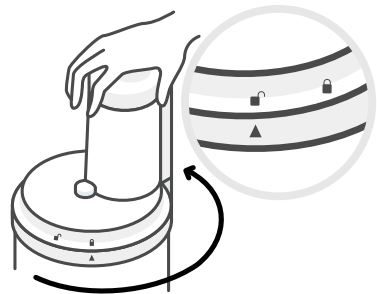


- 4** Twist the Juice Bowl lid counter-clockwise to unlock it, then lift to remove it from the top of the juicing jar.

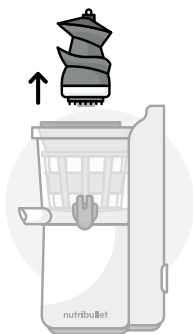

- 5** Remove the Auger from the bowl.

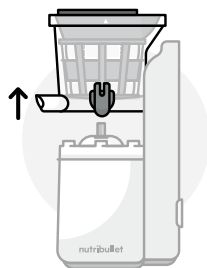


- 6** Detach and lift the Juice Bowl (with the Rotating Bowl Brush, Juicing Screen, and Auger still inside) off the top of the base.

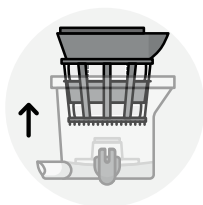

- 7** Remove the Rotating Bowl Brush and Juicing Screen together from the bowl.



- 8** Detach the Rotating Bowl Brush from Juicing Screen moving it downwards.

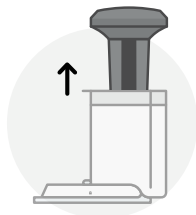

- 9** If the Food Pusher is inside the feed chute, remove it.

Care and maintenance.

Cleaning the NutriBullet® Slow Juicer is quick and easy. All parts (except for the base) can be cleaned by simply rinsing with warm soapy water, and most parts are dishwasher safe. Here are some tips for cleaning and best practices.

- 1** Always make sure the base is **unplugged** before you begin assembly, disassembly, cleaning, or storage of the unit.
- 2** Detach and separate the parts of the juicer (see Disassembly section).
- 3** Empty the **Pulp** and **Juice Containers** (store or throw away pulp, store or consume juice).
- 4** Clean the **Juice Bowl Cover, Food Pusher, Auger, Juicing Screen, Rotating Bowl Brush, Juice Bowl,** and the **juice** and **Pulp Containers** under running water.

CAUTION: Do not use a metal sponge to clean, it will damage the machine.

- 5** Clean all juicer parts, except for the **Motor Base**, in warm, soapy water. Or, you can put all parts into the dishwasher except for the **Auger**.

CAUTION: ALWAYS clean the Auger by hand with warm, soapy water and a soft cloth. The Auger is not dishwasher safe.

- 6** The **Cleaning Brush** can be used for better cleaning of the **Juicing Screen**. The screen can be cleaned completely using the small **Cleaning Brush**. Use this brush to scrub the Screen under running water. Be sure to properly clean the screen every time you juice. Leftover traces of fruits and vegetables can cause residue buildup in the strainer, which can clog the holes and may prohibit maximum juice extraction.

CAUTION: The Juice Screen is sharp, so handle carefully during cleaning.

- 7** If you need to clean the pulp spout, first pull the pulp plug out of the pulp spout, then clean it

thoroughly with the narrow end of the Cleaning Brush.

The narrow end of the **Cleaning Brush** is sized so that it can fit inside of the pulp spout to help remove pulp that has been stuck. Run water through the bowl and pulp spout to help remove any remaining pulp.

8 Wipe the outside of the base with a clean, damp cloth.



WARNING: Never submerge the **Motor Base** into water or other liquid.

9 Let all parts dry thoroughly, then assemble and store the appliance in a dry place. The **Juice Container** can be stored in the **Pulp Container**.

PRO TIP: Clean your appliance as soon as possible after juicing. If allowed to sit, pulp may dry on one or more parts (such as the Juicing Screen), which can make it more difficult to scrub away residue. If any pulp residue does cake onto any parts of the unit, allow those parts to soak in hot water for 30 minutes, which should soften the residue and make it easier to remove.

Replacement parts.

To order additional parts and accessories, please visit our website or feel free to contact Customer Service: www.bulletbrands.com.au / www.bulletbrands.co.nz.

How to store.

To save juice for future use, store it covered in the **Juice Container** in your refrigerator. You can also store pulp the same way, in the **Pulp Container**. For best taste, consume juice and pulp within 72 hours. Store juicer in a safe dry place where parts will not be damaged and won't cause harm. When moving the juicer, always grasp it by the base (not the **Juice Bowl** or **Juice Bowl Cover**).

CDB  GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**
We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:**
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.



NEW ZEALAND

PO Box 100-707
NSMC
Auckland 0745
0800 232633
www.bulletbrands.co.nz

AUSTRALIA

PO Box 574
South Morang
Victoria 3752
1300 285538
www.bulletbrands.com.au

NutriBullet is a registered trademark of CapBran Holdings, LLC.
Copyright © 2021 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90025, USA. Made in China.

www.bulletbrands.com.au / www.bulletbrands.co.nz

NTRIBULLET® is the registered trademark of CAPBRAN HOLDINGS, LLC
Copyright © 2021 CAPBRAN HOLDINGS, LLC. Distributed by
CAPITAL BRANDS DISTRIBUTION, LLC. LOS ANGELES, CA 90025 USA
All Rights Reserved. MADE IN CHINA

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**220-240VAC 50-60Hz 150W
210628_NBJ07300 (NBj-300)**