

## Packing list

With your order you should receive...

- 1 - 8 Gig SD Card (1)
- 1 - 8 Gig USB Drive (2)
- 1 - 6' HDMI Cable (3)
- 1 - Remote Control (4)
- 1 - VP71 HD Video Player (5)
- 1 - External Power Supply (6)
- 1 - 6' RCA Video/Audio Cable (7)



## Basic operation of the VP71

The VP71 is an auto on and auto looping HD video player (picture and audio files do not auto start on power up). Once you connect the player to a TV or monitor, simply load your video files on the enclosed SD card or USB drive and insert it into the player. The order in which the files are sorted on the card is the order in which they play. Once you load the card or drive, simply remove the power cord for a few seconds then reconnect the power. Your player will start play and continue to do so until power is turned off or the remote is used to stop or pause the video.

Note - The VP71 only outputs 1 video source at a time and the default is HDMI out. If you are using VGA (40) or Composite video out (38), you can switch the video output by pressing the VGA (10) or CVBS (composite) (9) on the remote.



## Remote control



- (8) Power - turns VP70 on and off
- (9) CVBS - switches video output to composite video (yellow RCA) (15)
- (10) VGA - switches video output to VGA (15 pin for computer monitor) (15)
- (11) Scale - This button switches between 4:3, full screen and default
- (12) Sub - N/A
- (13) OSD - rotates through repeat options Repeat all / Repeat current / Repeat off
- (14) Rotate - N/A
- (15) Menu - activates the main menu for the player (41)
- (16) Goto - N/A
- (17) Return - returns you to the previous menu selection
- (18) Stop - stops the current audio, video or picture file that is playing
- (19) Rewind - rewinds the current audio or video that is playing in steps of 1.5x, 2x, 4x, 8x, 16x, 32x
- (20) Previous - jumps backwards to the previous audio, video or picture file
- (21) Music - N/A
- (22) Photo - N/A



- (23) Mute - mutes current audio output
- (24) HDMI - switches video and audio output to HDMI Jack (15)
- (25) Audio - switches between audio formats
- (26) Zoom - N/A
- (27) Setup - Enter the set up menu (54) for the player. Access selections like video resolution output, language, etc..
- (28) Play and pause - press once to pause & again to resume play of current file
- (29) Fast forward - fast forwards the current audio or video that is playing in steps of 1.5x, 2x, 4x, 8x, 16x, 32x
- (30) Arrow buttons for navigating the menu or file selection section
- (31) Next - jumps forwards to the next audio, video or picture file
- (32) Movie - N/A
- (33) View - displays details about the current video, audio or picture file
- (34) Volume - adjust the output volume up and down

## Connections

The VP71 has 3 possible video outputs that can be activated individually. Composite video (38), HDMI (39) and VGA (40). Audio can be outputted with the 3.5mm jack on the back (41) with an included RCA cable (when using VGA or composite). The I/O port (42) is used to connect to our dry contact triggering board/harness or RS232 communication cable (available in early 2013).

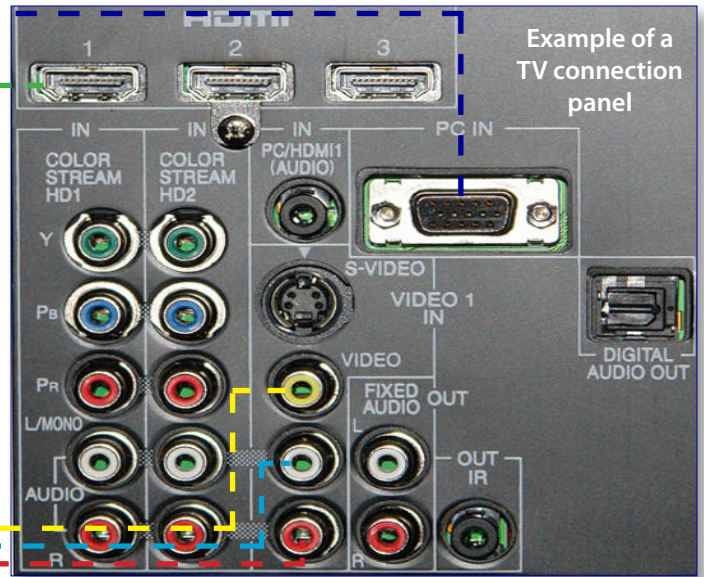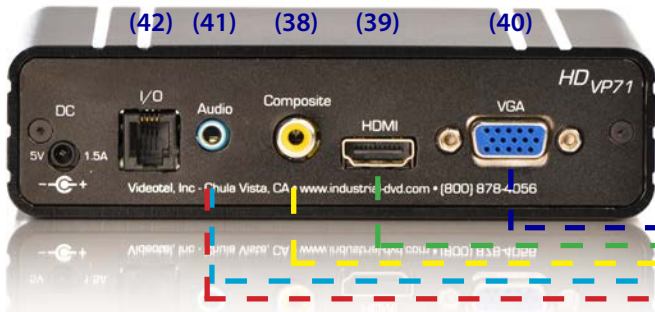

## Operation


As mentioned in the basic operation of player section, if you simply want to auto play and auto loop files, you just need to load them onto a SD or USB drive and insert into the player. Upon power up, the player will begin to play and continue to loop the files contained. The following sections explain how the menu and settings function.

### Play video files

When you press the "Menu" (15) button on the remote, the screen to the right (41) will appear. The menu options are... Explorer (42), Music (43), Movie (44), Photo (45) and Settings (46). Explorer will display all the files on the card. Movie will only show video files, Music will only show audio files and Photo will only show picture files.

When you select Movie, Music, Photo or Browser and press the "OK" button (between the arrow keys) a menu like the one to the right (47) will appear. Select your media (USB or SD Card) (48). Press the Enter button on the next screen (49) and a list of available files will appear (50). Use the arrow keys to select a desired video, audio track or picture file. Information about the selected file will appear on the upper left (51). If you are using a Macintosh, you may see duplicate file names with a under score before each one. This is normal and will not effect the operation of the player. You can select either the top list of files or the lower list.

Once you select a file to play, you can press the OSD button (13) to select a repeat option (repeat all (53) (default), repeat one (54) or random (55)).





## Setup Menu

You can access the Setup menu (56) by pressing the Setup button on the remote or selecting the Setup option on the menu (46).

### System

- Language (57): Available options are English and Chinese.
- Screen Saver (58): You can choose to activate a screen saver (floating hot air balloon icon) or simply let the player power off. When no media card is loaded the player will either go into screen saver mode or power off according to which time option is selected.
- Video Output Mode (59): You can switch between HDMI, CVBS (Composite video) and VGA using the buttons on the top of the remote, or you can use this section. The screen to the right lists all the available output options including 6 HDMI resolution selections.
- Auto Play DVD (60): When this option is set to ON, the player will begin to play video files when plugged in, or powered up. In the OFF position, the player will boot up to the menu.
- Play Mode (61): Repeat mode activates the player to auto start and auto play the play list on the SD or USB drive. Menu Mode is used when our external dry contact trigger board or harness is used to activate video play from a play list labeled 000.xxx 001.xxx 002.xxx etc...

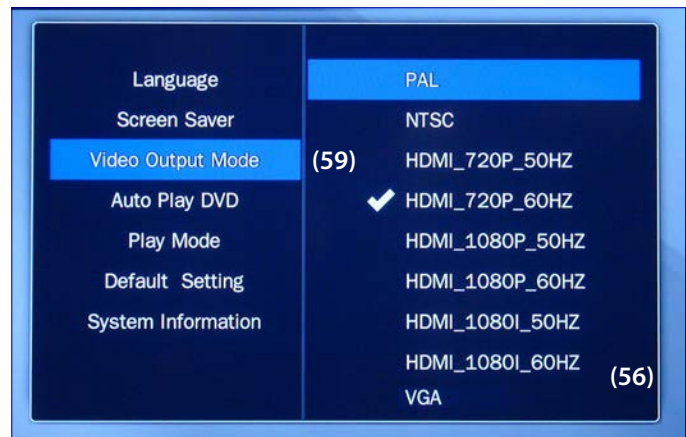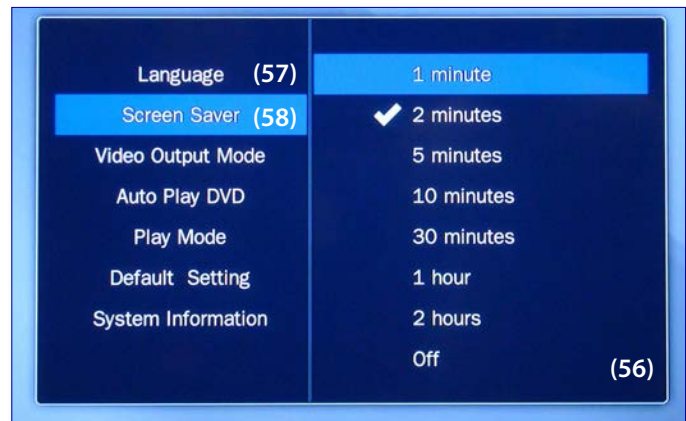

### Limited 2 Year Warranty

Videotel warrants the VP70 to be free from defect in material and workmanship. Warranty shall be limited to a period of 2 years from invoice date. Warranty shall not cover products that are found to be defective due to customers improper operation, accident, misuse, mishandling or damage occurring during transportation.

Videotel

681 Anita Street Suite 104 - Chula Vista, CA 91911

(800) 878-4056 - (619) 670-4412 - www.industrial-dvd.com - sales@industrial-dvd.com