




Fold-N-Stow Assembly




If your stool was mishandled in shipping, one or both of the side legs may have become disconnected from the stool.

DO NOT worry. This is simple to fix.


You won't need any tools. You just need a bit of patience to follow these easy steps:

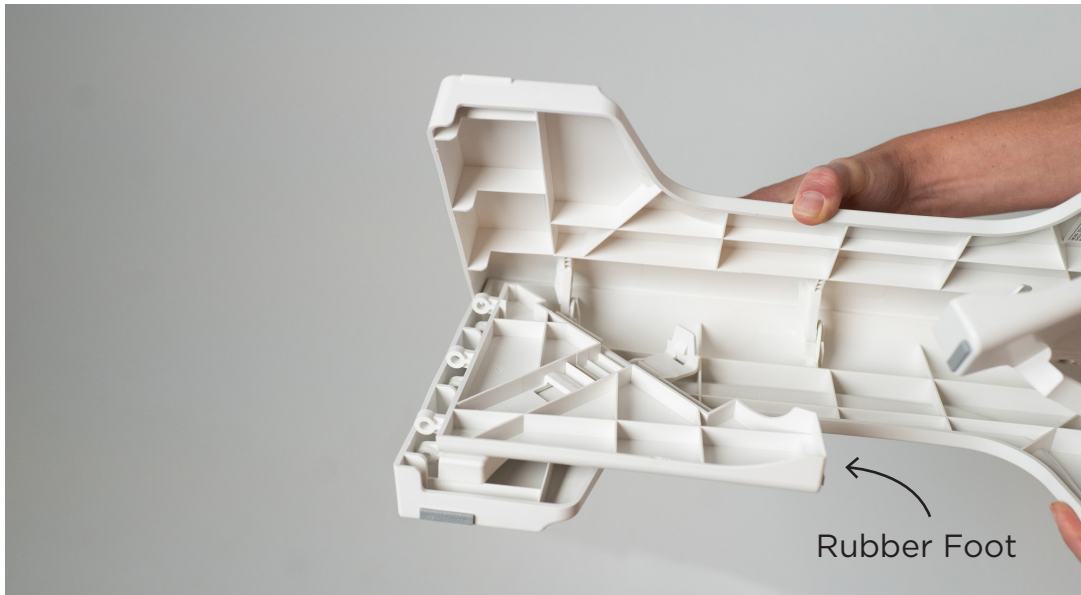

1. Lay the opened Fold-N-Stow Stool down with the top of the stool touching the ground. (Note: the top of the stool is the side with the tread lines.)
2. Place the detached legs into proper position (the latch facing down, and the rubber foot facing inward. (Note: this is only so you can perfectly see the proper placement of the leg parts - when you begin to re-assemble the stool.)

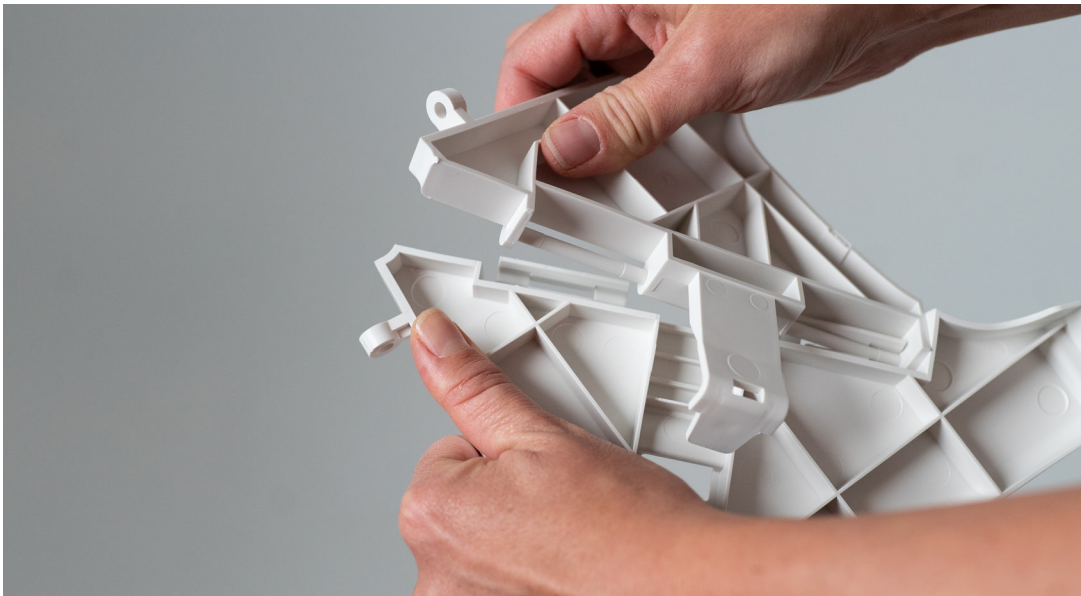


3. Carefully pry the 2 pieces of the detached leg apart at the hinge, so the 2 parts are separated.

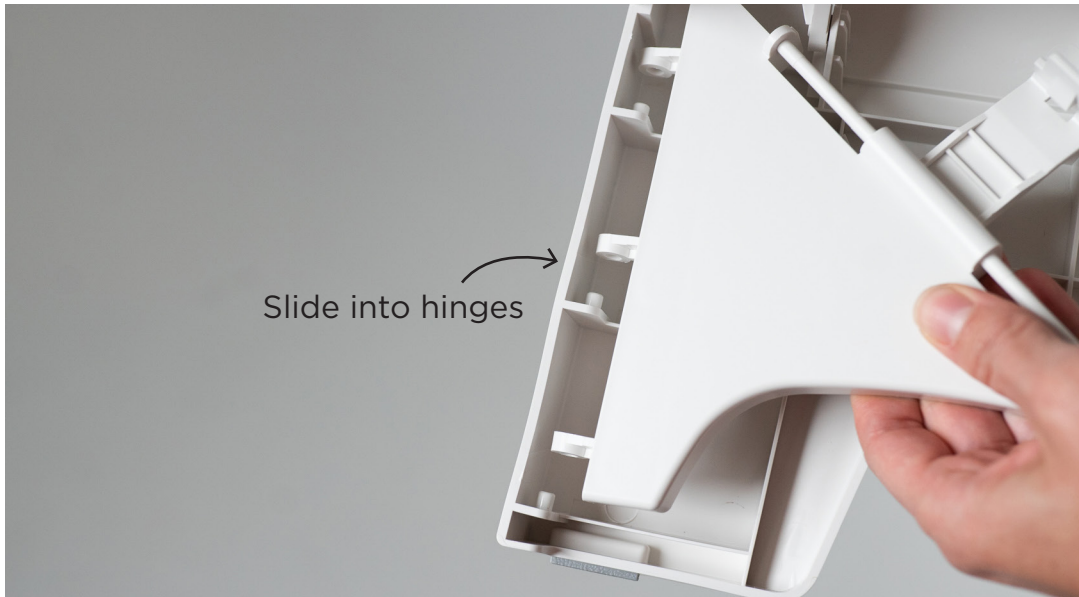

4. Attach one part of the leg at a time, by sliding the 3 hinge holes over the 3 hinge pins on the side.



5. Attach the other part of the leg on the other 3 hinge pins.
6. Make sure the flat surface on each part is facing outward, and the sides with all the ribbed siding are facing inward. (Note: Use the pictures on the box, or other images as a template for proper placement and direction.)

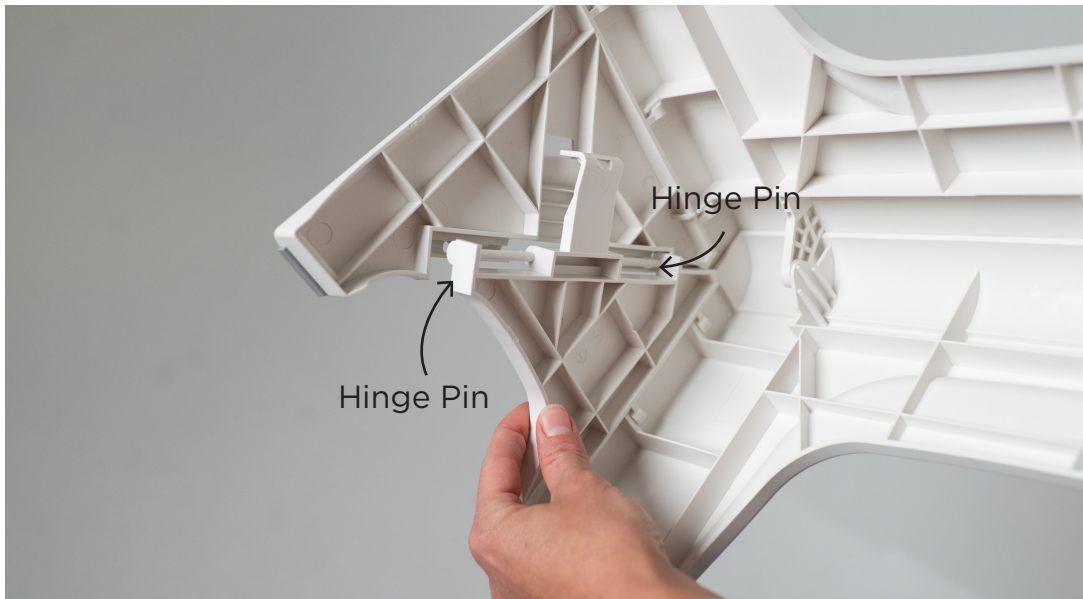

8. Open the stool back up, making sure the 6 leg hinge holes remain in place on each of the 6 hinge pins. (Note the side hinges from both of the pieces should line up.)



9. Lock the 2 hinge pieces in place by firmly snapping them together.



10. Use the force of a soft rubber mallet, or step on the inside of the hinges to make sure they engage completely into the slot. You should be able to hear them “Click” into place and see the hinges completely nested together.



Please call (855) 628-1099 our customer service desk if you have any problems or issues with this reassembly.

We apologize again for any inconvenience you experienced from mishandling during shipment of your Squatty Potty Fold-N-Stow.

Thank you for being a loyal Squatty Potty fan.