

FOR YOUR SAFETY

If you smell gas:

1. Open windows.
2. DO NOT try to light any appliance.
3. DO NOT use electrical switches.
4. DO NOT use any telephone in your building.
5. Extinguish any open flame.
6. Leave the building.
7. Immediately call your local gas supplier after leaving the building. Follow the gas supplier's instructions.
8. If you cannot reach your gas supplier, call the Fire Department.

⚠ WARNING



Fire Hazard

Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater.

Some objects will catch fire or explode when placed close to heater.

Failure to follow these instructions can result in death, injury or property damage.

NDUSTRIA™

ELEVATED INDUSTRIAL COMFORT

Model NBH

The Economical Unitary Infrared Heater

Installation, Operation & Service Manual

NBH-40

NBH-125

NBH-60

NBH-140

NBH-80

NBH-150

NBH-100

NBH-175

NBH-115

NBH-200

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can result in death, injury or property damage. Read the Installation, Operation and Service Manual thoroughly before installing or servicing this equipment.

Installation must be done by a contractor qualified in the installation and service of gas-fired heating equipment or your gas supplier.

Installer

Please take the time to read and understand these instructions prior to any installation. Installer must give a copy of this manual to the owner.

Owner

Keep this manual in a safe place in order to provide your service technician with necessary information.



NDUSTRIA
100 Seven Mile Rd NW
Comstock Park, MI 49321
Telephone: +1.716.551.7900
www.ndustria.com

TABLE OF CONTENTS

SECTION 1: Heater Safety	1	8.11 Vertical Venting (Category III) 4" (10 cm) Pipe	46
1.1 Manpower Requirements	1	8.12 Vertical Venting (Category I) 4" (10 cm) Pipe	47
1.2 Safety Labels and Their Placement	1	8.13 Common Side Wall Horizontal Venting (Category III)	48
1.3 California Proposition 65	1	8.14 Common Vertical Venting (Category III)	49
SECTION 2: Installer Responsibility	3	8.15 Outside Combustion Air Supply	50
2.1 Wall Tag	3	SECTION 9: Gas Piping	53
2.2 Corrosive Chemicals	3	SECTION 10: Wiring	55
2.3 National Standards and Applicable Codes	3	10.1 Line Voltage Thermostat Wiring	55
SECTION 3: Clearances to Combustibles	4	10.2 Low Voltage Thermostat Wiring	56
3.1 Required Clearances to Combustibles	4	10.3 Internal Wiring	57
SECTION 4: National Standards and Applicable Codes	9	10.4 Ladder Diagram	58
4.1 Gas Codes	9	10.5 Electrical Connection to the Burner	58
4.2 Aircraft Hangars	9	SECTION 11: Operation and Maintenance	59
4.3 Public Garages	9	11.1 Sequence of Operation	59
4.4 Electrical	9	11.2 To Shut Off Heater	59
4.5 Venting	9	11.3 To Start Heater	59
4.6 High Altitude	9	11.4 Pre-Season Maintenance and Annual Inspection	59
SECTION 5: Major Components	10	11.5 Maintenance Checklist	60
5.1 Standard Parts List	11	SECTION 12: Troubleshooting	62
SECTION 6: Heater Installation	13	12.1 Troubleshooting Flow Chart	63
6.1 Burner Tube Installation	17	12.2 Manifold Gas Pressure Setting	65
6.2 Tube Clamp Package Installation	18	SECTION 13: Replacement Parts	66
6.3 Coupling and Tube Assembly	19	SECTION 14: General Specifications	68
6.4 Turbulator Installation	21	14.1 Material Specifications	68
6.5 Swirler Installation	22	14.2 Heater Specifications	68
6.6 Reflector Installation	29	14.3 Suspension Specifications	68
6.7 Burner Installation	31	14.4 Controls Specifications	68
SECTION 7: Optional Heater Accessories	32	SECTION 15: The INDUSTRIA™ NBH Warranty	69
7.1 U-Tube Configuration	32		
7.2 Elbow Package Configuration	35		
7.3 Reflector Side Extension	38		
7.4 Lower Clearance Shield Installation	39		
7.5 Two-Foot Decorative Grille Installation	39		
7.6 Protective Grille Installation	41		
SECTION 8: Venting	42		
8.1 Venting	42		
8.2 Unvented Operation	43		
8.3 Horizontal Venting (Category III)	43		
8.4 Vertical Venting (Category III)	43		
8.5 Vertical Venting (Category I) 4" (10 cm) Pipe	44		
8.6 Venting Category Designation by Model	44		
8.7 Unvented Operation Tube Termination	45		
8.8 Length Requirements	45		
8.9 Vent Material Recommendations	45		
8.10 Horizontal Venting (Category III) 4" (10 cm) Pipe	46		

© 2021 Ndustría

All rights reserved. No part of this work covered by the copyrights herein may be reproduced or copied in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping or information storage and retrieval systems - without the written permission of Ndustría.

SECTION 1: HEATER SAFETY

Your Safety is Important to Us!
This symbol is used throughout the manual to notify you of possible fire, electrical or burn hazards. Please pay special attention when reading and following the warnings in these

sections.

Installation, service and annual inspection of heater must be done by a contractor qualified in the installation and service of gas-fired heating equipment.

Read this manual carefully before installation, operation or service of this equipment.

For Indoor Installation Only. Not for use in residential dwellings.

This heater is not certified to meet the requirements of NFPA30A-2012 Section 7.6.6. (maximum tube temperature of 750 °F (399 °C)). Do not install this heater in facilities where compressed natural gas (CNG) or liquid natural gas (LNG) are present. These instructions, the layout drawing, local codes and ordinances, and applicable standards that apply to gas piping, electrical wiring, venting, etc. must be thoroughly understood before proceeding with the installation.

Protective gear is to be worn during installation, operation and service in accordance to the Occupational Safety and Hazard Administration (OSHA). Gear must be in accordance to NFPA 70E, latest revision when working with electrical components. Thin sheet metal parts have sharp edges. To prevent injury, the use of work gloves is recommended. The use of gloves will also prevent the transfer of body oils from the hands to the surface of the reflector.

Before installation, check that local distribution conditions, nature of gas and pressure, and adjustment of the appliance are compatible.

This heater must be applied and operated under the general concepts of reasonable use and installed using best building practices.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For additional copies of the Installation, Operation and Service Manual, please contact NDUSTRIA.

1.1 Manpower Requirements

To prevent personal injury and damage to the heater, two persons will be required for installation.


1.2 Safety Labels and Their Placement

Product safety signs or labels should be replaced by the product user when they are no longer legible. Please contact NDUSTRIA or your NDUSTRIA™ independent distributor to obtain replacement signs or labels. See *Page 2, Figure 1 through Page 3, Figure 2*.

1.3 California Proposition 65

In accordance with California Proposition 65 requirements, a warning label must be placed in a highly visible location on the outside of the equipment (i.e., near equipment's serial plate). See label placement drawing on *Page 3, Figure 2* for label location. Avoid placing label on areas with extreme heat, cold, corrosive chemicals or other elements. To order additional labels, please contact NDUSTRIA or your NDUSTRIA™ NBH independent distributor.

FIGURE 1: Serial Number Identification Chart

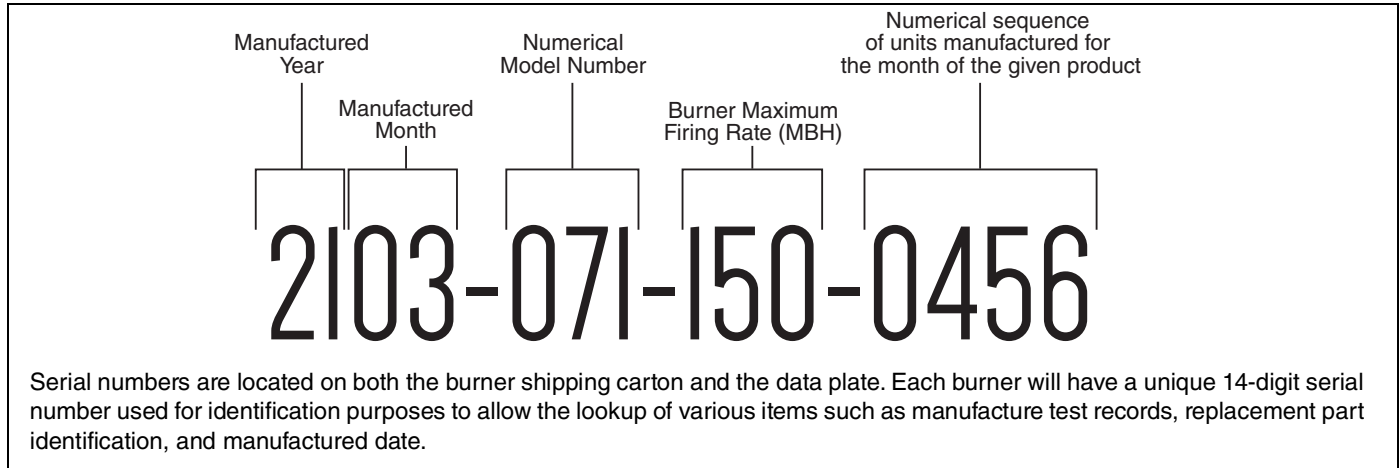

SECTION 2: INSTALLER RESPONSIBILITY

The installer is responsible for the following:

- To install the heater, as well as the gas and electrical supplies, in accordance with applicable specifications and codes. NDUSTRIA recommends the installer contact a local Building Inspector or Fire Marshal for guidance.
- To use the information given in a layout drawing and in the manual together with the cited codes and regulations to perform the installation.
- To install the heater in accordance with the clearances to combustibles.
- To furnish all needed materials not furnished as standard equipment.
- To plan location of supports.
- To provide access on all sides for burner servicing and removal.
- To provide the owner with a copy of this Installation, Operation and Service Manual.
- To never use heater as a support for a ladder or other access equipment and never hang or suspend anything from heater.
- To ensure there is adequate air circulation around the heater and to supply air for combustion, ventilation and distribution in accordance with local codes.
- To safely and adequately install heater using materials with a minimal working load of 75 lbs (33 kg).
- To ensure the heater is placed in an approved application.

2.1 Wall Tag

A laminated wall tag is available for the heater as a permanent reminder of the safety instructions and the importance of the required clearances to combustibles. Please contact NDUSTRIA or your NDUSTRIA™ independent distributor to obtain the wall tag. Affix the tag by peeling off the backing of the adhesive strips on the rear surface and position the tag on a wall near the heater (e.g. thermostat or NDUSTRIA™ Controller). A copy of the wall tag (P/N 91037912) is illustrated on the back cover. For an immediate solution, you may affix this copy on the wall near the heater. Know your model number and installed configuration. Model number and installed configuration are found on the burner and in the Installation, Operation and Service Manual. See Page 5, Figure 2 through Page 8, Figure 11. Write the proper clearance dimensions in

permanent ink according to your model number and configuration in the open spaces on the tag.

2.2 Corrosive Chemicals

⚠ CAUTION

Product Damage Hazard
Do not use heater in area containing corrosive chemicals.
Refer to appropriate Material Safety Data Sheets (MSDS).
Failure to follow these instructions can result in product damage.

NDUSTRIA cannot be responsible for ensuring that all appropriate safety measures are undertaken prior to installation; this is entirely the responsibility of the installer. It is essential that the contractor, the sub-contractor, or the owner identifies the presence of combustible materials, corrosive chemicals or halogenated hydrocarbons* anywhere in the premises.

** **Halogenated Hydrocarbons** are a family of chemical compounds characterized by the presence of halogen elements (fluorine, chlorine, bromine, etc.). These compounds are frequently used in refrigerants, cleaning agents, solvents, etc. If these compounds enter the air supply of the burner, the life span of the heater components will be greatly reduced. An outside air supply must be provided to the burners whenever the presence of these compounds is suspected. Warranty will be invalid if the heater is exposed to halogenated hydrocarbons.*

2.3 National Standards and Applicable Codes

All appliances must be installed in accordance with the latest revision of the applicable standards and national codes. This refers also to the electric, gas and venting installation. Note: Additional standards for installations in public garages, aircraft hangars, etc. may be applicable.

SECTION 3: CLEARANCES TO COMBUSTIBLES

3.1 Required Clearances to Combustibles

Clearances are the required distances that combustible objects must be away from the heater to prevent serious fire hazards. Combustibles are materials that may catch on fire and include common items such as wood, paper, rubber, fabric, etc.

Maintain clearances to combustibles at all times for safety.

Clearances for all heater models are located on the burner of the heater and on *Page 5, Figure 2 through Page 8, Figure 11* in this manual. Check the clearances on each burner for the model heater being installed to make sure the product is suitable for your application and the clearances are maintained. Read and follow the safety guidelines below:

- Keep gasoline or other combustible materials including flammable objects, liquids, dust or vapors away from this heater or any other appliance.
- The stated clearances to combustibles represents a surface temperature of 90 °F (32 °C) above room temperature. Building materials with a low heat tolerance (such as plastics, vinyl siding, canvas, tri-ply, etc) may be subject to degradation at lower temperatures. It is the installer's responsibility to assure that adjacent materials are protected from degradation.
- Maintain clearances from heat sensitive equipment and workstations.
- Maintain clearances from vehicles parked below the heater.
- Maintain clearances from swinging and overhead doors, overhead cranes, vehicle lifts, partitions, storage racks, hoists, building construction, etc.
- In locations used for the storage of combustible materials, signs must be posted to specify the maximum permissible stacking height to maintain required clearances from the heater to the combustibles. Signs must be posted adjacent to the heater thermostat. In the absence of a thermostat, signs must be posted in a conspicuous location.
- Consult local Fire Marshal, Fire Insurance Carrier or other authorities for approval of proposed installation when there is a possibility of exposure to combustible airborne materials or vapors.
- Hang heater in accordance to the minimum suspension requirements on *Page 14, Figure 13*.

⚠ WARNING



Fire Hazard

Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater.

Some objects will catch fire or explode when placed close to heater.

Failure to follow these instructions can result in death, injury or property damage.

- If the radiant tubes must pass through the building structure, be sure that adequate sleeving and fire stop is installed to prevent scorching and/or fire hazard.

- NOTE:** 1. All dimensions are from the surfaces of all tubes, couplings and elbows.
 2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the burner and burner tube connect.

FIGURE 2: Level Reflector

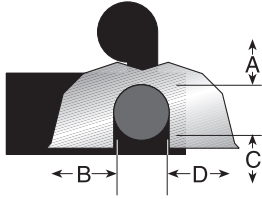
	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	6	27	52	27	16	69	133	69
	NBH-60	6	35	62	35	16	89	158	89
	NBH-80	6	38	65	38	16	97	166	97
	NBH-100	6	40	70	40	16	102	178	102
	NBH-115/125	6	46	76	46	16	117	194	117
	NBH-140/150	6	50	79	50	16	127	201	127
	NBH-175	8	52	82	52	21	133	209	133
	NBH-200	8	52	96	52	21	133	244	133

FIGURE 3: One Side Reflector

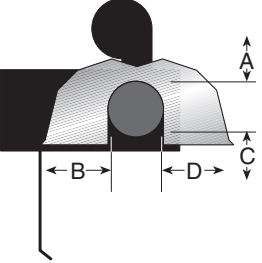
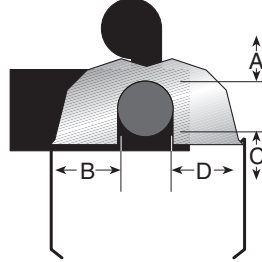
	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	6	9	52	44	16	23	133	112
	NBH-60	6	9	62	47	16	23	158	120
	NBH-80	6	9	69	54	16	23	176	138
	NBH-100	6	9	76	59	16	23	194	150
	NBH-115/125	6	9	82	65	16	23	209	166
	NBH-140/150	6	9	85	69	16	23	216	176
	NBH-175	8	9	88	73	21	23	224	186
	NBH-200	8	18	102	73	21	46	260	186

FIGURE 4: Two Side Reflectors

	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	6	15	52	15	16	39	133	39
	NBH-60	6	23	65	23	16	59	166	59
	NBH-80	6	25	71	25	16	64	181	64
	NBH-100	6	27	77	27	16	69	196	69
	NBH-115/125	6	32	83	32	16	82	211	82
	NBH-140/150	6	35	87	35	16	89	221	89
	NBH-175	8	40	91	40	21	102	232	102
	NBH-200	8	40	102	40	21	102	260	102

NOTE: 1. All dimensions are from the surfaces of all tubes, couplings and elbows.
 2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the burner and burner tube connect.

FIGURE 5: 45° Tilt Reflector

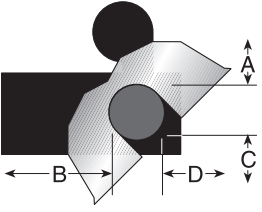
	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	8	8	50	46	21	21	127	117
	NBH-60	8	8	59	54	21	21	150	138
	NBH-80	8	8	65	60	21	21	166	153
	NBH-100	10	8	73	64	26	21	186	163
	NBH-115/125	10	8	77	69	26	21	196	176
	NBH-140/150	12	8	83	74	31	21	211	188
	NBH-175	12	8	85	79	31	21	216	201
	NBH-200	12	10	85	79	31	26	216	201

FIGURE 6: U-Tube, Standard Reflector

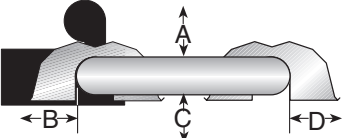
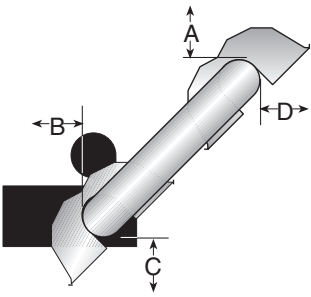
	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	- UNAPPROVED -				- UNAPPROVED -			
	NBH-60	6	35	62	30	16	89	158	77
	NBH-80	6	38	68	37	16	97	173	94
	NBH-100	6	40	75	39	16	102	191	100
	NBH-115/125	6	46	78	43	16	117	199	110
	NBH-140/150	6	50	83	47	16	127	211	120
	NBH-175	8	54	87	51	21	138	221	130
	NBH-200	8	54	102	51	21	138	260	130

FIGURE 7: U-Tube, 45°

	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	- UNAPPROVED -				- UNAPPROVED -			
	NBH-60	8	8	59	42	21	21	150	107
	NBH-80	8	8	65	46	21	21	166	117
	NBH-100	8	8	73	52	21	21	186	133
	NBH-115/125	8	8	77	61	21	21	196	155
	NBH-140/150	8	8	83	66	21	21	211	168
	NBH-175	8	8	85	70	21	21	216	178
	NBH-200	8	8	85	70	21	21	216	178

- NOTE:** 1. All dimensions are from the surfaces of all tubes, couplings and elbows.
 2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the burner and burner tube connect.

FIGURE 8: U-Tube, Opposite 45° Reflector

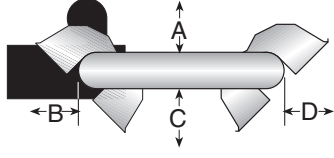
	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	- UNAPPROVED -				- UNAPPROVED -			
	NBH-60	8	54	59	22	21	138	150	56
	NBH-80	8	60	65	22	21	153	166	56
	NBH-100	10	64	73	22	26	163	186	56
	NBH-115/125	10	70	77	22	26	178	196	56
	NBH-140/150	12	74	83	22	31	188	211	56
	NBH-175	12	76	85	22	31	194	216	56
	NBH-200	12	76	85	22	31	194	216	56

FIGURE 9: 2-Foot Deco Grille and Protective Grille

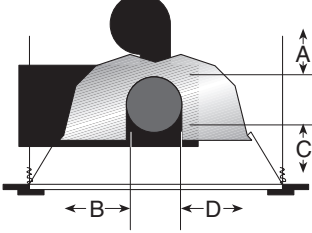
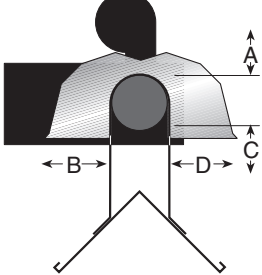
	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	6	27	52	27	16	69	133	69
	NBH-60	6	35	62	35	16	89	158	89
	NBH-80	6	38	65	38	16	97	166	97
	NBH-100	6	40	70	40	16	102	178	102
	NBH-115/125	6	46	76	46	16	117	194	117
	NBH-140/150	6	50	79	50	16	127	201	127
	NBH-175	8	52	82	52	21	133	209	133
	NBH-200	8	52	96	52	21	133	244	133

FIGURE 10: Lower Clearance Shield*

	Model	(inches)				(centimeters)			
		A	B	C	D	A	B	C	D
	NBH-40	6	34	27	34	16	87	69	87
	NBH-60	6	39	33	39	16	100	84	100
	NBH-80	6	40	38	40	16	102	97	102
	NBH-100	6	50	44	50	16	127	112	127
	NBH-115/125	6	54	48	54	16	138	122	138
	NBH-140/150	6	55	50	55	16	140	127	140
	NBH-175/200	- UNAPPROVED -				- UNAPPROVED -			

*When installed in the first 10' (3 m).

NOTE: 1. All dimensions are from the surfaces of all tubes, couplings and elbows.
 2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the burner and burner tube connect.

FIGURE 11: Venting

	Model	(inches)			(centimeters)		
		A	E	F	A	E	F
	NBH-40	14	18	18	36	46	46
	NBH-60	14	18	18	36	46	46
	NBH-80	20	24	18	51	61	46
	NBH-100	20	24	18	51	61	46
	NBH-115/125	20	24	18	51	61	46
	NBH-140/150	20	30	18	51	77	46
	NBH-175/200	20	30	18	51	77	46

SECTION 4: NATIONAL STANDARDS AND APPLICABLE CODES

4.1 Gas Codes

Type of gas appearing on the nameplate must be the type of gas used. Installation must comply with national and local codes and requirements of the local gas company.

United States: Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

4.2 Aircraft Hangars

Installation in aircraft hangars must be in accordance with the following codes:

United States: Refer to Standard for Aircraft Hangars, NFPA 409 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

In aircraft storage and servicing areas, heaters shall be installed at least 10' (3 m) above the upper surface of wings or of engine enclosures of the highest aircraft which may be housed in the hangar. The measurement shall be made from the wing or engine enclosure (whichever is higher from the floor) to the bottom of the heater.

- In shops, offices and other sections of aircraft hangars communicating with aircraft storage or servicing areas, heaters shall be installed not less than 8' (2.4 m) above the floor.
- Suspended or elevated heaters shall be so located in all spaces of aircraft hangars that they shall not be subject to injury by aircraft, cranes, movable scaffolding or other objects. Provisions shall be made to assure accessibility to suspended heaters for recurrent maintenance purposes.

4.3 Public Garages

Installation in garages must be in accordance with the following codes:

United States: Refer to Standard for Parking Structures NFPA 88A - latest revision or the Code for Motor Fuel Dispensing Facilities and Repair Garages, NFPA 30A - latest revision.
Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

- Heaters must not be installed less than 8' (2.4 m) above the floor. Minimum clearances to combustibles must be maintained from vehicles parked below the heater.
- When installed over hoists, minimum clearances to combustibles must be maintained from the upper most point of objects on the hoist.

4.4 Electrical

Heater must be electrically grounded in accordance with the following codes:

United States: Refer to National Electrical Code®, NFPA 70 - latest revision. Wiring must conform to the most current National Electrical Code®, local ordinances and any special diagrams furnished.

Canada: Refer to Canadian Electrical Code, CSA C22.1 Part 1 - latest revision.

4.5 Venting

Venting must be installed in accordance with the requirements within this manual and the following codes:

United States: Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest revision.


Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

4.6 High Altitude


These heaters are approved for installations up to 2000' (610 m) (US), 4500' (1370 m) (Canada) without modification. Consult factory if US installation is above 2000' (610 m) or Canadian installation is above 4500' (1370 m).

SECTION 5: MAJOR COMPONENTS


FIGURE 12: Major Component Descriptions

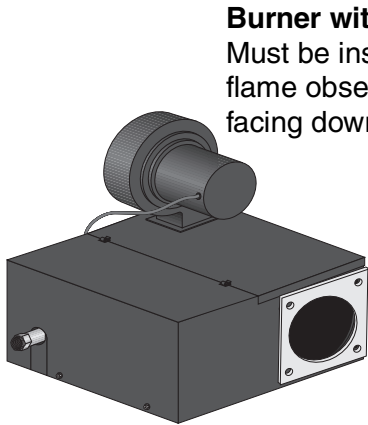


Burner with Tube Gasket
 Must be installed with the flame observation window facing down.

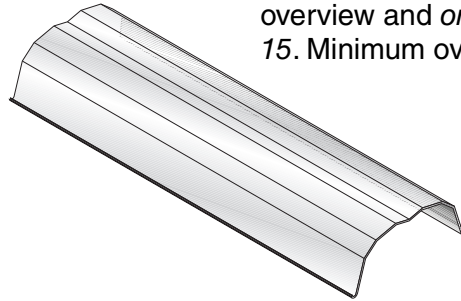


Reflector (Aluminum or Stainless Steel)
 Alternate overlap as shown on overview and on Page 16, Figure 15. Minimum overlap is 6" (16 cm).

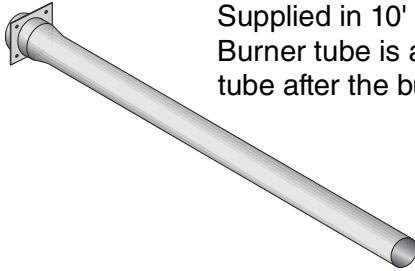


Burner Tube
 Supplied in 10' (3 m) lengths. Burner tube is always the first tube after the burner.

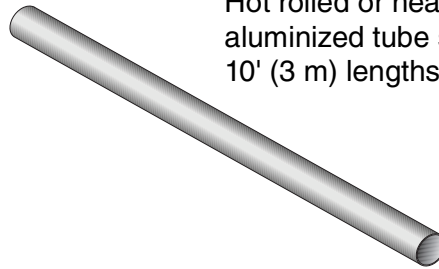


Tube
 Hot rolled or heat treated aluminized tube supplied in 10' (3 m) lengths.

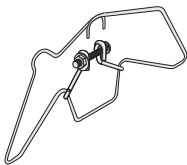


Tube and Reflector Hanger with Clamp Package
 Position this hanger no more than 4" (10 cm) away from the burner.

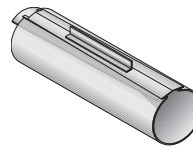


Coupling Assembly with Lock

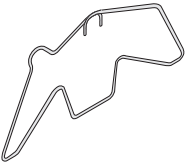


Tube and Reflector Hanger
 Suspend system from these hangers.

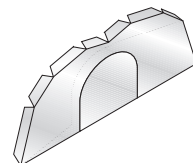


Reflector End Cap
 Punch out center section to accommodate tube.

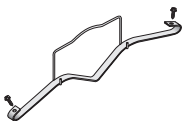


Reflector Support Strap & Wire Form

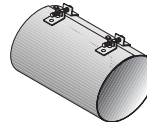

Vent Adapter

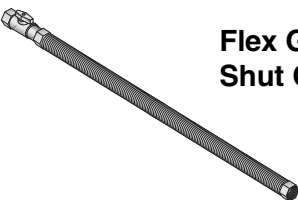

Flex Gas Line with Shut Off Cock

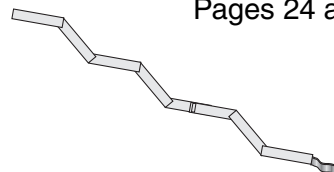

Turbulator/Swirler
 Install turbulator/swirler as specified in the "Turbulator and Swirler Installation" chart. See Pages 24 and 25.

5.1 Standard Parts List

Table 1: Contents of NBH-Series Burner Carton

Part No.	Description	NBH-40	NBH-60	NBH-80	NBH-100	NBH-115	NBH-125	NBH-140	NBH-150	NBH-175	NBH-200
071XXXXX	Burner (Rate and Fuel Varies)	1	1	1	1	1	1	1	1	1	1
90709700	Blower Assembly with Cord	1	1	1	1	1	1	1	1	1	1
02568200	Gasket (Burner to Burner Tube)	1	1	1	1	1	1	1	1	1	1
90709801	Gasket (Blower to Burner)	1	1	1	1	1	1	1	1	1	1
170101NA	Installation, Operation and Service Manual	1	1	1	1	1	1	1	1	1	1
91201708	Pipe Nipple (Black) 1/2" NPT x 4"	1	1	1	1	1	1	1	1	1	1
94273914	Hex Head Bolts 5/16" - 18 Rolok	4	4	4	4	4	4	4	4	4	4
96411600	Split Lock Washer	4	4	4	4	4	4	4	4	4	4
*91412200	Flexible Stainless Steel Gas Hose, 1/2" NPT (US Models Only)	1	1	1	1	1	1	-	-	-	-
*91412203	Flexible Stainless Steel Gas Hose, 3/4" NPT (US Models Only)	-	-	-	-	-	-	1	1	1	1
91907302	S-Hooks	2	2	2	2	2	2	2	2	2	2
91911700	Outside Air Flue Collar	1	1	1	1	1	1	1	1	1	1
94118106	#8 x 3/8 Hex Washer Head (for Outside Air Collar)	3	3	3	3	3	3	3	3	3	3
92311800	Locknuts #10-32	4	4	4	4	4	4	4	4	4	4
03051501	Turbulator Adapter	1	1	1	1	1	-	1	-	-	-
03051502	Turbulator 2.5' (76 cm), Aluminized Steel	2	4	4	1	3	-	1	-	-	-
03051505	Turbulator 2.5' (76 cm), Stainless Steel	1	-	-	-	-	-	-	-	-	-
**03051509K	Swirler Package - 10' (3 m) (Contains Qty 2 - 62" Swirlers)	-	-	-	-	-	-	-	1	-	1
**03051510K	Swirler Package - 15' (4.5 m) (Contains Qty 3 - 62" Swirlers)	-	-	-	-	-	-	-	-	1	-
**03051511K	Swirler Package - 20' (6 m) (Contains Qty 4 - 62" Swirlers)	-	-	-	-	-	1	-	-	-	-

*Canadian models: Rubber (Type 1) Gas Hoses available as an accessory. *See Page 53.*

**Contents located in box separate from the burner

Table 2: Contents of Standard Core and Extension Packages

Part No.	Description	Core Packages								Extension Packages								
		Hot Rolled				Aluminized				Hot Rolled				Aluminized				
		20' (6m)	30' (9m)	40' (12m)		10' (3m)	20' (6m)	30' (9m)	40' (12m)	10' (3m)	20' (6m)	30' (9m)	40' (12m)	10' (3m)	20' (6m)	30' (9m)	40' (12m)	
91409300	Tube, Hot Rolled Steel, 10' (3 m)	1	2	3		-	-	-	-	1	2	3	4		-	-	-	-
91409408	Tube, HT Aluminized, 10' (3 m)	-	-	-		-	1	2	3	-	-	-	-		1	2	3	4
03051101	Burner Tube, ALUMI-THERM® Steel, 10' (3 m)	-	1	1		-	-	1	1	-	-	-	-		-	-	-	-
03051601	Burner Tube, HT ALUMI-THERM® Steel, 10' (3 m)	1	-	-		1	1	-	-	-	-	-	-		-	-	-	-
01312700	Coupling Assembly	1	2	3		-	1	2	3	1	2	3	4		1	2	3	4
02750303	Standard Reflector, 8' (3.5 m)	3	4	6		2	3	4	6	2	3	4	6		2	3	4	6
02750800	End Cap	2	2	2		2	2	2	2	-	-	-	-		-	-	-	-
03090100	Tube and Reflector Hanger	3	4	5		2	3	4	5	1	2	3	4		1	2	3	4
91907302	S-Hook	3	4	5		2	3	4	5	1	2	3	4		1	2	3	4
03050010	Reflector Support Package (Strap, Wire Form, Screws)	2	3	5		1	2	3	5	2	3	4	6		2	3	4	6
91107720	U-Clip Package	1	1	1		1	1	1	1	1	1	1	1		1	1	1	1
90502701	Vent Adapter	1	1	1		1	1	1	1	-	-	-	-		-	-	-	-
01318901	Tube Clamp Package	1	1	1		1	1	1	1	-	-	-	-		-	-	-	-
	Part Number	CP20HRS	CP30HRS	CP40HRS		CP10ALUM	CP20ALUM	CP30ALUM	CP40ALUM	EXP10HRS	EXP20HRS	EXP30HRS	EXP40HRS		EXP10ALUM	EXP20ALUM	EXP30ALUM	EXP40ALUM

Table 3: NBH-Series Component Package Guide - Standard Reflector

Model	Tubing Length	Core Packages	
	Minimum	Hot Rolled	Aluminized
NBH-40	10' (3 m)	-	CP10ALUM
NBH-60	20' (6 m)	CP20HRS	CP20ALUM
NBH-80	20' (6 m)	CP20HRS	CP20ALUM
NBH-100	30' (9 m)	CP30HRS	CP30ALUM
NBH-115	30' (9 m)	CP30HRS	CP30ALUM
NBH-125	30' (9 m)	CP30HRS	CP30ALUM
NBH-140	40' (12 m)	CP40HRS	CP40ALUM
NBH-150	40' (12 m)	CP40HRS	CP40ALUM
NBH-175	40' (12 m)	CP40HRS	CP40ALUM
NBH-200	50' (15 m)	CP30HRS + EXP20HRS	CP30ALUM + EXP20ALUM

Although not recommended, additional tube lengths may be added to the heater. Tubing must be hot-rolled steel, aluminized (heat-treated) or porcelain coated. Additional tube lengths beyond the specified minimum tubing length are considered vent pipe for length determination.

SECTION 6: HEATER INSTALLATION**⚠ WARNING****Severe Injury Hazard**

Secure burner to burner tube with nuts and lockwashers.

Hang heater with materials with a minimum working load of 75 lbs (33 kg).

Failure to follow these instructions can result in death, injury or property damage.

Expansion and contraction of the tube dictates that the minimum suspension lengths must be maintained. See table on Page 14, Figure 13.

⚠ WARNING**Cut/Pinch Hazard**

Wear protective gear during installation, operation and service.

Edges are sharp.

Failure to follow these instructions can result in injury.

To ensure your safety and comply with the terms of the warranty, all units must be installed in accordance with these instructions.

The gas or the electrical supply lines must not be used to support the heater.

Do not locate the gas or electric supply lines directly over the path of the flue products from the heater.

The heater must be installed in a location that it is readily accessible for servicing.

The heaters must be installed in accordance with clearances to combustibles as indicated on the rating plate and in this instruction manual.

The minimum and maximum gas inlet pressures must be maintained as indicated on the rating plate.

Typical installation configurations are shown on Page 14, Figure 13.

FIGURE 13: Critical Hanger Placement

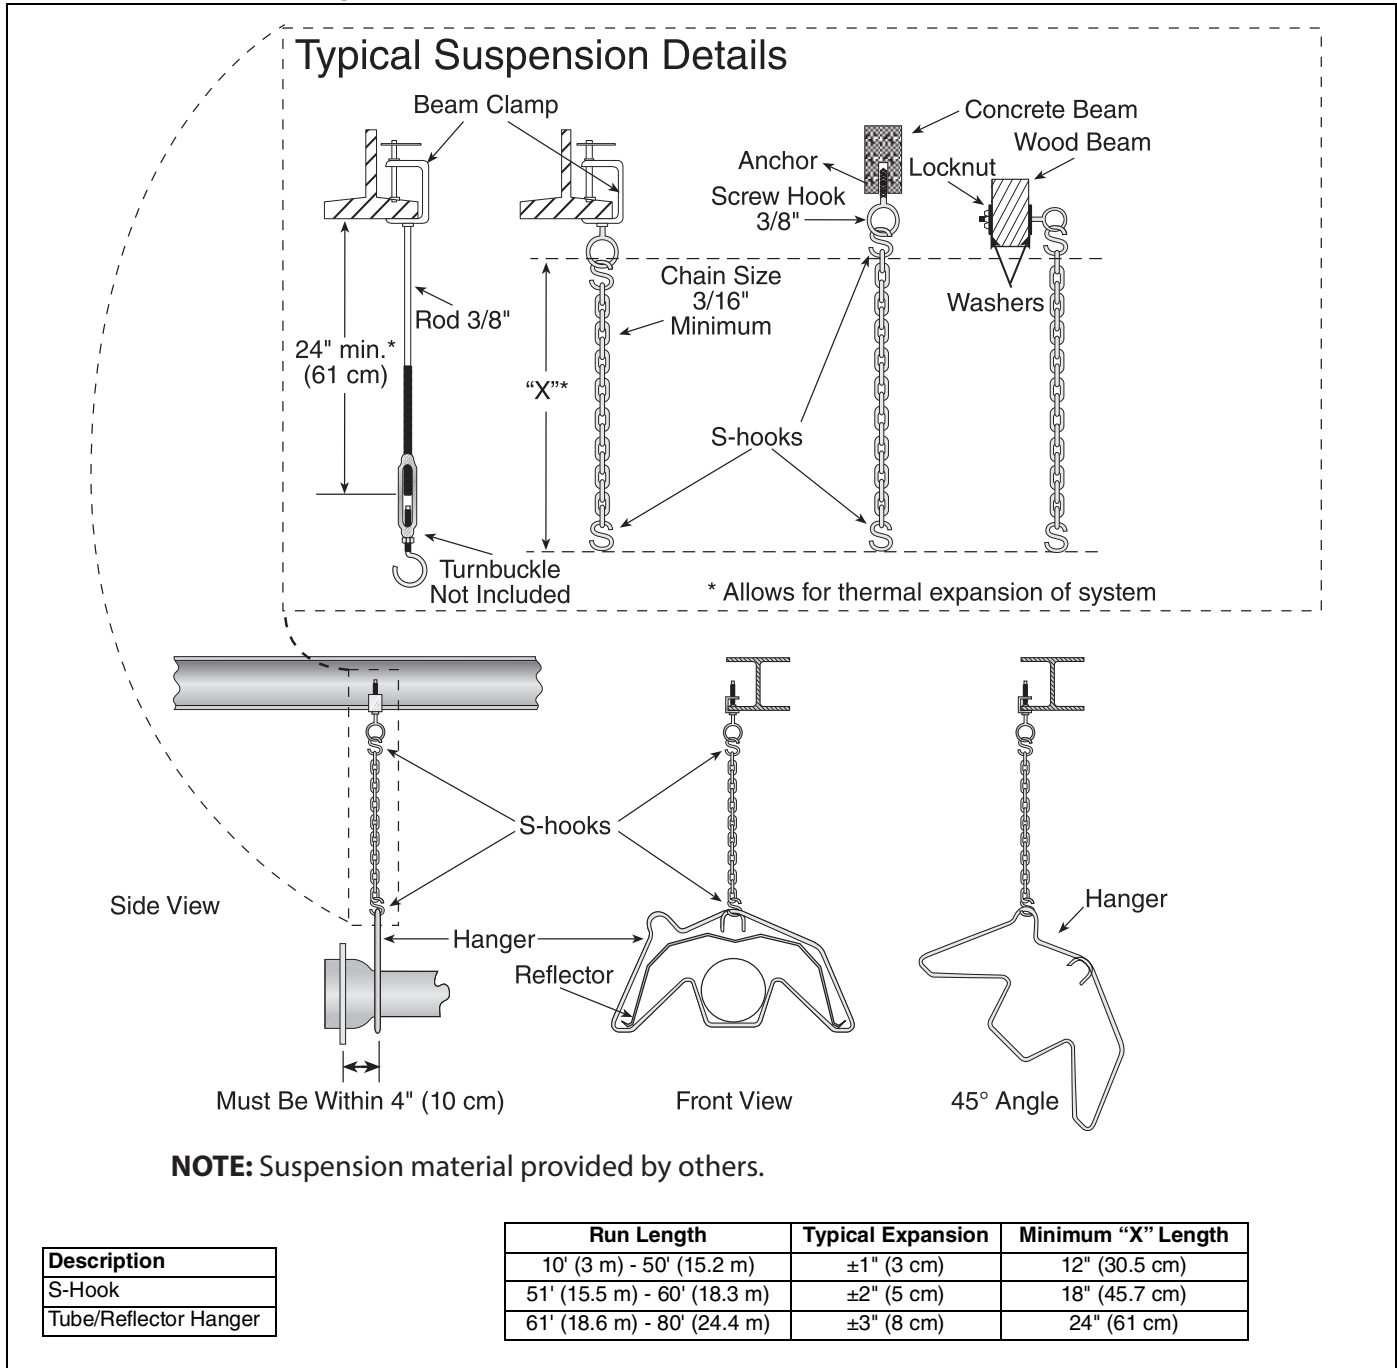


FIGURE 14: Linear Heater Assembly Overview

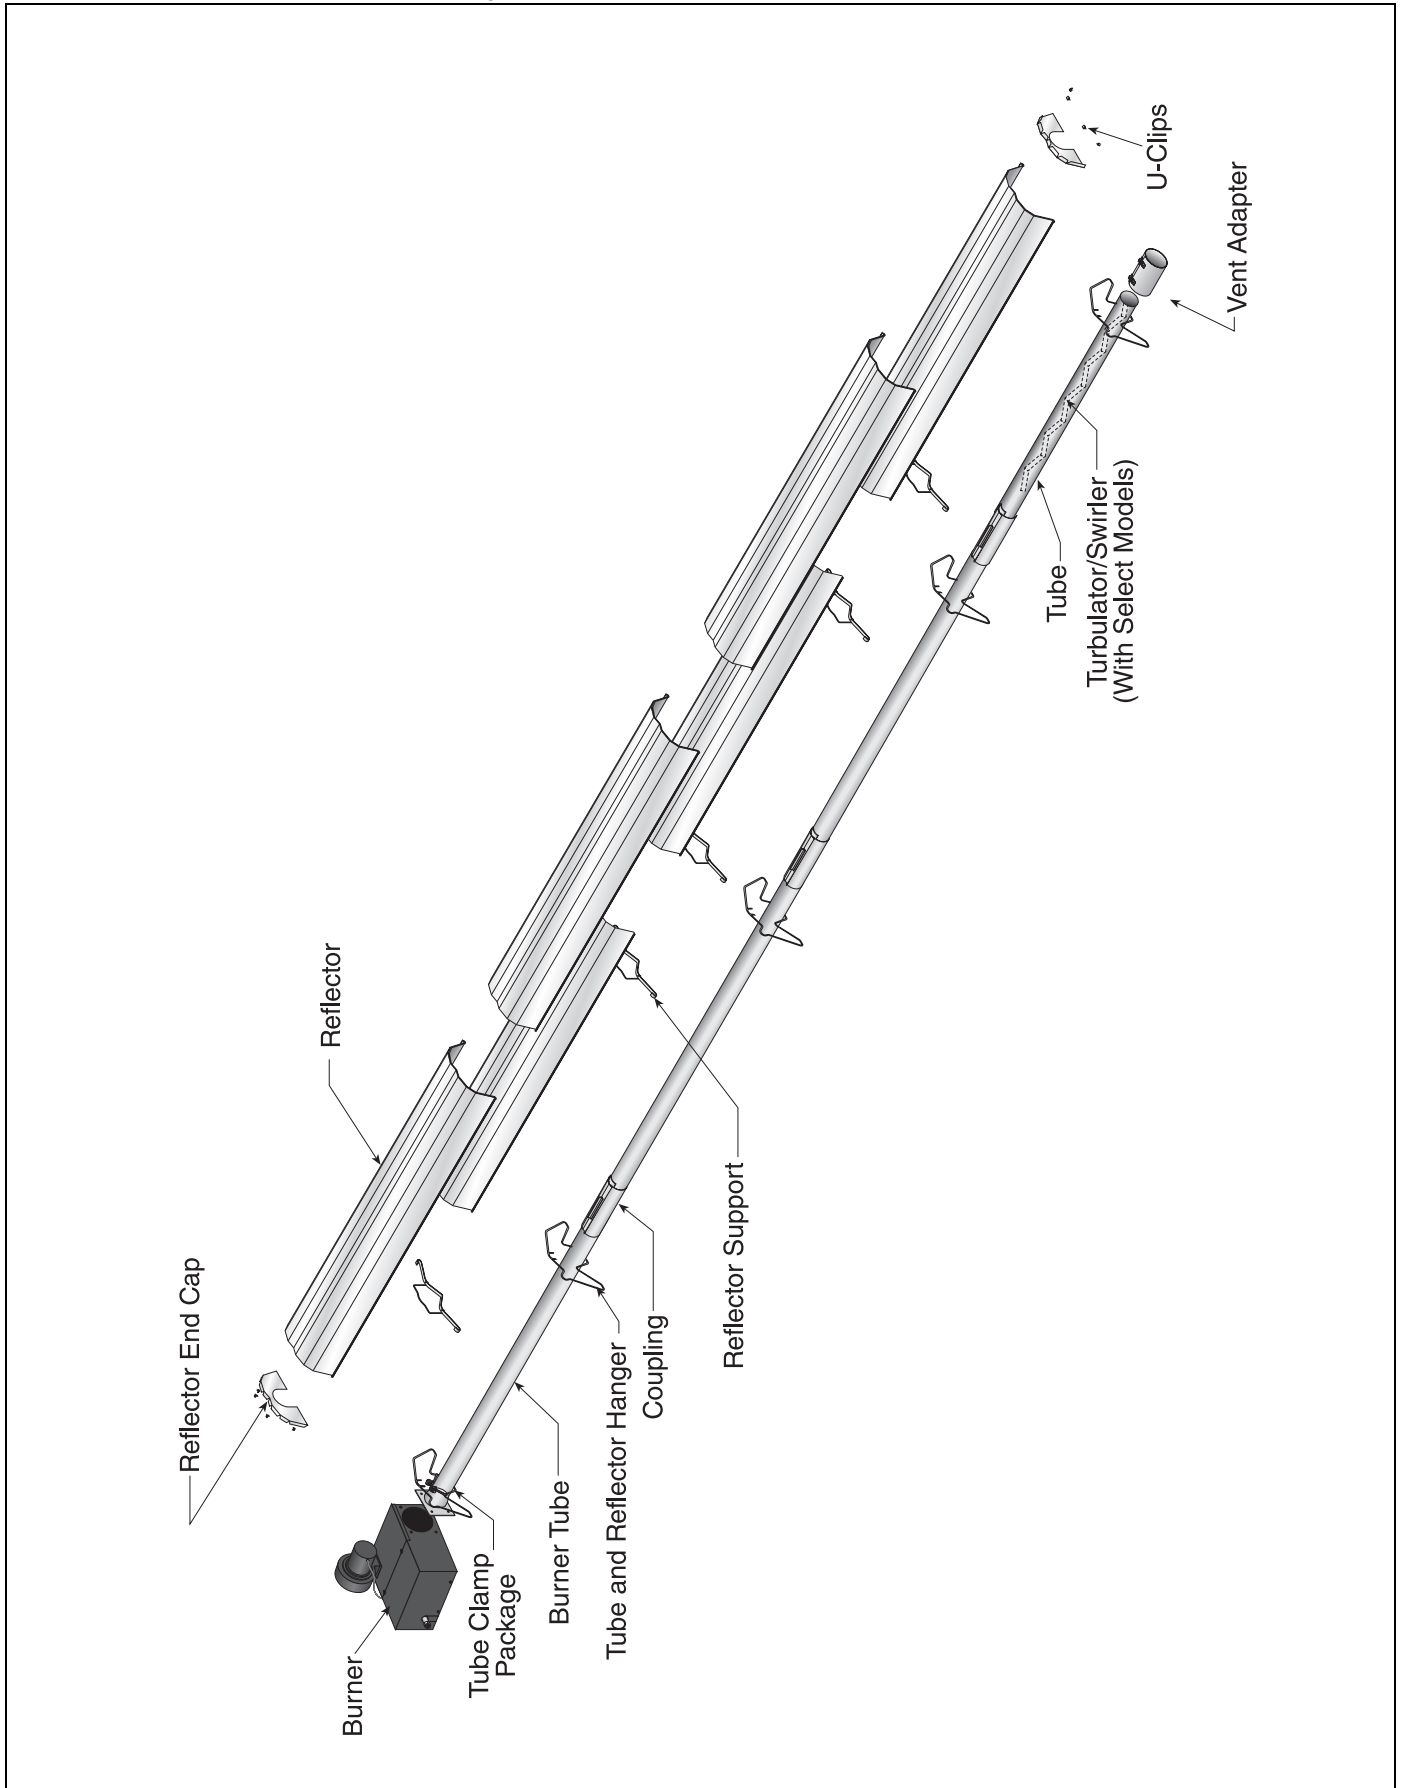








FIGURE 15: Linear Heater Layout Overview

LEGEND

-  Burner
-  Reflector
-  Tube
-  Tube/Reflector Hanger
-  Coupling Assembly
-  Vent Adapter

a = 14" (36 cm)
reflector width (not shown)

b = 2" (5 cm)
end cap to burner

c = 2" (5 cm)
end cap to hanger

d = 7' 6" (2.3 m)
distance first hanger

e = 10' (3 m)
distance between hangers

f = 12.5" (32 cm)
burner height

g = 11" (28 cm)
burner length







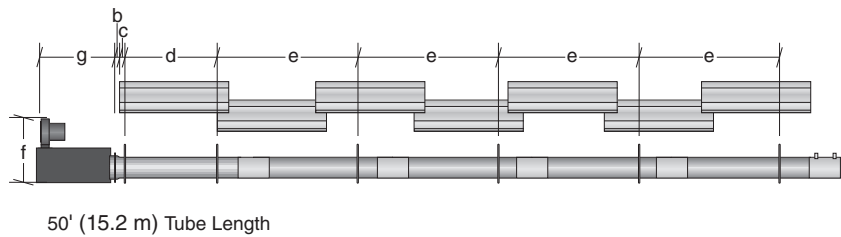



FIGURE 16: Linear Heater Layout Overview (Continued)

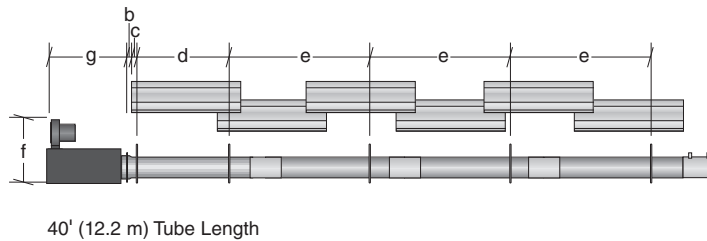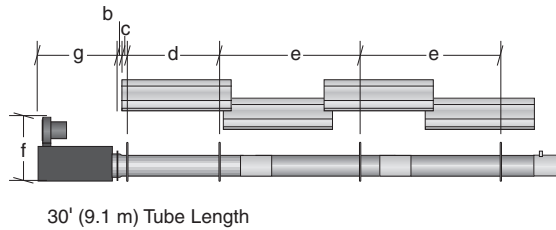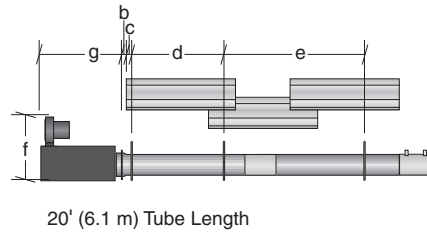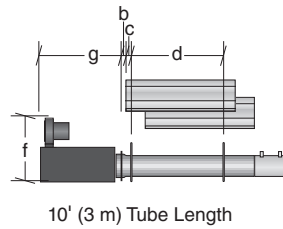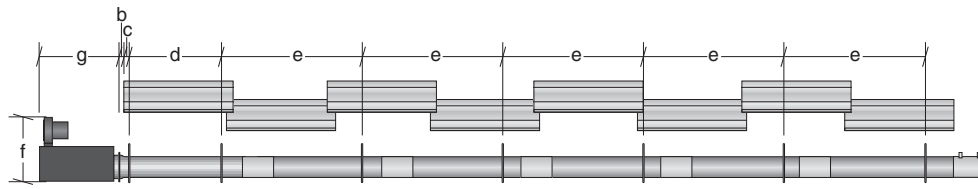

60' (18.3 m) Tube Length

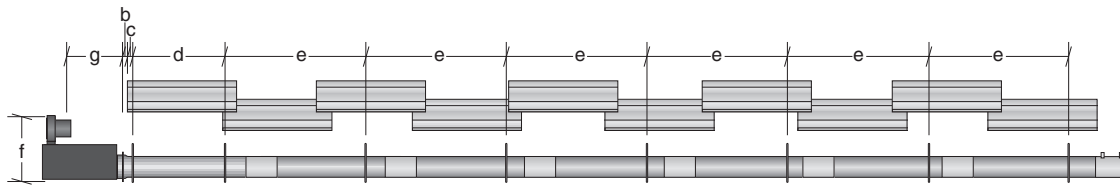


70' (21.3 m) Tube Length

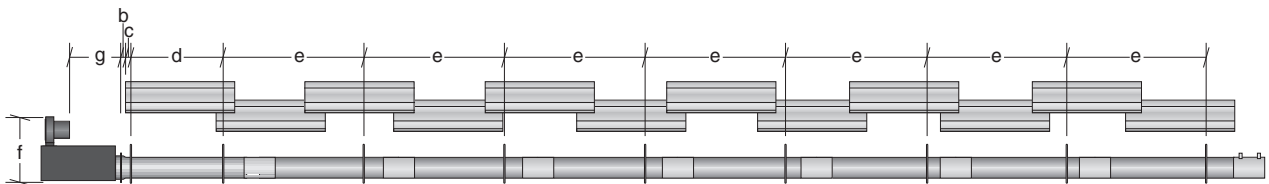

80' (24.4 m) Tube Length


Step 6.1 Burner Tube Installation

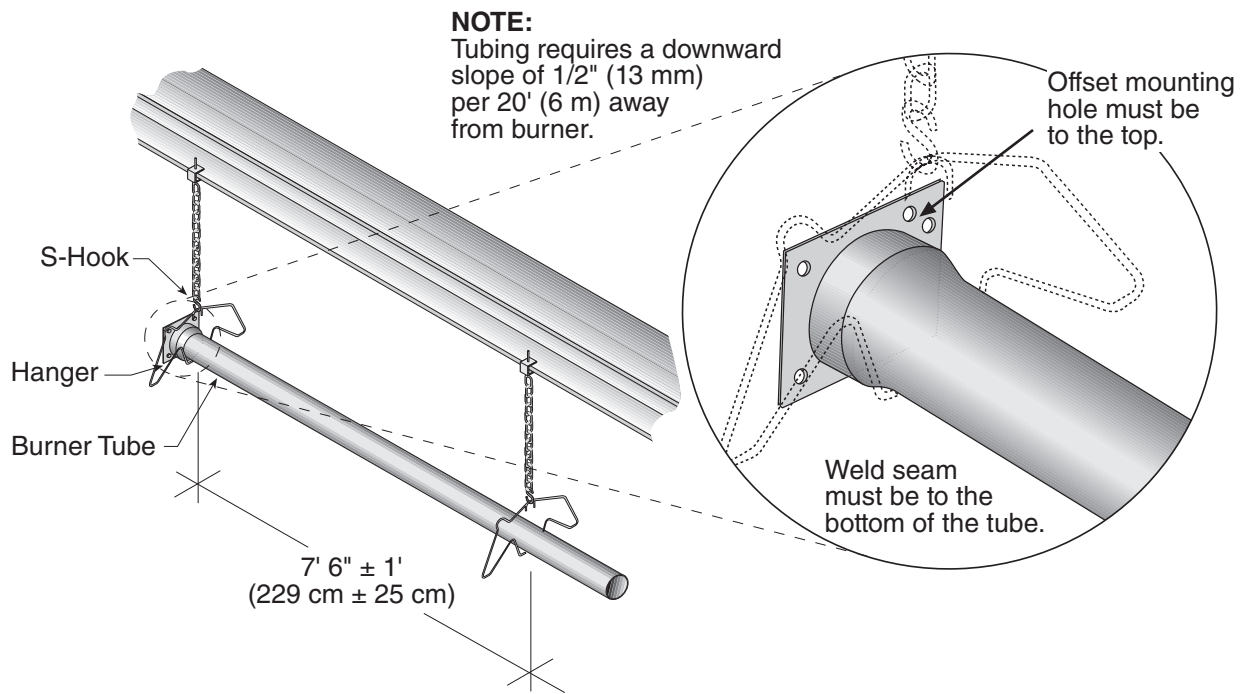

NOTE:
Tubing requires a downward slope of 1/2" (13 mm) per 20' (6 m) away from burner.

Description
Burner Tube
S-Hook
Tube/Reflector Hanger


Step 6.2 Tube Clamp Package Installation

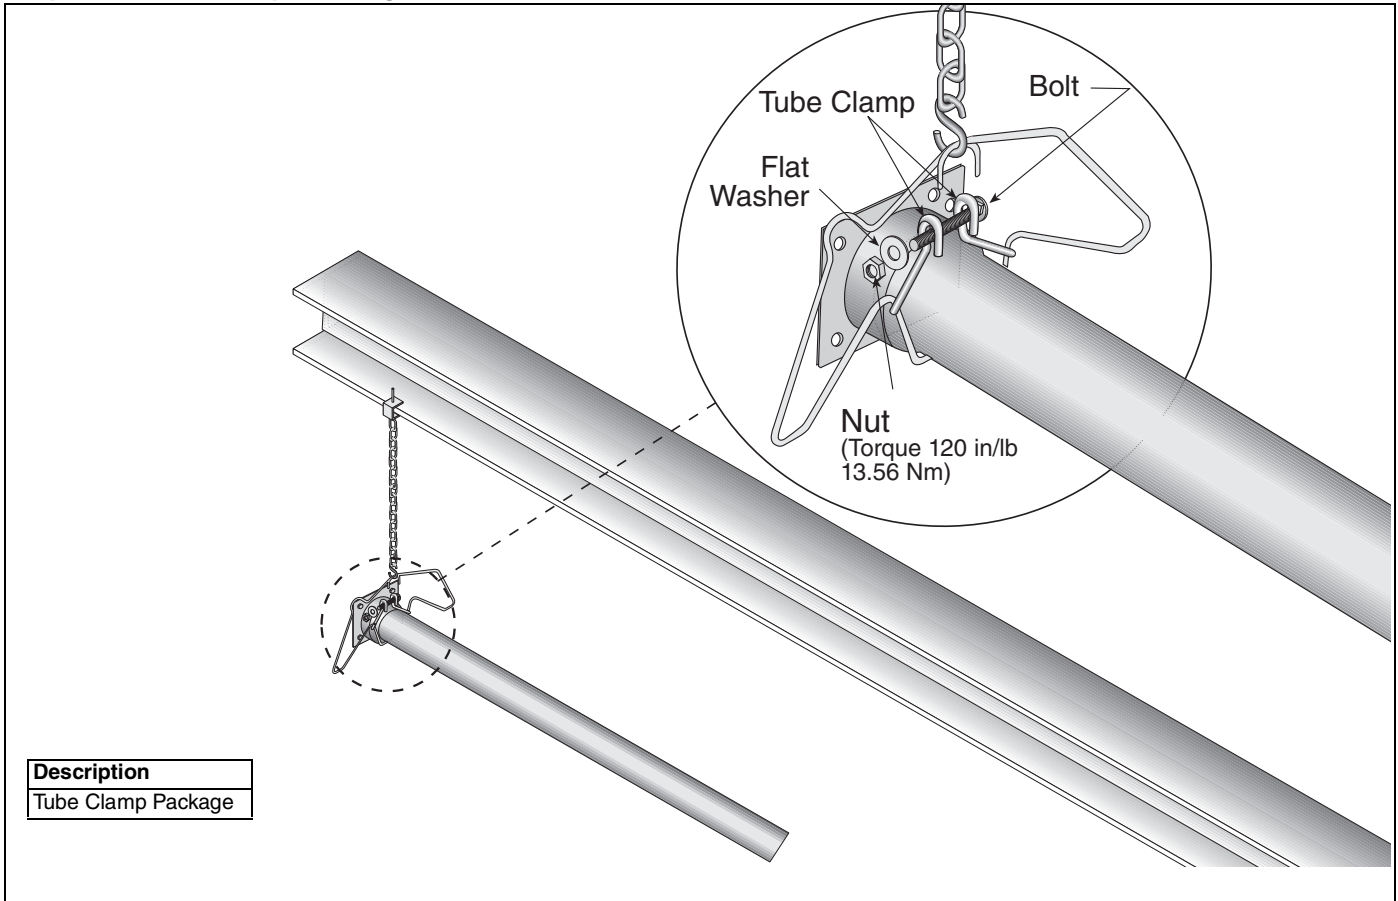


Step 6.3 Coupling and Tube Assembly

NOTE: Prior to coupling installation review Swirler Installation on *Page 22, Step 6.5*. Models NBH-125 and NBH-175 require swirler tab to be installed under coupling. Swirler installation for these models must be complete prior to coupling installation.


- A** Close coupling and slide opposite end into tab. Position tab underneath guide rail.

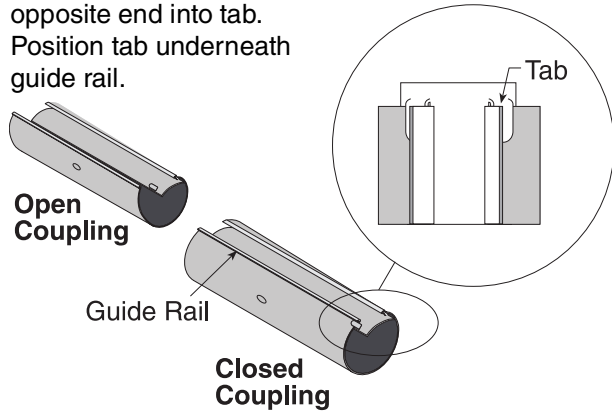


- B** Insert wide end of slide bar/coupling lock into guide rail on opposite end of tabs. Slide the slide bar/coupling lock up the guide rail until snug (approximately 3" (8 cm) to 4" (10 cm)).

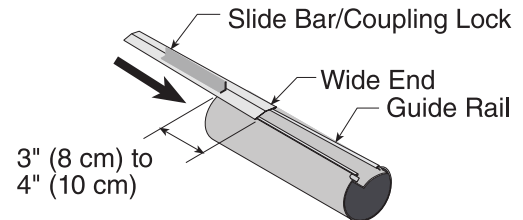

- C** Insert tubes into coupling until end of each tube rests against internal pins.

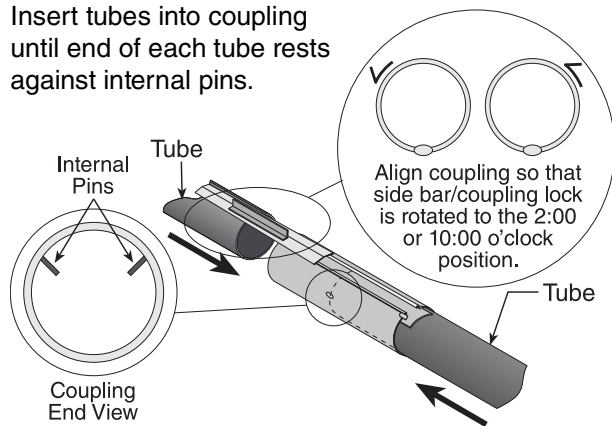

- D**


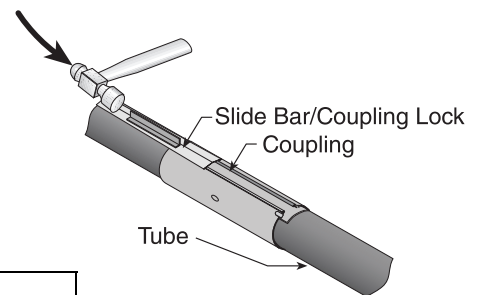


Description
Coupling
Slide Bar/Coupling Lock
Tube

Step 6.3.1 Coupling and Tube Assembly (Continued)


Tighten slide bar as shown below.

Be sure not to over tighten slide bar/coupling lock. Slide bar/coupling lock should be within tolerance listed below.

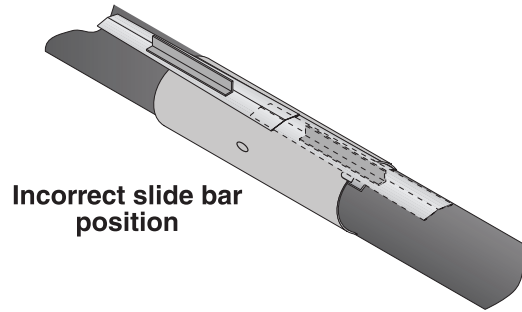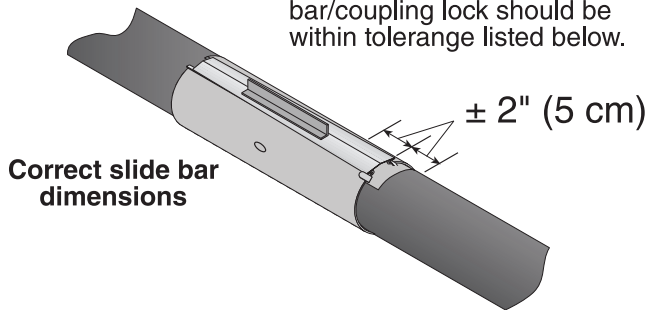

- Repeat Step 6.3 A - D until all tubes are assembled. See Page 20, Step 6.3.2.

Step 6.3.2 Coupling and Tube Assembly (Continued)

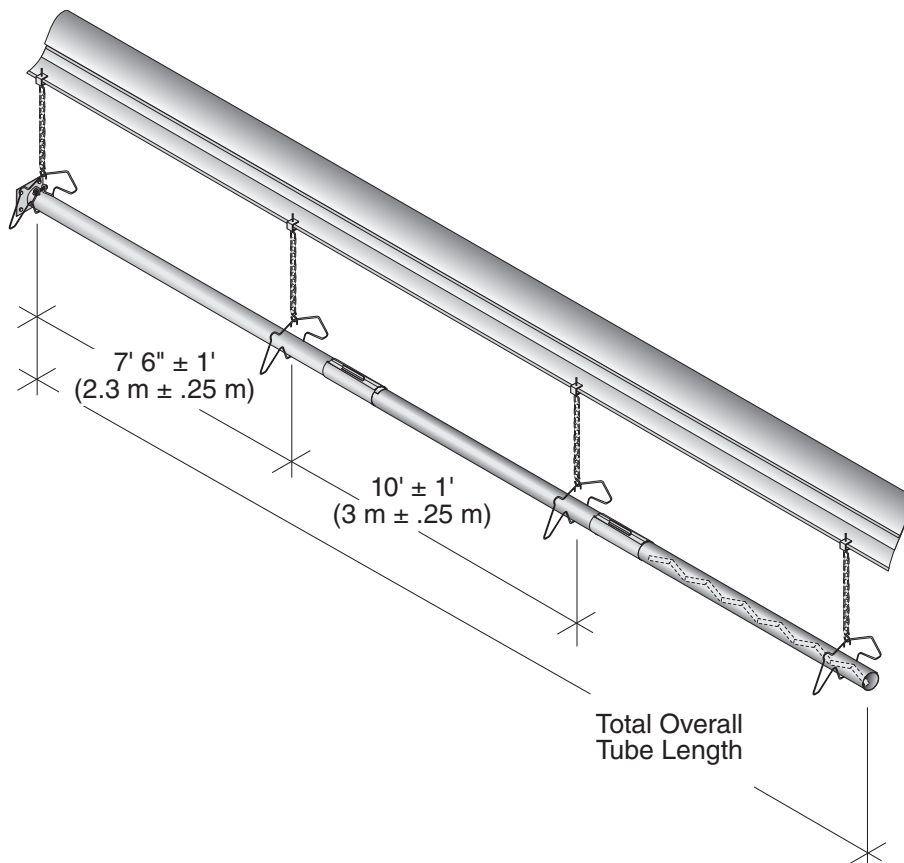

Model	Tube Length Minimum
NBH-40	10' (3 m)
NBH-60	20' (6 m)
NBH-80	20' (6 m)
NBH-100	30' (9 m)
NBH-115	30' (9 m)
NBH-125	30' (9 m)
NBH-140	40' (12 m)
NBH-150	40' (12 m)
NBH-175	40' (12 m)
NBH-200	50' (15 m)

Step 6.4 Turbulator Installation

Install turbulator as specified in the "Turbulator Installation" chart below.

Turbulator Installation	
Model	Tube Section
NBH-40	1st 10' (3 m) Section
NBH-60	2nd 10' (3 m) Section
NBH-80	2nd 10' (3 m) Section
NBH-100	3rd 10' (3 m) Section
NBH-115	3rd 10' (3 m) Section
NBH-140	4th 10' (3 m) Section

Turbulator Section

Turbulator Adapter

Tab
(Tab located only on turbulator starter section)


Turbulator section (stainless steel) used in NBH-40 must be installed in the 1st 10' (3 m) tube section.

Pull String

Fold tab around outside of tube nearest to the vent to hold turbulator in place.

Description
Turbulator Adapter 2.5' (76.2 cm)
Turbulator Section 2' (61 cm)
Turbulator Section 2.5' (76.2 cm) (Stainless)
Tube

Step 6.5 Swirler Installation

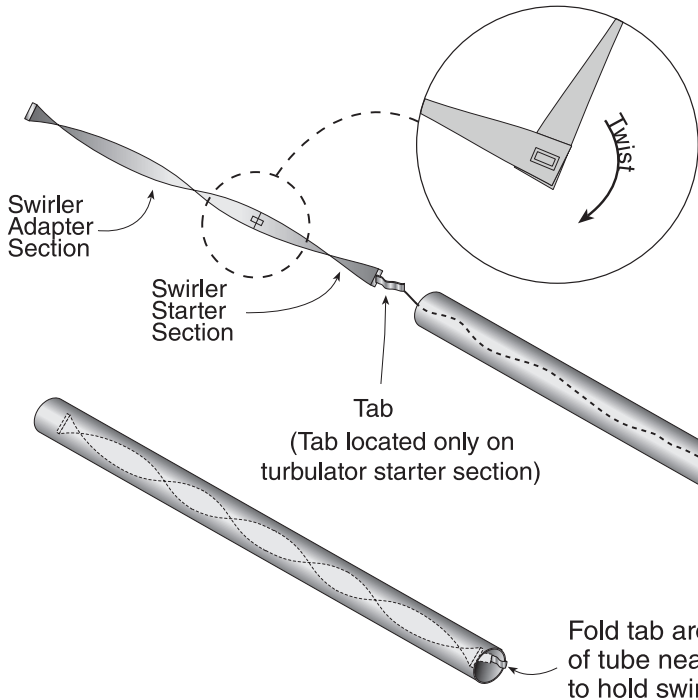

Swirlers should not be installed through 180° "U" sections or elbows. For this reason, 15' and 20' long swirler packages each contain 2 swirler starter sections to allow for starter pieces to be installed before and after "U" sections and elbows. Swirler starter section identified as section with tab on end. Swirlers should be installed as shown in figures 19 through 27.

Installer can use pull string to pull swirlers through tube, or the swirlers may be pushed into tube.

Swirler installation required for models specified in the "Swirler Installation" chart.

Begin installing swirler at end of tube section as described in the "Swirler Installation" chart and continue towards burner.

Note: If heater length is extended 10' (3 m) beyond the specified minimum heat exchanger length swirler can begin in either the specified tube section (according to the "Swirler Installation" chart) or the end of the 10' (3 m) extension and continue towards burner.

Swirler Installation		
Model	Tube Section	Swirler Qty
NBH-125	3rd 10' (3 m) Section	2 Starters + 2 Adapters
NBH-150	4th 10' (3 m) Section	1 Starter + 1 Adapter
NBH-175	4th 10' (3 m) Section	2 Starters + 1 Adapter
NBH-200	5th 10' (3 m) Section	1 Starter + 1 Adapter

Description
Swirler Starter 62" (1.6 m)
Swirler Adapter 62" (1.6 m)
Tube

FIGURE 17: Swirler Installation Model: NBH-125, 30' Straight Tube; Swirler Package - 20' (6 m) (p/n 03051511K)

Note: Swirler installation for this model must be complete prior to coupling installation for proper swirler starter tab placement.


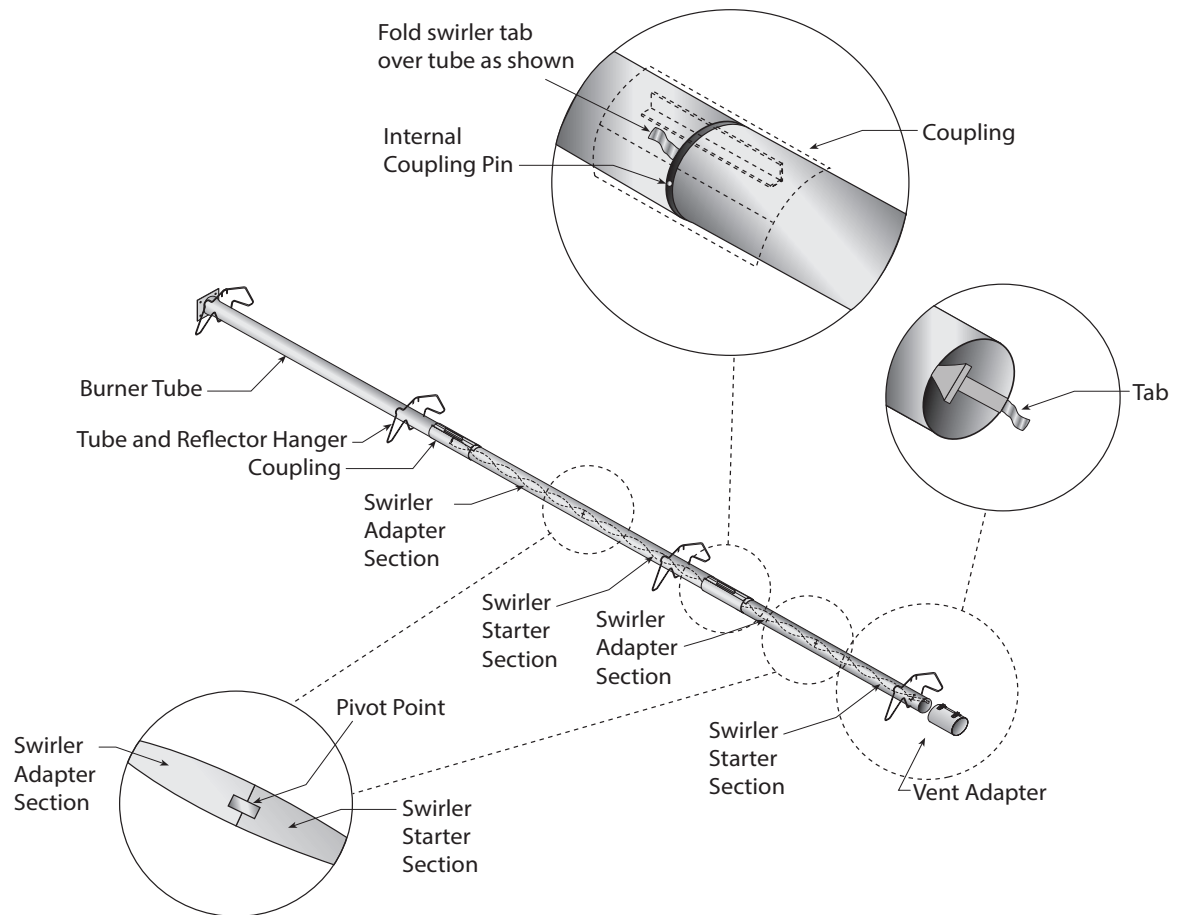


FIGURE 18: Swirler Installation Model: NBH-125, 30' U-Tube; Swirler Package - 20' (6 m) (p/n 03051511K)

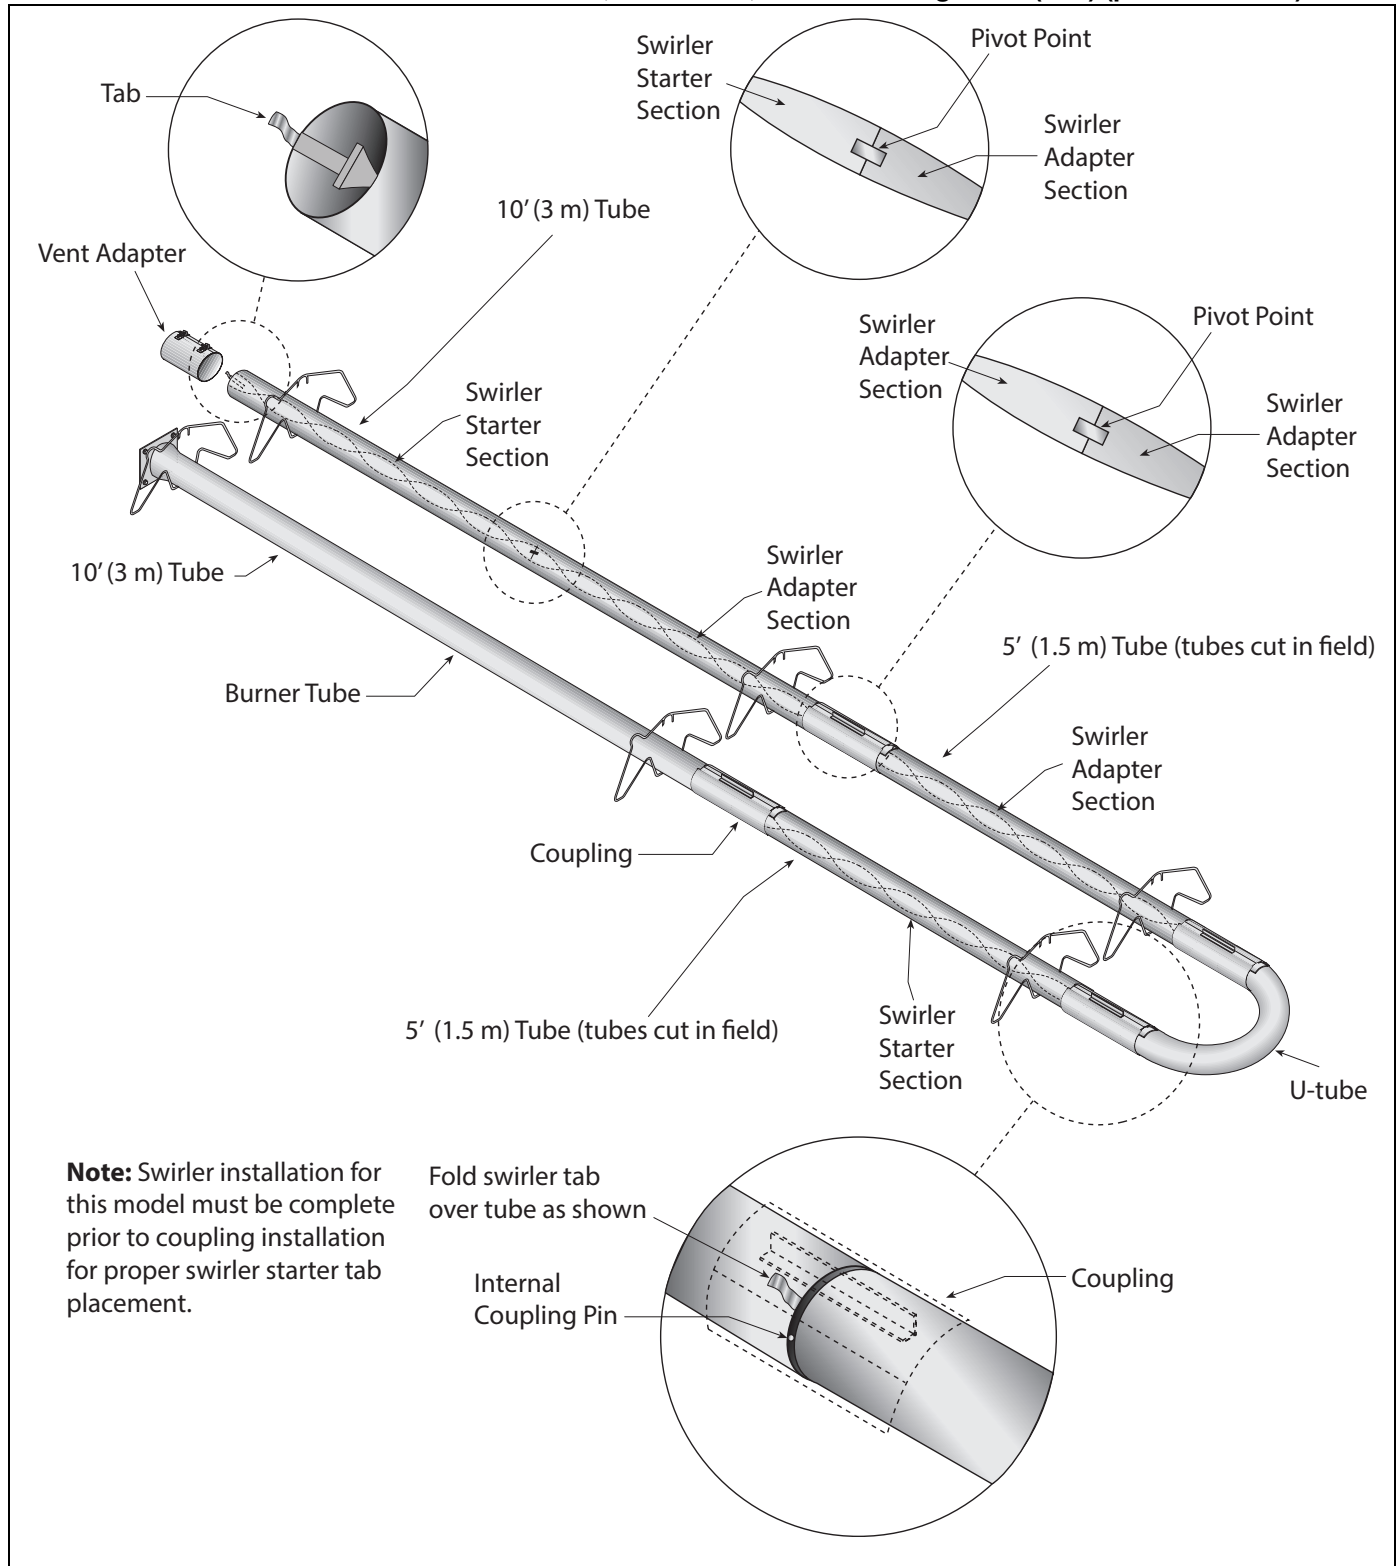

See Page 32 for U-Tube installation instructions.

FIGURE 19: Swirler Installation Model: NBH-150, 40' Straight Tube; Swirler Package - 10' (3 m) (p/n 03051509K)



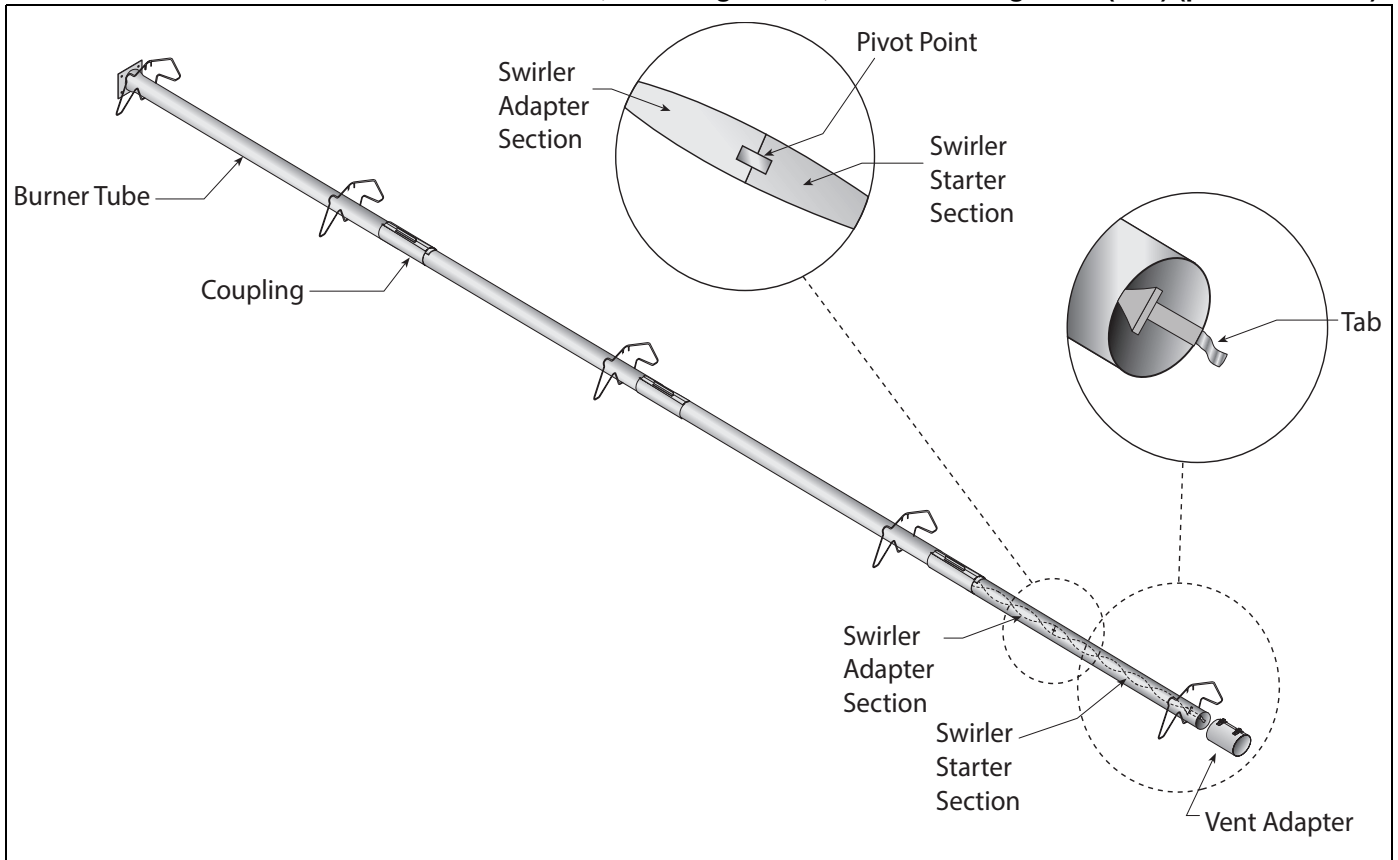


FIGURE 20: Swirler Installation Model: NBH-150, 40' U-Tube; Swirler Package - 10' (3 m) (p/n 03051509K)

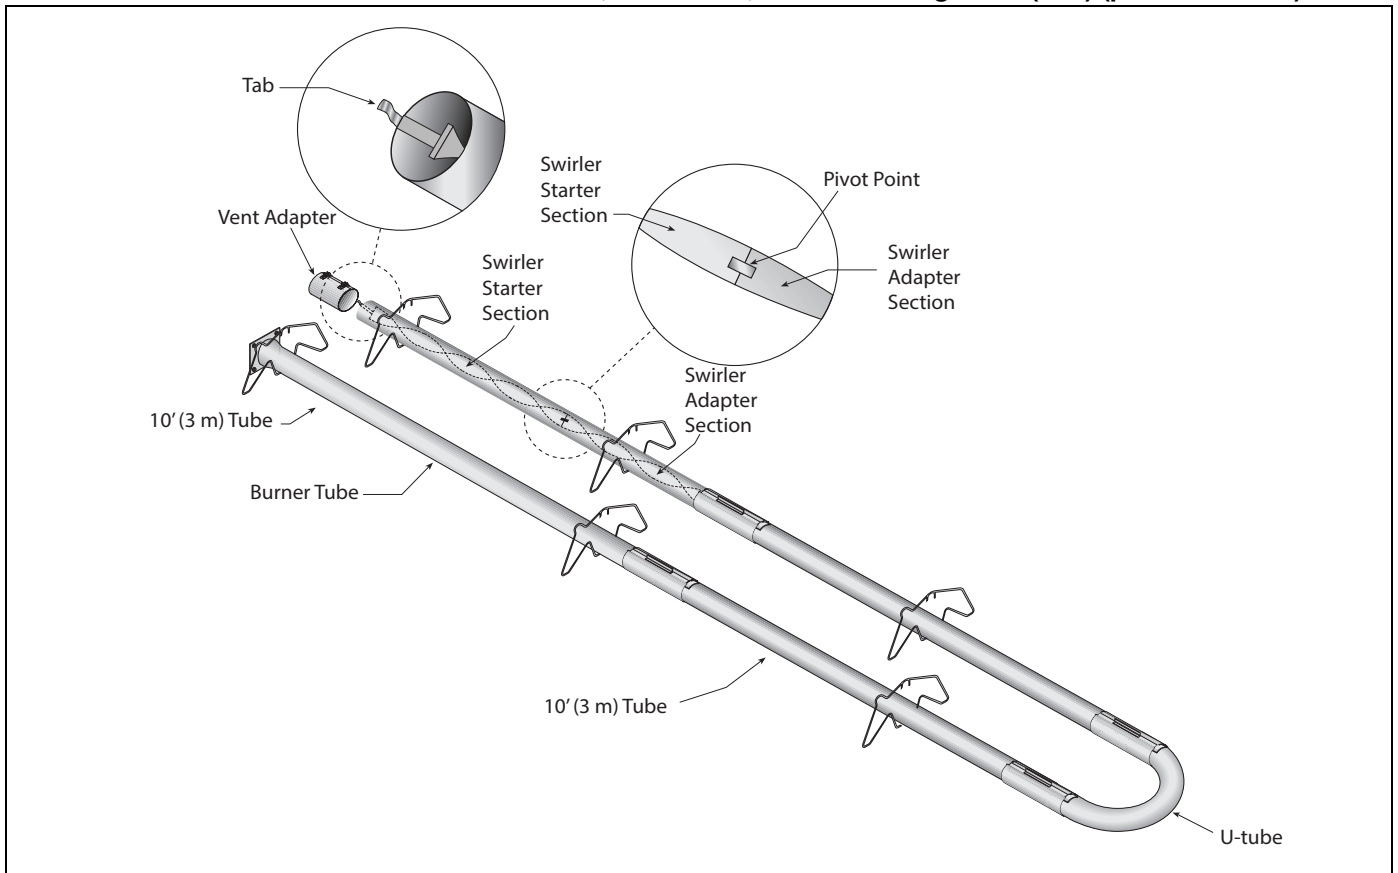


See Page 32 for U-Tube installation instructions.

FIGURE 21: Swirler Installation Model: NBH-175, 40' Straight Tube; Swirler Package - 15' (4.5 m) (p/n

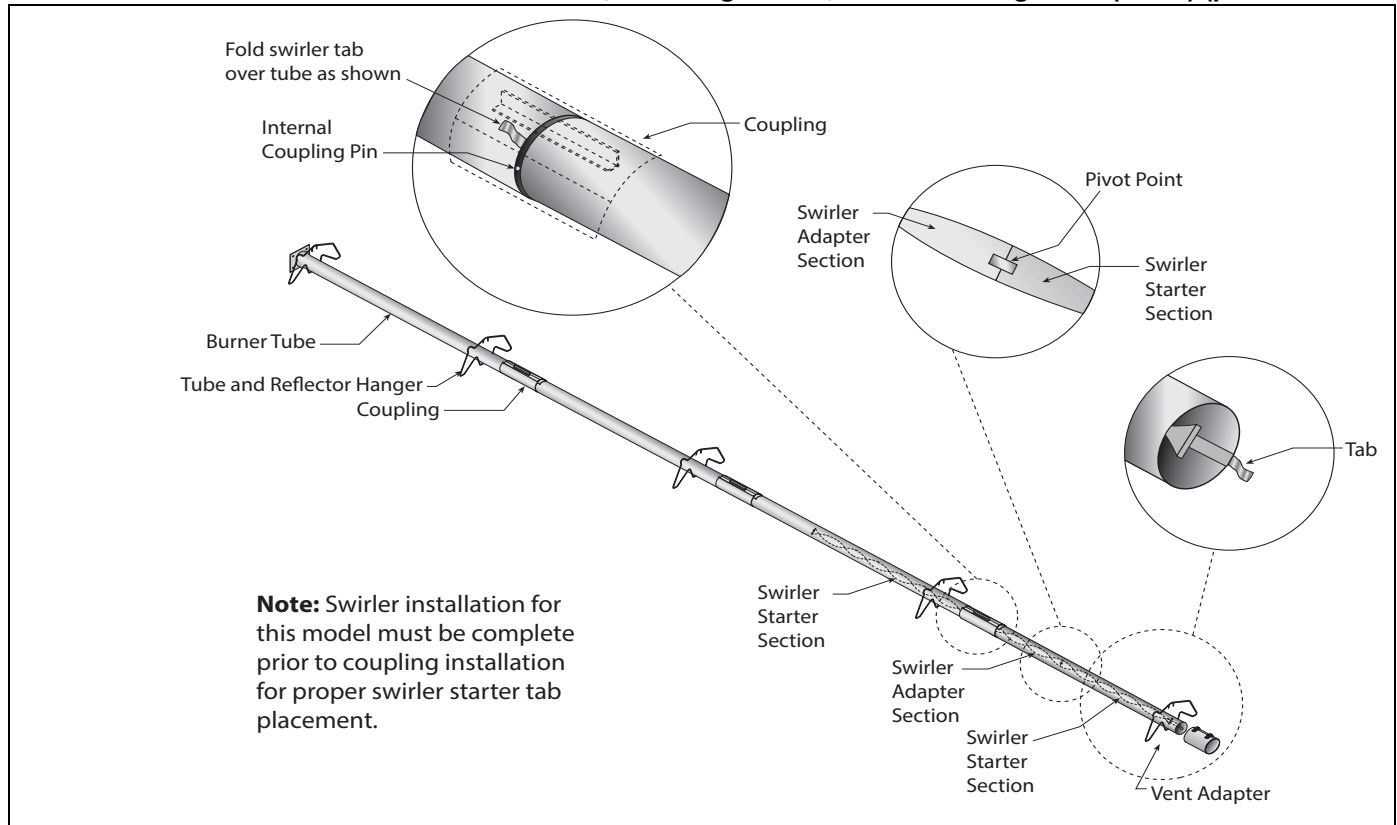


03051510K)

FIGURE 22: Swirler Installation Model: NBH-175, 40' Even U-Tube; Swirler Package - 15' (4.5 m) (p/n 03051510K)

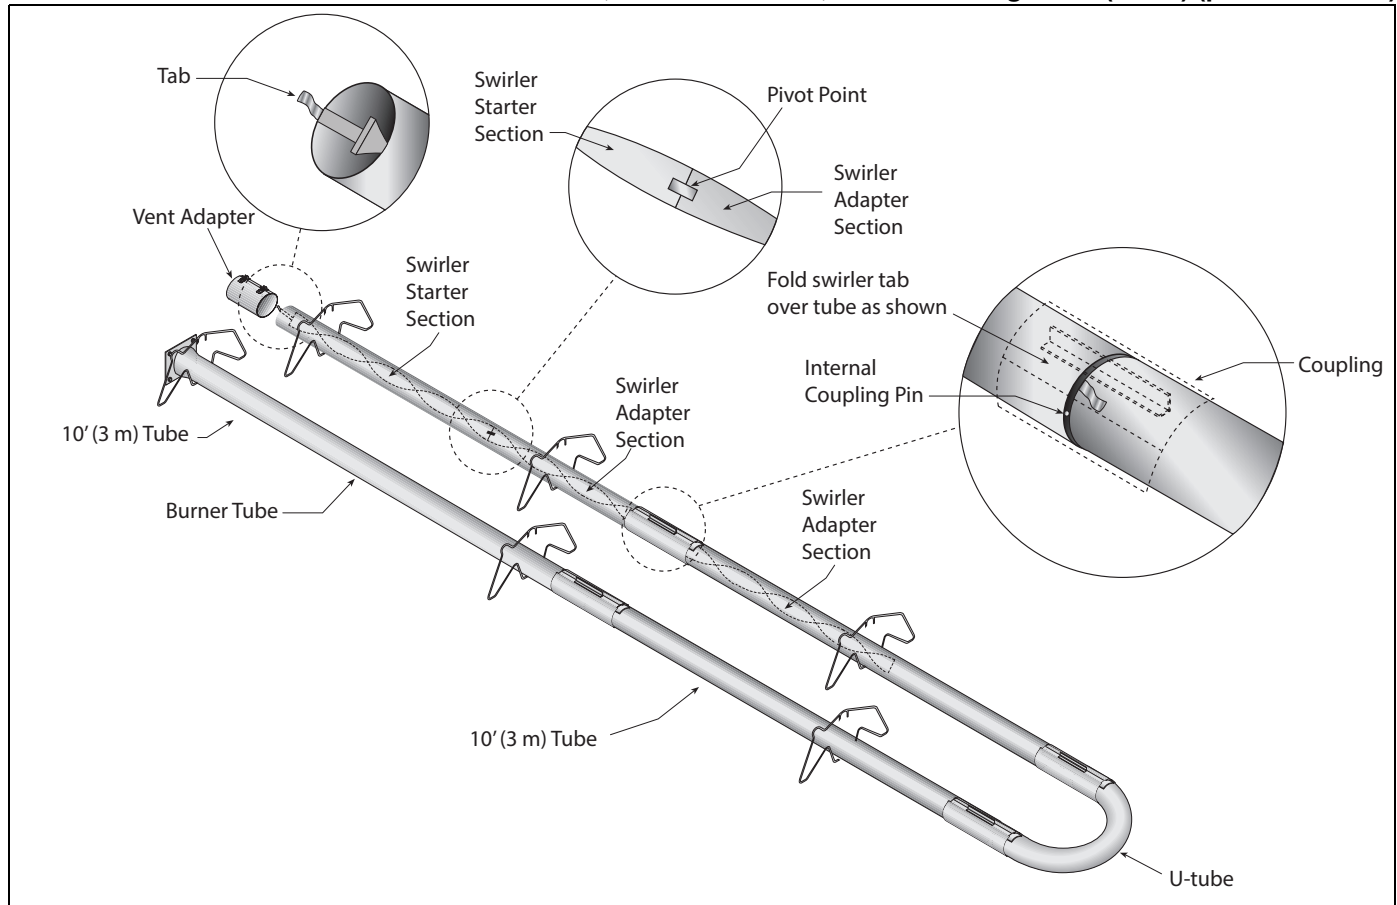

See Page 32 for U-Tube installation instructions.

FIGURE 23: Swirler Installation Model: NBH-175, 40' Uneven U-Tube; Swirler Package - 15' (4.5 m) (p/n 03051510K)

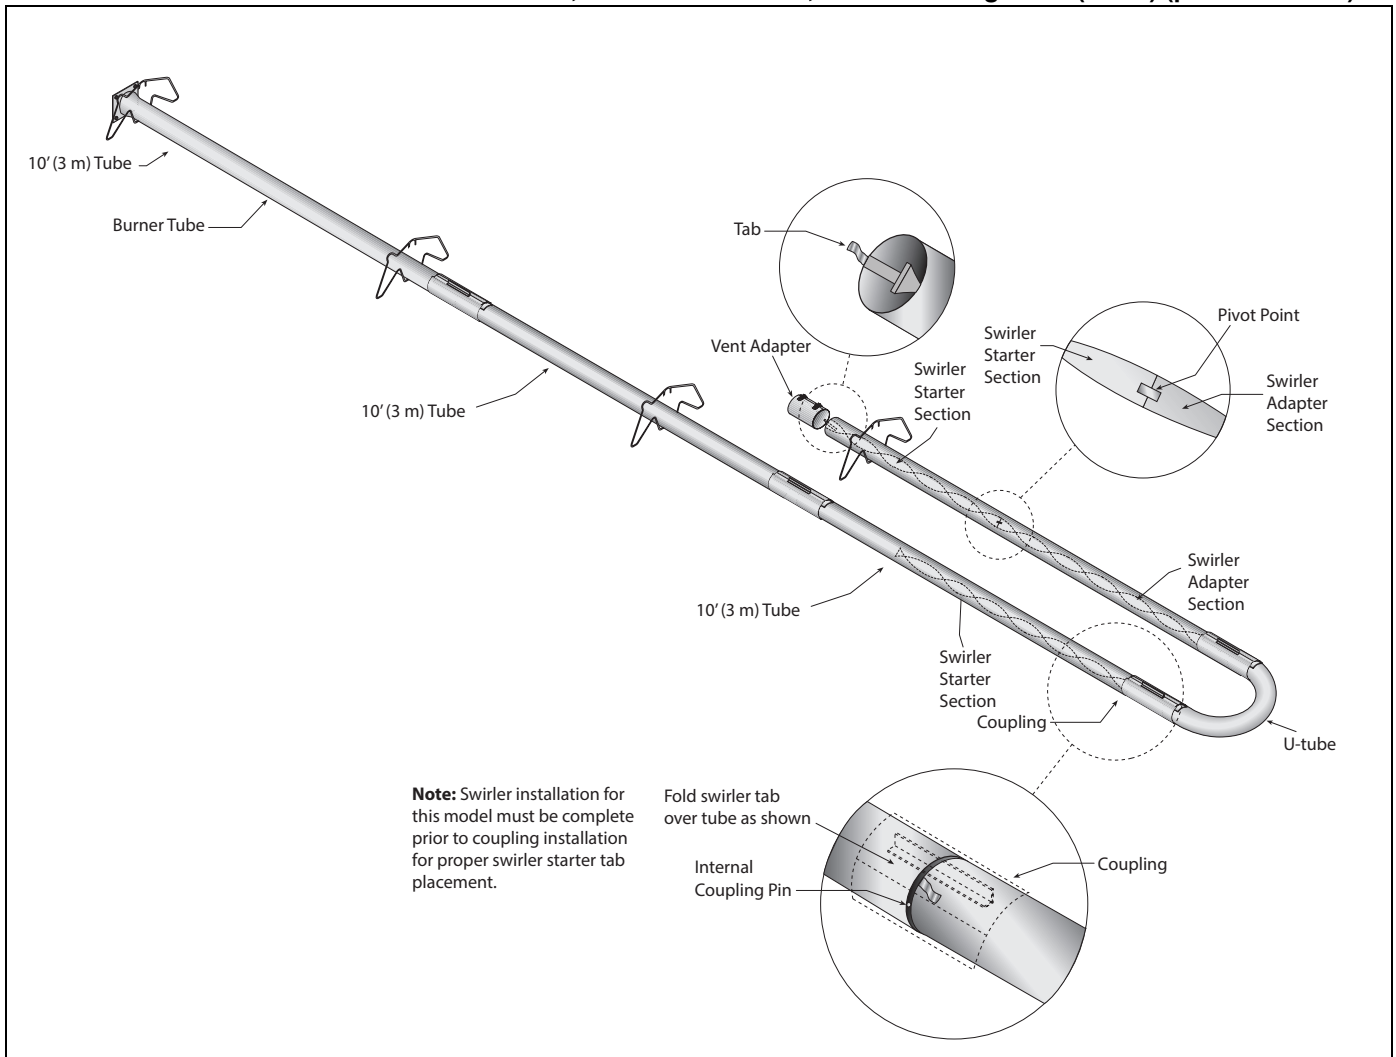

See Page 32 for U-Tube installation instructions.

FIGURE 24: Swirler Installation Model: NBH-200, 50' Straight Tube; Swirler Package - 10' (3 m) (p/n 03051509K)


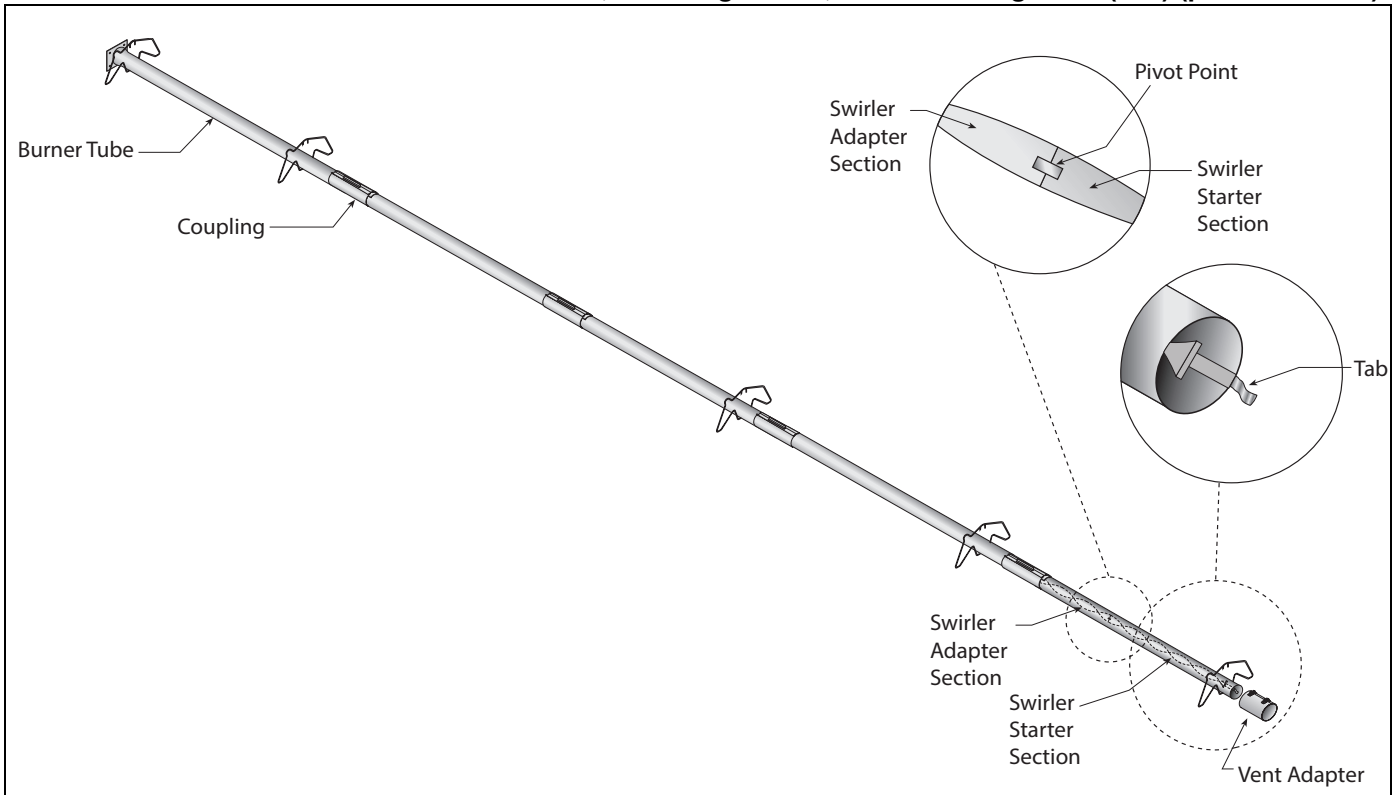


FIGURE 25: Swirler Installation Model: NBH-200, 50' U-Tube; Swirler Package - 10' (3 m) (p/n 03051509K)

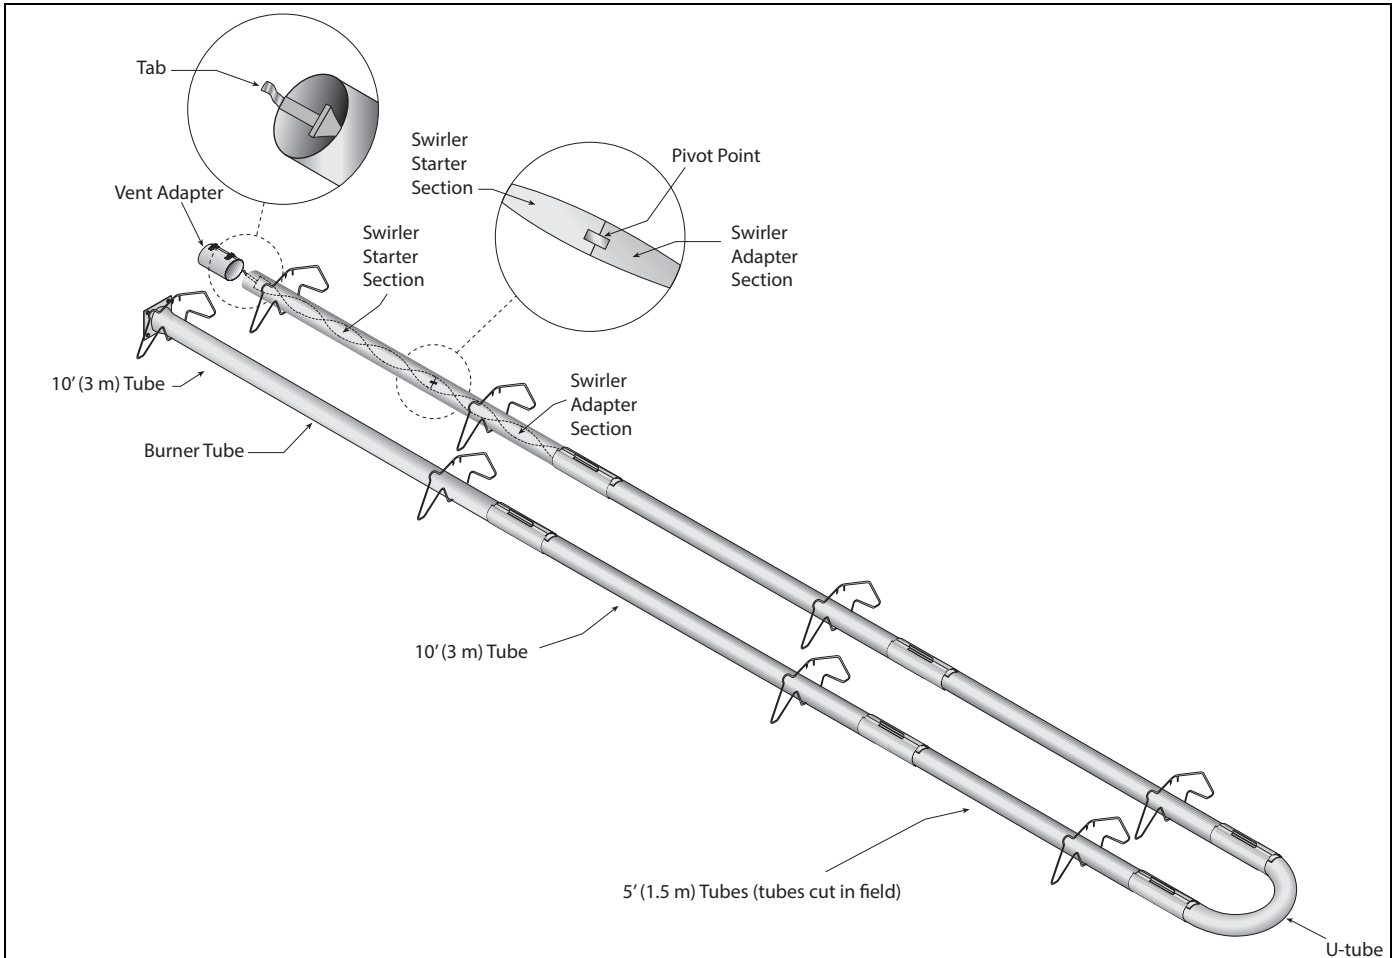


See Page 32 for U-Tube installation instructions.

Step 6.6 Reflector Installation

⚠ WARNING

Fire Hazard
<p>Support reflector with reflector hanger and support strap.</p> <p>Reflector must not touch tube.</p> <p>Failure to follow these instructions can result in death, injury or property damage.</p>

NOTE: All tube surfaces must be covered by a reflector, except for a U-tube.

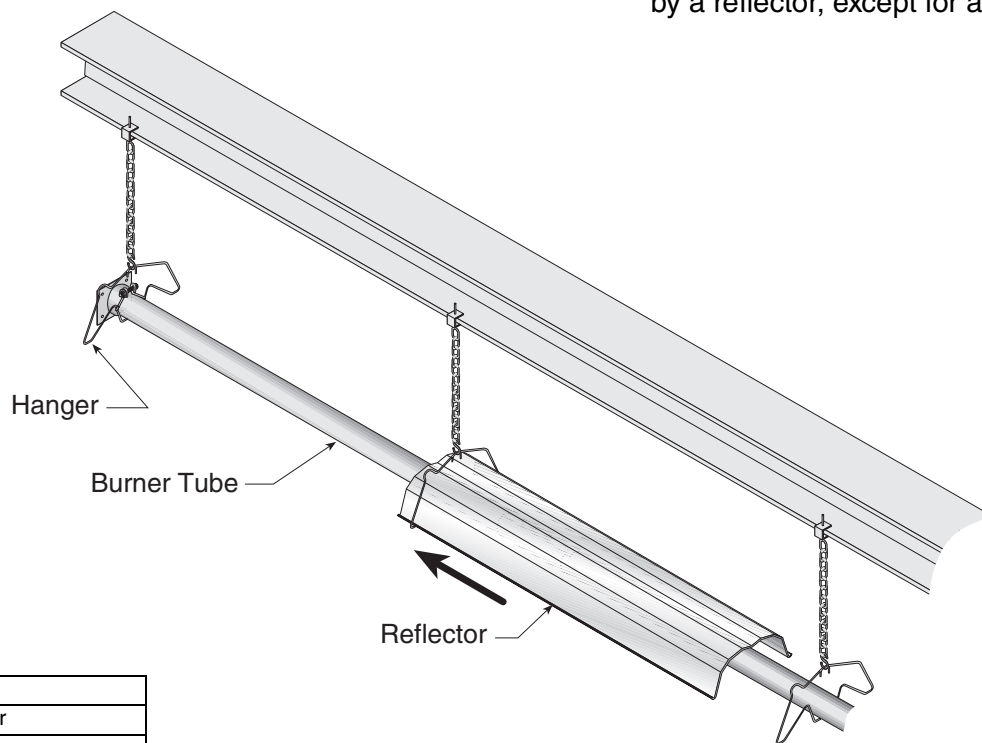

Description
Tube/Reflector Hanger
Burner Tube
Reflector 96" (244 cm)




Step 6.6.1 Reflector, U-Clip and Reflector Support Installation

The pictorial drawings of the heater construction in Section 6 are schematic only and provide a general guideline of where hangers, reflector supports and U-clips are to be installed.


To ensure proper expansion and contraction movement of the reflectors, a combination of U-clips and reflector supports are used. The positioning of

reflector supports and U-clips depend on the individual installation. Use either pop rivets or sheet metal screws instead of u-clips when installing end caps and joint pieces in areas where impact and high wind may be a factor. The following rules must be observed.

1. Slide first reflector after burner a minimum 2" (4 cm) through first hanger and ensure reflector end cap is securely fastened via U-clips, pop rivets, or sheet metal screws. Position reflector support with tight screws in middle of first reflector.

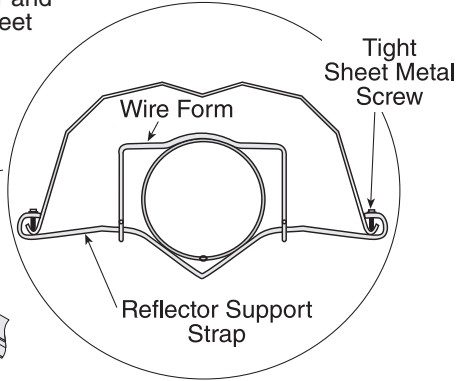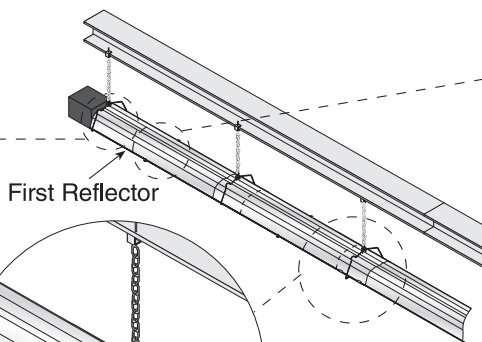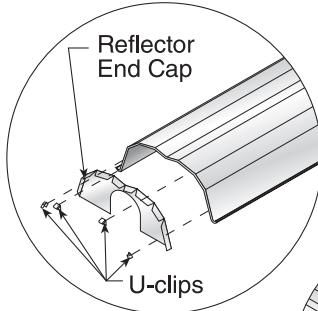


Overlap must be a minimum of 6" (16 cm).

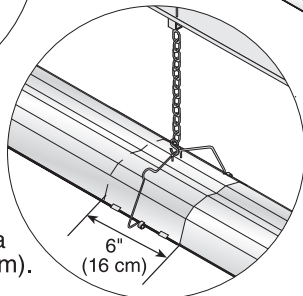

2. The overlap at the first and second reflector is a **slip overlap**. Thereafter, every third reflector joint is a slip overlap. A slip overlap is achieved by either:


- a.) both reflectors lay inside a hanger.
- (No reflector support needed.)
- b.) using a reflector support with loose screws at the reflector overlap.

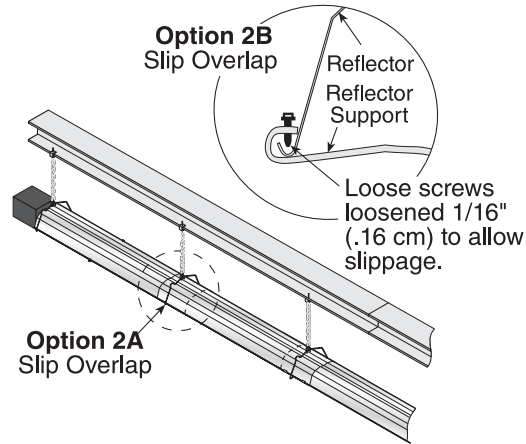

Option 2B Slip Overlap

3. The remaining reflector overlaps require a **non-slip overlap** connection. To affix the reflectors together in a non-slip overlap either:


- a.) use reflector support and tight screws.
- b.) if both reflectors lay inside a hanger, u-clips or sheet metal screws may be used.

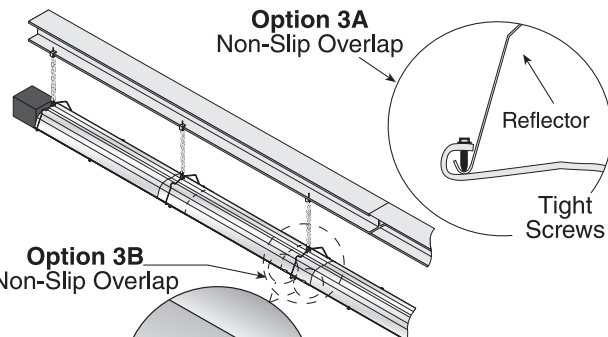

Option 3A Non-Slip Overlap

This section of three reflectors joined together will be affixed to the tube with at least one reflector support with tight screws.

Option 3B Non-Slip Overlap

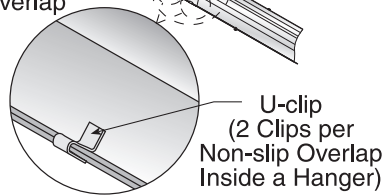


NOTE: High efficiency reflectors should NOT be used in applications exposed to wind.

Description
Reflector Support Package
Wire Form
Reflector Support Strap
Screw #8 x 3/4
U-Clip Package
Reflector End Cap

Step 6.7 Burner Installation

Install combustion blower by placing blower gasket between blower and top of burner. Secure blower to top of burner using (4) supplied #10-32 locknuts. Install flue collar if connecting an outside air inlet. Plug blower cord into receptacle on rear of burner.

Note: Do NOT face blower air inlet towards hinged access panel if connecting fresh air inlet. Doing so will interfere with access panel.

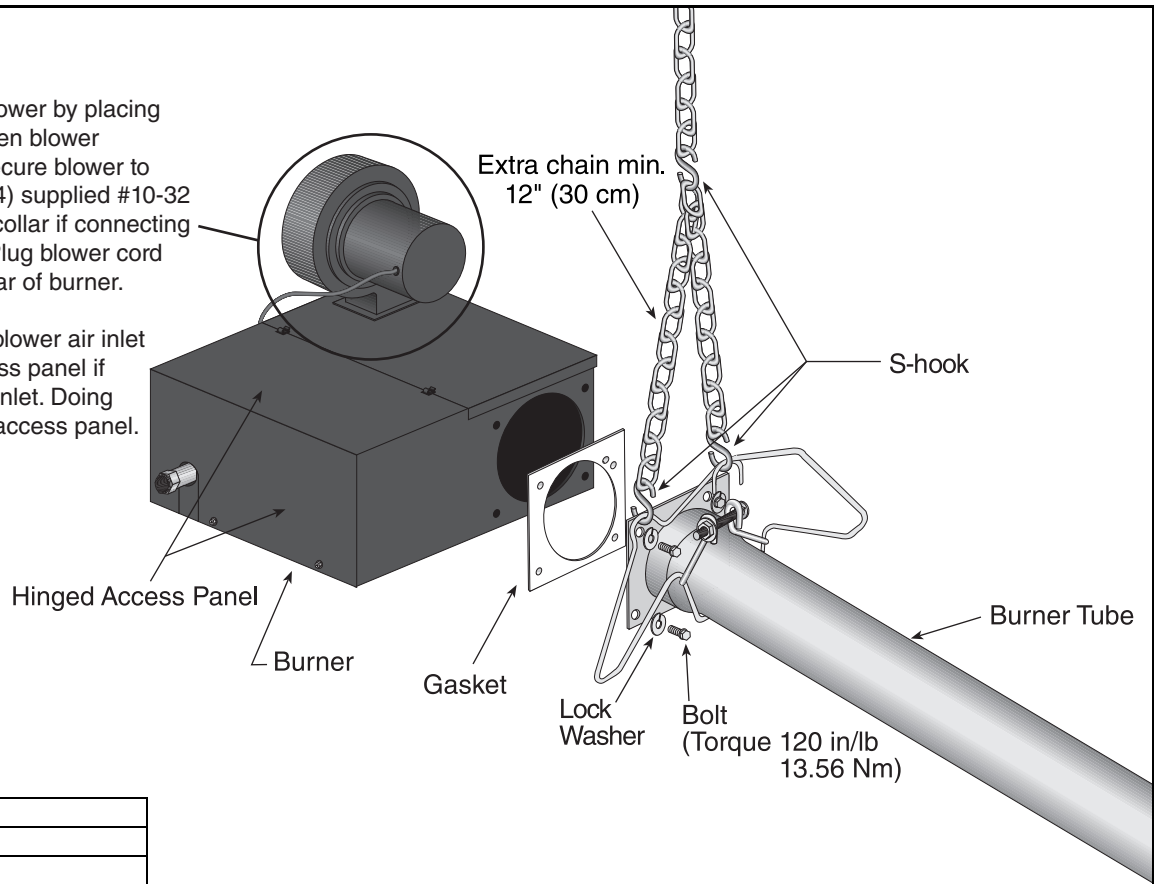

Description

Bolt
Lock Washer
Blower
Blower to Burner Gasket
Locknuts # 10-32
Outside Air Flue Collar
#8 x 3/8 Hex Washer Head
Burner to Burner Tube Gasket

NOTE: To ensure proper orientation, attached burner tube with tube weld facing downward

SECTION 7: OPTIONAL HEATER ACCESSORIES**! WARNING****Cut/Pinch Hazard**

Wear protective gear during installation, operation and service.

Edges are sharp.

Failure to follow these instructions can result in injury.

7.1 U-Tube Configuration

Heaters (except NBH-40) are approved for optional U-tube configurations.

The U-tube may be installed in either a standard horizontal position, a 45° position or in an opposite 45° position as shown *on Page 6, Figure 6 through Page 7, Figure 8*. When using a U-tube configuration, the following additional rules must be adhered to:

- A minimum of 10' (3 m) on NBH-60/80 and a minimum of 15' (4.5 m) on NBH-100/115/125/140/150/175/200 is required between the burner and the U-tube.
- The correct turbulator/swirler (See Pages 24 and 25) must be installed in the last standard section of the tube.
- The burner must never be operated in a tilted position.
- The heater must be properly supported at all locations. See *Page 34, Figure 27*.

FIGURE 26: U-Tube Heater Assembly Overview

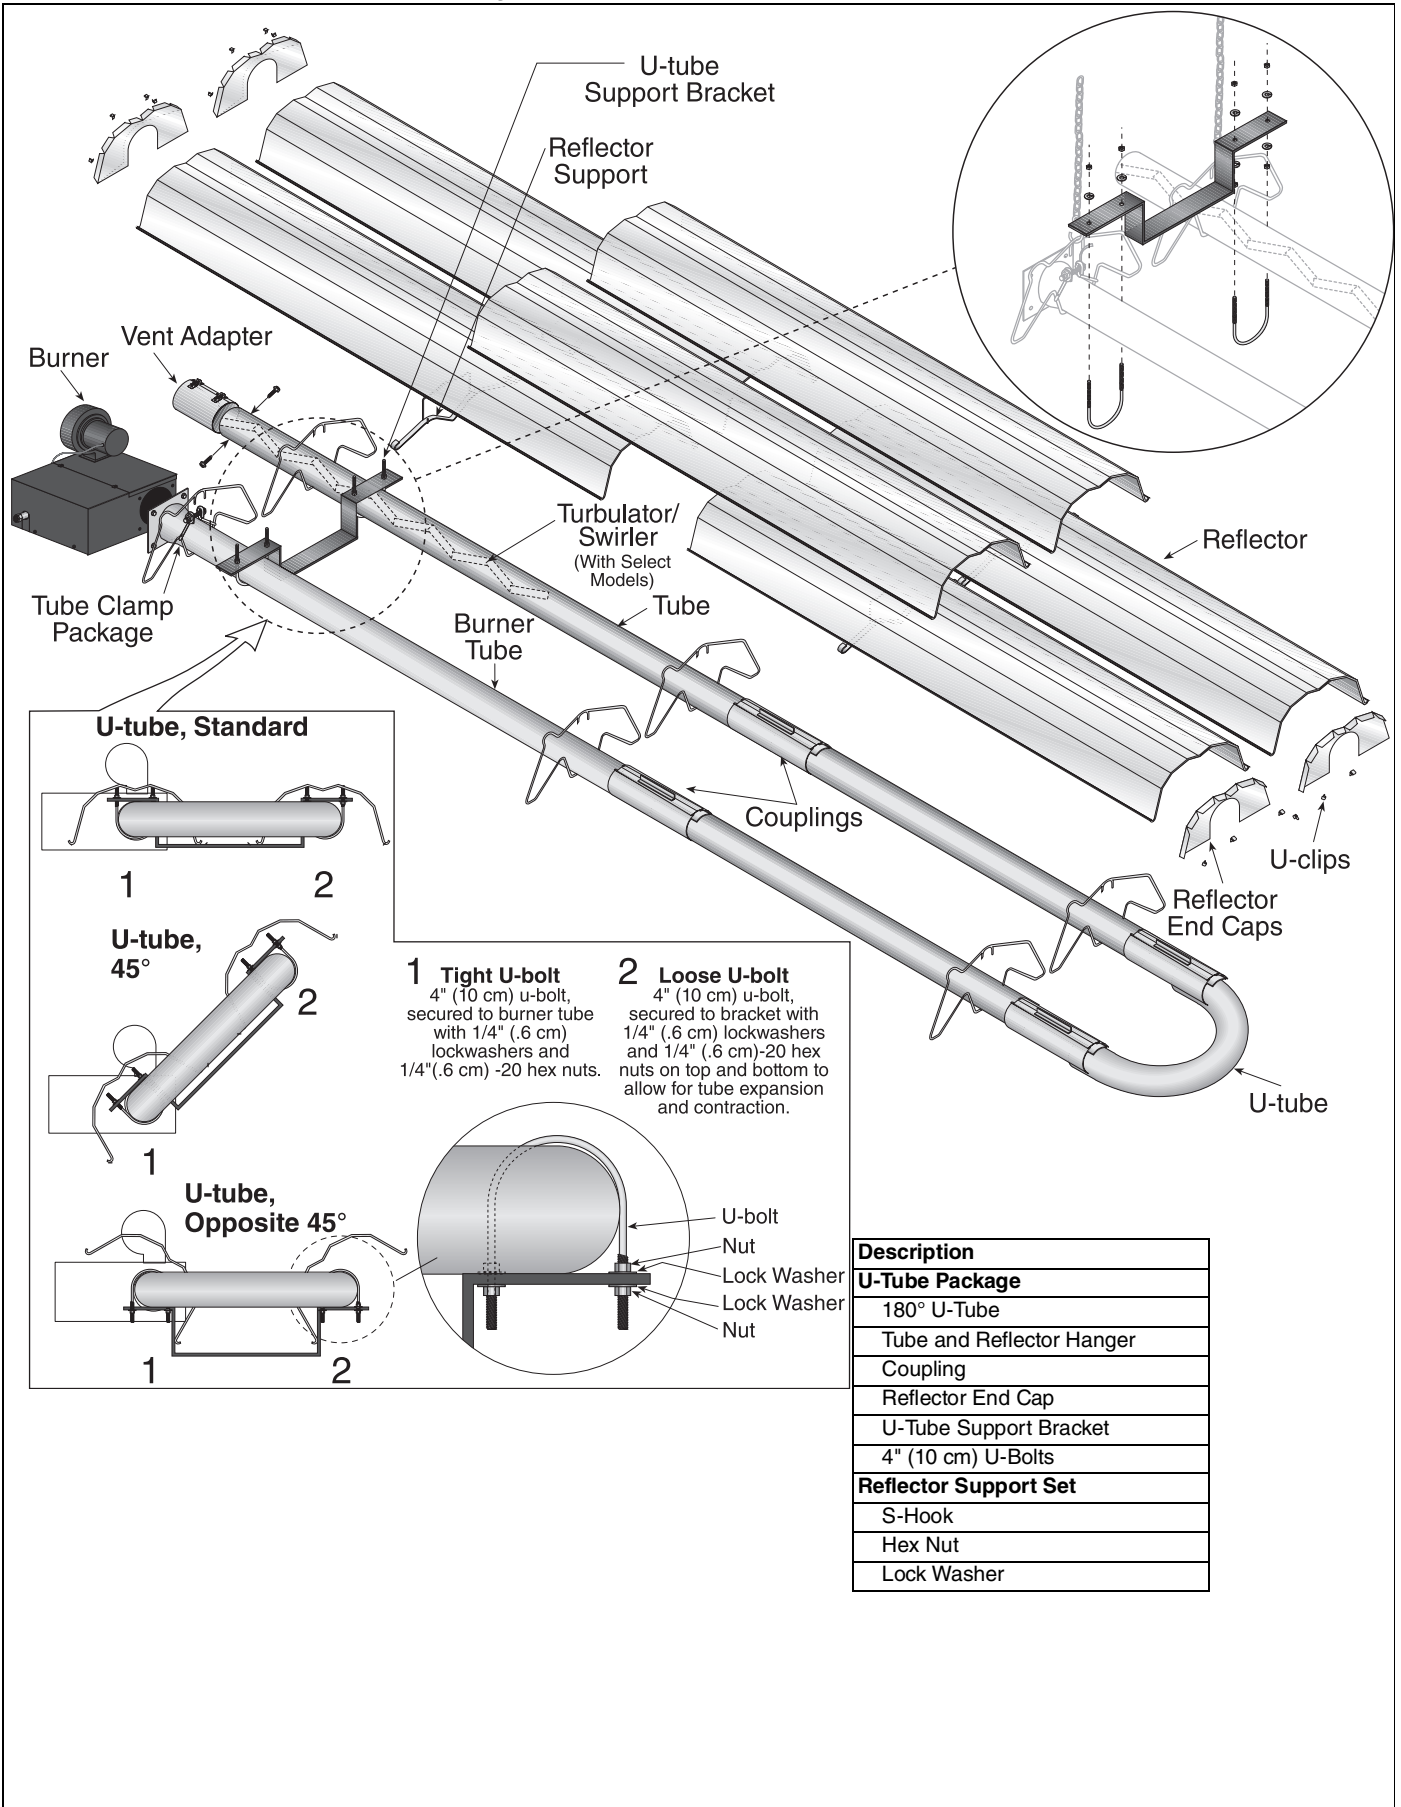










FIGURE 27: U-Tube Heater Layout Overview

LEGEND	
	Burner
	Reflector
	Tube 10' (3.0 m)
	Tube 5' (1.5 m)**
	Tube/Reflector Hanger
	Coupling Assembly
	U-tube
	Vent Adapter (Not Shown)

a = 14" (36 cm)
Reflector Width (Not Shown)

b = 2" (5 cm)
End Cap to Burner

c = 2" (5 cm)
End Cap to Hanger

d = 7' 6" (2.3 m)
Distance First Hanger

e = 10' (3.0 m)
Distance Between Hangers

f = 5' (1.5 m)
Distance Between Last Full Tube Hanger and Half Tube Hanger

g = 12.5" (32 cm) Burner Length

h = 11" (28 cm) Burner Height

* Requires the last **reflector** before the u-tube to be cut in half for use on both sides.

** Requires the last **tube** before the u-tube to be cut in half for use on both sides.






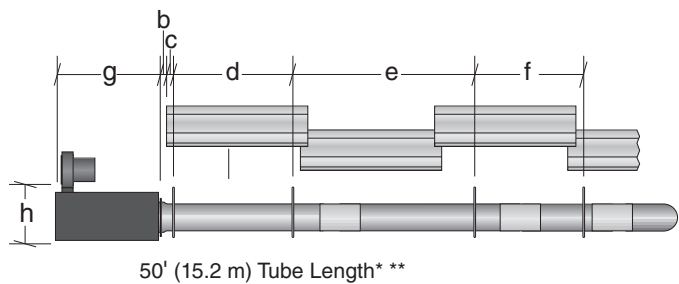


FIGURE 28: U-Tube Layout Overview (Continued)

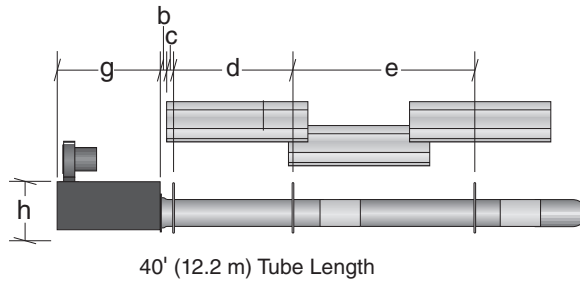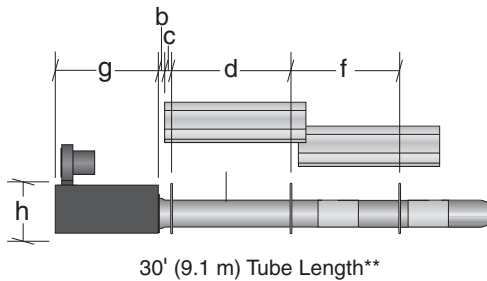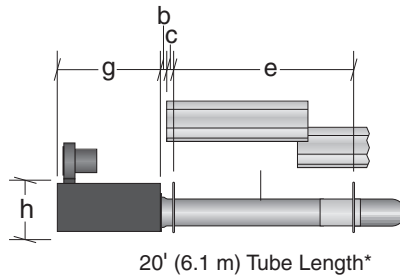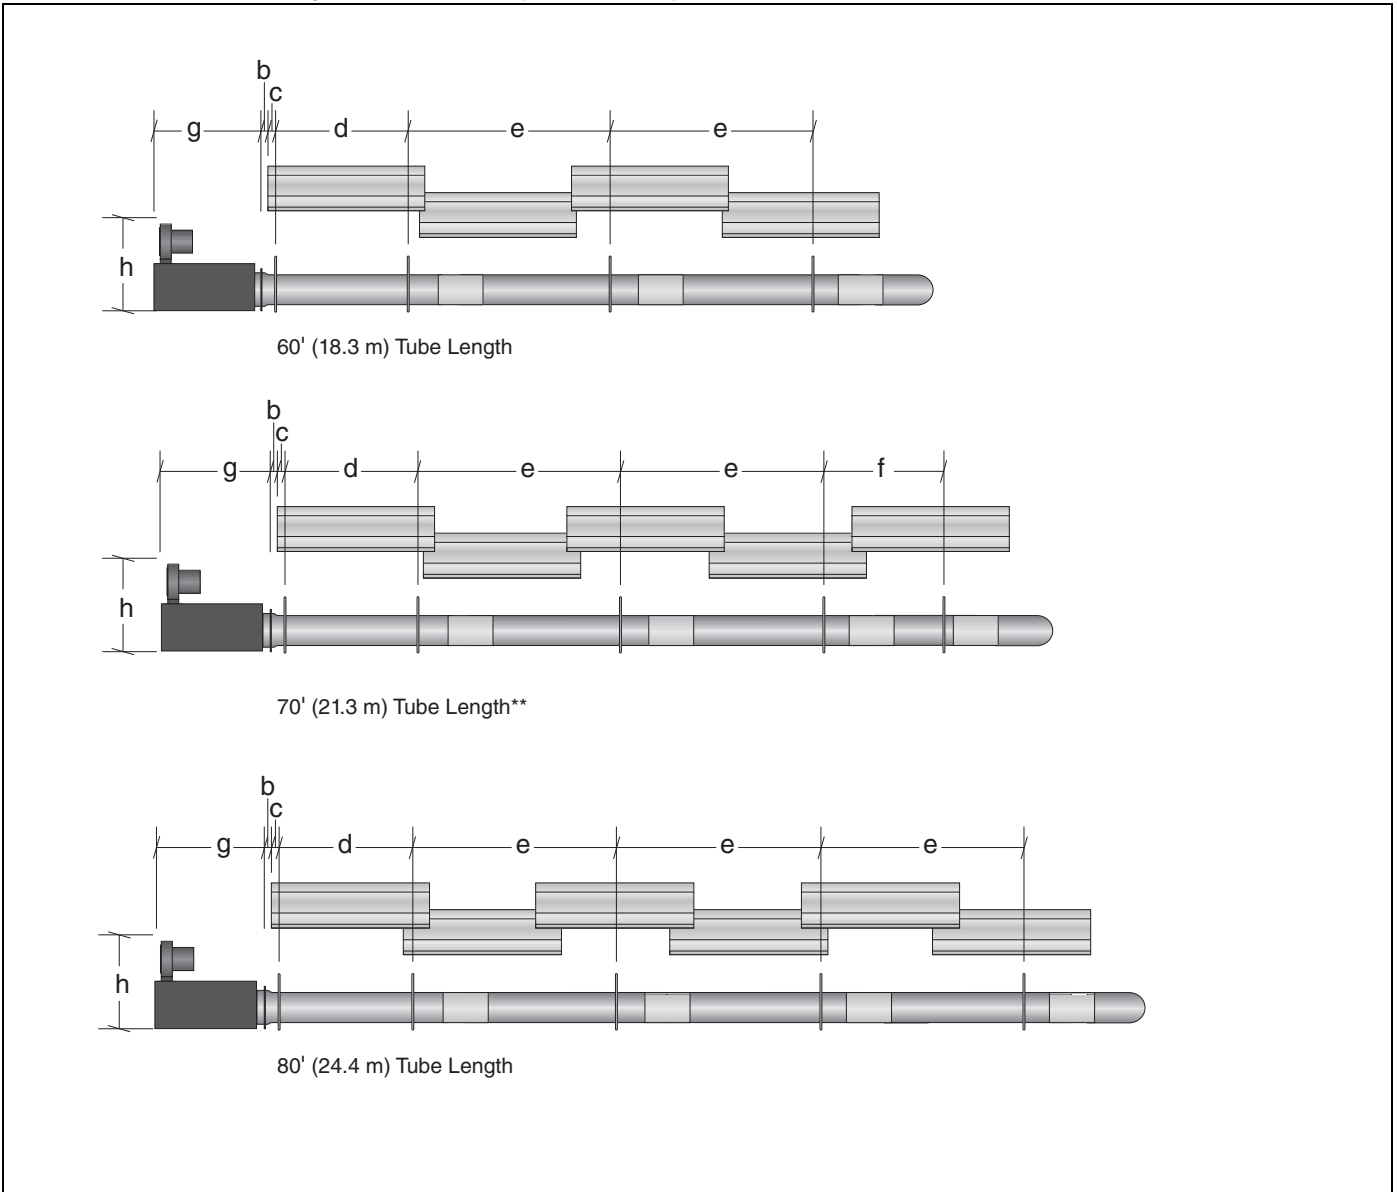


7.2 Elbow Package Configuration


Step 7.2.1 Elbow Installation

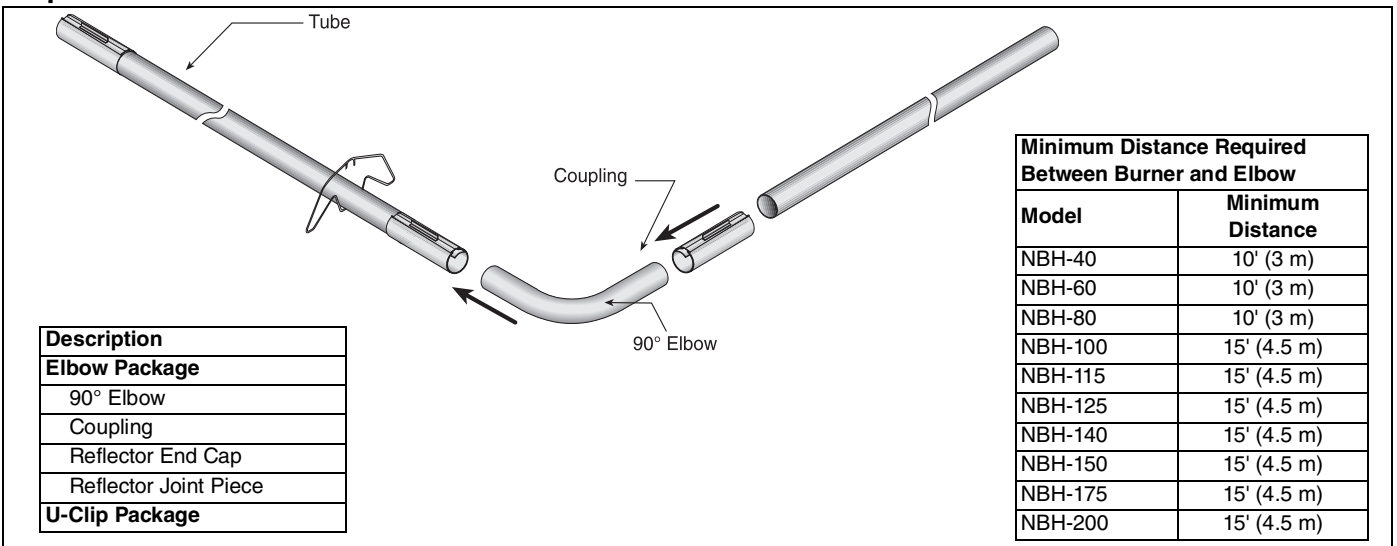


Step 7.2.2 Elbow Installation


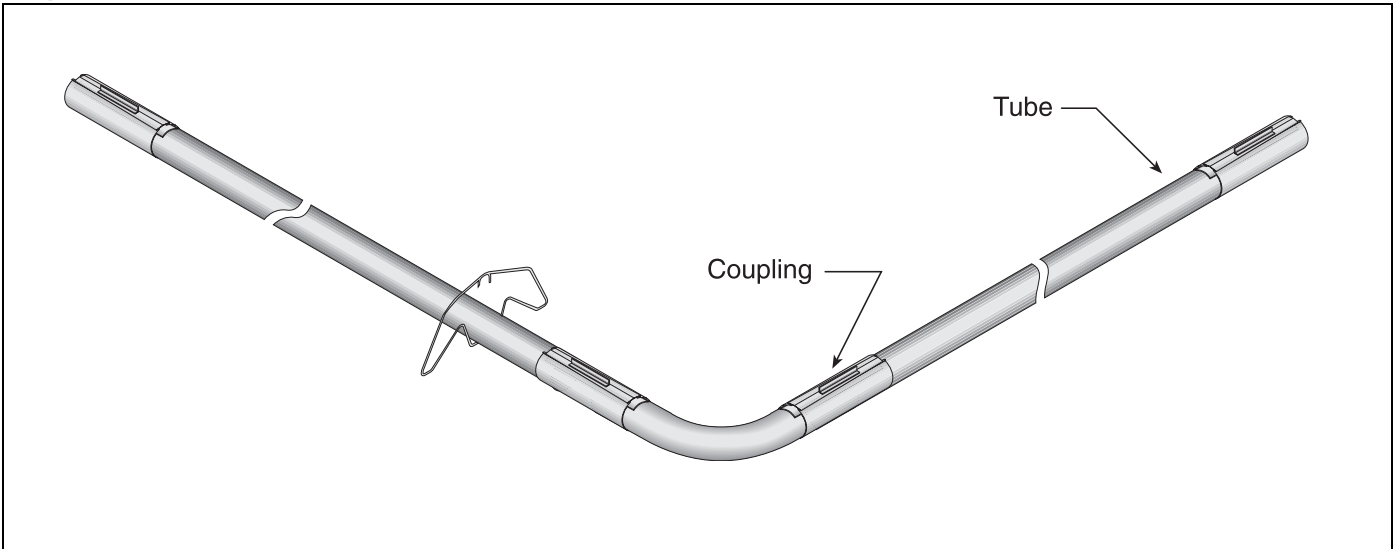


Step 7.2.3 Reflector Joint Installation

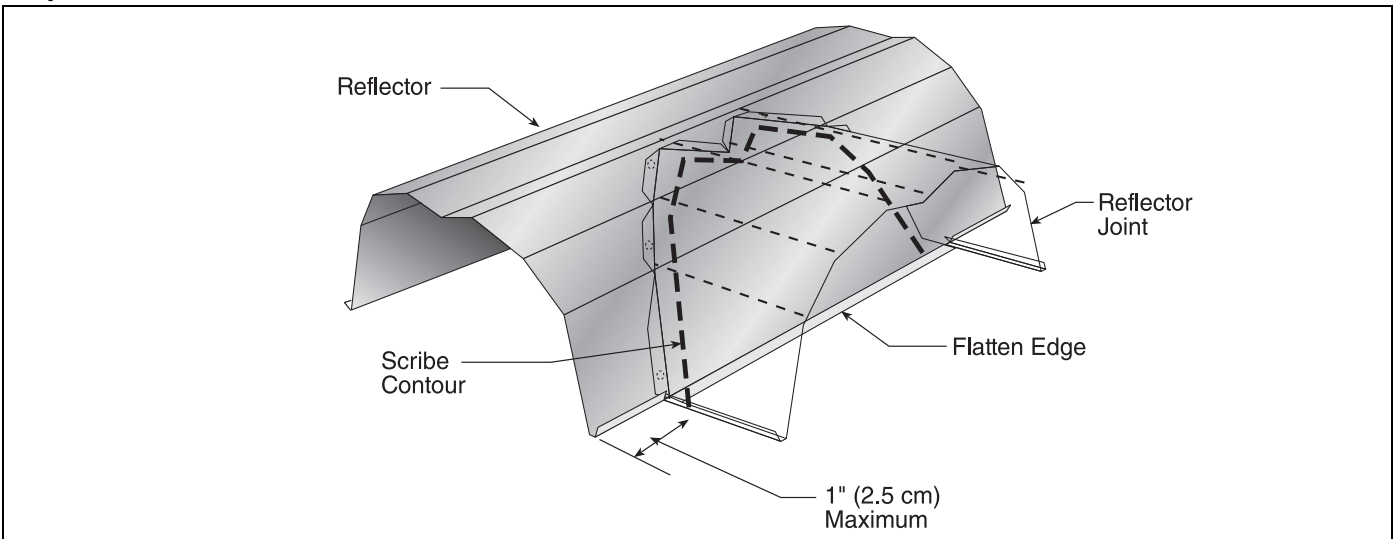


Step 7.2.4 Reflector Joint Installation

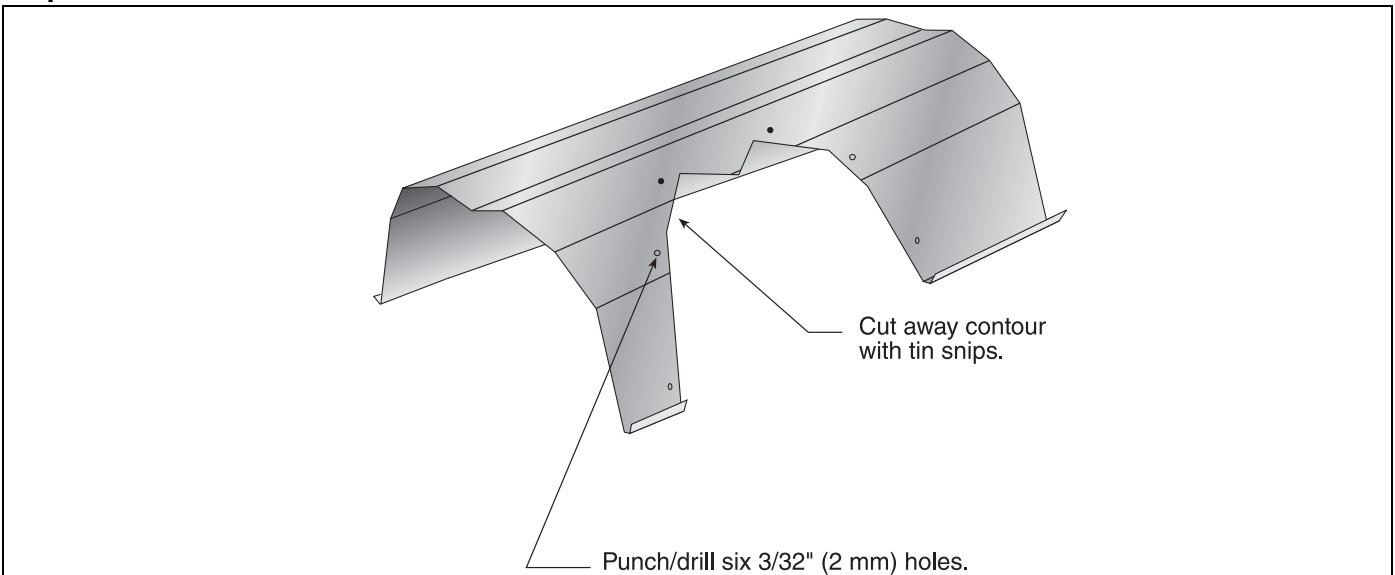

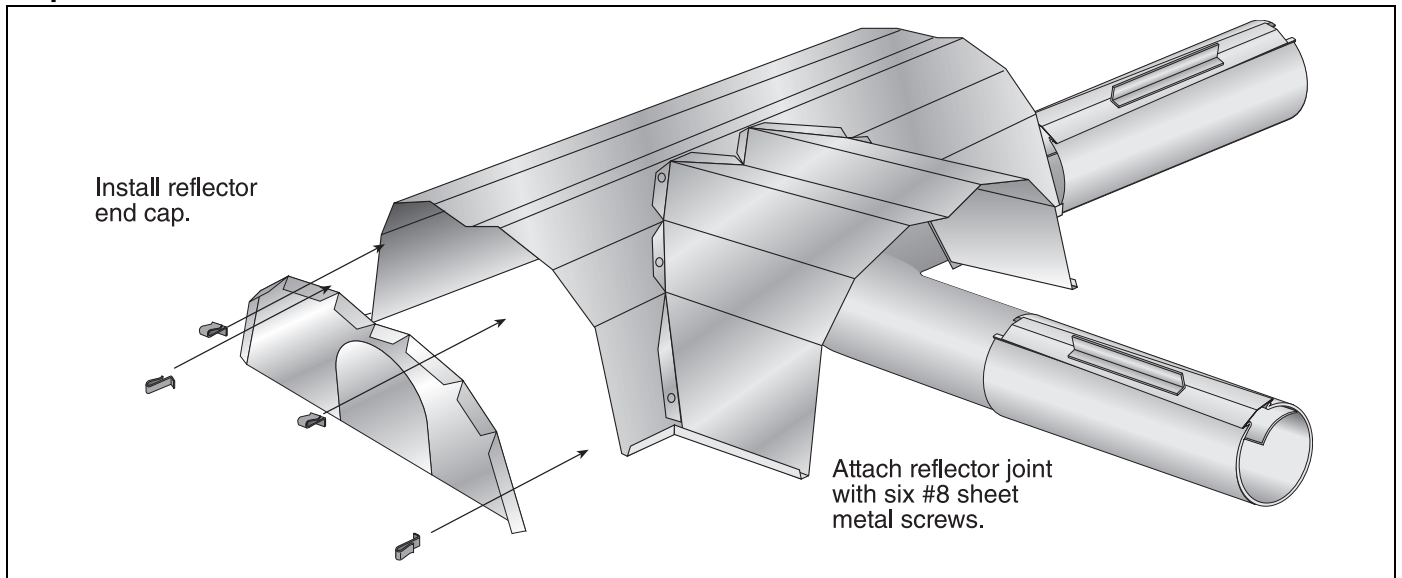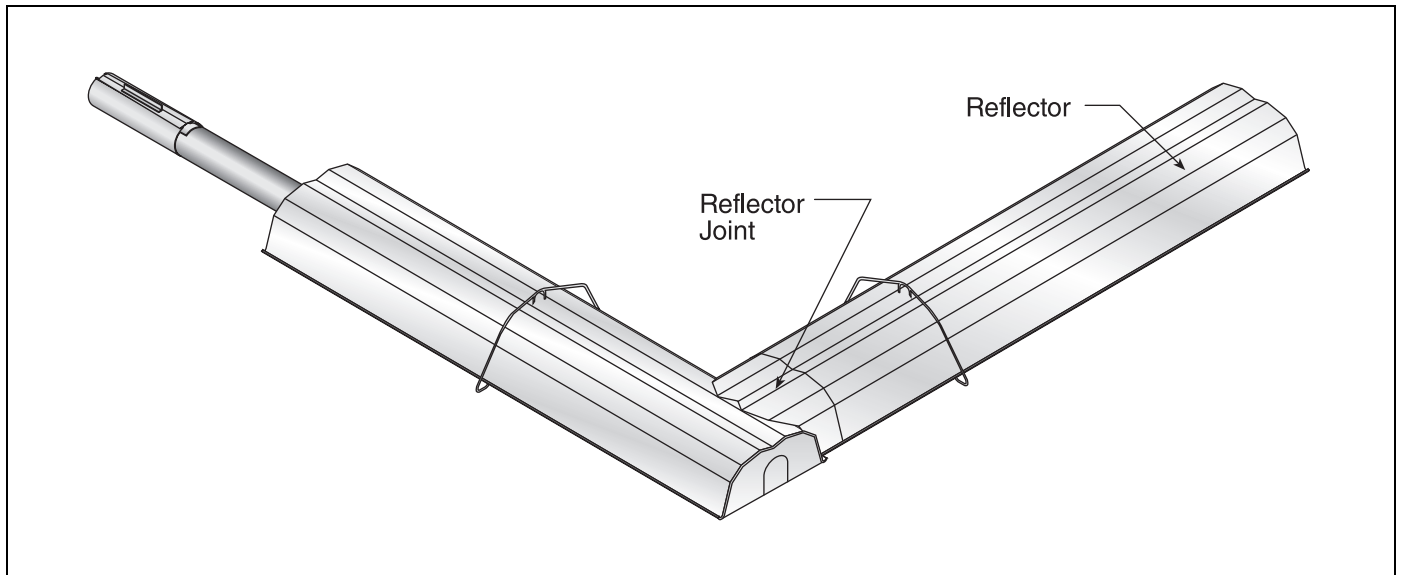
Step 7.2.5 Reflector Joint Detail**FIGURE 29: Reflector Joint Detail**

7.3 Reflector Side Extension

Step 7.3.1 Bracket Installation

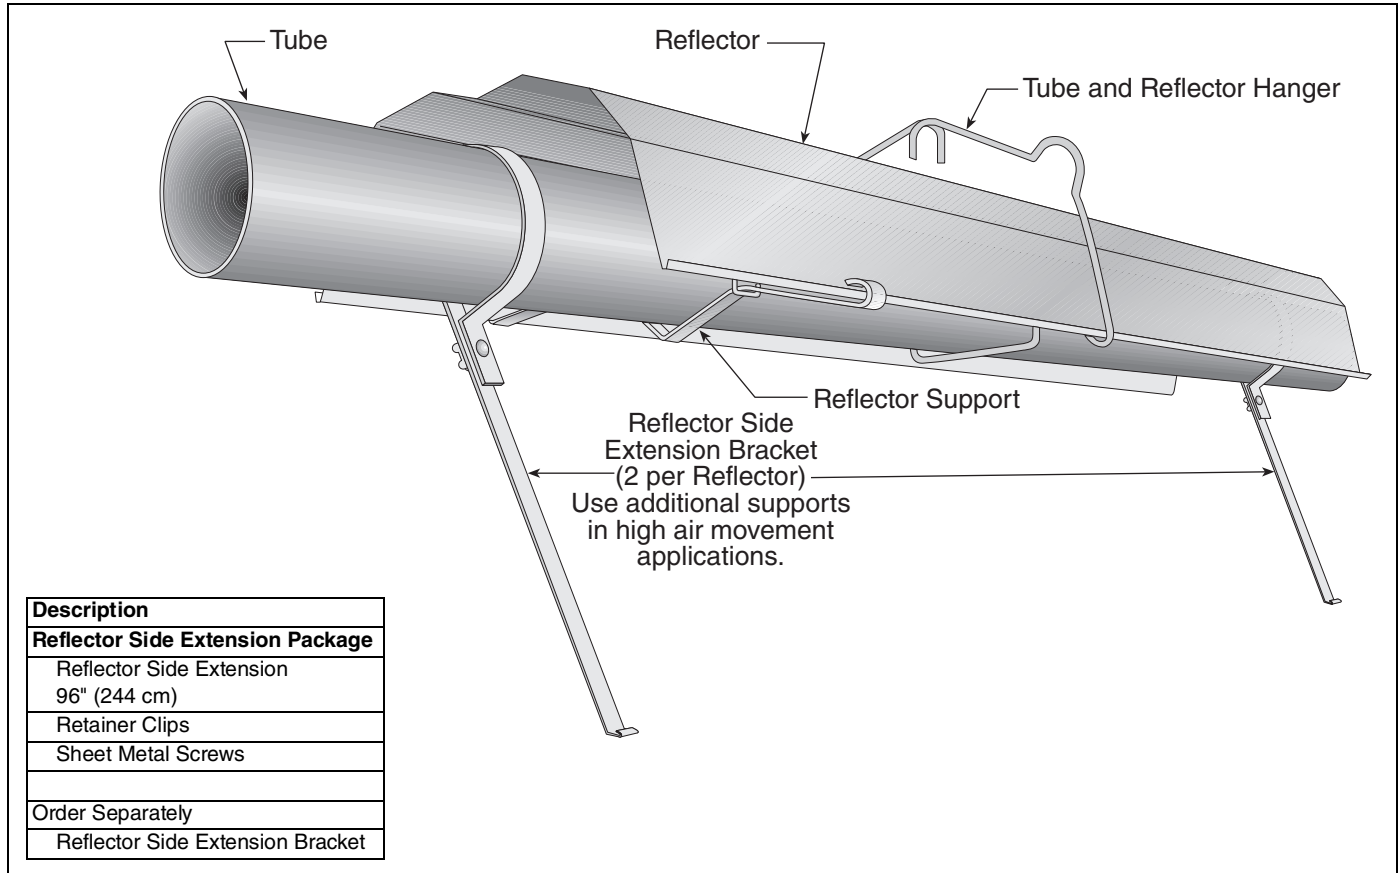


Step 7.3.2 Side Reflector Installation

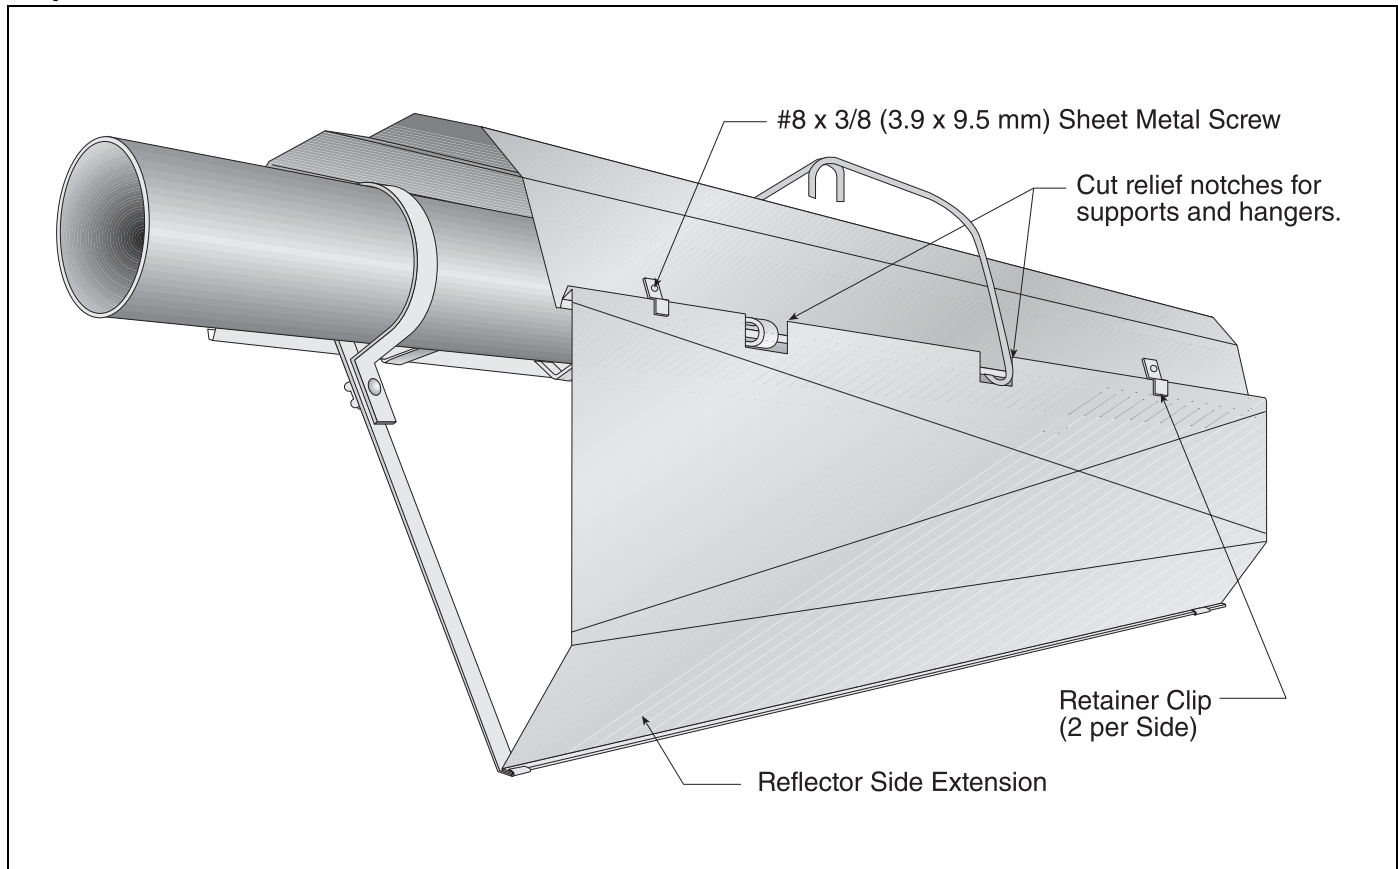


7.4 Lower Clearance Shield Installation

Step 7.4.1 Shield Support Strap Assembly

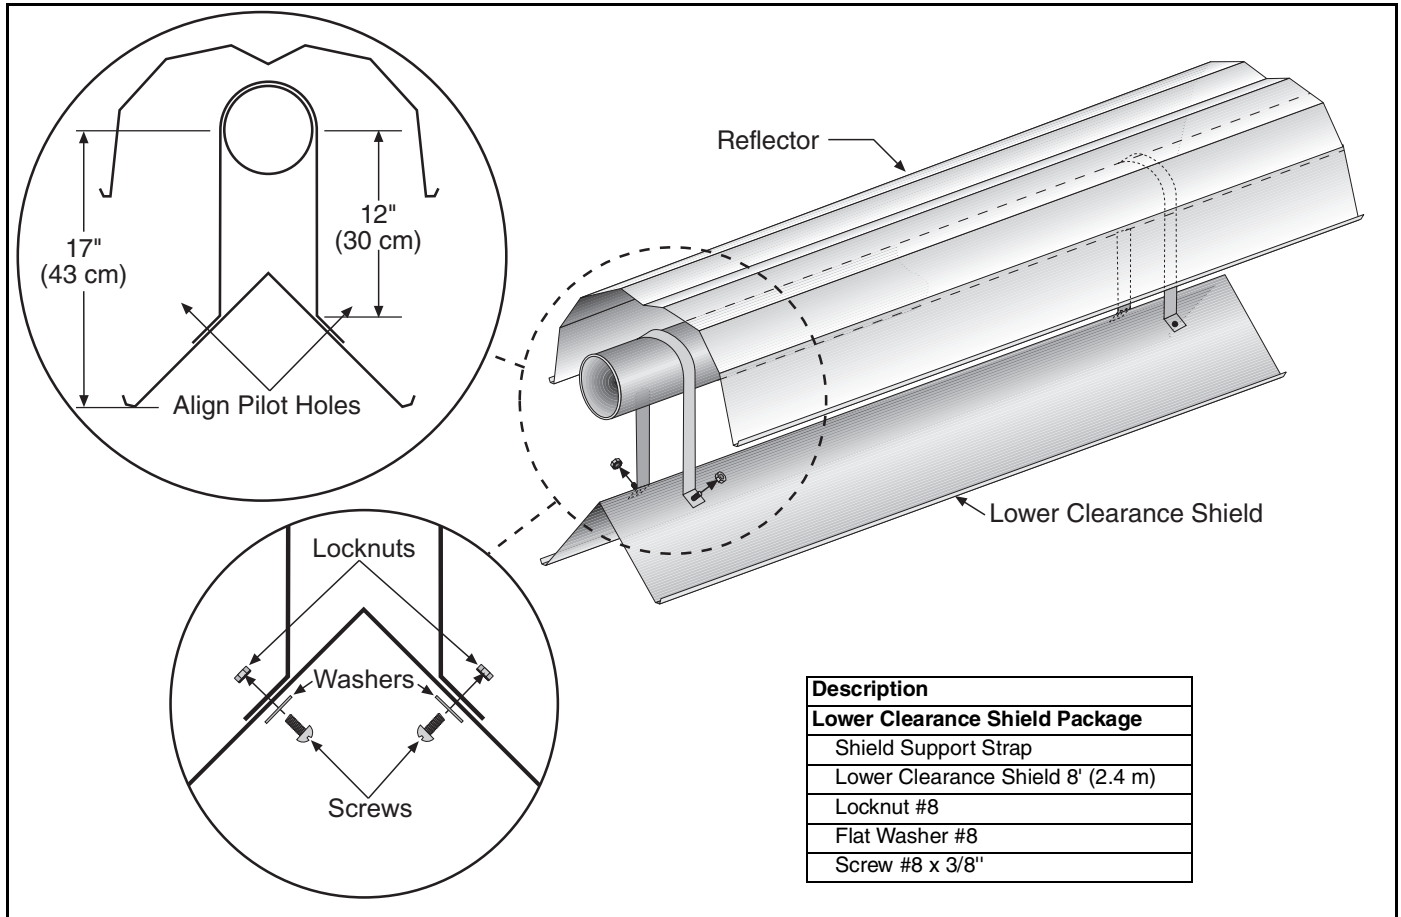


7.5 Two-Foot Decorative Grille Installation

Step 7.5.1 Grille Installation

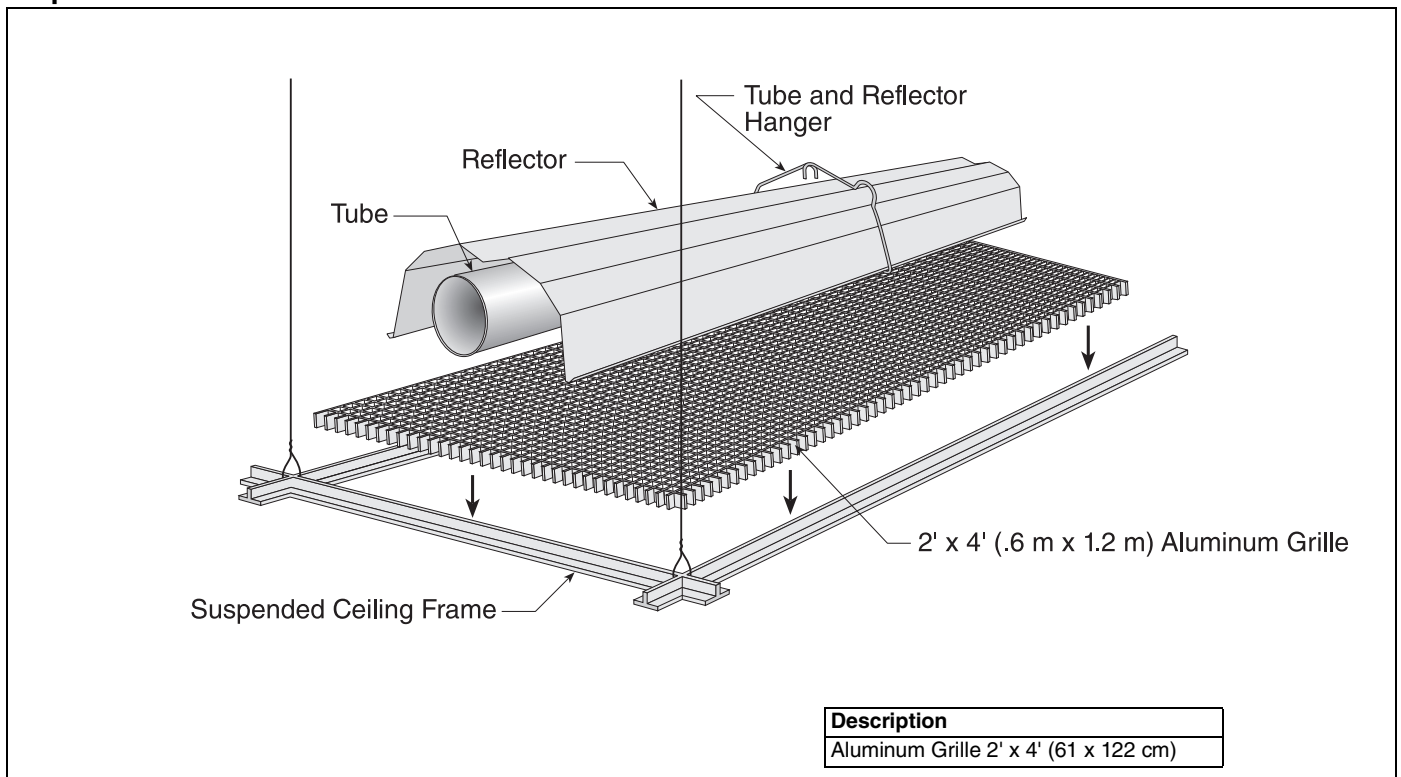


Step 7.5.2 Frame Shield Installation

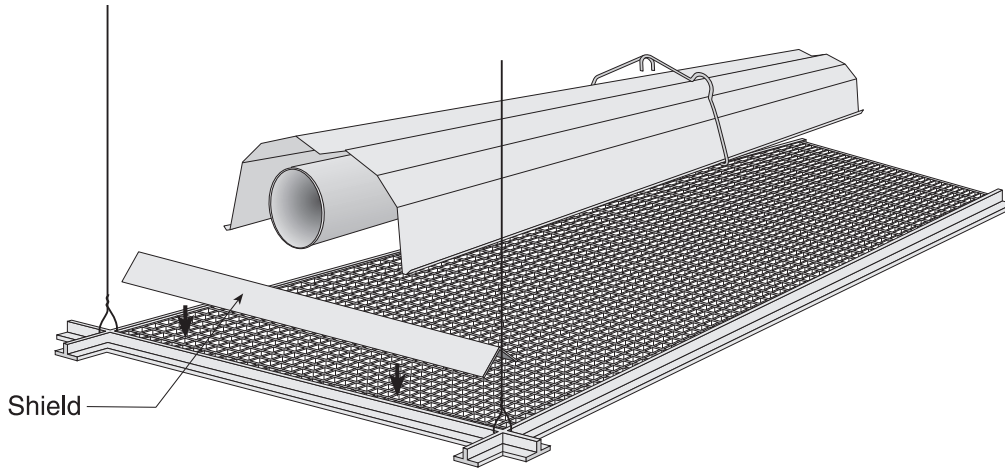

Description
Deco Grille Shield 24" (61 cm)

Step 7.5.3 Reflector Side Extension Installation for Decorative Grilles

NOTE: If the decorative grille system is to be installed in an area with considerable air movement, it is recommended that one #8 x 3/8" sheet metal screw be installed per reflector extension to prevent it from blowing over.

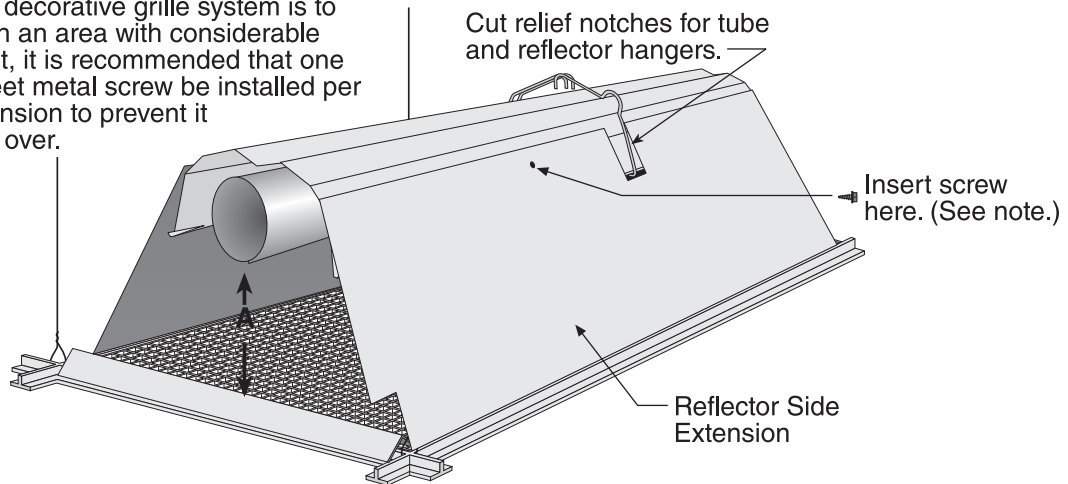


Distance "A"		Extension	
Minimum	Maximum	Part No.	Width
2" (4 cm)	6" (15 cm)	013704XX	8" (20 cm)
6" (15 cm)	10" (26 cm)	013704XX	12" (30 cm)
10" (26 cm)	14" (37 cm)	013704XX	16" (40 cm)

Description
Reflector Side Extension 48" (122 cm)

7.6 Protective Grille Installation


Step 7.6.1 Silicone Cap Installation

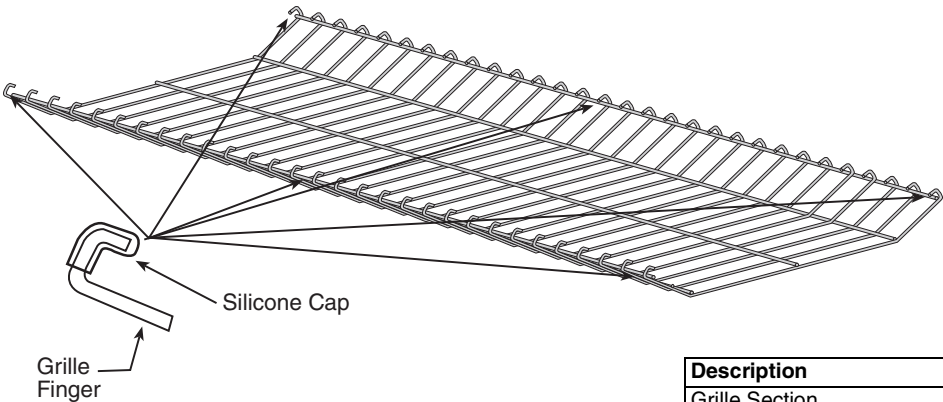

NOTE: Protective Grille NOT APPROVED for use with 45° tilted reflectors.

Description
Grille Section
Grille Section - EF Reflector
Grille End Cap
Grille End Cap - EF Reflector
Silicone Cap

Step 7.6.2 Grille End Cap Installation

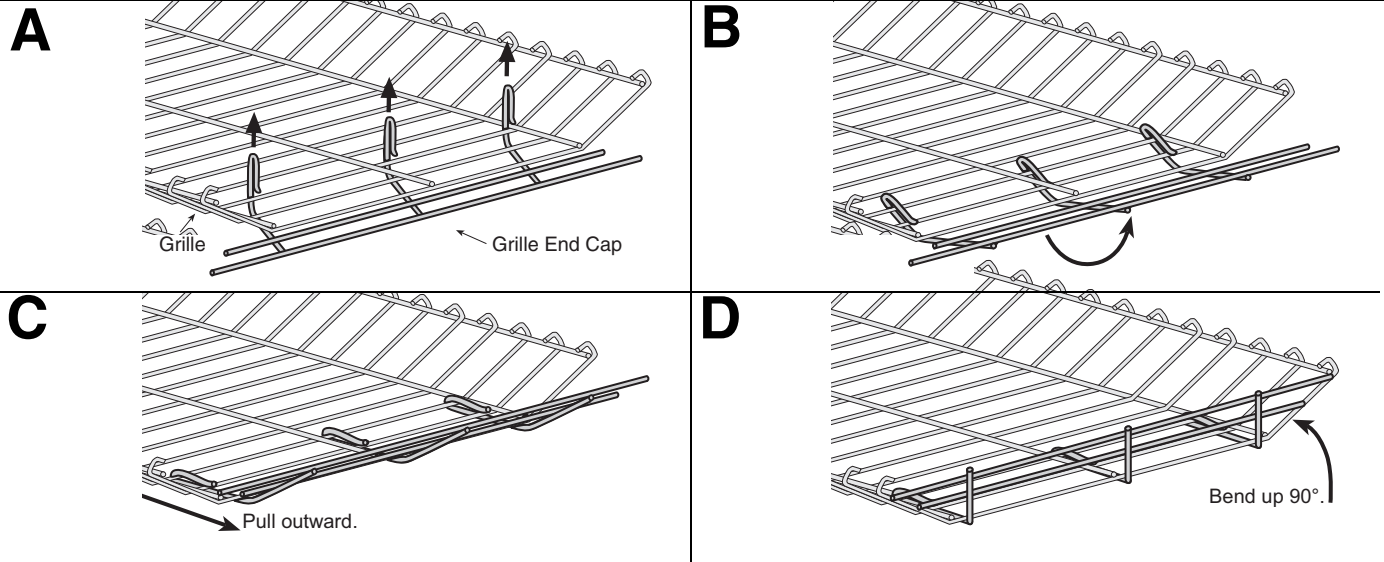


A Grille Grille End Cap

B

C Pull outward.

D Bend up 90°.

Step 7.6.3 Grille Installation

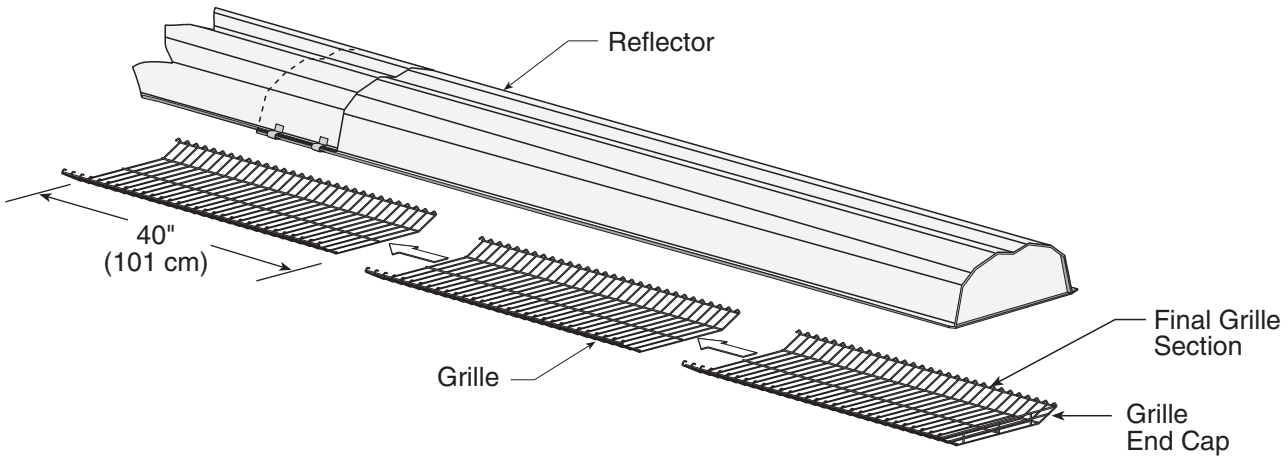

Reflector

40" (101 cm)

Grille

Final Grille Section

Grille End Cap

SECTION 8: VENTING**⚠ WARNING****Carbon Monoxide Hazard**

Heaters installed unvented must be interlocked with sufficient building exhaust.

Heaters must be installed according to the installation manual.

Failure to follow these instructions can result in death or injury.

⚠ WARNING**Cut/Pinch Hazard**

Wear protective gear during installation, operation and service.

Edges are sharp.

Failure to follow these instructions can result in injury.

8.1 Venting

This heater is considered a Category I or Category III vented appliance. The Serial plate on the heater will indicate vent Category and this manual will describe the installation requirements for each vent Category.

This heater must be vented in accordance with the rules contained in this manual and with the following national codes and any state, provincial or local codes which may apply:

United States: Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

Exhaust end of heater will accept a 4" (10 cm) vent

pipe using the vent adapter (P/N 90502701). To prevent leakage of condensation, install the vent adapter with the seam on top and seal the joint using a high temperature silicone sealant.

Maintain a minimum of 6" (15 cm) clearance around all single wall flue pipe.

Any portion of vent pipe passing through a combustible wall must have an approved thimble to conform with the above listed codes.

Vent pipe must be sloped downward away from the heater 1/2" (1 cm) for every 20' (6 m).

The heater may be individually vented or common vented. When venting horizontally, a maximum of two heaters can be commonly vented. See *Page 48, Section 8.13*. When venting vertically, a maximum of four heaters can be commonly vented. See *Page 49, Section 8.14*.

The heater may also be installed unvented in certain circumstances according to building ventilation codes. Refer to the above codes and *Page 43, Section 8.2* for further information. Unvented operation also requires compliance with the clearances to combustibles given on *Page 8, Figure 11*.

The bottom of the vent or air intake terminal shall not be located less than 1' (0.3 m) above grade level.

The vent shall not terminate less than 7' (2.1 m) above grade where located adjacent to public walkways.

Vent terminal must be installed at a height sufficient to prevent blockage by snow, and building materials protected from degradation by flue gases.

Secure all joints with #8 x 3/8 sheet metal screws. Seal all joints with high temperature silicone sealant.

Vent terminal must be beyond any combustible overhang.

8.1.1 United States Requirements

Vent must terminate at least 3' (0.9 m) above any forced air inlet located within 10' (3.1 m).

Vent must terminate at least 4' (1.2 m) below, 4' (1.2 m) horizontally from, or 1' (0.3 m) above any door, operable window, or gravity air inlet into any building.

Canadian Requirements

The vent shall not terminate within 6' (1.8 m) of a mechanical air supply inlet to any building.

The vent shall not terminate within 3' (0.9 m) of a window or door that can be opened in any building, any non-mechanical air supply inlet to any building, or of the combustion air inlet of any other appliance.

8.1.2 Vent Category Definitions

Radiant tube heaters are divided into four categories based on the static pressure produced in the vent and the percentage flue loss.

Category I – a radiant tube heater that operates with a non-positive vent static pressure and with a vent gas temperature that avoids excessive condensate production in the vent

Category II – a radiant tube heater that operates with a non-positive vent static pressure and with a vent gas temperature that can cause excessive condensate production in the vent

Category III - a radiant tube heater that operates with a positive vent static pressure and with a vent gas temperature that avoids excessive condensate production in the vent

Category IV - a radiant tube heater that operates with a positive vent static pressure and with a vent gas temperature that can cause excessive condensate production in the vent

This heater is considered a Category I or Category III vented appliance. The Serial plate on the heater will indicate vent Category and this manual will describe the installation requirements for each vent Category.

8.2 Unvented Operation

Sufficient ventilation must be provided in the amount of 4 cfm per 1000 Btu/h firing rate (United States); 3 cfm per 1000 Btu/h firing rate (Canada).

Use of optional outside combustion air is not recommended with unvented heaters.

If exhaust fans are used to supply ventilation air, an interlock switch must be used to prevent the heater from coming on when the fans are off. This may be done using a pressure switch.

8.3 Horizontal Venting (Category III)

All horizontal venting configurations for this product are considered Category III.

In noncombustible walls only, vent terminal (P/N 02537801-1P) may be used.

For 4" (10 cm) vents in either combustible or noncombustible walls, use Tjernlund VH1-4 (P/N 90502100) or equivalent, insulated vent terminal. Follow the manufacturer's instructions for proper installation.

For 6" (15 cm) common vents in either combustible or noncombustible walls, use Tjernlund VH1-6 (P/N 90502101) or equivalent, insulated vent terminal.

Approved venting material for horizontal venting (Category III) must be single-wall corrosion resistant with a thickness of no less than 24 gauge. It is required that all vent pipes and connectors be fastened together with sheet metal screws and sealed with high temperature silicone sealant approved for at least 550 °F (288 °C) (supplied by others). The installer must perform a leak test on the complete venting system. A solution of soap and water should be used to test the venting system.

A continuous section of type B-vent may only be used to pass through the outside wall or outside of the building. Horizontal venting (Category III) does not allow the use of type B-vent inside of the space.

Follow the vent material manufacturer's instructions for proper installation.

8.4 Vertical Venting (Category III)

For 4" (10 cm) common or single heater vent, an approved vent cap (P/N 90502300) must be used.

For 6" (15 cm) common vent, an approved vent cap (P/N 90502302) must be used.

Approved venting material for vertical venting (Category III) must be single-wall corrosion resistant with a thickness of no less than 24 gauge. It is required that all vent pipes and connectors be fastened together with sheet metal screws and sealed with high temperature silicone sealant approved for at least 550 °F (288 °C) (supplied by others). The installer must perform a leak test on the complete venting system. A solution of soap and water should be used to test the venting system.

A continuous section of type B-vent may only be used to pass through the roof or outside of the building. Vertical venting (Category III) does not allow the use of type B-vent inside of the space.

For common vertical venting of more than two heaters, See Page 49, Section 8.14.

A vent shall not extend less than 2' (0.6m) above the highest point where it passes through a flat roof of a building.

Note: Vertical venting will be classified as a Category III if the length of the horizontal portion of the vent pipe is greater than 75% of the vertical portion of the vent pipe. (Example: If vertical vent section of the vent is 10' (3 m) long, the horizontal section of the vent is greater than 7' 6" (2.3 m) long.)

8.5 Vertical Venting (Category I) 4" (10 cm) Pipe

For Category I vertical venting guidance, refer to the National Fuel Gas Code (ANSI Z 223.1 , NFPA 54) in the USA and CSA B149.1 code in Canada. Some rules that are applicable are listed below:

- A category I vent system is not required to be “gas tight” as the pressure inside the vertical vent system is a negative pressure.
- Type B vent material is acceptable for use in the vertical venting configuration (See Page 47, Figure 8.12).
- The length of the horizontal portion of the vent pipe must be less than 75% of the vertical portion of the vent pipe. (Example: If vertical vent section of the vent is 10' (3 m) long, the horizontal section of the vent must not exceed 7' 6" (2.3 m) long.)
- Horizontal portion of the vent pipe can be double wall vent type-B or single-wall pipe type-C and have an upward slope from the heater of at least 1/4" (.632 cm) per foot. When using type B-vent on horizontal section, use B to C adapter (supplied by others) and attach to end of heater tube in place of supplied vent adapter.
- The vertical vent must terminate at least 5 ft (1.5 m) above the vent connection to the unit.

Note: Horizontal Venting (Category I) is not a possible configuration with this product. Common vertical venting (Category I) is not a possible configuration with this product.

8.6 Venting Category Designation by Model

	Single Heater Horizontal Venting Category	Single Heater Vertical Venting Category*	Common Venting Category (for both Vertical and Horizontal)
Model	III	I	III
NBH-40	III	I	III
NBH-60	III	I	III
NBH-80	III	III	III
NBH-100	III	III	III
NBH-115	III	III	III
NBH-125	III	III	III
NBH-140	III	III	III
NBH-150	III	III	III
NBH-175	III	III	III
NBH-200	III	III	III


* Vertical venting will be classified as a Category III if the length of the horizontal portion of vent pipe is greater than 75% of the vertical portion of vent pipe. (Example: If vertical vent section of vent is 10' (3 m) long, the horizontal section of vent is greater than 7' 6" (2.3 m) long.)

8.7 Unvented Operation Tube Termination

Turndown type vent terminal with a screen must be installed at the exhaust end of the tube. Vent terminal design shall not incorporate backdraft flap.

tubing (P/N 91409408), and 6" (15 cm) O.D. Heat treated aluminized tubing (P/N E0009105) are equivalent to single wall corrosion resistant flue pipe.

FIGURE 30: Tube Termination

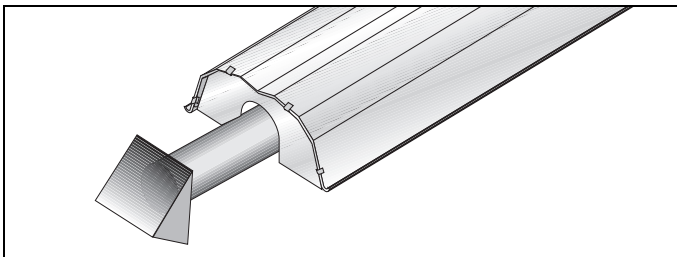

8.8 Length Requirements

Minimum vent length allowed is 2' (.6 m). Maximum vent length allowed is 45' (13.7 m). Maximum outside air supply duct length allowed is 45' (13.7 m).

The total vent length, plus outside air duct length, plus any extensions to minimum heat exchanger lengths, cannot exceed 65' (19.8 m).

Vent length should be limited to less than 20' (6 m). If using vent lengths greater than 20' (6 m), condensation will form in the vent pipe. Insulation and additional sealing measures (high temperature silicone at all seams) are required. Optional heat exchanger beyond minimum lengths is considered as vent length for length determination.

Subtract 15' (4.6 m) of maximum allowed vent or duct length per vent elbow if more than two are used.

8.9 Vent Material Recommendations

Vent recommendations:


1. Porcelain coated tubing 4" (10 cm) O.D. (P/N 9141030D)
2. Heat treated aluminized tubing 4" (10 cm) O.D. (P/N 91409408)
Heat treated aluminized tubing 6" (15 cm) O.D. (P/N E0009105)
3. Single wall pipe (Type-C) that is corrosion resistant galvanized steel - minimum 24 ga. (Supplied by others)
4. Double wall vent (Type-B). For Category I venting only or used as a continuous section passing through the outside wall, roof or outside of the building.

NOTE: 4" (10 cm) O.D. Porcelain coated tubing (P/N 914030D), 4" (10 cm) O.D. Heat treated aluminized

8.10 Horizontal Venting (Category III) 4" (10 cm) Pipe

Note: A continuous section of type B-vent may only be used to pass through the outside wall or outside of the building. Horizontal venting (Category III) does not allow the use of type B-vent inside of the space.


SIDE VIEW

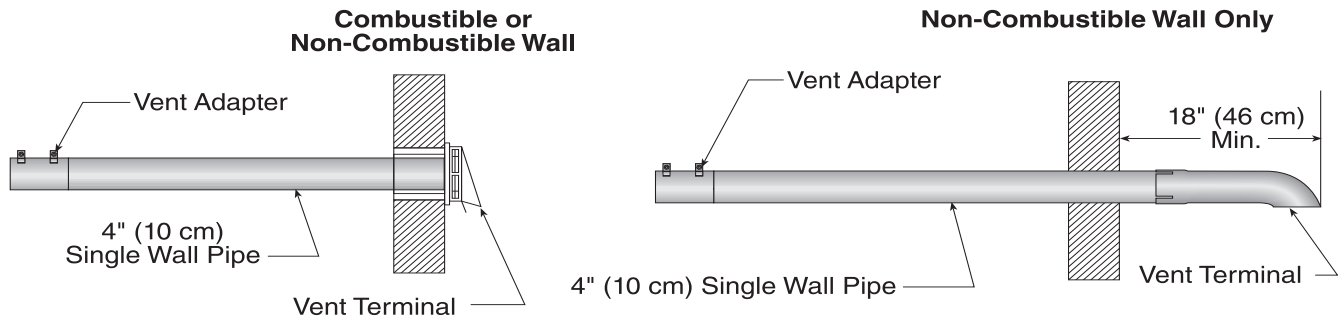

8.11 Vertical Venting (Category III) 4" (10 cm) Pipe

Note: A continuous section of type B-vent may only be used to pass through the roof or outside of the building. Vertical venting (Category III) does not allow the use of type B-vent inside of the space.

SIDE VIEW

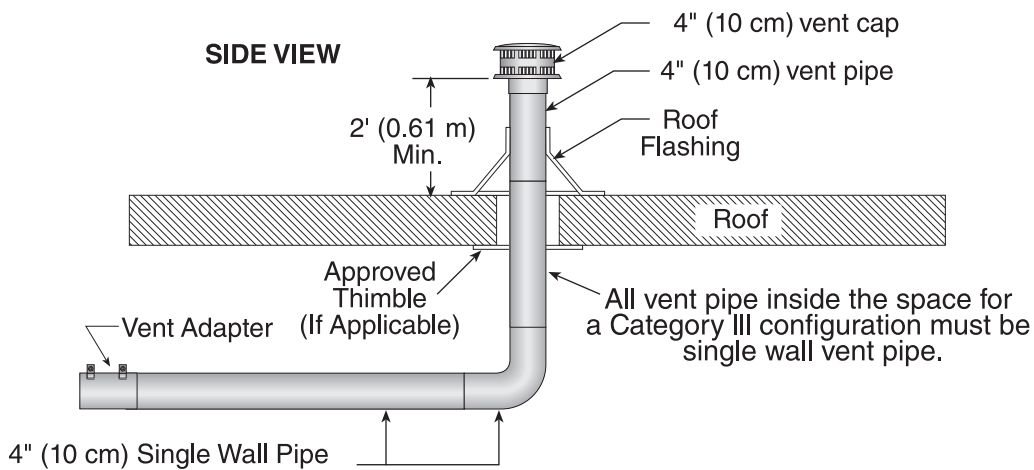


NOTE:

It is required that all vent pipes and connectors be fastened together with sheet metal screws and sealed with high temperature silicone sealant approved for at least 550 °F (288 °C) (supplied by others). The installer must perform a leak test on the complete venting system. A solution of soap and water should be used to test the venting system.

8.12 Vertical Venting (Category I) 4" (10 cm) Pipe


Note: With the exception of the Metalbestos vent cap, all vent material is supplied by others.

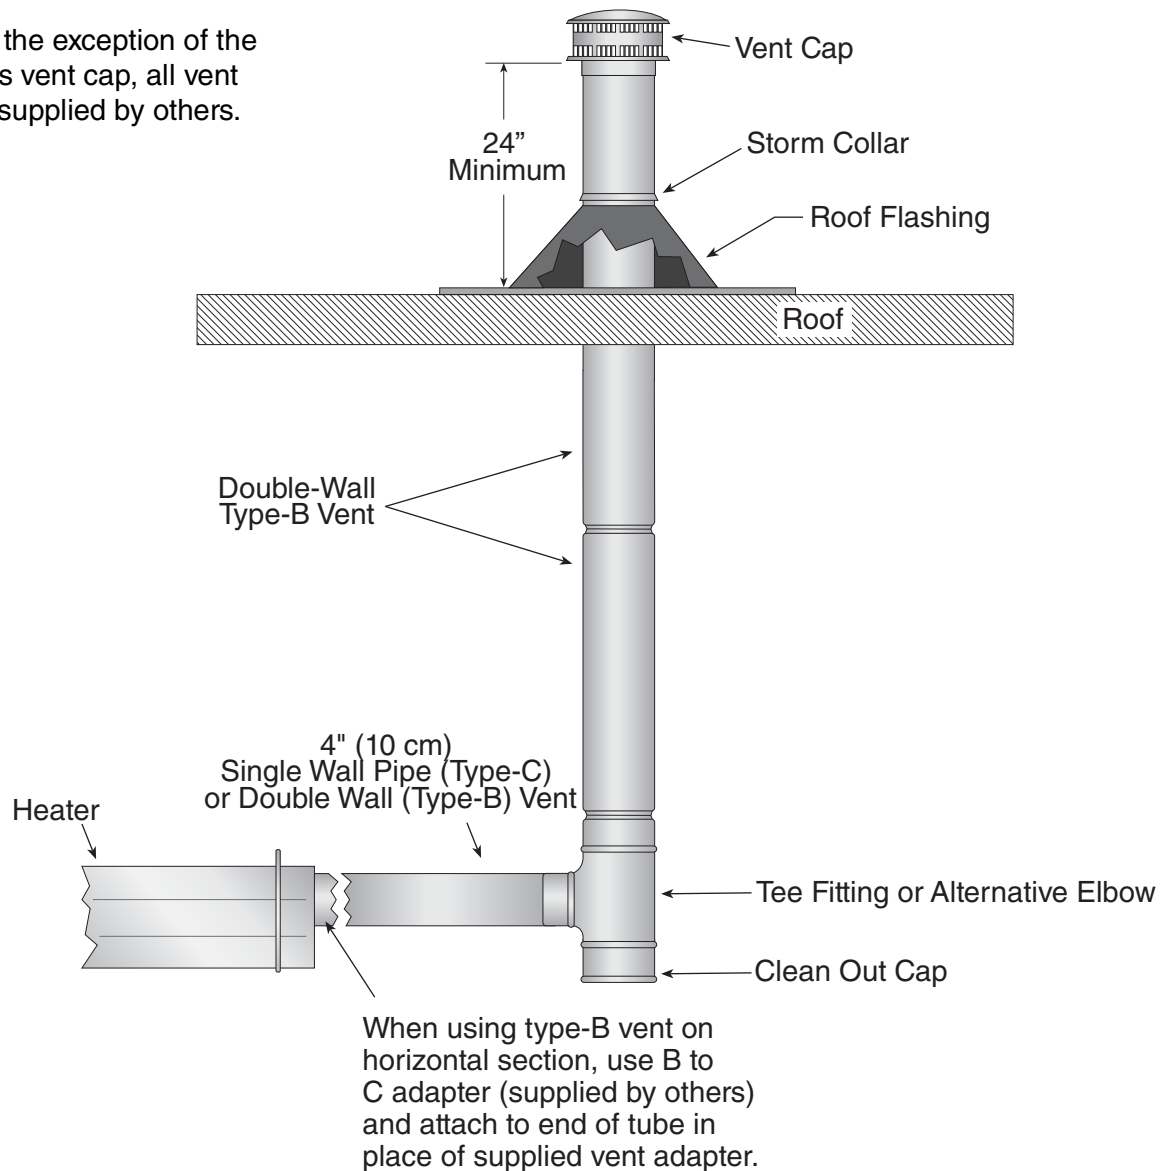

NOTE: It is not required for the contractor to perform a leak test for vertical venting (Category I) configurations.

8.13 Common Side Wall Horizontal Venting (Category III)

Note: A continuous section of type B-vent may only be used to pass through the outside wall or outside of the building. Horizontal venting (Category III) does not allow the use of type B-vent inside of the space.

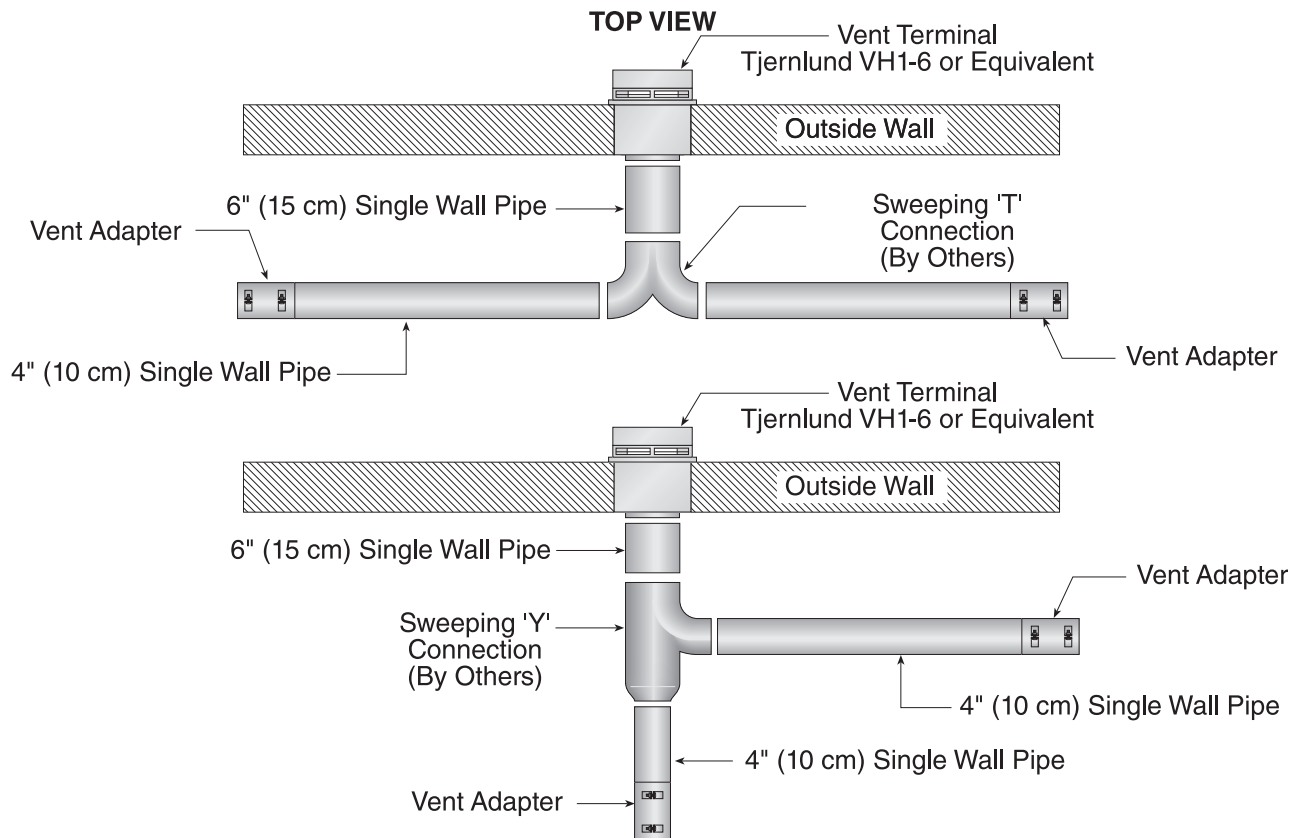

Requirements:

- Maximum of two heaters can be commonly vented through a side wall.
- Heaters must be of the same BTU output.
- Heaters must be controlled by a common thermostat.

NOTE:


It is required that all vent pipes and connectors be fastened together with sheet metal screws and sealed with high temperature silicone sealant approved for at least 550 °F (288 °C) (supplied by others).

The installer must perform a leak test on the complete venting system. A solution of soap and water should be used to test the venting system.


8.14 Common Vertical Venting (Category III)

Note: A continuous section of type B-vent may only be used to pass through the roof or outside of the building. Vertical venting (Category III) does not allow the use of type B-vent inside of the space.

SIDE VIEW

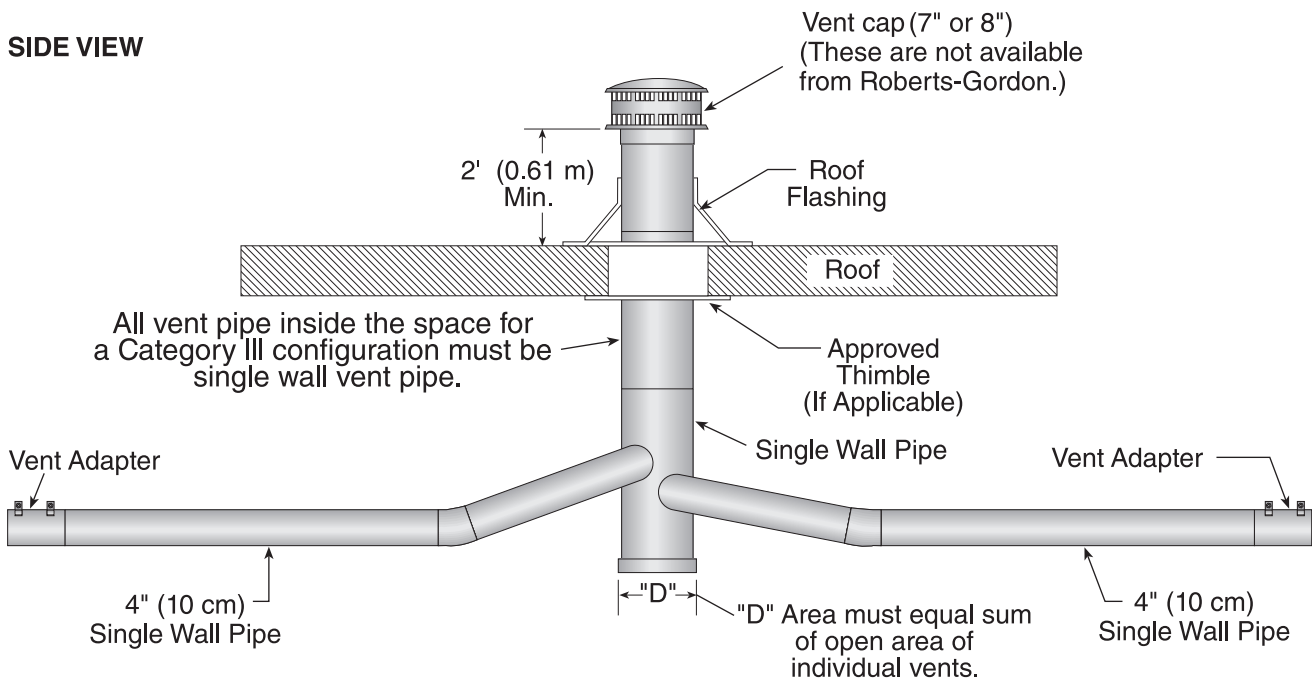

TOP VIEW

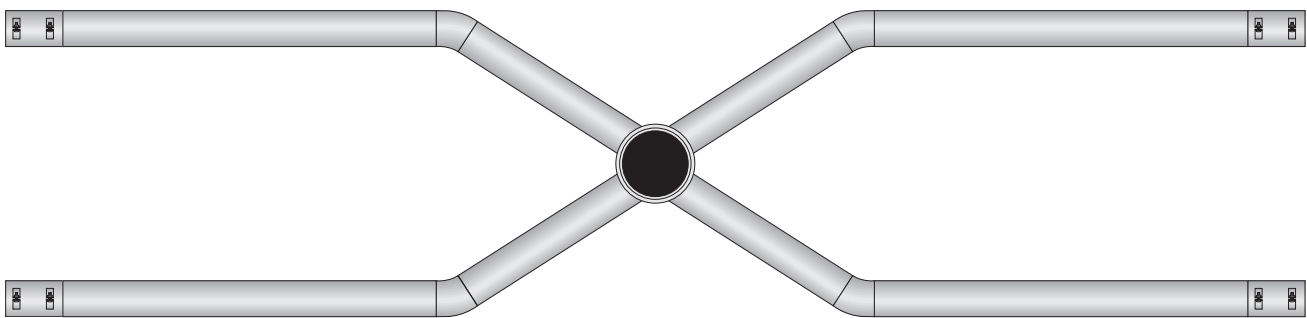

Requirements:

- Maximum of four heaters can be commonly vented through the roof.
- Heaters must be of the same BTU output.
- Heaters must be controlled by a common thermostat.
- Connections to a common stack must be positioned to avoid direct opposition between streams of combustion gases.

NOTE:

It is required that all vent pipes and connectors be fastened together with sheet metal screws and sealed with high temperature silicone sealant approved for at least 550 °F (288 °C) (supplied by others).

The installer must perform a leak test on the complete venting system. A solution of soap and water should be used to test the venting system.


8.15 Outside Combustion Air Supply

IMPORTANT: If the building has a slight negative pressure or corrosive contaminants, such as halogenated hydrocarbons, are present in the air, an outside combustion air supply to the heater is required. Seal all combustion air pipe joints.

Use of optional outside combustion air is not recommended with unvented heaters.

The air supply duct may have to be insulated to prevent condensation on the outer surface. The outside air terminal must not be more than 1' (31 cm) above the vent termination while maintaining a minimum distance of 3' (93 cm) for both vertical and horizontal venting.


8.15.2 Vertical Outside Air Supply for Single Heater Installation

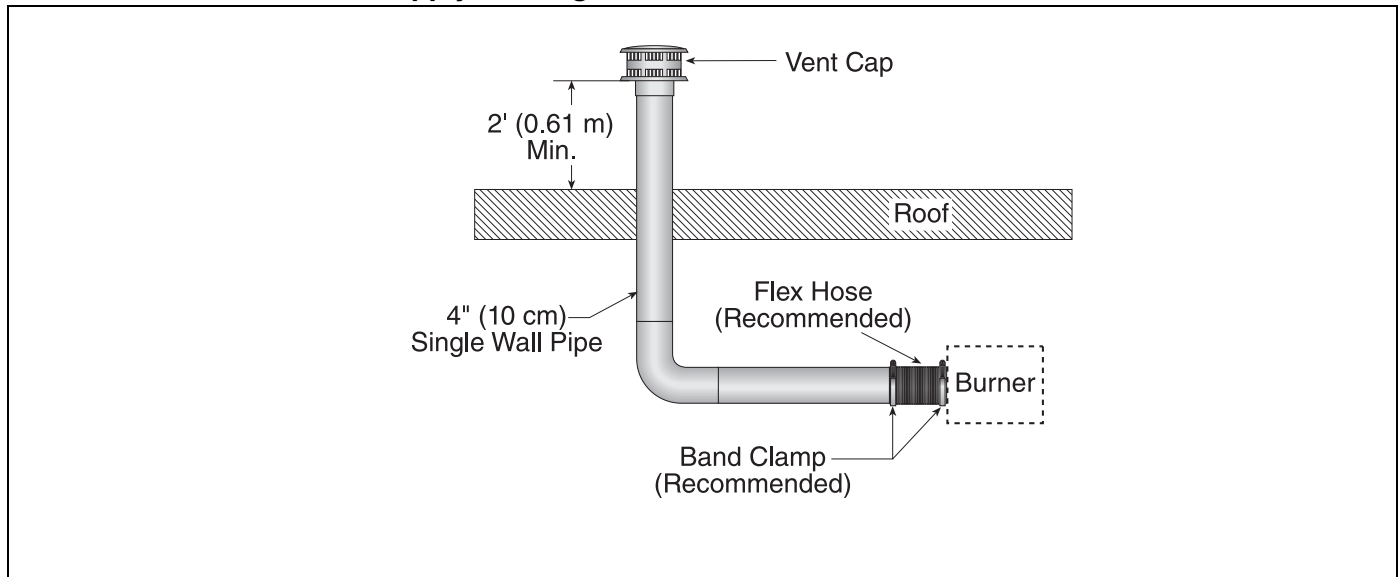


8.15.1 Length Requirements

Follow the constraints listed on *Page 45, Section 8.8*.

8.15.3 Horizontal Outside Air Supply for Single Heater Installation

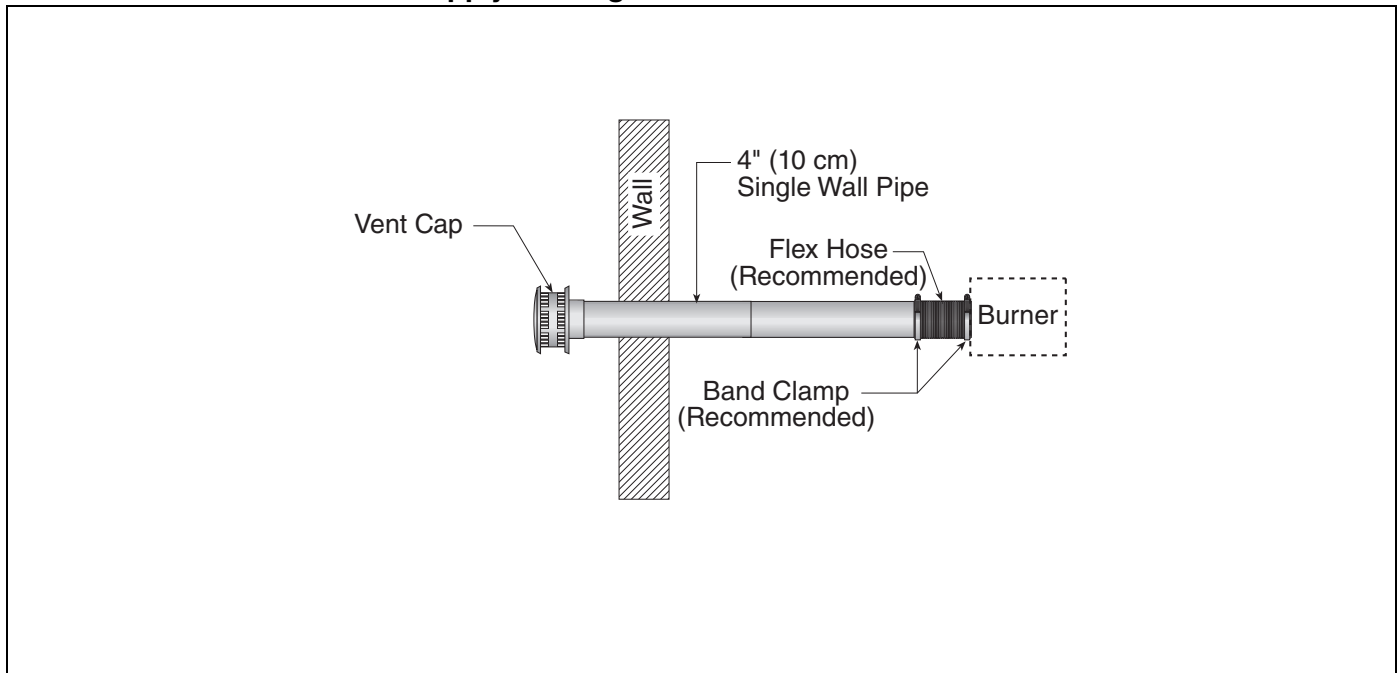


8.15.4 Vertical Outside Air Supply for Double Heater Installation

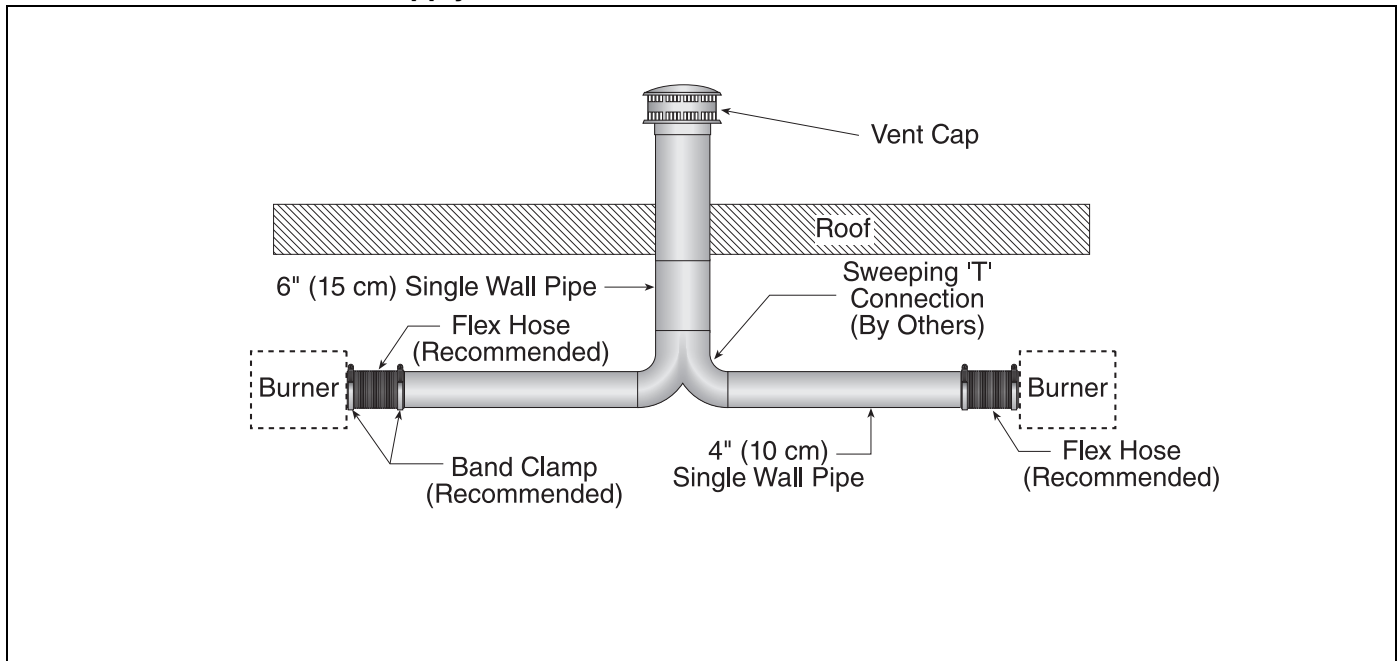

Requirements:

- Heaters must be controlled by a common thermostat.
- All joints must be sealed.

8.15.5 Horizontal Outside Air Supply for Double Heater Installation

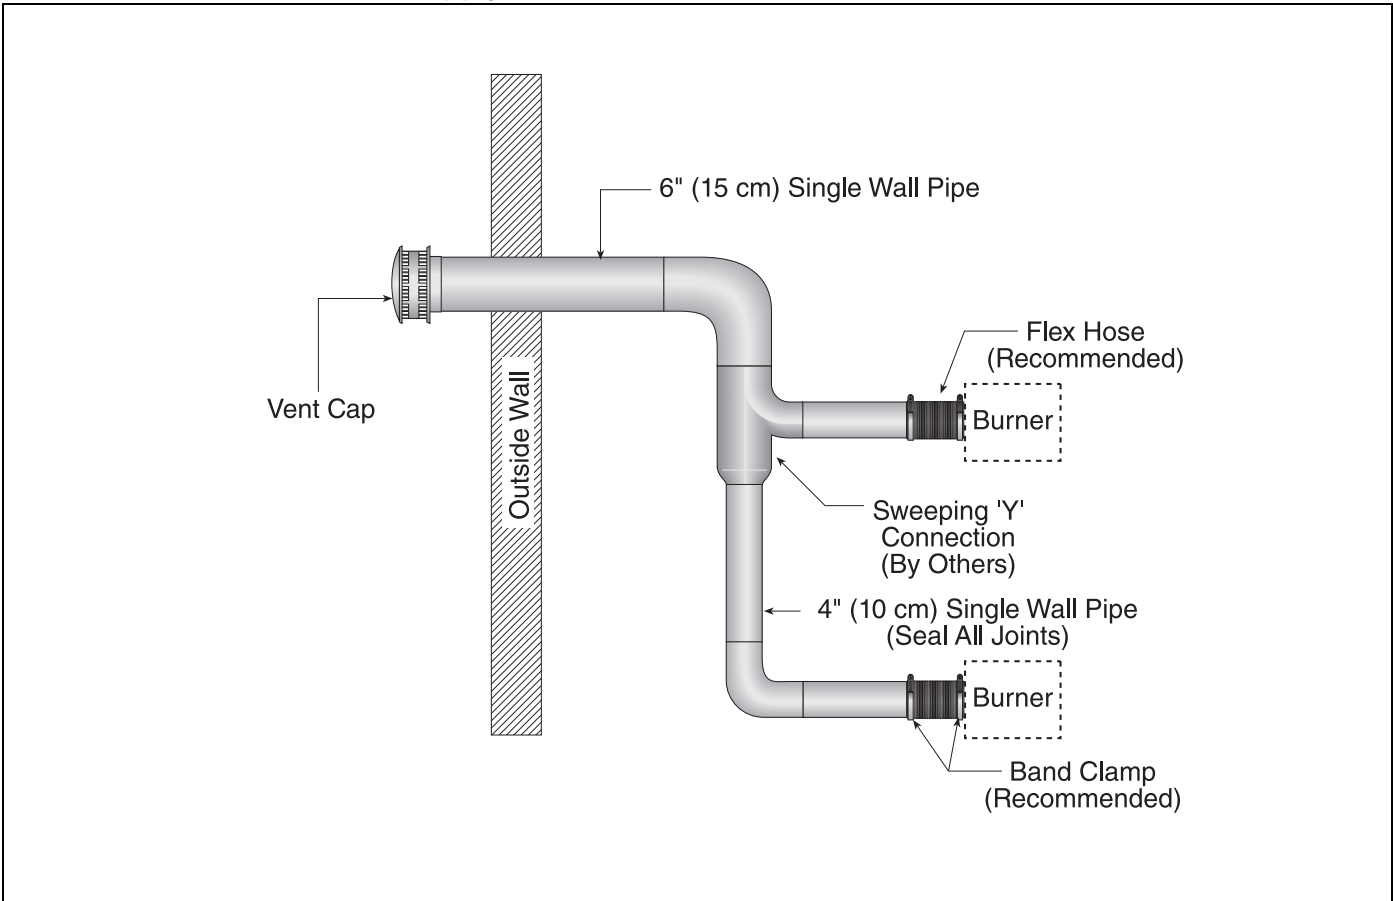

Requirements:

- Heaters must be controlled by a common thermostat.
- All joints must be sealed.

SECTION 9: GAS PIPING

! WARNING**Fire Hazard**

Tighten gas hose fittings to connect gas supply according to Figure 23.

Gas hose can crack when twisted.

Gas hose moves during normal operation.

Use only 36" (91 cm) long connector of 1/2" or 3/4" nominal ID.

Connector supplied with heater for U.S. models (not with Canadian models).

Failure to follow these instructions can result in death, injury or property damage.

! WARNING**Explosion Hazard**

Leak test all components of gas piping before operation.

Gas can leak if piping is not installed properly.

Do not high pressure test gas piping with heater connected.

Failure to follow these instructions can result in death, injury or property damage.

Install the gas hose as shown on *Page 54, Figure 31*. The gas hose accommodates expansion of the heating system and allows for easy installation and service of the burner. Before connecting the burners to the supply system, verify that all high pressure testing of the gas piping has been completed.

There is an expansion of the tube with each firing cycle; this will cause the burner to move with respect to the gas hose. This can cause a gas leak resulting in an unsafe condition if the gas connection is not made strictly in accordance with *Figure 31 on Page 54*.

Meter and service must be large enough to handle all the burners being installed plus any other connected load. The gas hose which feeds the system must be large enough to supply the required gas with a maximum pressure drop of 1/2" w.c. When gas piping is not included in the layout drawing, the local gas supplier will usually help in planning the gas piping.

Gas lines must meet applicable codes:

United States: The Flexible Stainless Steel Gas Hose (US models) supplied with the heater is certified per the Standard for Connectors for Gas Appliances, ANSI Z21.24/CSA 6.10 - latest revision.

Canada: The Rubber Type 1 Gas Hose (Canadian models) optional with the heater is certified as being in compliance with the Standard for Elastomeric Composite Hose and Hose Couplings for Conducting Propane and Natural Gas, CAN/CGA 8.1 - Latest revision.

- **Check the pipe and tubing ends for leaks before placing heating equipment into service. When checking for gas leaks, use a soap and water solution; never use an open flame.**

FIGURE 31: Gas Connection with Flexible Gas Hose

CORRECT POSITIONS

Shut-Off Valve (included with gas hose) must be parallel to burner gas inlet. The 3" (8 cm) displacement shown is for the cold condition. This displacement may reduce when the system is fired.



High Gas Pressure Regulator to be installed upstream of flexible gas hose if inlet pressure exceeds maximum allowance. See Page 68, Section 14

⚠ CAUTION


Product Damage Hazard

Hold gas nipple securely with pipe wrench when attaching gas hose.

Failure to follow these instructions can result in product damage.

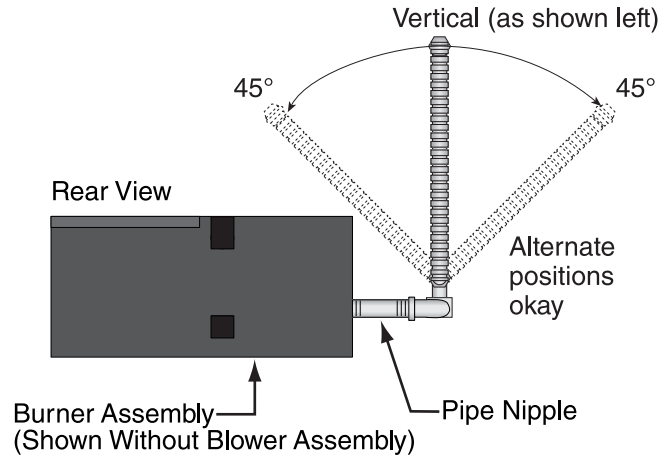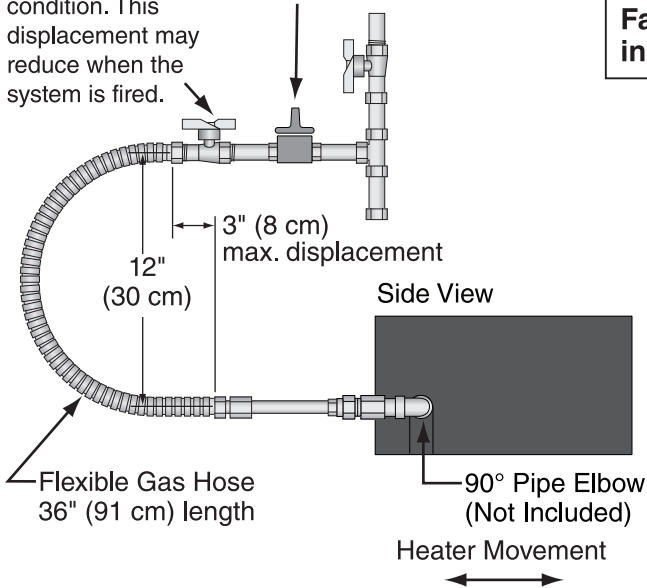

INCORRECT POSITIONS (WRONG INSTALLATION)

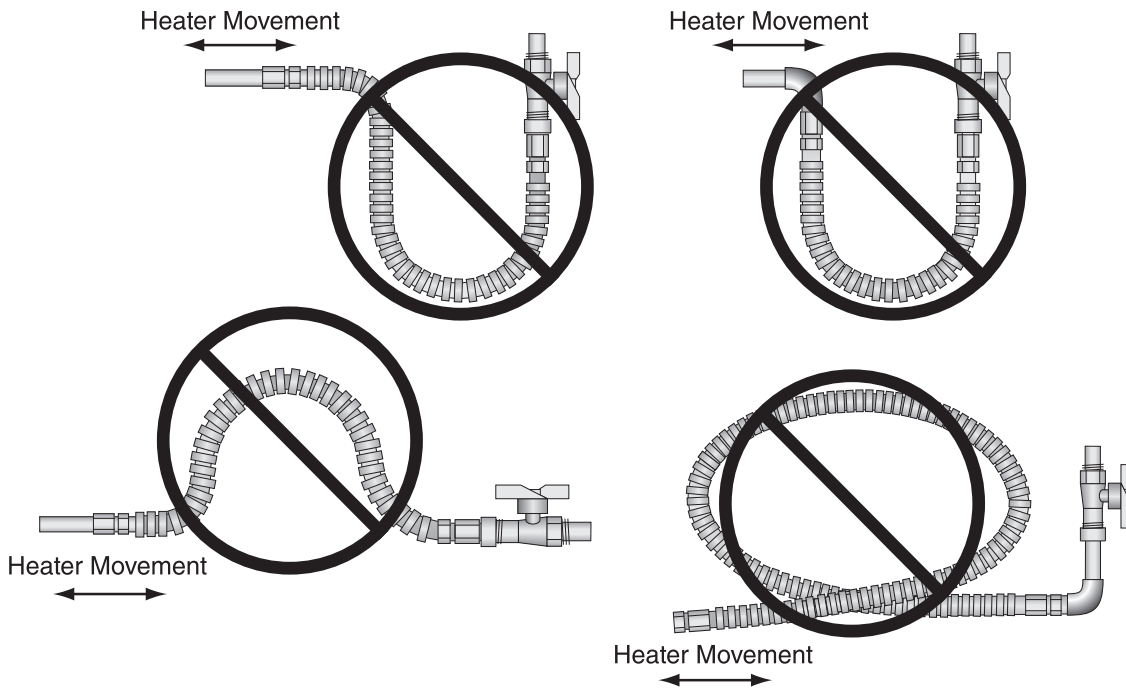


SECTION 10: WIRING

⚠ DANGER**Electrical Shock Hazard****Disconnect electric before service.****Heater must be properly earthed.****Failure to follow these instructions can result in death or electrical shock.**


Heaters can be controlled using several methods. Normally thermostats are used to control the heaters but they can also be controlled by an energy management system. *Section 10.1* illustrates the connection for heaters controlled by a line voltage thermostat.

For heaters on a low voltage thermostat, See *Page 56, Section 10.2*. Heaters must be grounded in accordance with applicable codes: United States: Refer to National Electrical Code® NFPA 70 - latest revision; Canada: Refer to Canadian Electrical Code CSA C22.1 Part I - latest revision.


If any of the original internal wiring must be replaced, it must be replaced with wiring materials having a temperature rating of at least 105 °C and 600 volts.

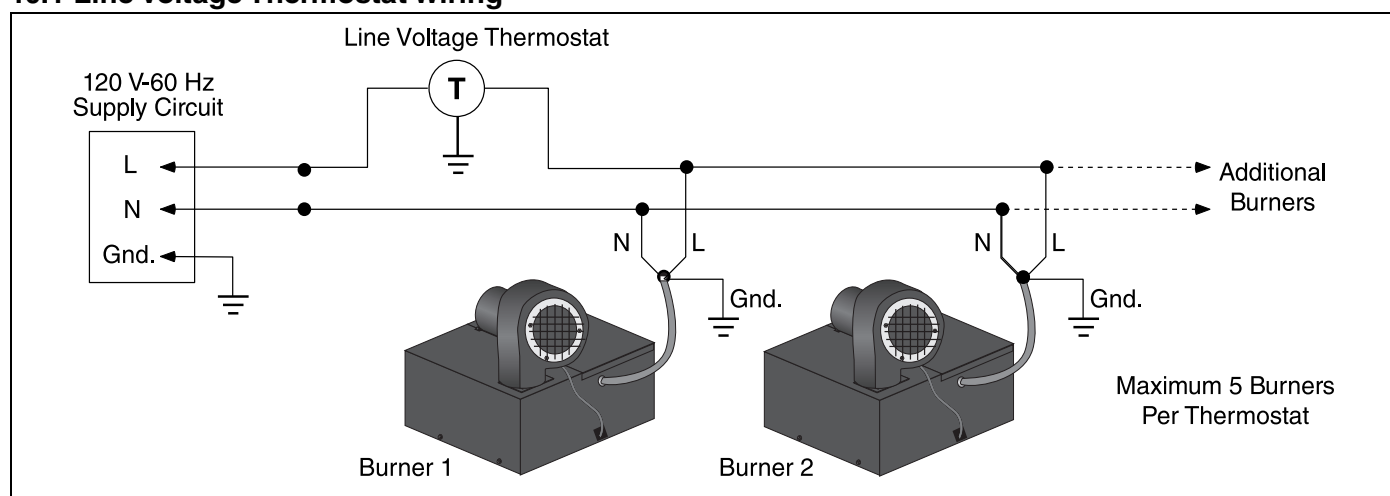10.1 Line Voltage Thermostat Wiring


10.2 Low Voltage Thermostat Wiring

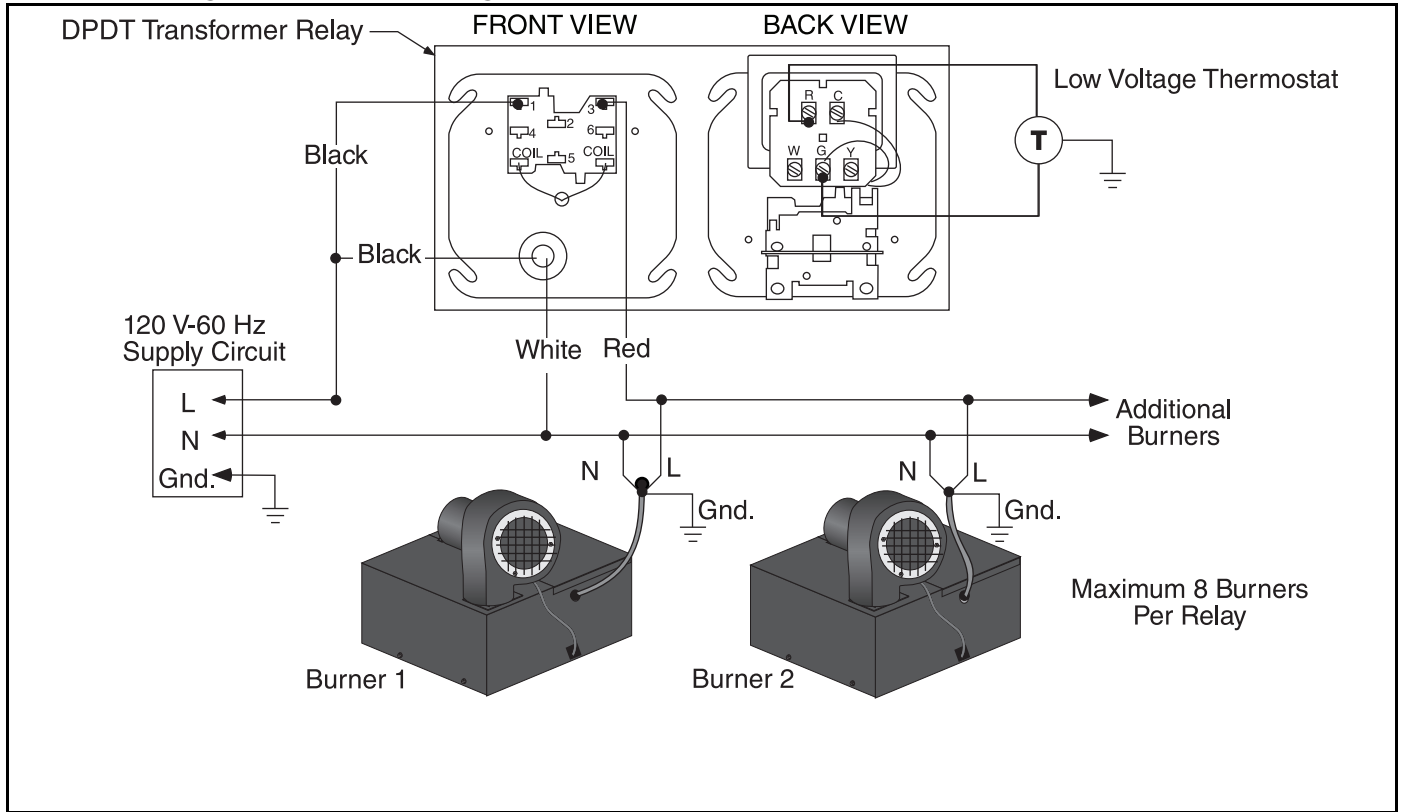


10.3 Internal Wiring

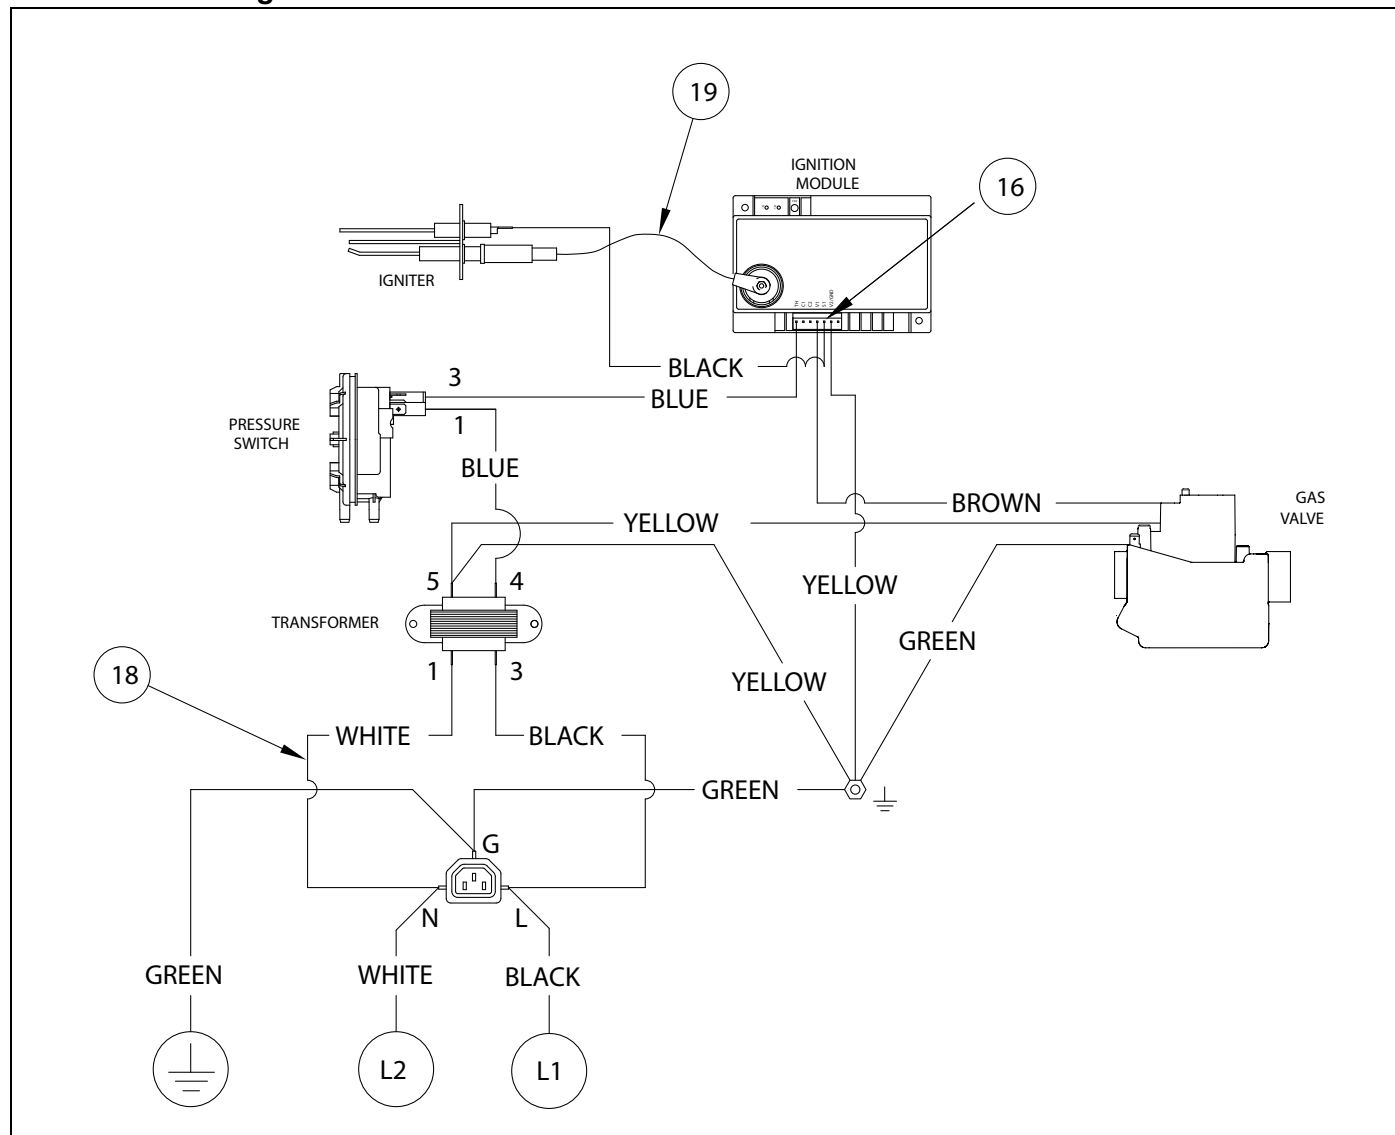

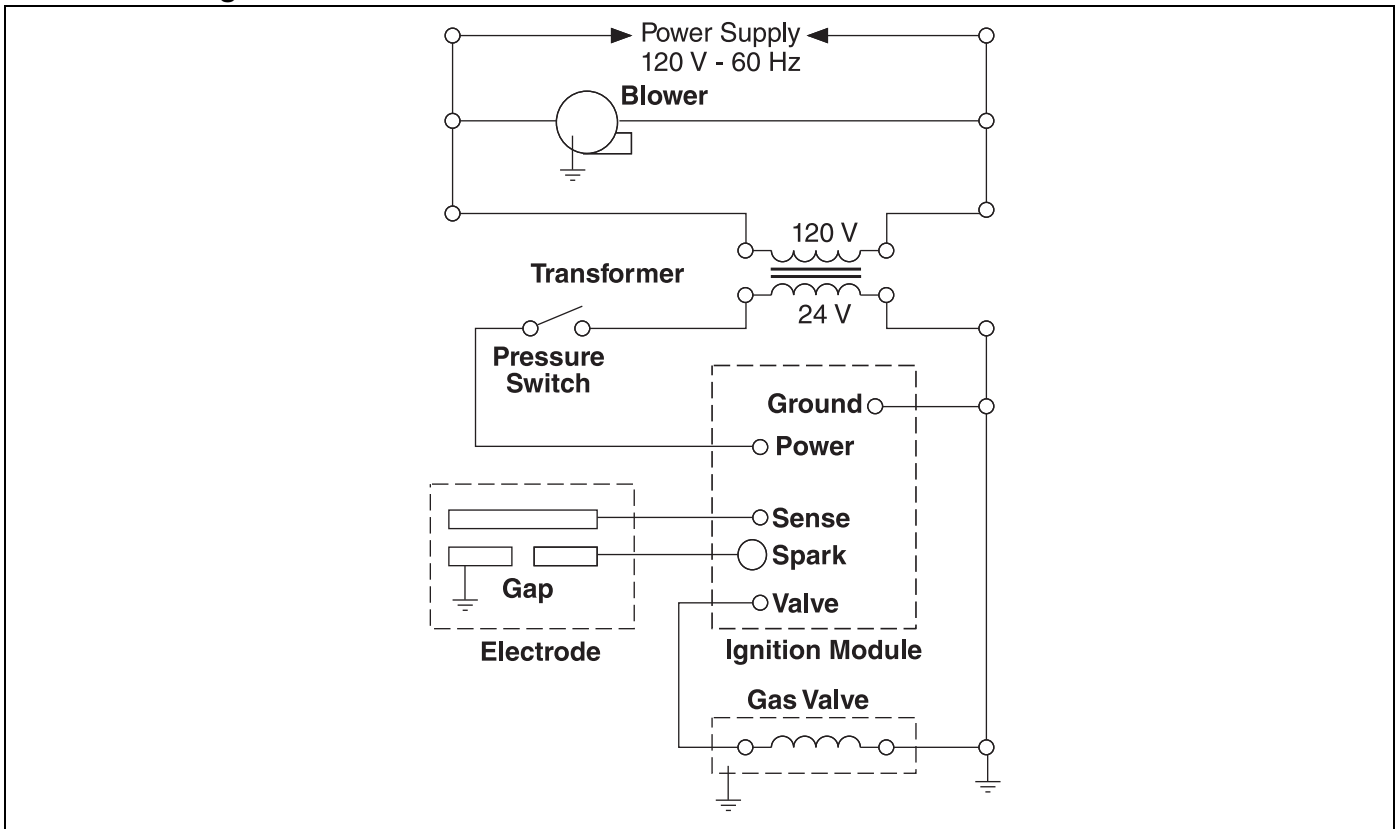



10.4 Ladder Diagram

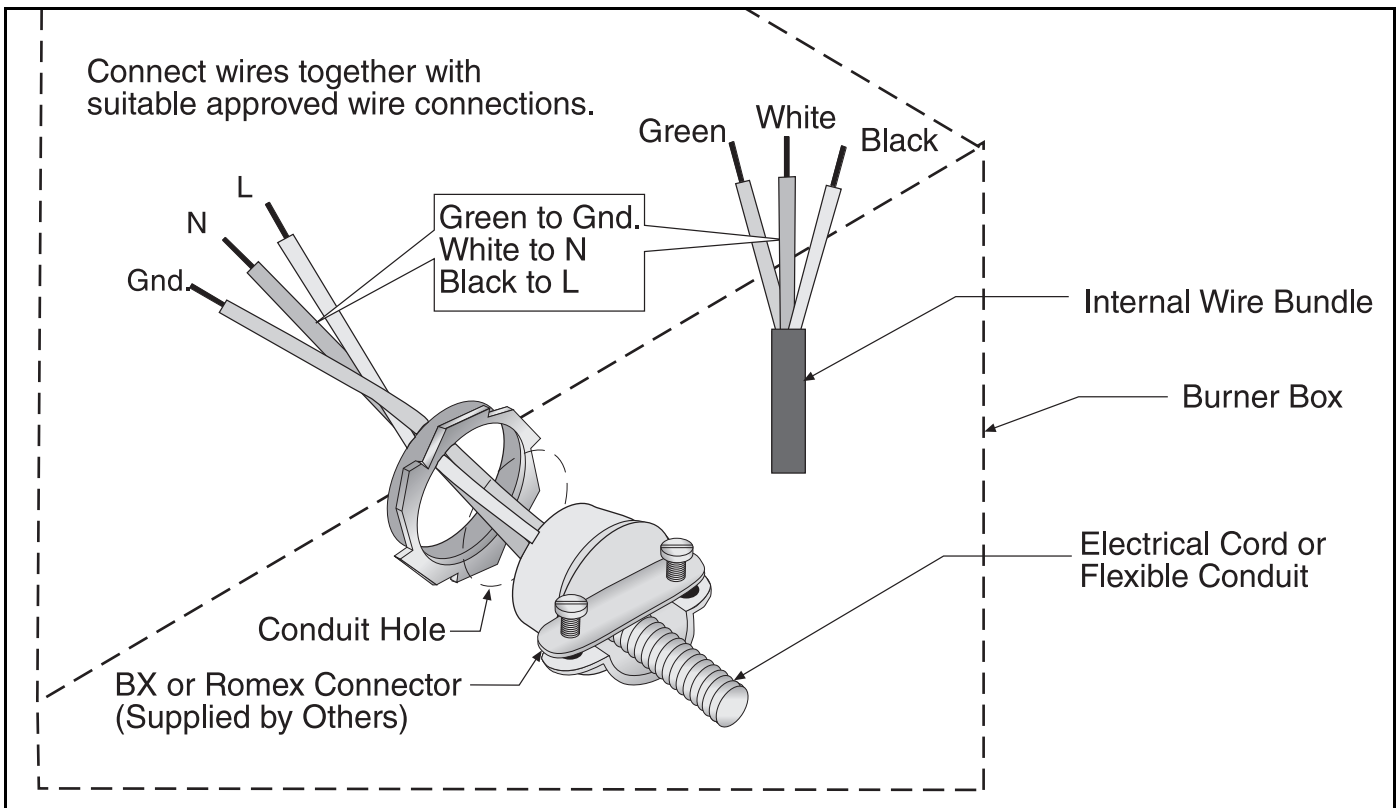

10.5 Electrical Connection to the Burner

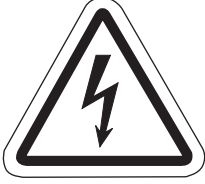

SECTION 11: OPERATION AND MAINTENANCE

⚠ DANGER		⚠ WARNING	
			
Electrical Shock Hazard Disconnect electric before service. Heater must be connected to a properly grounded electrical source.	Explosion Hazard Turn off gas supply to heater before service.	Burn Hazard Allow heater to cool before service. Tubing may still be hot after operation.	Cut/Pinch Hazard Wear protective gear during installation, operation and service. Edges are sharp.
Failure to follow these instructions can result in death, electric shock, injury or property damage.			

This heater is equipped with a direct spark ignition system.

11.1 Sequence of Operation

5. Turn the thermostat up. When the thermostat calls for heat, the blower motor will energize.
6. When the motor approaches nominal running RPM, the pressure switch closes and activates the ignition module.
7. After a 45 second prepurge, the ignition module then opens the gas valve and energizes the spark igniter.
8. When the flame is established, the sparking sequence ceases.
9. If the flame is not established during the ignition sequence, the ignition module closes the gas valve and purge begins. Module will try 2 additional times for ignition (with purges in between trials). If ignition is not established, the module will lockout.
10. If the flame extinguishes during operation, the ignition module will attempt the multiple trial sequence described in step 5. If ignition is not re-established, the module will lockout for one hour or until reset.
11. After lockout, the control can be reset by turning down thermostat for five seconds, and then raising it again to desired temperature, or by disconnecting power and then reconnecting. overall heater condition should be thoroughly

12. When thermostat is satisfied, all power to the unit is shut off.

11.2 To Shut Off Heater

- Set thermostat to lowest setting.
- Turn OFF electric power to heater.
- Turn OFF manual gas valve in the heater supply line.

11.3 To Start Heater

- Turn gas valve and electric power OFF and wait five minutes for unburned gases to vent from heater.
- Turn ON main gas valve.
- Turn ON electric power.
- Set thermostat to desired temperature.
- Burner should light automatically.

11.4 Pre-Season Maintenance and Annual Inspection

- To ensure your safety and years of trouble-free operation of the heating system, service and annual inspections must be done by a contractor qualified in the installation and service of gas-fired heating equipment.
- Turn off gas and electric supplies before performing service or maintenance. Allow heater to cool before servicing.
- Before every heating season, a contractor qualified in the installation and service of gas-fired heating equipment must perform a thorough safety inspection of the heater.
- For best performance, the gas, electrical, thermostat connections, tubing, venting, suspensions and inspected.

NOTE: Gas flow and burner ignition are among the first things that should be thoroughly inspected. Please see *Page 60, Section 11.5* for suggested items to inspect.

requirements set forth in the NDUSTRIA™ manuals and all applicable governmental authorities pertaining to the installation, service, operation and labeling of the equipment.

To help facilitate optimum performance and safety, NDUSTRIA recommends that a qualified contractor conduct, at a minimum, annual inspections of your NDUSTRIA™ equipment and perform service where necessary, using only replacement parts sold and supplied by NDUSTRIA.

11.5 Maintenance Checklist


Installation Code and Annual Inspections:





All installation and service of NDUSTRIA™ equipment must be performed by a contractor qualified in the installation and service of equipment sold and supplied by NDUSTRIA and conform to all

The Vicinity of the Heater	<p>Do not store or use flammable objects, liquids or vapors near the heater. Immediately remove these items if they are present.</p> <p><i>See Page 4, Section 3.</i></p>
Vehicles and Other Objects	<p>Maintain the clearances to combustibles.</p> <p>Do not hang anything from, or place anything on, the heater.</p> <p>Make sure nothing is lodged underneath the reflector, in between the tubes or in the decorative or protective grilles (included with select models).</p> <p>Immediately remove objects in violation of the clearances to combustibles.</p> <p><i>See Page 4, Section 3.</i></p>
Reflector	<p>Support reflector with reflector hanger and support strap.</p> <p>Reflector must not touch tube.</p> <p>Make sure there is no dirt, sagging, cracking or distortion.</p> <p>Do not operate if there is sagging, cracking or distortion.</p> <p>Make sure reflectors are correctly overlapped. <i>See Page 30, Section 6.6.1.</i></p> <p>Clean outside surface with a damp cloth.</p>
Vent Pipe	<p>Venting must be intact. Using a flashlight, look for obstructions, cracks on the pipe, gaps in the sealed areas or corrosion.</p> <p>The area must be free of dirt and dust.</p> <p>Remove any carbon deposits or scale using a wire brush.</p> <p><i>See Page 42, Section 8.</i></p>
Outside Air Inlet	<p>Inlet must be intact. Look for obstructions, cracks on the pipe, gaps in the sealed areas or corrosion.</p> <p>The area must be free of dirt and dust. Clean and reinstall as required.</p>
Tubes	<p>Make sure there are no cracks.</p> <p>Make sure tubes are connected and suspended securely.</p> <p><i>See Page 13, Section 6.</i></p> <p>Make sure there is no sagging, bending or distortion.</p> <p>Clean or replace as required.</p>
Gas Line	<p>Check for gas leaks. <i>See Page 53, Section 9.</i></p>
Burner Observation Window	<p>Make sure it is clean and free of cracks or holes.</p> <p>Clean and replace as required.</p>
Blower Scroll, Wheel and Motor	<p>Compressed air or a vacuum cleaner may be used to clean dust and dirt.</p>


Burner Cup and Orifice	<p>Clear of obstructions (even spider webs will cause problems).</p> <p>Carefully remove any dust and debris from the burner.</p>
Electrode	<p>Replace if there are cracked ceramics, excessive carbon residue, or erosion of the electrode.</p> <p>The electrode gap should be 1/8" (3.2 mm).</p>
Thermostat	<p>There should be no exposed wire or damage to the thermostat.</p> <p><i>See Page 55, Section 10.</i></p>
Suspension Points	<p>Make sure the heater is hanging securely. Look for signs of wear on the chain or ceiling.</p> <p><i>See Page 14, Figure 13.</i></p>
Decorative and Protective Grille (optional)	<p>The grille must be securely attached.</p> <p>Check that the side reflector extensions are installed correctly and secured in place if necessary. (Decorative grille only.)</p> <p><i>See Page 39, Section 7.5 and Page 41, Section 7.6</i></p> <p>Make sure shield is installed correctly and secured in place if necessary. (Decorative grille only.) <i>See Page 40, Section 7.5.2.</i></p>
Lower Clearance Shield (optional)	<p>The lower shield must be securely attached. Inspect shield support straps and lower clearance shield anchor points.</p> <p><i>See Page 39, Section 7.4.</i></p> <p>Make sure shield is installed correctly and secured in place if necessary.</p> <p><i>See Page 39, Section 7.4.</i></p>
Wall Tag	<p>If wall tag is present, make sure it is legible and accurate. Please contact NDUSTRIA or your NDUSTRIA™ independent distributor, if you need a wall tag. <i>See Page 3, Section 2.1</i></p>
Safety Labels	<p>Product safety signs or labels should be replaced by the product user when they are no longer legible. Please contact NDUSTRIA or your NDUSTRIA™ independent distributor to obtain replacement signs or labels. <i>See Page 2, Figure 1 through Page 3, Figure 2.</i></p>

SECTION 12: TROUBLESHOOTING


⚠ DANGER

Electrical Shock Hazard
<p>Disconnect electric before service.</p> <p>Heater must be properly earthed.</p> <p>Failure to follow these instructions can result in death or electrical shock.</p>

⚠ WARNING			
			
Fire Hazard	Explosion Hazard	Burn Hazard	Cut/Pinch Hazard
<p>Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater.</p> <p>Some objects will catch fire or explode when placed close to heater.</p>	<p>Turn off gas supply to heater before service.</p>	<p>Allow heater to cool before service.</p> <p>Tubing may still be hot after operation.</p>	<p>Wear protective gear during installation, operation and service.</p> <p>Edges are sharp.</p>
Failure to follow these instructions can result in death, injury or property damage.			

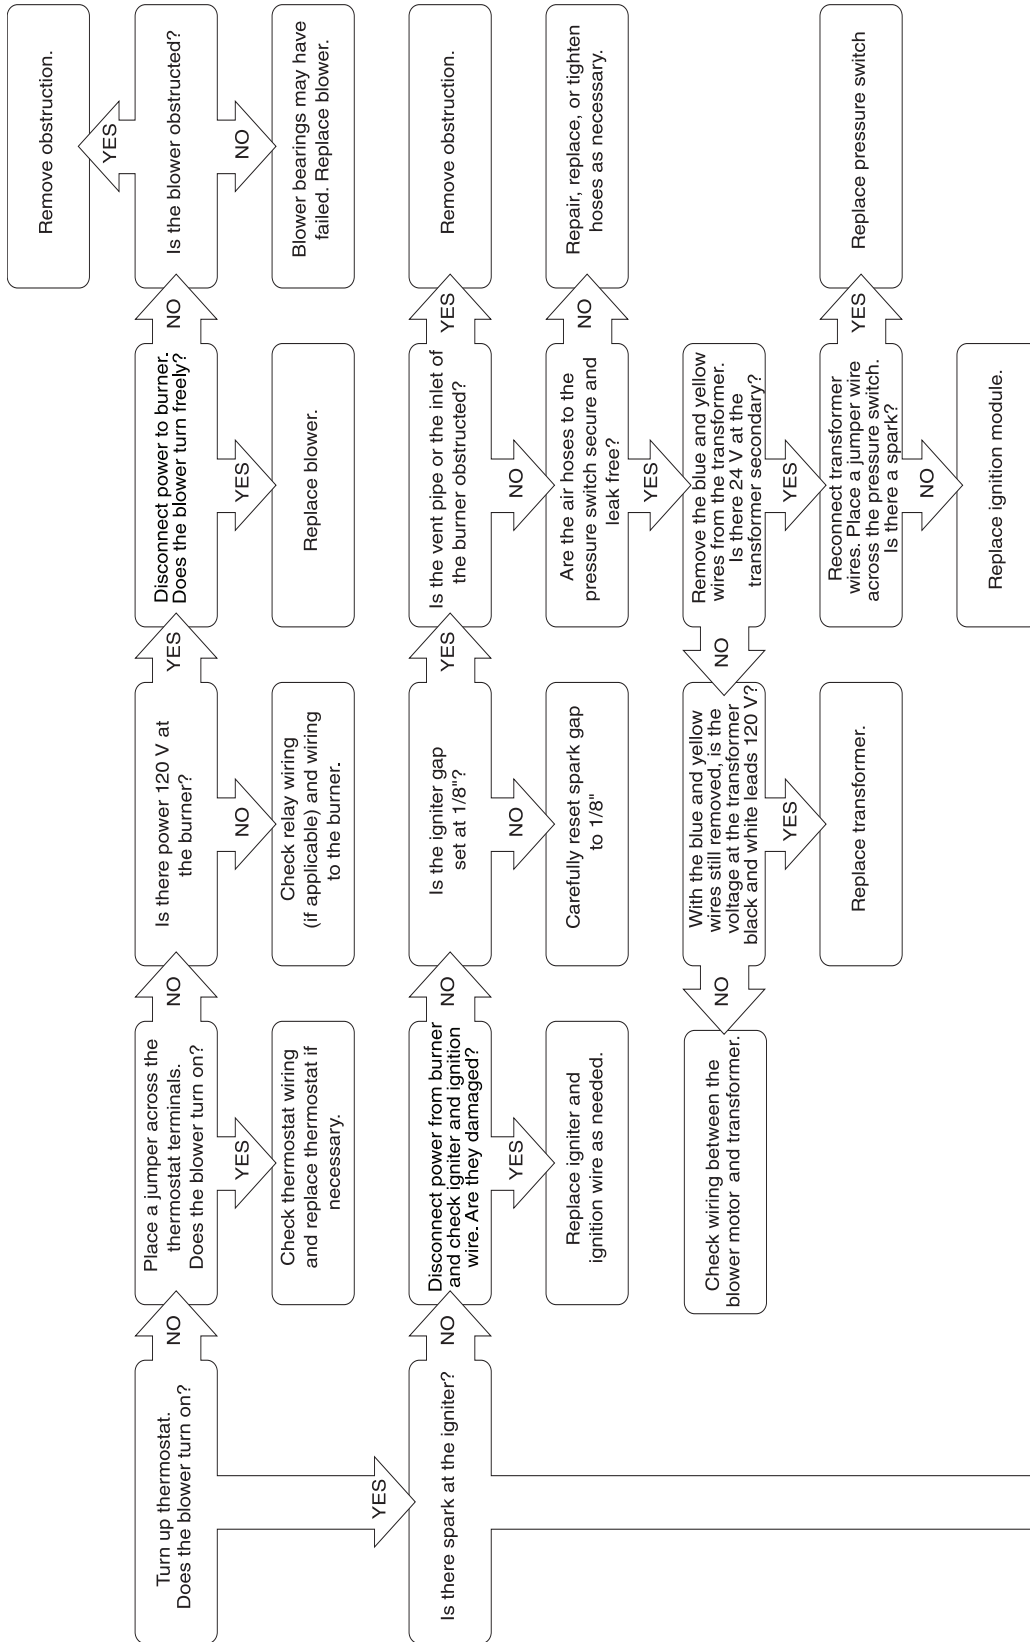
12.1 Troubleshooting Flow Chart



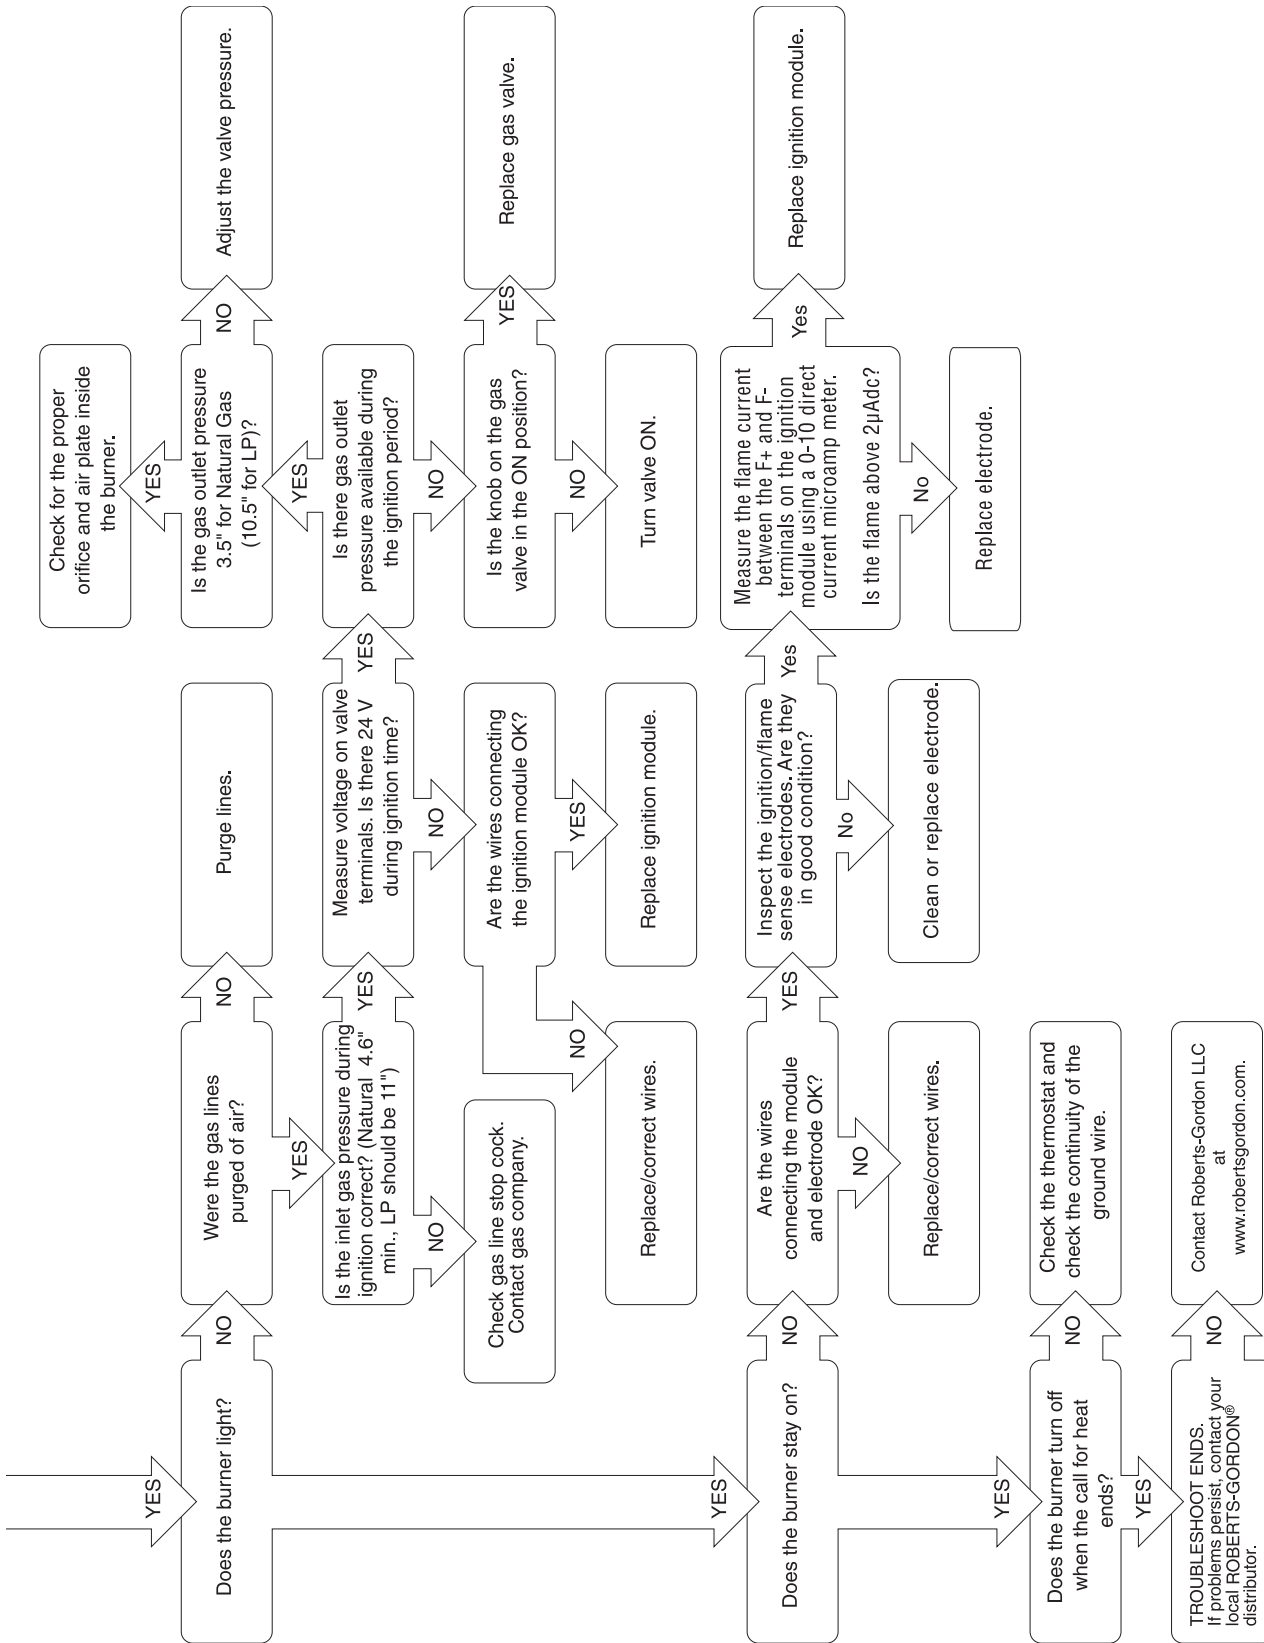



Module Diagnostic Codes:		Problem	Solution
LED	4 second steady flash at start of cycle	Normal	Wait for valve to open
	Steady on	Microprocessor failure within module	Replace module
	Three flashes	Ignition lockout Lockout of module after 3 tries	Recycle unit: check for spark and valve opening and replace:if none, replace module

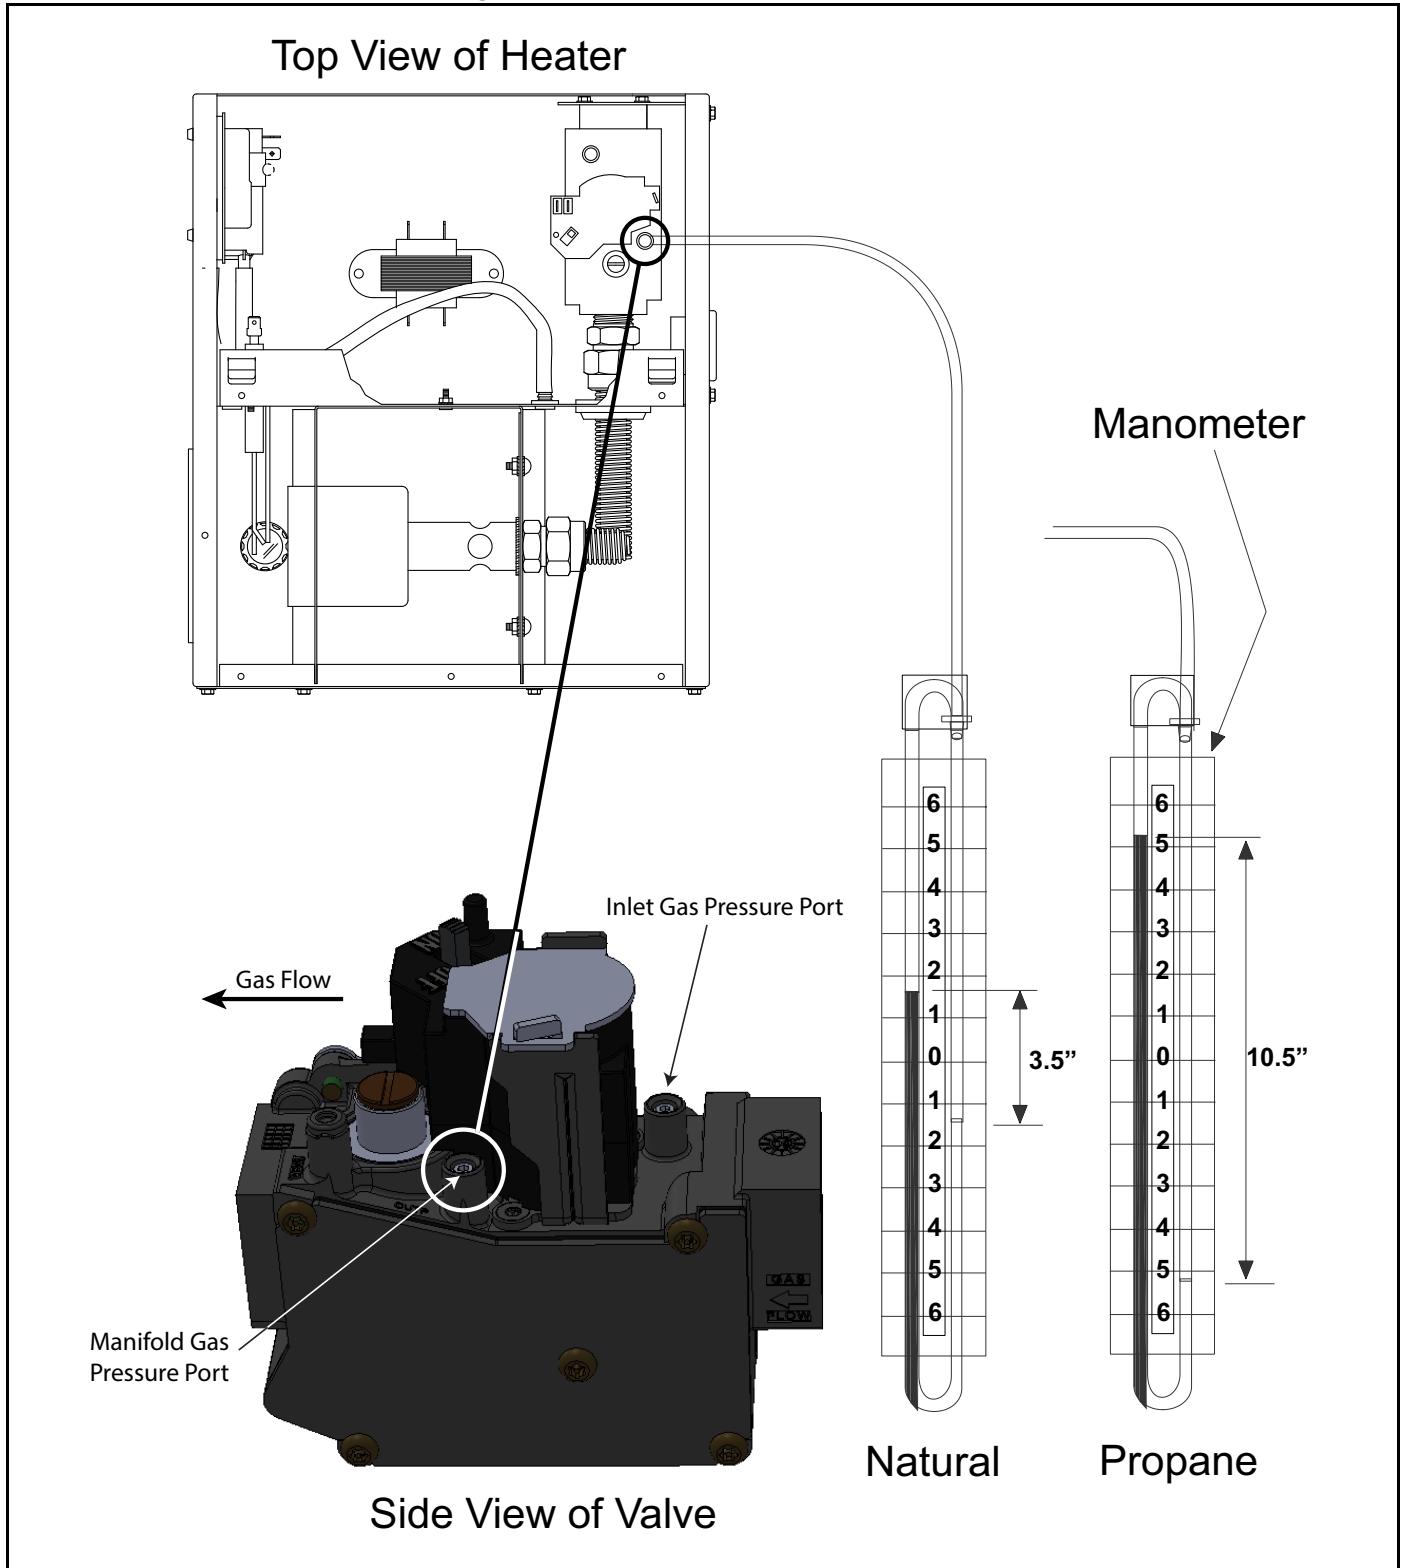



12.2 Manifold Gas Pressure Setting



SECTION 13: REPLACEMENT PARTS

⚠ DANGER	⚠ WARNING		
			
Electrical Shock Hazard	Explosion Hazard	Fire Hazard	Carbon Monoxide Hazard
<p>Use only genuine NDUSTRIA™ replacement parts per this installation, operation and service manual.</p> <p>Failure to follow these instructions can result in death, electric shock, injury or property damage.</p>			

See warnings and important information before removing or replacing parts. After any maintenance or repair work, always test fire the heater in accordance with the start-up instructions on *Page 59, Section 11* to help ensure all safety systems are in working order before leaving the heater to operate. Minor faults may be traced by using the troubleshooting charts on *Page 62, Section 12 through Page 65, Figure 12.2*.

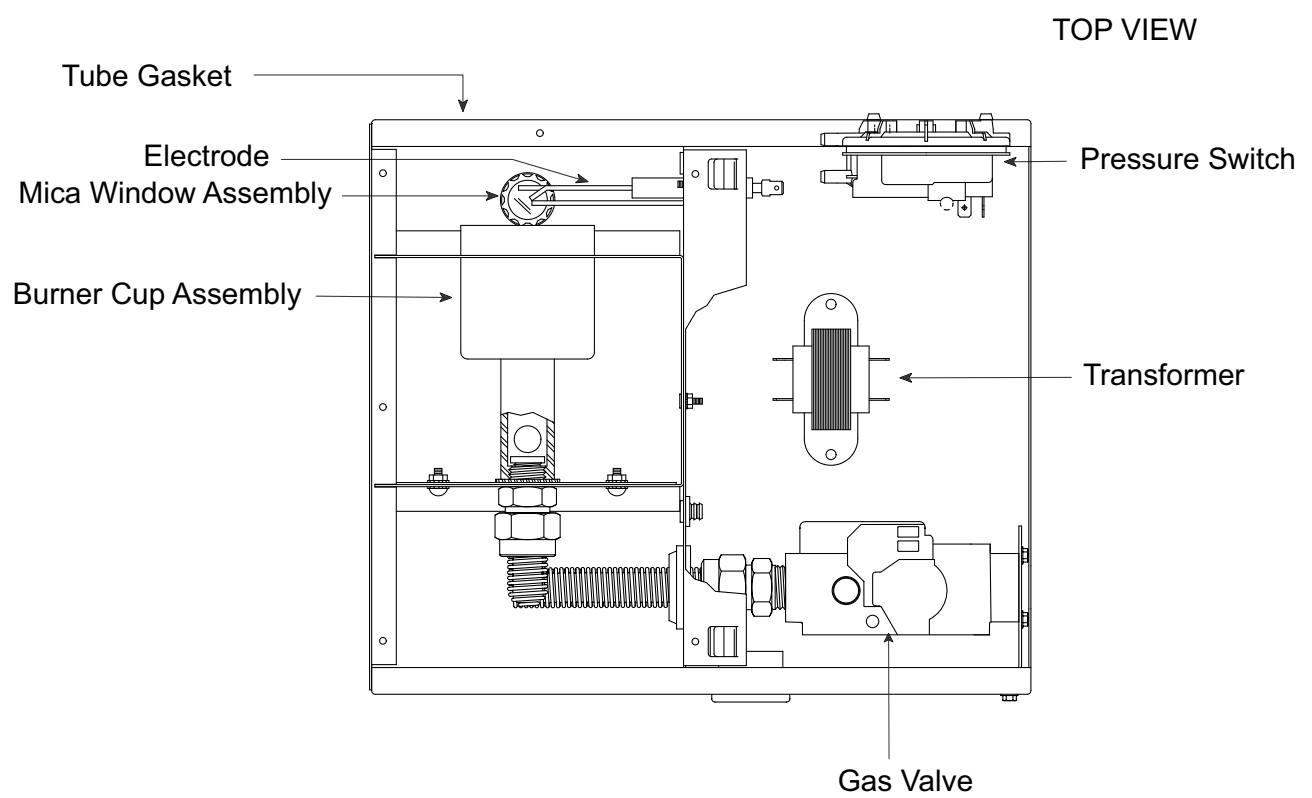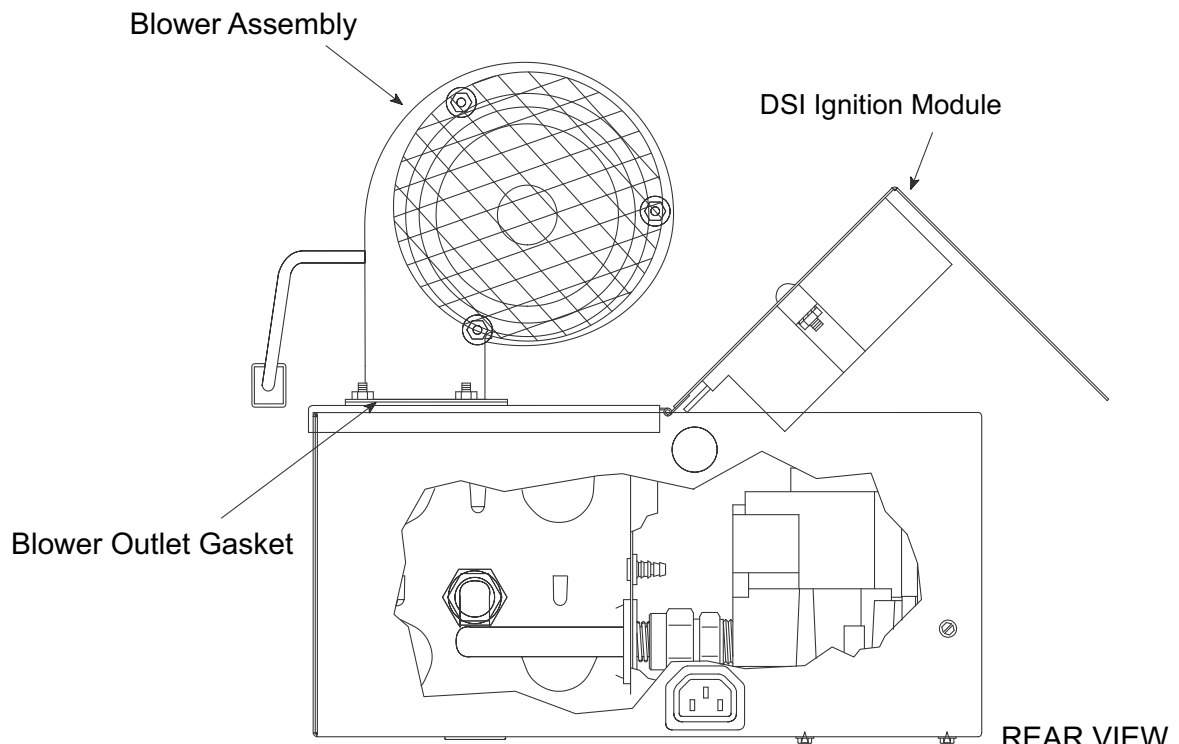

SECTION 14: GENERAL SPECIFICATIONS

14.1 Material Specifications

14.1.1 Reflectors

.024 Aluminum
(Optional .024 Stainless Steel Type 304, Standard Reflectors Only)

14.2 Heater Specifications

14.2.1 Ignition Fully automatic, three-try, direct spark, electronic ignition control, 100% safety shut-off.

14.3 Suspension Specifications

Hang heater with materials with a minimum working load of 75 lbs (33 kg). See Page 14, Figure 13.

14.4 Controls Specifications

Time switches, thermostats, etc. can be wired into the electrical supply. External controls supplied as an optional extra.

General Specifications for NBH-Series heaters are as follows:

Model	Heat Input Rate (Btu/h) x (1000)	Length "A" Minimum	Recommended Minimum Mounting Height*	
			Space	Spot
NBH-40	40	10' (3 m)	8-10' (2.4 - 3 m)	8' (2.4 m)
NBH-60	60	20' (6 m)	10-12' (3 - 3.6 m)	9' (2.7 m)
NBH-80	80	20' (6 m)	12-15' (3.6 - 4.5 m)	11' (3.3 m)
NBH-100	100	30' (9 m)	12-15' (3.6 - 4.5 m)	12' (3.7 m)
NBH-115	115	30' (9 m)	15-20' (4.5 - 6 m)	15' (4.6 m)
NBH-125	125	30' (9 m)	15-20' (4.5 - 6 m)	15' (4.6 m)
NBH-140	140	40' (12 m)	20-25' (6 - 7.6 m)	20' (6.1 m)
NBH-150	150	40' (12 m)	20-25' (6 - 7.6 m)	20' (6.1 m)
NBH-175	175	40' (12 m)	25' (7.6 m)	23' (7 m)
NBH-200	200	50' (15 m)	25' (7.6 m)	25' (7.6 m)

*See Page 4, Section 3 for clearances to combustibles.

GAS PRESSURE AT MANIFOLD:

Natural Gas: 3.5" wc
LP Gas: 10.5" wc

PIPE CONNECTION:

1/2" NPT

DIMENSIONS:

Vent Connection Size: 4" (10 cm)
Outside Air Connection Size: 4" (10 cm)
Refer to figure above for dimensional information.

ELECTRICAL RATING (ALL MODELS):

120 V - 60 Hz, 1 A (run)

GAS INLET PRESSURE:

Natural Gas:

for NBH-40, 60, 80, 100, 115, 125, 140, 150 4.6" wc Minimum
for NBH-175, 200 5.0" wc Minimum
14.0" wc Maximum

LP Gas:

11.0" wc Minimum
14.0" wc Maximum

PRODUCT "TYPE" ACCORDING TO ASHRAE HANDBOOK-HVAC SYSTEMS AND EQUIPMENT (LATEST EDITION)

Type: "C" - Indirect Tube-Type Heater (Forced Draft)

SECTION 15: THE NDUSTRIA™ NBH WARRANTY

NDUSTRIA WILL PAY FOR:

Within 36 months from date of purchase by buyer or 42 months from date of shipment by NDUSTRIA (whichever occurs first), replacement parts will be provided free of charge for any part of the product which fails due to a manufacturing or material defect.

NDUSTRIA will require the part in question to be returned to the factory. NDUSTRIA will, at its sole discretion, repair or replace after determining the nature of the defect and disposition of part in question.

NDUSTRIA™ Replacement Parts are warranted for a period of 12 months from date of shipment from NDUSTRIA or the remaining NDUSTRIA™ NBH warranty.

NDUSTRIA WILL NOT PAY FOR:

Service trips, service calls and labor charges.

Shipment of replacement parts.

Claims where the total price of the goods have not been paid.

Damage due to:

- Improper installation, operation or maintenance.
- Misuse, abuse, neglect, or modification of the NDUSTRIA™ NBH in any way.
- Use of the NDUSTRIA™ NBH for other than its intended purpose.
- Incorrect gas or electrical supply, accident, fire, floods, acts of God, war, terrorism, or other casualty.
- Improper service, use of replacement parts or accessories not specified by NDUSTRIA.
- Failure to install or maintain the NDUSTRIA™ NBH as directed in the Installation, Operation and Service Manual.
- Relocation of the NDUSTRIA™ NBH after initial installation
- Use of the NDUSTRIA™ NBH in a corrosive atmosphere containing contaminants.
- Use of the NDUSTRIA™ NBH in the vicinity of a combustible or explosive material.
- Any defect in the NDUSTRIA™ NBH arising from a drawing, design, or specification supplied by or on behalf of the consumer.
- Damage incurred during shipment. Claim must be filed with carrier.

WARRANTY IS VOID IF:

The NDUSTRIA™ NBH is not installed by an contractor qualified in the installation and service of gas fired heating equipment.

You cannot prove original purchase date and required annual maintenance history.

The data plate and/or serial number are removed, defaced, modified or altered in any way.

The ownership of the NDUSTRIA™ NBH is moved or transferred. This warranty is non-transferable.

NDUSTRIA is not permitted to inspect the damaged equipment and/or component parts.

READ YOUR INSTALLATION, OPERATION AND SERVICE MANUAL.

If you have questions about your equipment, contact your installing professional. Should you need Replacement Parts or have additional questions, call or write:

NDUSTRIA

100 Seven Mile Rd NW

Comstock Park, MI 49321

Telephone: +1.716.551.7900

www.ndustria.com

NDUSTRIA's liability, and your exclusive remedy, under this warranty or any implied warranty (including the implied warranties of merchantability and fitness for a particular purpose) is limited to providing replacement parts during the term of this warranty.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. There are no rights, warranties or conditions, expressed or implied, statutory or otherwise, other than those contained in this warranty.

NDUSTRIA shall in no event be responsible for incidental or consequential damages or incur liability for damages in excess of the amount paid by you for the NDUSTRIA™ NBH. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

NDUSTRIA shall not be responsible for failure to perform under the terms of this warranty if caused by circumstances out of its control, including but not limited to war, fire, flood, strike, government or court orders, acts of God, terrorism, unavailability of supplies, parts or power. No person is authorized to assume for NDUSTRIA any other warranty, obligation or liability.

LIMITATIONS ON AUTHORITY OF REPRESENTATIVES:

No representative of NDUSTRIA, other than an Executive Officer, has authority to change or extend these provisions. Changes or extensions shall be binding only if confirmed in writing by NDUSTRIA's duly authorized Executive Officer.