




Rectangle Table System Installation Instructions

(Base Part #: TTR1834)

PARTS/TOOLS NEEDED:

		<p>#12 Oval Head Screws</p>	
<p>Table & Table Base (Table base comes attached to table)</p>	<p>Table Leg & Floor Base</p>	<p>Screws (Not Provided)</p>	<p>Power Drill (Not Provided)</p>


INSTALLATION CONSIDERATIONS

- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not sit on or lean on table, intended for use as a table only. Maximum load is 50 lbs distributed evenly.
- The stiffness and rigidity of the floor mounting substrate has a direct effect on the sturdiness of the entire table system.
- Recommended cleaning solutions: soap and water, Fantastic, Windex, 409 or Simple Green.

1. Mount the floor base into solid floor structure (wood, fiberglass, etc.) using #12 phillips oval head screws.



2. Align the T-bolt on the bottom of the leg with the rectangular opening in the floor base. Insert the T-bolt and begin to turn clockwise. After one turn, pull up on the leg to ensure that the T-bolt is secure in the floor base. Continue to turn the leg until the leg is secure.

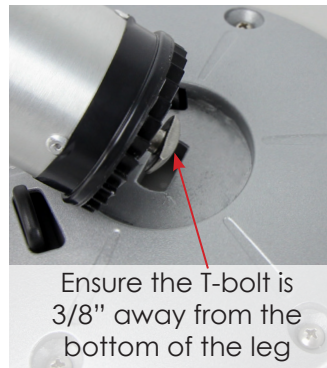


3. Install the table by aligning the table base to the leg and push down. To ensure the table base is secure to the table leg make sure the table base goes over the first black piece.



Removing The Leg & Table

¹To remove the table, press the button at the top of the post. *Twist top until it releases from taper fit then lift until it pops off the post. ²To remove the leg, slide base release tab, then turn the leg counter-clockwise and lift gently until the leg removes from the base ³Place cover on floor base when the leg is not in place.

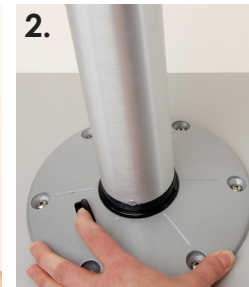

For warranty information please visit www.itc-manufacturersselect.com/warranty

ITC Incorporated • 3030 Corporate Grove Dr. • Hudsonville • MI • 49426

Phone: 616-396-1355 • www.itc-us.com • Doc #: MSTTR1834 • Revision A: 12.04.19