



SOLO TABLET REMOVAL/ INSTALLATION INSTRUCTIONS





Required Tools

#1 Phillips Screw Driver






Tablet Removal





1. Unplug the power cable from the bike.



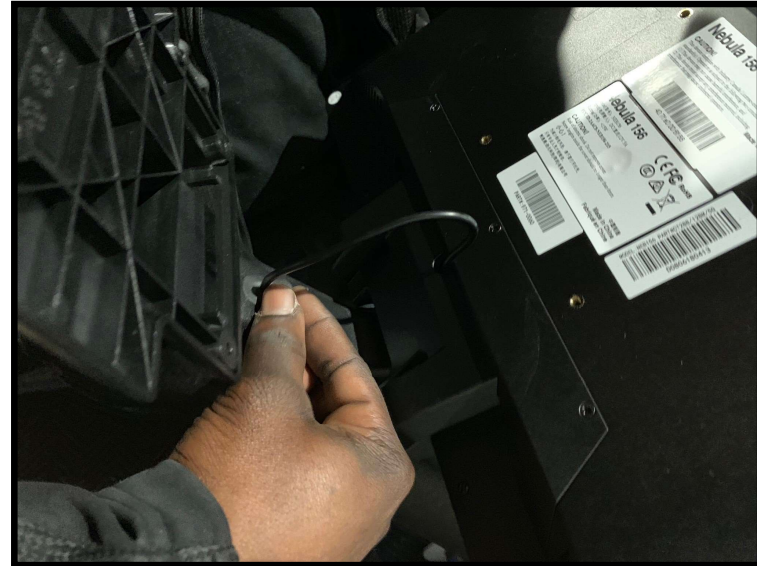

2. Remove the (4) Phillips-head screws from the rear of the tablet. Lay the tablet over and pull out approximately 1 to 2 inches of the power cable from the bracket to give you room to lay the tablet over on top of phone holder.

Note: Keep one hand on the tablet to make sure the tablet is secure while detaching. Make sure not to lose the screws.






3. Remove the three (3) small screws from the port cover.

Note: Ensure tablet is secure while removing screws, to keep tablet from falling. Make sure not to lose screws.




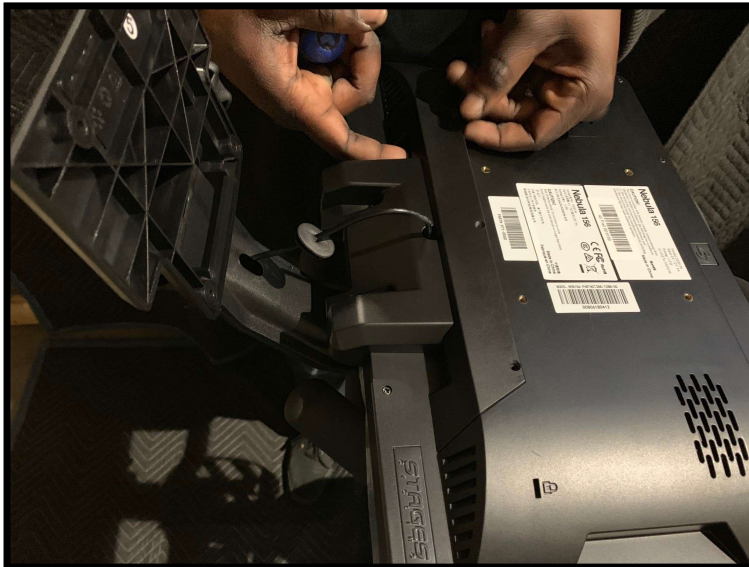

4. Lift and remove port cover from the rear of the tablet.


Note: Ensure tablet is secure while removing cover, to keep tablet from falling.



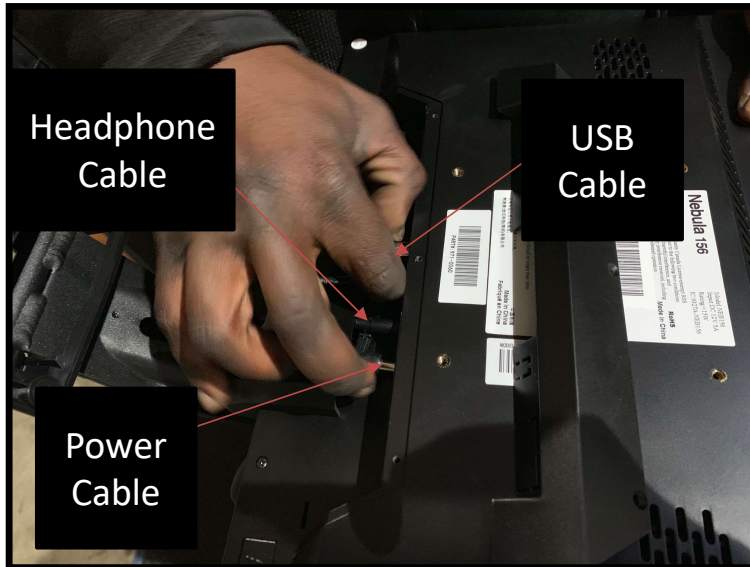

5. Unplug the power cable, USB, and headphone cable from the bottom of the tablet.



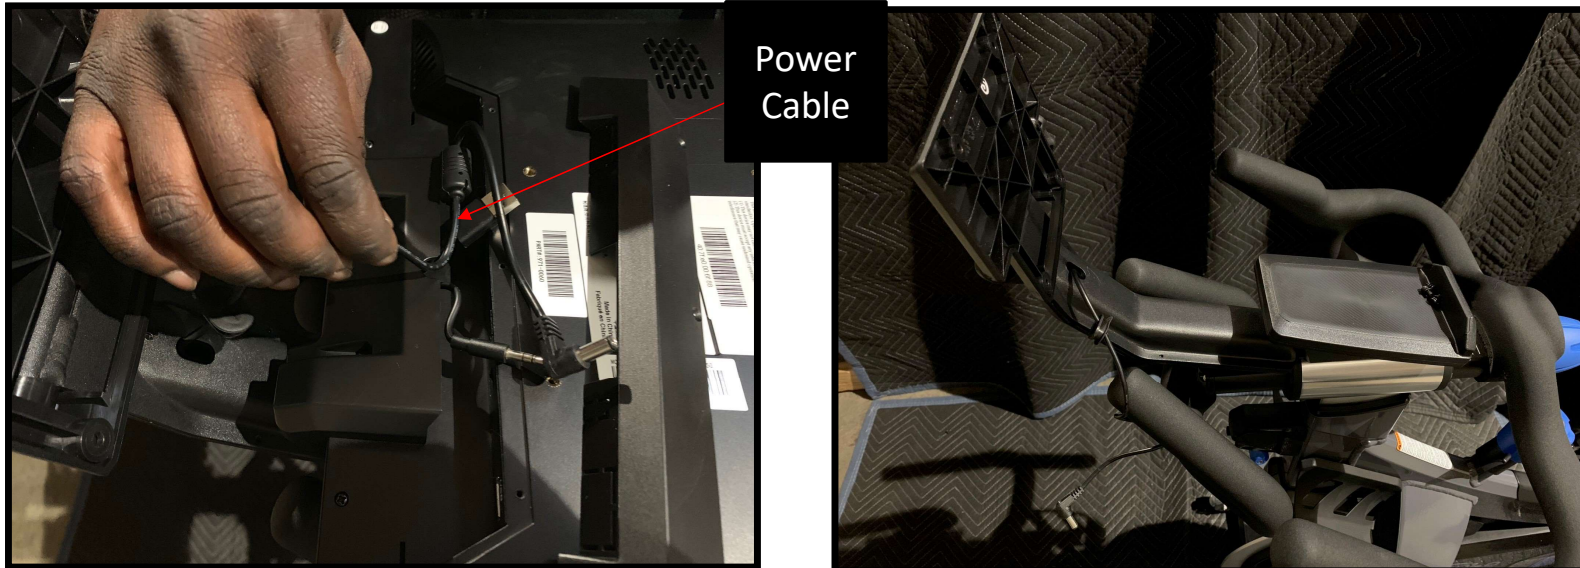

6. Remove the power cable completely from the tablet, then remove the tablet from bike.

Note: Ensure tablet is secure while unplugging power cable, to keep tablet from falling. Power cable will stay with new bike and will be used for new tablet.





7. Reinstall the port cover and all the removed screws back onto the old tablet.





Tablet Replacement






1. Unbox the new tablet and repackage the old tablet into the package in the same manner that the new tablet came out and using the materials from new tablet. Once packaged, tape up the box and affix the return label (provided) and ship back.

Note: If there is no return label enclosed, please contact support@stagesindoorcycling.com or call 800-717-8076.




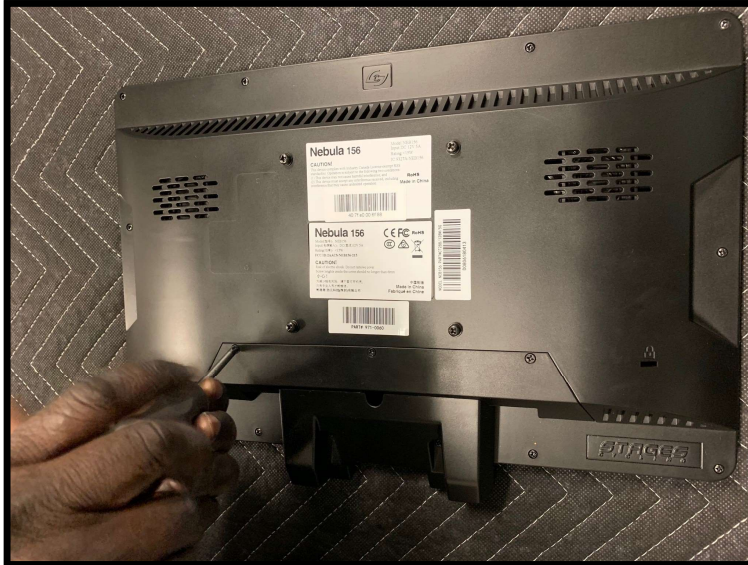

2. Remove the three (3) screws from the port cover and then lift and remove the port cover. Also remove the four (4) Phillips screws from the back of new tablet.

Note: If your new tablet has a power cord attached to it, unplug it from the tablet prior to proceeding to the next step. Make sure not to lose screws.




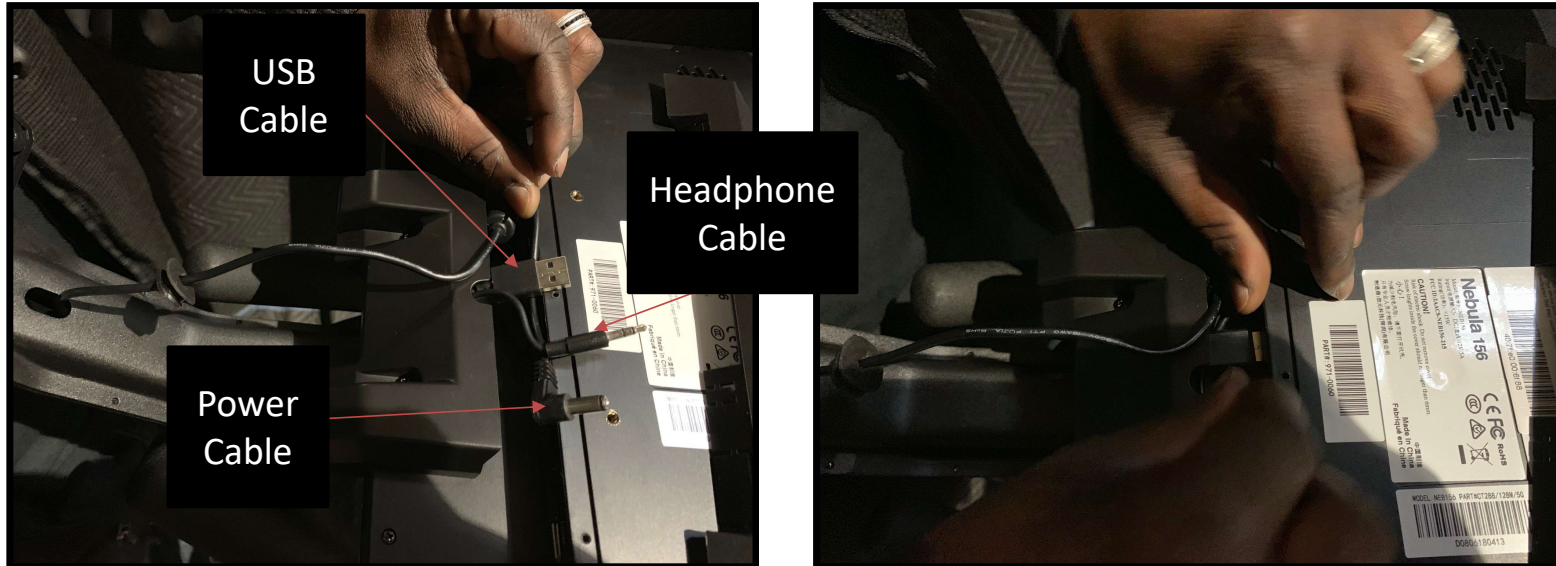

3. Unplug the USB and the headphone cables and then route the power cable from the bike under the USB and headphone cables and plug in. Then, plug in the USB and headphone cables over the power cable on the new tablet.


Note: Ensure tablet is secure while plugging in cables, to keep tablet from falling. Please be careful plugging in cables, not to damage ports as cables are being inserted.



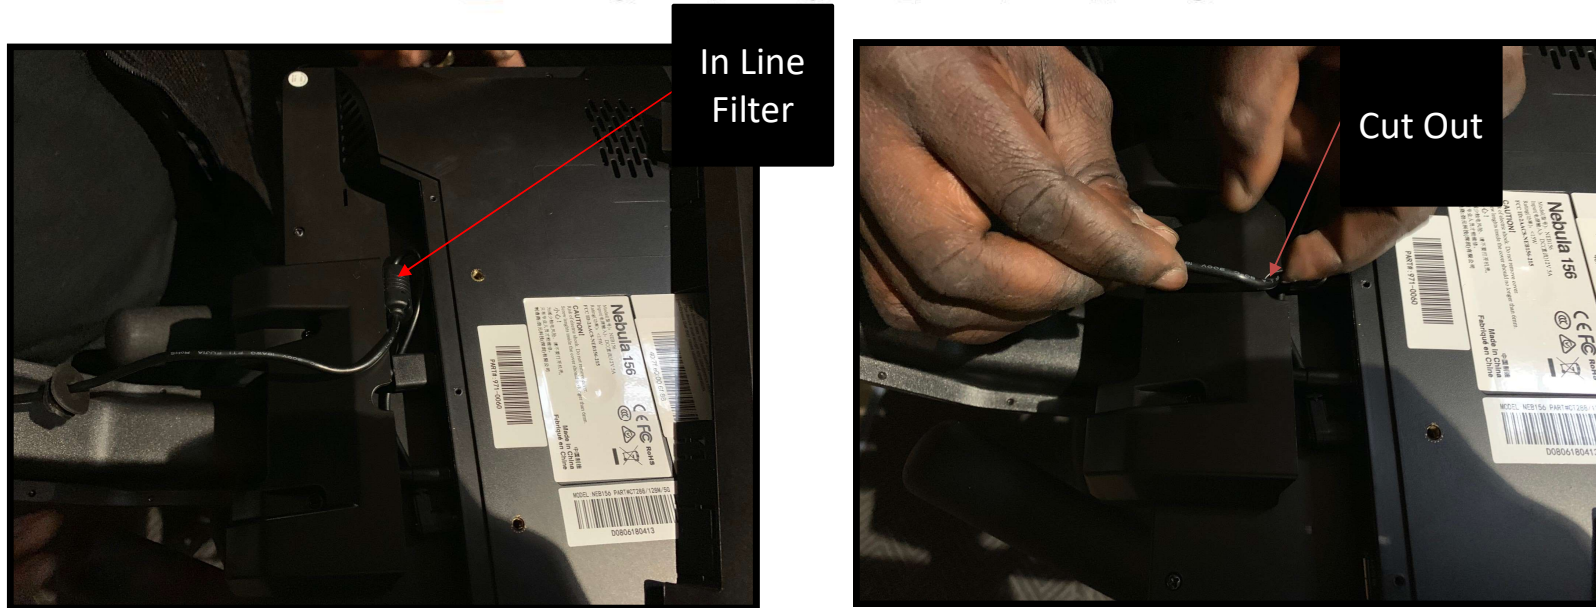


4. Prior to installing port cover, ensure that the in-line filter on the power cable is tucked into the tablet and the power cable is feed through the small cut out on the bottom cover.



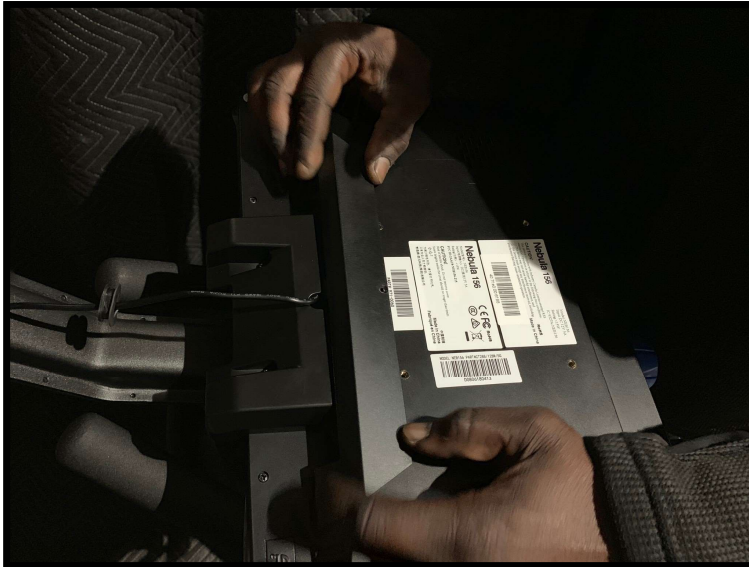

5. Reinstall the port cover onto the tablet with the three (3) small screws and make sure it is flush with the back of the tablet.



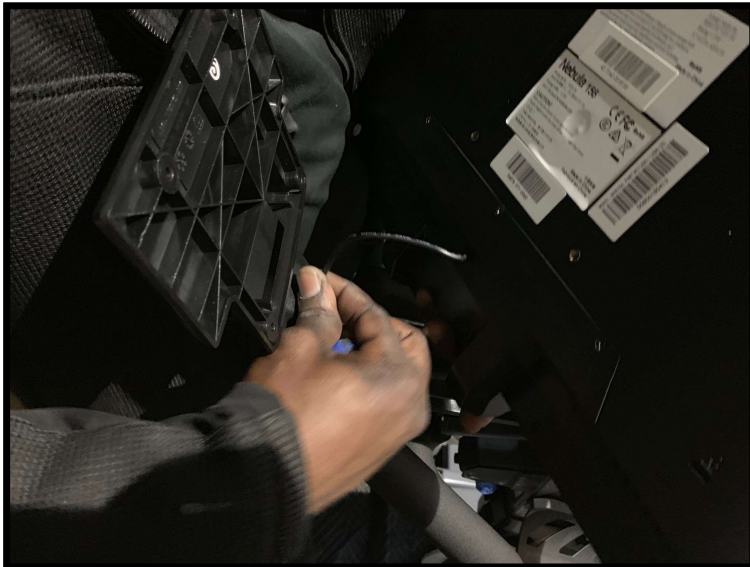



6. Lift up tablet and push the extended power cable back into the tablet bracket (1 to 2 inches pulled out during tablet removal), then reattach the new tablet to the bracket using the four (4) Phillips-head screws.






7. Once the new tablet is reinstalled, plug the power cord back into bike.



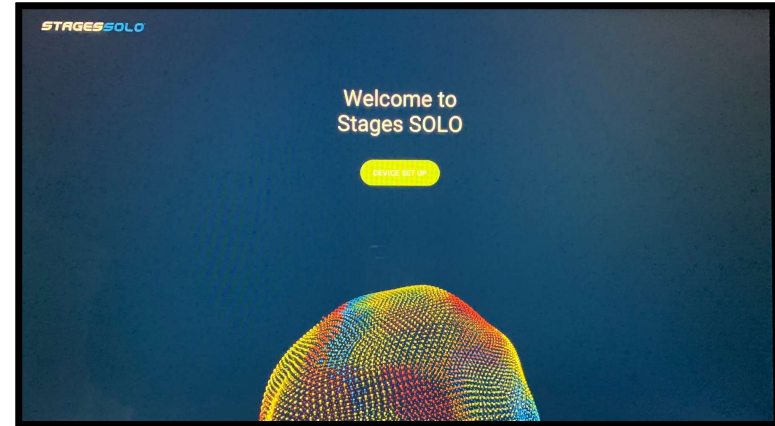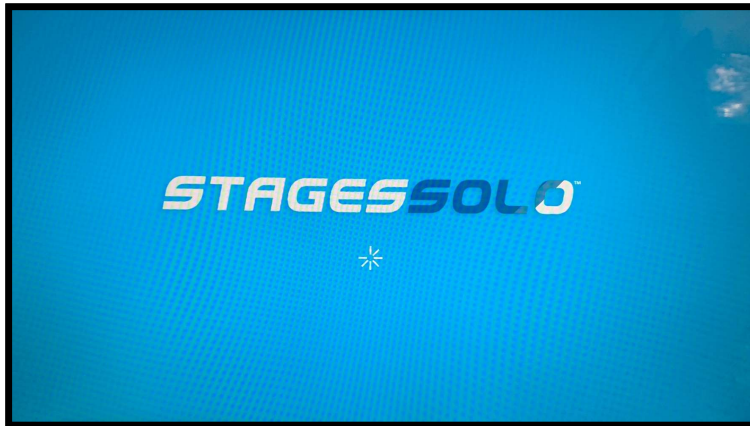

8. Once powered up the “Stages Solo” screen will appear and then the “Welcome to Stages Solo” screen will appear on the tablet. After the “Welcome to Stages Solo” screen appears, press the “Device Set Up” button.





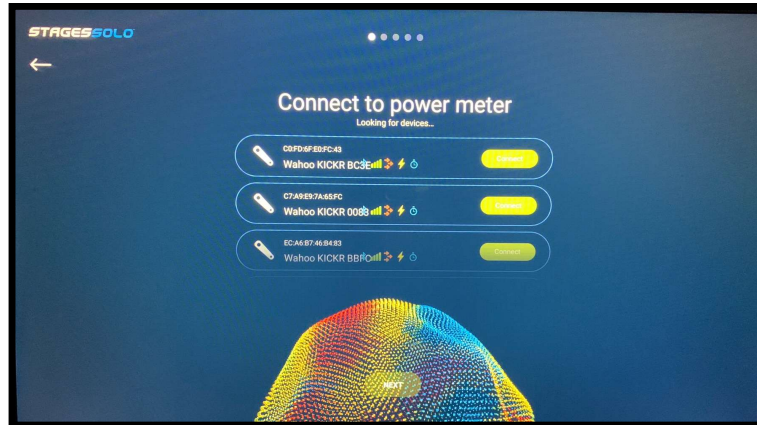

9. The next screen will be the “Connect to power meter” screen. Prior to selecting a power meter you will need to locate the ANT ID on the power meter. It is a 5 digit number on the side of the power meter. Once located pedal the bike to wake up the power meter. Then select the matching ANT ID on the tablet screen. Once connected press the “Next” button.

Note: If your power meter’s ANT ID does not come up on tablet. Use your Phillips screw driver and open the battery door, take out the batteries in the power meter and flip the batteries upside down. Close the battery door and hold down battery door for 5 seconds. Then, reinstall the batteries correctly and tighten battery door. This should allow the ANT ID to be found.





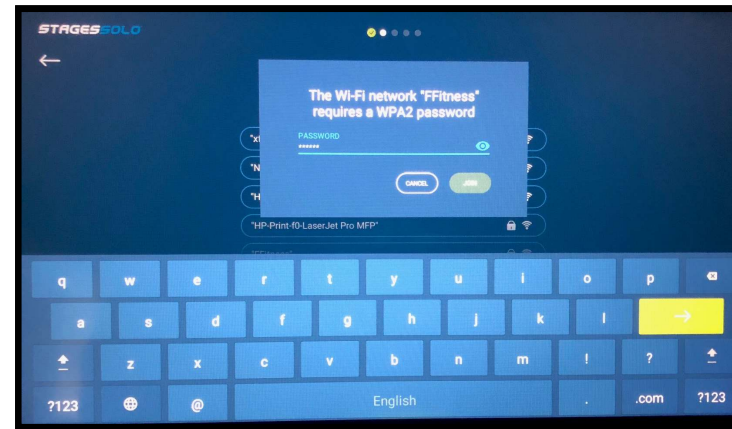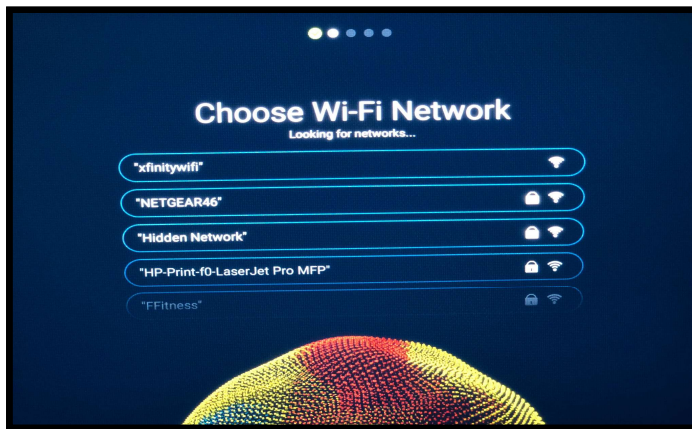

10. Select the WiFi network you are wanting to use. Then, type in the password for the Wifi network being used (if any).

Note: To bring up the keyboard, touch the screen in the password area.





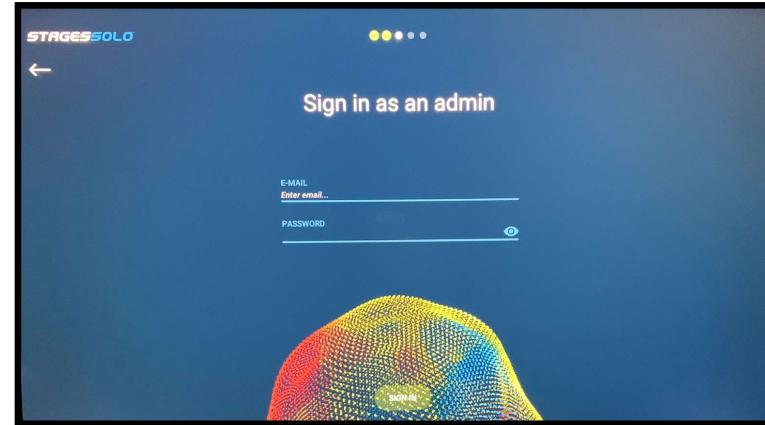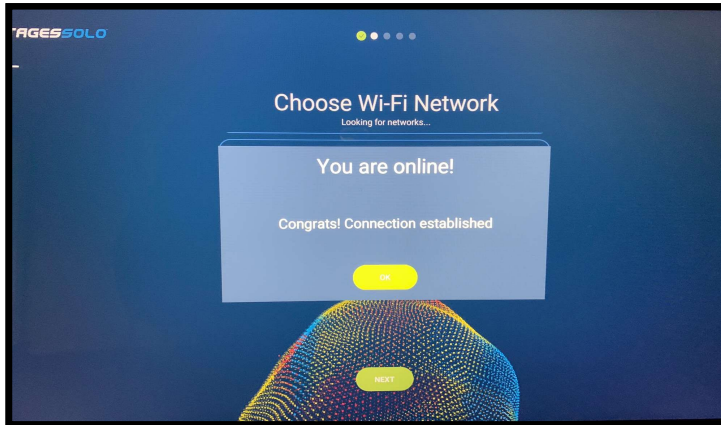

11. Once the “You are online!” screen appears on the screen, press the “Next” button. On the “Sign in as an admin” screen, enter in the email and password and then press the “Sign in” button. The log-in information is that of the Club Admin within the facility. This information was provided prior to installation.

Note: Without the admin sign-in, you will not be able to set up the bike or test the bike. In order to set up the tablet you will need the admin and password assigned to this location.





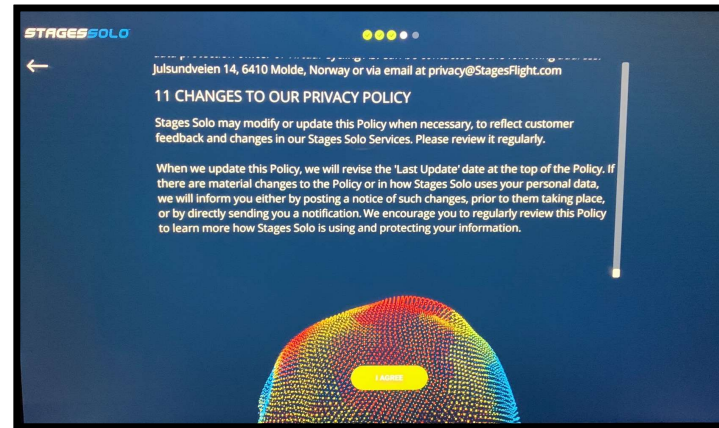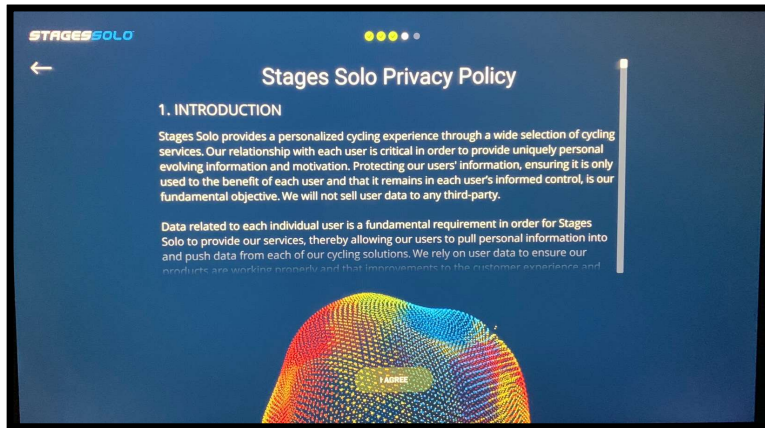

12. Review the Stage Solo Privacy Policy and then press the “Accept” button.

Note: You will need to scroll through the entire form for the “Accept” button to illuminate.





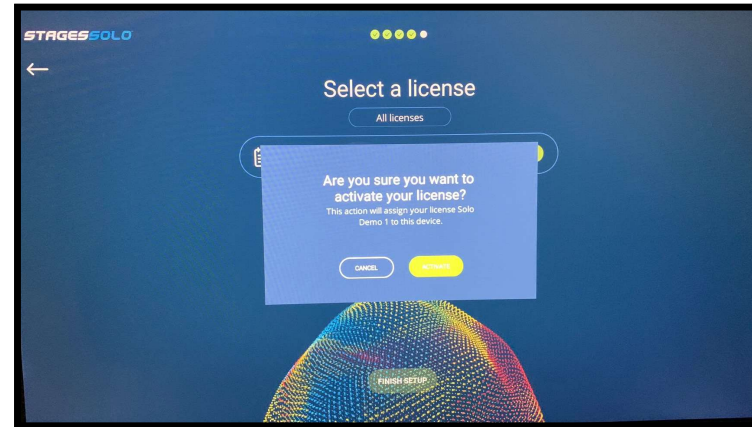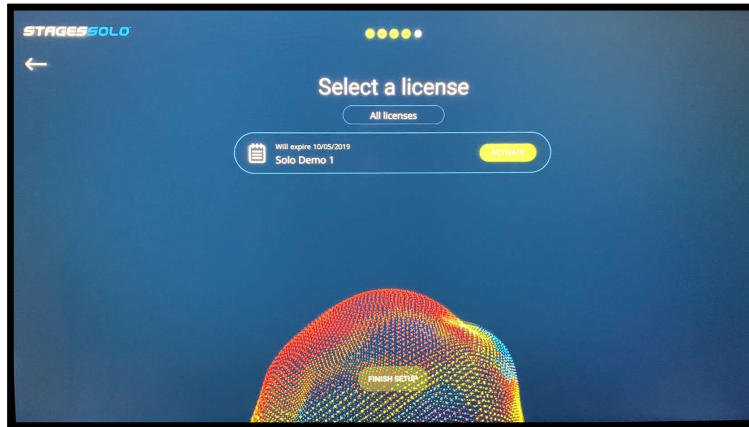

13. Select the license for your “Solo” and then press the “Accept” button to activate your license for your solo bike.

Note: There is one license per tablet. If there is more than one bike at a club, the screen will show the licenses for all the bikes until you accept the license for that bike.





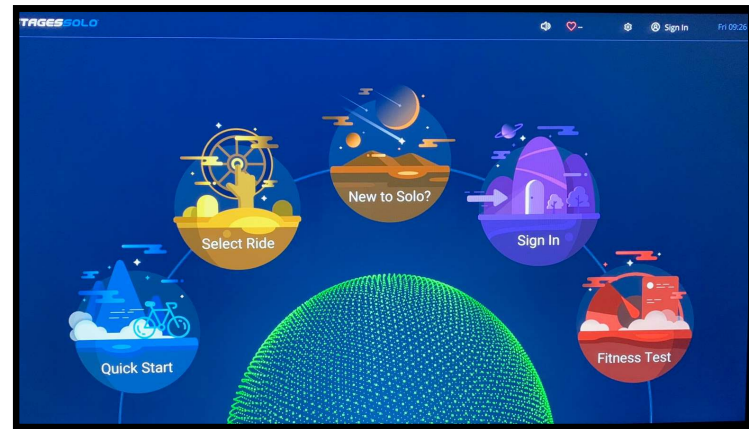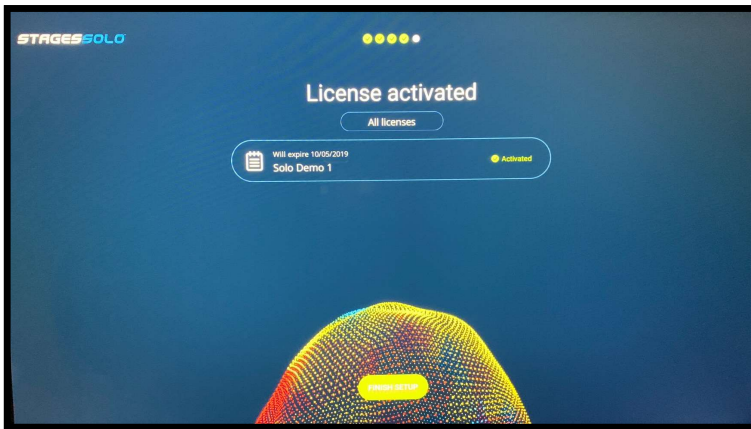

14. From the “License Activated” screen, press the “Finish Setup” button, then it will bring up the select a ride screen.

Now your Solo bike is ready to ride.



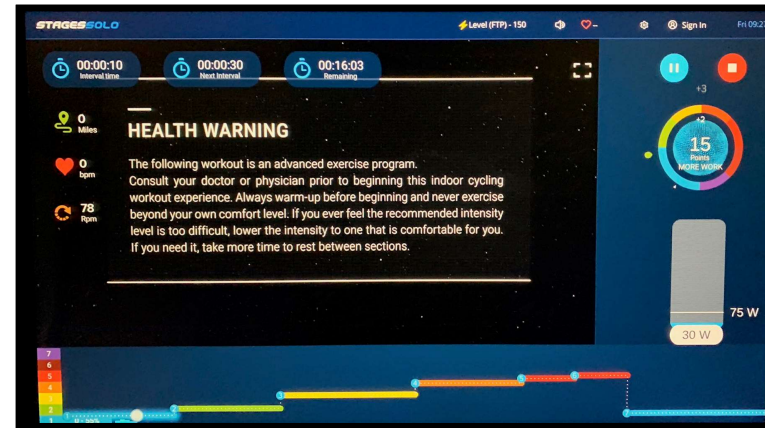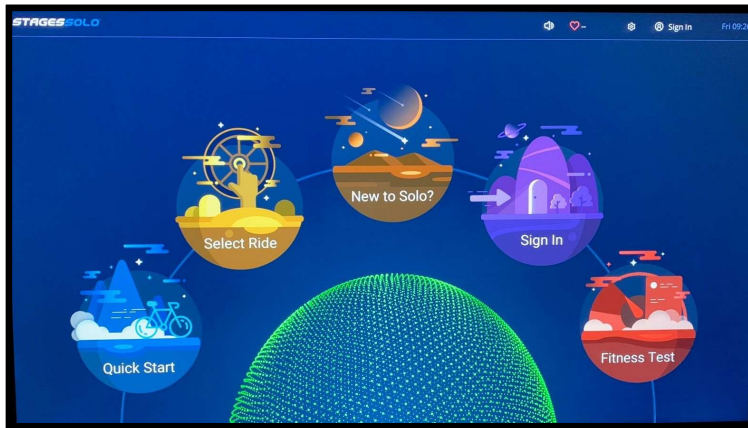

15. Select a ride and ride the bike to make sure it is working. Make sure the wattage and cadence is displaying on the tablet.





Job complete!

Please don't forget to ship back old tablet. If there is no return tag provided please contact support@stagesindoorcycling.com

