



Datomaster
MANUAL WINDING

INSTRUCTION MANUAL

DATOMASTER MANUAL Watch parts

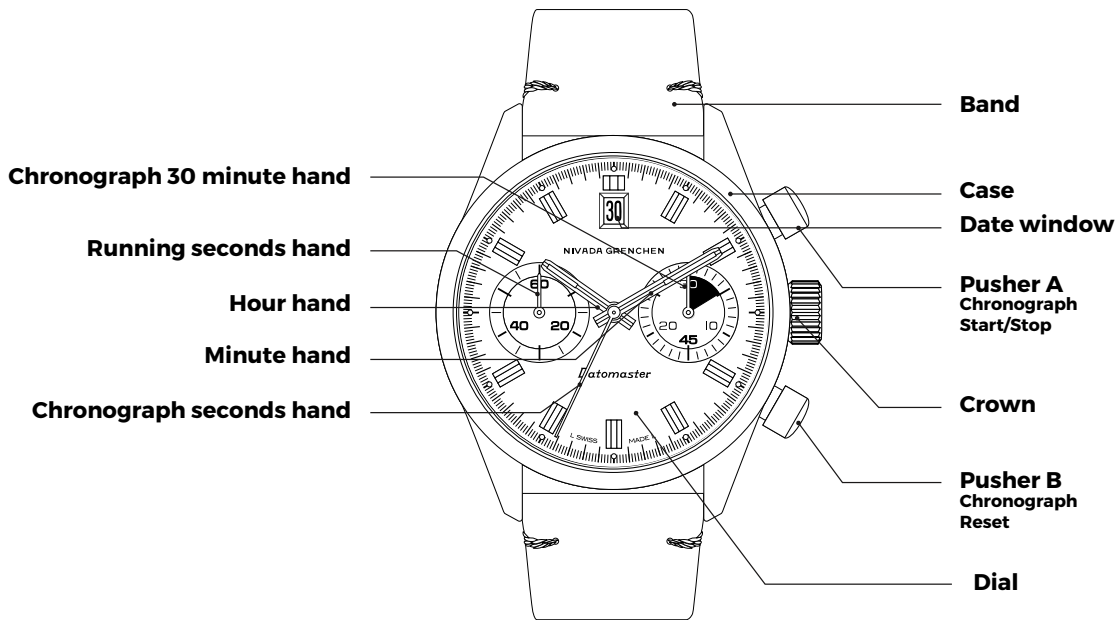

DATOMASTER MANUAL Crown Position

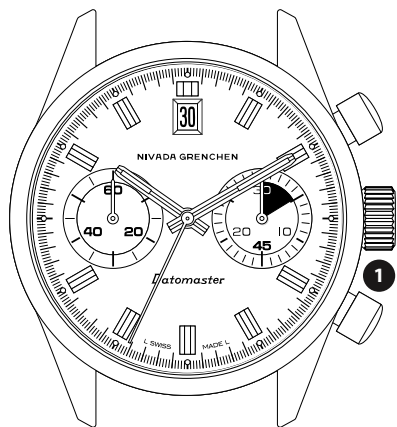


1 Normal crown position

2 Setting the date

3 Setting the time

DATOMASTER MANUAL Manual winding

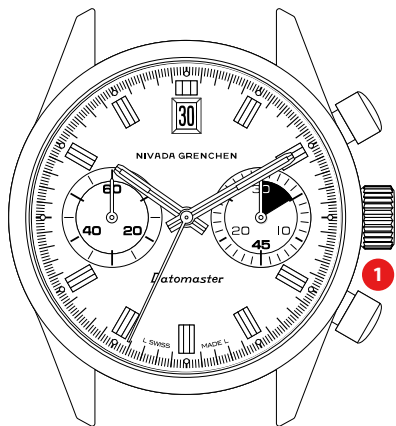


1 Manual winding

Turn the crown clockwise. As you're winding your watch, you will feel a slight resistance which increases as the tension mounts.

Depending on the size of the watch, 20 to 30 forward turns should lead to resistance.

★ *Purely manually wound movements require winding at regular intervals, normally on a daily basis, to keep operating. Take care to stop winding this type of movement at the first sign of resistance as damage may result from over winding.*

DATOMASTER MANUAL Setting the date

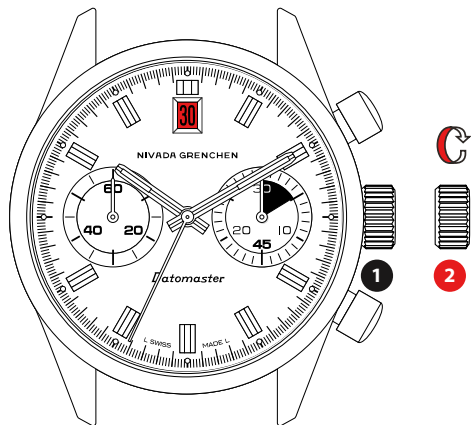


1. Pull the crown out to the **2** position

2. Turn the crown clockwise for date setting

★ *Do not set the date between 9 PM and 3 AM, otherwise the day may not change properly.*

3. Push the crown back into the normal **1** position

DATOMASTER MANUAL Setting the time

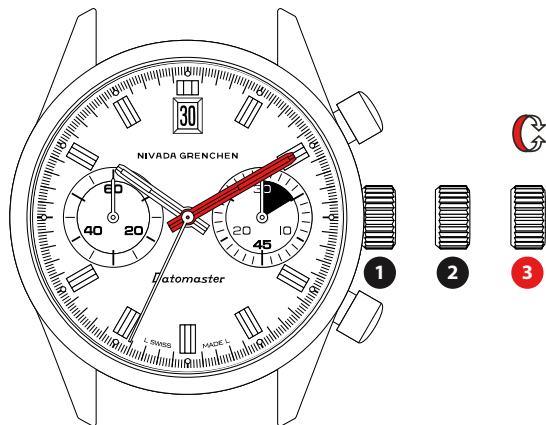

1. Pull the crown out to the **3** position




2. Turn the crown to set minute and hour hands



3. Push the crown back into the normal **1** position

DATOMASTER MANUAL Using the chronograph

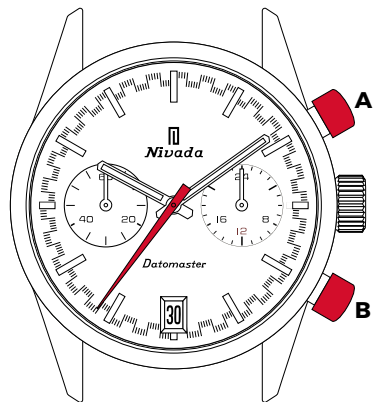

THIS MODEL CHRONOGRAPH FEATURES STOPWATCH THAT CAN MEASURE UP TO 60 MINUTES

1. To start the chronograph: Press the upper pusher A
The chronograph hands will begin to move
2. To stop the chronograph: Press the upper pusher A again.
The chronograph hands will stop and indicate the elapsed time.
(Read the elapsed seconds on the large central hand and minutes on the sub-dial in the 9 o'clock position)
3. To reset the chronograph: Press the lower pusher B to reset the chronograph. All the chronograph hands will be reset to "0" position

*Nivada
Grenchen*