

nutribullet.
BLENDER
COMBO



User guide.

Important safeguards & cautionary information.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet®. When using any electrical appliance, basic safety precautions should always be observed, including the following critical information.

PERSONAL SAFETY

BLENDING WITH NUTRIBULLET® CUPS:

Do not put hot liquids in any of the blending vessels before blending.

WARNING! Start with cool or room temperature ingredients. Heated ingredients can create internal pressure in a sealed blending vessel, which may erupt on opening and cause thermal injury.

Caution must be observed if hot liquid is poured into the product (food processor or blender) as the liquid can be ejected out of the appliance due to sudden steaming.

Never blend carbonated ingredients or liquids. Built-up pressure from released gases can cause container to burst, resulting in possible injury.

WARNING! Never permit any blended mixture to sit inside a sealed vessel without first releasing internal pressure.

Never store the extractor blade on the power base without a cup or vessel attached.

BLENDING WITH THE PITCHER:

Use caution when blending hot liquids in the pitcher.

WARNING! Never turn the power on while using the pitcher without the vented lid cap inserted and locked into the pitcher lid, as ingredients can splash, and if hot or warm, could potentially cause thermal injury and/or property damage.

Friction from the rotating blade will cause ingredients to heat and generate internal pressure in the sealed vessel. Do not continuously operate for more than one minute. If the vessel is warm to touch, allow to cool before carefully opening pointed away from your body.

Remove spoon or other foreign objects before blending.

Never leave the NutriBullet® unattended while it is in use. Close supervision is necessary when any appliance is used by or near children.

WARNING! To avoid risk of electric shock, never immerse the cord, plug, or power base of blender in water or other liquids.

At all times, avoid contact with moving parts.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Switch off the appliance and disconnect from power supply before changing accessories or handling moving parts.
- To reduce the risk of personal injury or damage to the device, keep hands and utensils away from the cutting blade.
- To reduce the risk of injury and leakage, make sure the blade base is securely screwed onto the cup before placing it on the power base and operating the appliance.

Blades are sharp. Handle carefully.

- The use of attachments not recommended or not sold by the manufacturer may cause fire, electric shock, or injury.

WARNING!

WARNING! If you are taking any medication, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before consuming any NutriBullet® recipes.

The following list of seeds and pips contain chemicals that release cyanide into the body when ingested. Do not use the following seeds and pips in the NutriBullet®: apple seeds, apricot seeds, cherry pips, plum pips, and peach pips.

PRODUCT SAFETY

- If the NutriBullet® malfunctions or is dropped, or damaged in any manner, discontinue use and contact Customer Service for further assistance.
- To prevent overheating, never allow the motor to run continuously for more than one minute at a time, as this may cause damage to the motor as well as increase the thermal pressure inside the cup which can cause personal injury.
- Check gasket to make sure it is completely seated in the

blade unit before each use. If seal is damaged, replace the complete blade assembly.

- If the motor stops for any reason, unplug the power base and let it cool for at least 15 minutes as this will reset the internal thermal breaker.
- **Never use the NutriBullet® Blender Combo without adding liquid or when the cup is empty, as doing so may damage the blade.**
- The NutriBullet® is not intended for use in microwave ovens. Do not place the NutriBullet® cups, power base or any accessories in a microwave as this may result in damage to the appliance.
- Use of adapters and converters is considered an unauthorized modification of the product and as such will void the warranty. Use of this product in locations with different electrical specifications may result in damage to the product.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Periodically inspect cord and plug for damage. Do not operate any appliance with a damaged cord or plug.

- Do not pull, twist, or damage the power cord.
- Do not allow the cord to hang over the side of the counter or table.
- Do not allow cord to touch hot surfaces, including stove.
- The NutriBullet® power base is made exclusively to work with the NutriBullet® cups and blades only and not other Bullet branded products such as the Magic Bullet. Use with items not specifically manufactured for the NutriBullet® will void the warranty.

WARNING: VENTILATION CAUTION

WARNING: Always operate the NutriBullet® on a level surface, leaving unobstructed space beneath and around the power base to permit proper air circulation. Slots and openings on the bottom of the product are provided for ventilation to ensure reliable motor operation and to prevent over-heating.

WARNING: to prevent fire hazard, power base openings should be free of dust or lint and never obstructed with flammable materials such as newspapers, tablecloths, napkins, dishtowels, or place mats.

- Always operate the pitcher with the pitcher lid securely in place.

- With recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, seal the pitcher lid with vented lid cap attached, and begin blending. Then, once the ingredients are well mixed, twist open the vented lid cap and carefully pour or drop ingredients into the mixture.
- If you need to push ingredients closer to the blade, **ONLY USE THE TAMPER PROVIDED** with the NutriBullet® Blender Combo. **DO NOT** use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools can make contact with the blade, which may result in damage to the machine, damage to property, and/or possible injury.
- **NEVER USE YOUR FINGERS OR ANY PART OF YOUR HAND TO PUSH INGREDIENTS DOWN TOWARD THE BLADE.** Only use the provided tamper.
- The cyclonic action® of your NutriBullet® requires the use of liquids to make smoothies and other nutritious items. The NutriBullet® is not intended to be used without liquids, or as an ice crusher. **ALWAYS ADD LIQUID** to your recipe.
- We recommend replacing your easy-twist extractor blade every 6 months (depending on

use) or as needed for optimal performance.

- Do not use NutriBullet® outdoors. If exposed to inclement weather elements such as rain or other wet conditions, discontinue use. Unplug the NutriBullet® when it is not in use. Make sure the power base is unplugged before assembling, disassembling, adding additional parts, or cleaning.
- **TO AVOID LEAKAGE, DO NOT OVERFILL THE BLENDING VESSELS!** The pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquid ingredients (lower line). Your NutriBullet® cups are also marked with a MAX line. When filling the blending vessels, make sure your ingredients do not exceed their respective MAX lines. Exceeding the indicated MAX lines can result in leakage, and may lead to dangerous pressurization.
- Never remove cup/blade assembly from the power base until the motor comes to a complete stop. Removing the cup/blade assembly while power base is still running may cause damage the blade coupling or motor gear.

! Save these instructions!

FOR HOUSEHOLD USE ONLY

Contents.



08 What's included

09 Assembly guide

10 Getting started

10 Safety guide

11 Pitcher assembly & use

14 NutriBullet® cup assembly & use

16 Blending control panel.

17 How to use the blending control panel

18 Care & maintenance.

18 How to clean the NutriBullet®

20 How to store

20 Replacement parts


**21 NutriBullet® Blender Combo's
one-year limited warranty**

Thank you for purchasing the NutriBullet®
Blender Combo.

What's included.



700 mL
cup

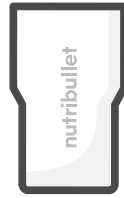

590 mL
cup



to-go lid



pitcher with
integrated blade



easy-twist
extractor blade



pitcher lid with
vented lid cap



motor base



tamper

Assembly guide.



vented lid cap

pitcher lid

easy-pour spout

tamper


pitcher

integrated blade

blender control
panel

motor base

suction cup feet

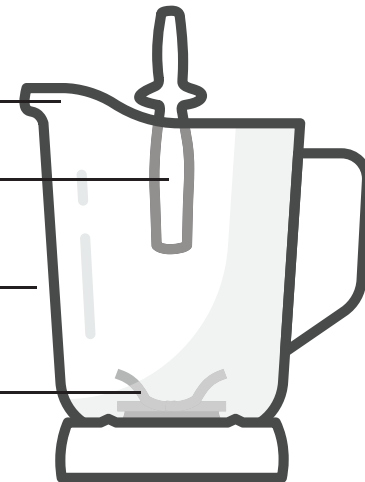

NutriBullet®
cup



easy-twist
extractor blade

Getting started.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Make sure the base is plugged in for use.
- **DO NOT** attempt to operate the pitcher on the appliance without attaching the pitcher lid and vented lid cap.
- Never run the appliance while empty.
- Appliance accessories are not intended to be used in the microwave as it may damage the accessories.
- **Never** leave the appliance unattended while in use.

Never blend hot ingredients when using any sealed NutriBullet® cups.

WARNING: Heated ingredients can pressurize sealed containers when agitated and violently expel hot contents upon opening. Always start the blending process with room temperature or refrigerated ingredients and liquids (21°C/70°F or cooler).




Use extra caution when blending hot liquids in the pitcher.

WARNING: Steam and splatters can escape through the vented lid, potentially causing scalding and/or burns. **NEVER** blend hot liquids in your pitcher without the pitcher lid and vented lid cap attached. The vented lid cap is ventilated to allow steam and pressure to release, while guarding against excess splashing. **NEVER blend hot liquids in your NutriBullet cups or any other sealed vessel.**

When blending hot liquids, add liquid and solid ingredients to your pitcher below their respective MAX lines. Attach the pitcher lid with the vented lid cap inserted. Press the **POWER** icon, then begin blending on the **LOW** setting. Once ingredients are integrated and the mixture is level (no splashing), increase speed as needed.

Pitcher assembly & use.

- 1 Review all warning and caution statements in the Important Safeguards section (pg 2-5) and on the previous page before proceeding to Step 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table.

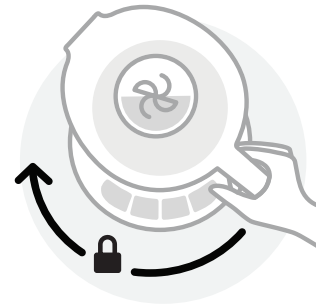


3

Place the pitcher onto the motor base — handle facing to the right of the blending control panel, never towards the back — and gently twist clockwise so it locks in place. When you hear the click, it's locked and ready to blend.

NOTE: If you are left-handed, place the handle facing towards the center of the blending control panel and twist clockwise.

4

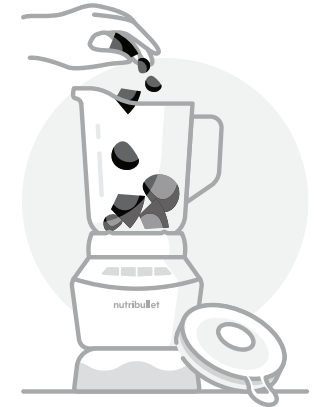

Add ingredients and liquid to the pitcher, making sure they do not exceed the MAX line.

NOTE: Always add liquid. The blending pitcher is marked with two MAX lines: one for solid ingredients (higher line) and one for liquids (lower line). When filling the blender, make sure your ingredients do not exceed their respective MAX lines.


5



Place the pitcher lid with vented lid cap attached on the pitcher, making sure it's aligned to the handle.

6



Plug the power cord into an electrical outlet and press **POWER**  to turn on the blender.

7



To start blending, select a speed or the **EXTRACT** program on the blending control panel. This program will turn off automatically. Buttons will illuminate while in use.

NOTE: Proceed to the blending control panel chart on page 16 for speed definitions.


NOTE: If you need to add additional ingredients while blending, switch the setting to **LOW** and remove the vented lid cap from your pitcher lid, leaving the lid attached. Add ingredients through the hole in the top of the lid, followed by the tamper if necessary. Replace the vented lid cap, then increase to your desired speed. **DO NOT** attempt to add items through the vent hole when blending hot ingredients.



CAUTION: Do not use any apparatus other than the tamper to push ingredients toward the blade. The tamper is specifically designed not to come in contact with the blade. Spatulas, spoons and other tools are long enough to reach the blade, which may result in damage to the machine, damage to property, and possible injury.



8



If the ingredients stick to the side of the pitcher, stop the appliance by pressing **POWER**  and wait for the blade to stop turning. Then remove the pitcher lid and use the tamper to dislodge the ingredients. When finished, replace the lid and continue blending. If the ingredients continue to stick, consider adding a little more liquid.

9



When you have reached your desired consistency, pause/stop the appliance by pressing **POWER**  or the speed you selected and wait for the blades to stop turning. The unit will enter idle-mode. The **POWER**  button will remain illuminated.




WARNING: Blades are sharp. Never insert your hands into the pitcher.

10

Press **POWER**  to turn off the unit completely.


11

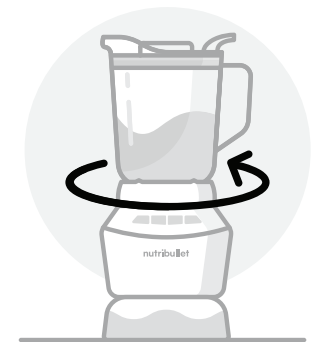

Twist pitcher counterclockwise and lift off the motor base. Pour and enjoy!


NutriBullet® cup assembly & use.

- 1 Review all warning and caution statements in the Important Safeguards section (pg 2-5) before proceeding to Step 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table.

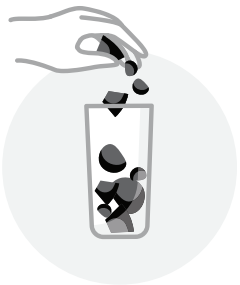

- 3 Add ingredients and liquid to the NutriBullet® cup.

NOTE: Always add liquid. Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.

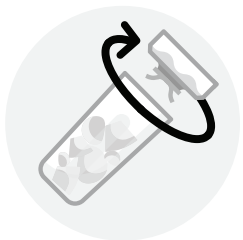

- 4 Twist the easy-twist extractor blade onto the cup until tightly sealed.




WARNING! Handle the easy-twist extractor blade assembly with care, as the blades are sharp.

Never leave the appliance unattended while in use.

NEVER BLEND HOT INGREDIENTS, as doing so may cause excessive pressure buildup, resulting in risk of personal injury and or property damage.

5

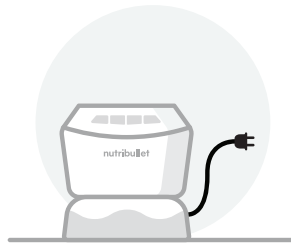

Plug the power cord into an electrical outlet and press **POWER** ⏻ to turn on the blender.

6



Turn the cup upside down and place it onto the motor base, gently turning the cup clockwise to lock into the motor base.

7



To start blending, select a speed or the **EXTRACT** program on the blending control panel. This program will turn off automatically. Buttons will illuminate while in use.

NOTE: Proceed to the blending control panel chart on page 16 for speed definitions.

8



When you have reached your desired consistency, pause/stop the appliance by pressing **POWER** ⏻ or the speed you selected and wait for the blades to stop turning. The unit will enter idle-mode. The **POWER** ⏻ button will remain illuminated.

NOTE: speeds will automatically shut off after 60 seconds.

- 9 Press **POWER** ⏻ to turn off the unit completely.

10



Unlock the assembly by gently twisting the cup counterclockwise. You will hear a click. Enjoy!

NOTE: Blending should not require longer than one minute to yield smooth and creamy results.



CAUTION

Do not remove the easy-twist extractor blade from the NutriBullet® cup until blending has completely ceased. Do not use the easy-twist extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. When storing contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

Care & maintenance.

Cleaning the NutriBullet® is easy. The pitcher is dishwasher-safe while the cups and to-go lids are **TOP RACK** dishwasher-safe. The easy-twist extractor blade and motor base can be quickly hand-washed with soap and water. Read on for best practices.

Here's how to clean the NutriBullet®:

STEP 1:

The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories during cleaning, and any time you leave the machine unattended.

STEP 2:

Detach the NutriBullet® cup / easy-twist extractor blade or pitcher from the motor base.

STEP 3:

Clean the individual components (motor base, easy-twist extractor blade, NutriBullet® cups) as recommended in the following pages.

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the motor base while the NutriBullet® Blender Combo is plugged in.
- Do not attempt to remove any pieces from the motor base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the motor base, wipe with a damp sponge and warm water.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.



WARNING: Never submerge the motor base in water.

EASY-TWIST EXTRACTOR BLADE:

- Blades are sharp! Handle the easy-twist extractor blade with care when cleaning! It is best to clean blades immediately after use to reduce buildup of residue. If food particles get stuck, use a small brush or sponge to target and dislodge them.
- **Do not remove any components of the easy-twist extractor blade;** this can result in permanent damage to the blade, resulting in leakage when blending. If, over time, the easy-twist extractor blade becomes loose or damaged, you may order a new easy-twist extractor blade at nutribullet.com or contact customer service.
- Dry the easy-twist extractor blade completely after every use.
- Regularly check the condition of the bottom of the blade for cracking or breakage. If damaged, replace easy-twist extractor blade immediately to prevent possible personal injury.

NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the cups — heat this high can warp the plastic.

NUTRIBULLET® PITCHER:



WARNING: Blades are sharp! Use caution when cleaning the pitcher.

- The pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing in the dishwasher. **NEVER** use the sanitize cycle to wash the pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the pitcher with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.
- Regularly check the structure of the pitcher and twisting threads for cracking, crazing, or breakage.

If damaged, replace immediately to prevent possible personal injury.

- **NEVER USE A PITCHER THAT DOES NOT PROPERLY ALIGN WITH THE BLADE.**

Doing so may cause the pitcher and motor base to separate, exposing the blade assembly and potentially causing severe personal injury.

TAMPER

- Always hand-wash the tamper with soap and water. Stuck-on ingredients might require extra scrubbing from a dish brush or sponge.

STUBBORN CLEAN UP:

If ingredients get stuck to the NutriBullet® cups, easy-twist extractor blades, or pitcher, here's an easy cleanup solution: fill the vessel with room temperature (21°C/70°F or less)

water to its MAX line and add 1-2 drops of dish soap. For cups, twist on the easy-twist extractor blade, and blend on the motor base for 20-30 seconds. For the pitcher, attach lid and blend on the motor base for the same amount of time, 20-30 seconds. This should loosen debris enough to scrub away with soap and water.

How to store:

Store the NutriBullet® Blender Combo pitcher upright with the pitcher lid secured on top. Do not place anything on top of the pitcher lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm.



WARNING: NEVER store the easy-twist extractor blade on the motor base without a NutriBullet® cup or the pitcher as the exposed blades pose a serious laceration hazard.

Replacement parts.

To order additional parts and accessories, please visit our website at [nutribullet.com/shop/accessories](https://www.nutribullet.com/shop/accessories) or feel free to contact customer service: **1.800.523.5993**.

Nutribullet® Blender Combo one-year limited warranty.

LIMITED WARRANTY FOR NUTRIBULLET®

NutriBullet's limited warranty obligations are confined to the terms set forth below:

NutriBullet, LLC ("NutriBullet") warrants this NutriBullet® against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds.

If a defect exists, and NutriBullet® is obligated under this limited warranty, at its option NutriBullet® will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally

equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a one-year warranty from the date of repair. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes NutriBullet's property. When a refund is given, your product becomes NutriBullet's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply call our customer service department at 1-800-523-5993 or contact us via email from our website at [nutribullet.com](https://www.nutribullet.com), simply click the contact us link, fill out and submit the customer contact form and we will be glad to help you. When you contact our customer service department you will be asked for your name, address, telephone number and to provide proof of

the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate NutriBullet® serial number(s). Before you send your product for limited warranty service please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This NutriBullet® One-Year Limited Warranty applies only to NutriBullet® products distributed by or for NutriBullet® that can be identified by the “NutriBullet” trademark, trade name, logo and bar code. NutriBullet® Blender Combo’s One-Year Limited Warranty does not apply to any other products that may appear to be authentic, but were not distributed/sold by NutriBullet, LLC.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product

is used in a commercial or institutional setting.

This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. NutriBullet, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state. NutriBullet® is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply: (a) to damage caused by accident, abuse, misuse, or misapplication; (b) to damage caused by improper maintenance (including unauthorized parts service); (c) to a product or a part that has been modified in any way;

(d) if any NutriBullet® serial number or trademark has been removed or defaced; and or (e) if the product has been used with an adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. NUTRIBULLET® SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF NUTRIBULLET CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No NutriBullet® reseller, agent, or employee is authorized to make any modification to this warranty.

NUTRIBULLET IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY

BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT AND PROPERTY. NUTRIBULLET® SPECIFICALLY DOES NOT REPRESENT THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

NutriBullet, LLC | All rights reserved.

NutriBullet and the NutriBullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

220-240VAC 50-60Hz 1000W

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

190000_NBF00000-1008DG