
# MY FIRST TRIKE OWNERS MANUAL & ASSEMBLY INSTRUCTIONS

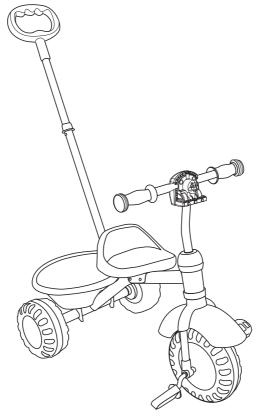

Thank you for your purchase this product. If any parts are missing or damaged, please contact one of our

Customer Service Representatives by phone on

1800 632 792 Australia

0800 632 792 New Zealand

spares@hunterleisure.com.au

#### Hyper Extension Pty, Ltd

100 Keilor Park Drive

Tullamarine, Victoria, 3043, Australia

### DO NOT RETURN THIS PRODUCT TO THE STORE!

1

## **SAFETY INFORMATION & SERVICE**

### **WARNING:**

THIS MANUAL CONTAINS IMPORTANT SAFETY, ASSEMBLY AND MAINTENANCE INFORMATION. Keep this manual for future reference.


**ASSEMBLY MUST BE COMPLETED BY AN ADULT.** Obtain the required tools and then follow the assembly instructions in this manual. If you do not have the required tools or have trouble understanding the instructions, we recommend that you seek assistance by an experienced bicycle mechanic.


FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE SERIOUS INJURY.

### **WARNING:**

- · Adult assembly required.
- Contents of this package include small parts used in the assembly of this product. These parts could be ingestion hazards for small children.
- This product should only be used under direct adult supervision.
- Always wear helmet, knee & elbow pads when riding.
- Use only on smooth, flat paved and dry surfaces, free of sand, gravel or dirt.
- Do not ride at night or in areas of traffic.
- Check and secure all fasteners before every ride.
- Replace worn and broken parts immediately.
- Recommended for children age: 3 to 6 years
- RECOMMENDED FOR RIDER UNDER 20KGS


## **PARTS LIST**

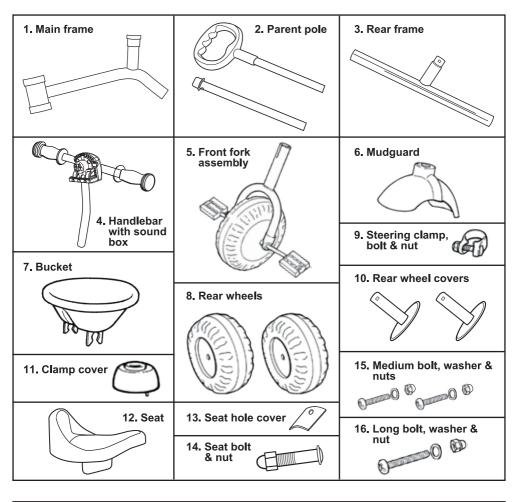


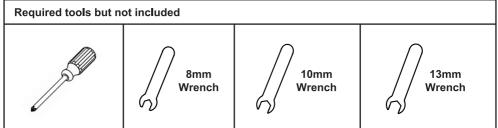

#### 1. FRONT WHEEL

Slide the upper part of the front fork through the hole in the mudguard and the hole in the head of the main frame – make sure that the steering lock tab on the mudguard faces forward and locates into the slot in the underside of the frame head.

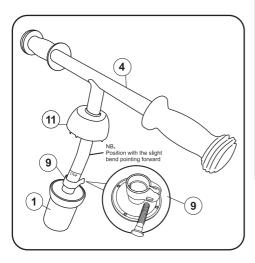

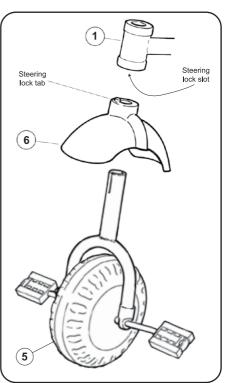


#### 2. HANDLEBARS

- 1. Slide the clamp cover up onto the handlebar stem. Slide the steering clamp onto the top of the fork stem. Then push the handlebar stem down into the top of the fork stem as far as the STOP marks.
- 2. Set the handlebars at right angles to the front wheel and, with the clamp adjusting barrel facing rearwards, tighten the clamp and ensure the handlebars are locked into the forks.
- 3. Slide the cover down over the clamp ensuring the lugs locate into the slots in the frame head.


#### 3. REAR WHEEL

- 1. Push one rear wheel cover through one of the rear wheels and then into one end of the rear frame (with the recess in the wheel facing outwards). Align the hole in the rear wheel cover with the holes in the rear frame.
- 2. Push a medium sized bolt through the aligned holes of the rear frame and rear wheel cover. Put a washer on the bolt, add a nut and tighten.
- 3. Repeat with the other rear wheel.

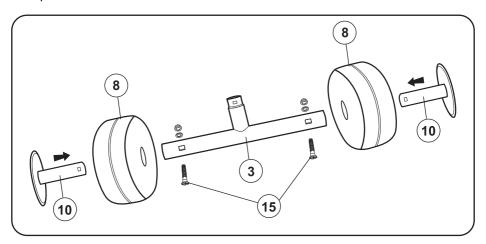

### 4. BUCKET


- Push the rear frame into the main frame then locate the bucket so that the holes in all three parts are aligned.
- Push the long bolt through the hole in the bucket and then through the holes in the frame and rear frame.
- 3. Add the washer and nut and tighten.

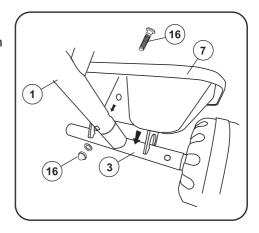

#### 5. SEAT


- 1. Push the seat bolt through the hole in the seat.
- 2. Push the bolt through one of the holes in the main frame. There are two holes in the main frame, the front one is for a smaller child and the rear one for a taller child.
- 3. Locate the seat hole cover over the bolt ensuring that the peg on the other side goes into the unused hole.
- 4. Add the nut and tighten.


2

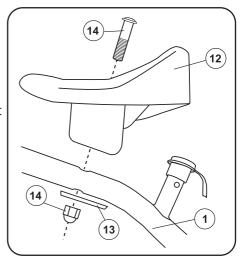

### 6. PARENT POLE

- 1. Push the two pieces of the parent pole together ensuring the spring clip locates into the retaining hole.
- 2. Push the parent pole into the main frame bracket ensuring the spring clip locates into the retaing hole.

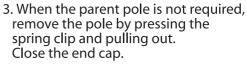

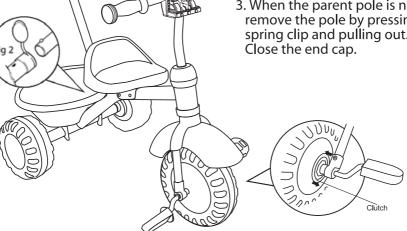

WARNING: The Trike should never be used with the parent pole partially assembled.


### 7. USING THE CLUTCH

The clutch on the front wheel is used to change the way in which the pedals are used.

- 1. When using the parent pole, pull the clutch COMPLETELY out, away from the front wheel. This allows the trike to be pushed without the pedals moving.
- 2. When the parent pole is not in use, push the clutch COMPLETELY in, towards to wheel. This allows the trike to be moved by pedalling.

#### 8. SOUND BOX

- 1. Unscrew the screw on the back of the sound box.
- Open the battery cover and insert
   AAA batteries (NOT included).
   Ensure batteries are inserted correctly according to diagram on the sound box.
- 3. Replace the cover and screw back on.

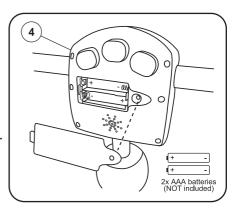

IMPORTANT: Please check all screws and fittings are secure before giving to your child.

#### DO NOT LEAVE THE TRIKE OUTSIDE.

WARNING: Protective equipment should be worn. Not to be used in traffic. 20kg max.

Hyper Extension recommends the use of protective pads and helmet when using this product.

WHEN THE PARENT POLE IS NOT IN USE, THE CLUTCH MUST BE PUSHED IN SO THAT THE PEDALS CAN BE USED TO MOVE THE TRIKE AND ALSO TO STOP IT BY ACTING AS A BRAKE ON THE FRONT WHEEL.