

Product Limited Warranty

Labelmate USA warrants to the original end-user customer that Labelmate USA products will be free from defects in materials and workmanship for the duration described herein below. Labelmate USA's Limited Warranty covers only those defects that arise as a result of normal use of the products and does not cover any other problems, including those that arise as a result of: (i) improper maintenance or modification; (ii) parts or supplies not provided or supported by Labelmate USA; (iii) operation outside the products' specifications; or (iv) unauthorized repair, modification or misuse. Use of any unauthorized accessory or attachment will void coverage.

The Warranty period for all products commences the date of shipment from Labelmate USA and accrues to the original end-user customer. Warranty coverage is non-transferable and terminates immediately upon rental, resale or any other change in ownership. Original purchase documentation should be retained for Warranty coverage verification.

In the event Labelmate USA substantiates, during the applicable Warranty period, a defect in any product which is covered by Labelmate USA's Warranty, Labelmate USA shall repair or replace the product, at Labelmate USA's option. Labelmate USA retains sole discretion to determine whether or not a product is defective. In no event shall Labelmate USA have any obligation to repair or replace until the customer returns the defective product to Labelmate USA. The customer assumes any and all responsibility and liability associated with transportation of products for service under this Warranty.

WARRANTY PERIOD	PRODUCTS COVERED
5-Years	"CAT" and "Mini CAT" Label Rewinders "UCAT" Label Unwinders
3-Years	Label Counters (<i>Excluding Counter Displays and Encoders</i>) Label Dispensers (<i>Excluding Counter Displays</i>) Label Slitters (<i>Mechanical Parts Only - excluding Counter Displays</i>) Reel-to-Reel Machines (<i>Excluding Counter Displays and Encoders</i>) Print Mechanisms (<i>Excluding Counter Displays and Encoders</i>) Bottle Label Applicators (<i>Excluding Polyurethane Rollers</i>) Quick-Chucks
1-Year	Power Supplies, AC/DC Adaptors and Transformers Counter Displays Encoders Any other products or parts not specified herein
180-Days	Out-of-Warranty Repairs

In the event your product requires service or you have questions regarding Warranty coverage, please call toll-free (877) 833-7149 inside the United States, or +1 (702) 435-8535 outside the United States.

LABELMATE MAKES NO OTHER WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND/OR FITNESS FOR A PARTICULAR PURPOSE. NO OTHER PERSON, AGENT, DEALER OR RESELLER IS AUTHORIZED TO GIVE ANY WARRANTIES ON BEHALF OF LABELMATE. ANY OBLIGATION TO WARRANTY OTHER THAN THAT SPECIFICALLY ADDRESSED HEREIN IS EXPRESSLY DISCLAIMED.

LABELMATE USA LLC

12A Sunset Way, Henderson, NV 89014 USA

(702) 435-8535 FAX (702) 435-8536

Toll-Free (877) 833-7149 in USA!

support@labelmateusa.com

www.labelmateusa.com



LABELMATE USA LLC

BOTTLEMATE-712

Manual Label Applicator for Bottles and other Cylindrical Objects



Remove all parts from shipping container and verify contents.

Package Contents


- User Manual (this document)
- BOTTLEMATE-712
- Flanges for Supply Roll (x2)
- Crank Handle (x1)
- Knurl Knobs (x2)

Retain the Shipping Container and Packaging for Storage and Transport.

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •


1 SET-UP APPLICATOR & ADJUST HEIGHT

- (A) Install the Crank Handle onto the feed roller.
- (B) Install and tighten the two Knurl Knobs - **DO NOT OVERTIGHTEN**
- (C) Place bottle onto rollers and adjust Locking Lever to position rollers so that the bottle rests 1 - 2mm above the chassis edge.
- **NOTE:** Locking Lever Handle may be repositioned by pulling it away from the Chassis and turning to the desired position.

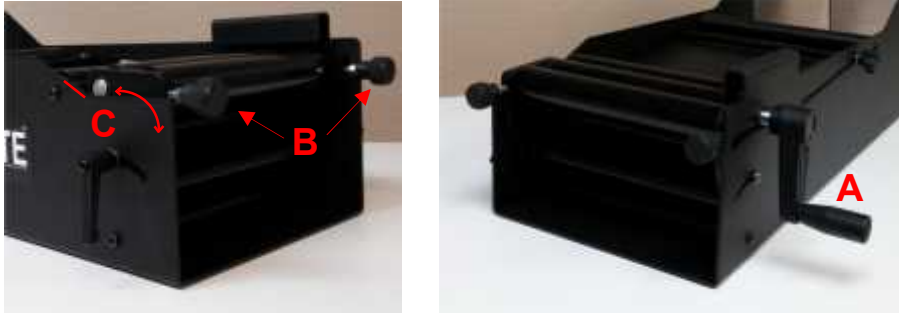


2 LOAD AND POSITION LABELS

- (A) Place roll of labels onto Supply Roller.
- (B) Slide Flanges onto supply roller on either side of label roll.
- (C) Position label roll for desired label placement on bottle.
- (D) Feed labels under Guide Roller, across Platen and under Label Position Guide Rod.
- (E) Continue feeding labels under Roller and over Strip Plate
- (F) Feed labels under Advancement Roller and over Pressure Roller. Loosen the two Knurl Knobs to feed labels between Advancement Roller and Pressure Roller. Gently retighten Knurl Knobs so that labels cannot slip.

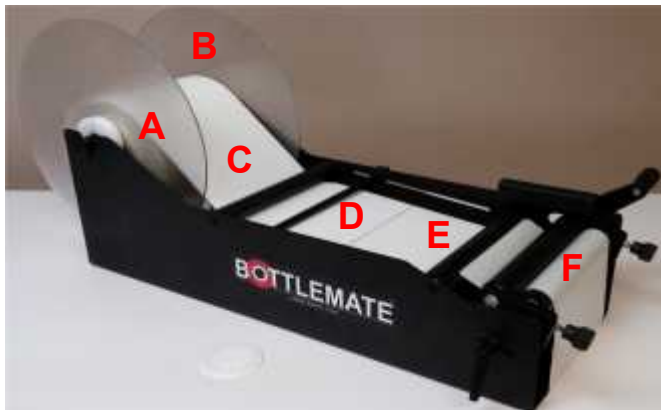

3 SET LABEL

- (A) Turn Crank Handle until leading edge of first label is approximately 2mm above the Strip Plate.
- (B) Place the Label Position Guide Rod directly over the gap between labels.

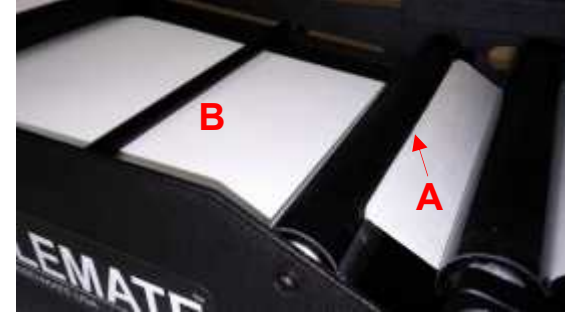

4 APPLY LABELS

- Place bottle on rollers and turn Crank Handle to apply labels.
- Stop turning when Label Position Guide Rod is over the gap between the next labels.



BOTTLEMATE SPECIFICATIONS

Maximum Label Width	Minimum Label Width	Maximum Label Length	Maximum Roll Dia.	Core Dia.	Maximum Bottle Dia.	Minimum Bottle Dia.
7"	0.25"	37"	12"	1" - 6"	12"	0.3"

WARNING

Rollers must remain dry and should only be cleaned with rapidly evaporating liquids.

Store BOTTLEMATE-712 in cool dry location.

