

---

## Flow Chair

Operating Instructions


# Flow Chair

## Operating Instructions




### A: Armrest Height Adjustment

While seated, grasp each armrest and raise to your desired height. In order to lower the arm, lift the armrest to its highest position and it will go back down to the lowest height. Then repeat to get to your desired height.

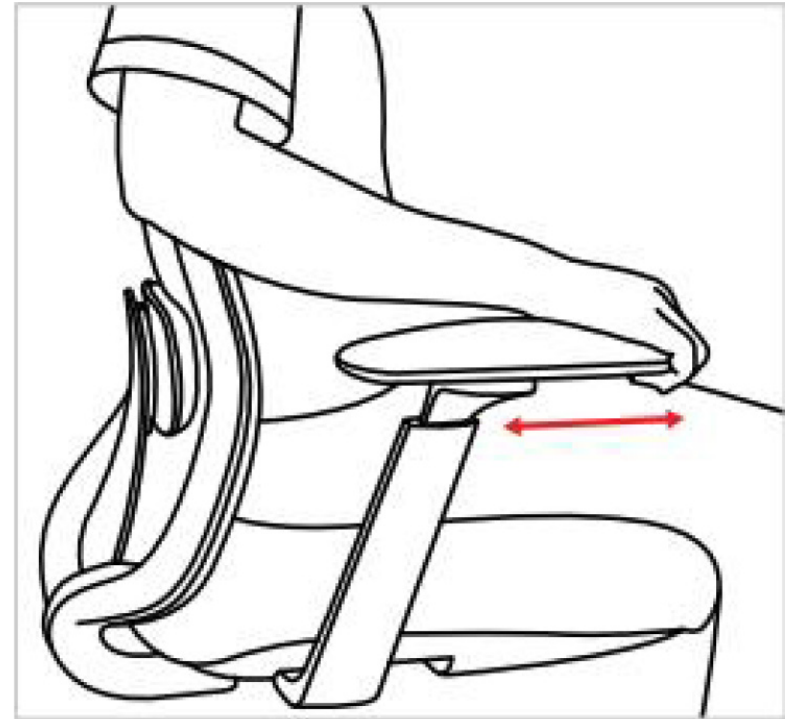


### B: Arm Pad Forward and Backward Adjustment

While seated, push the arm pad forward or backward to a desired position.

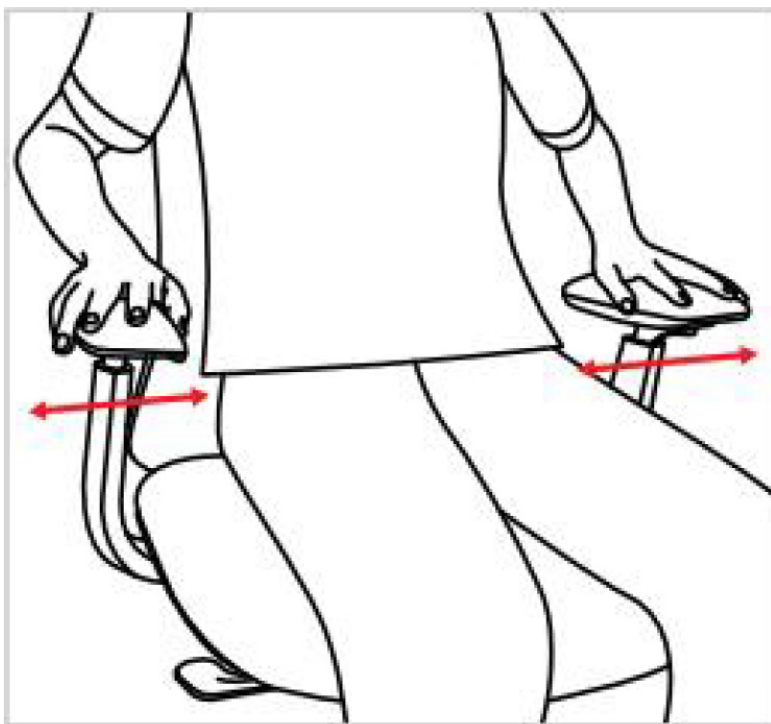

### C: Arm Pad Horizontal Adjustment

While seated, each armrest horizontally slides inward and outward from the center.

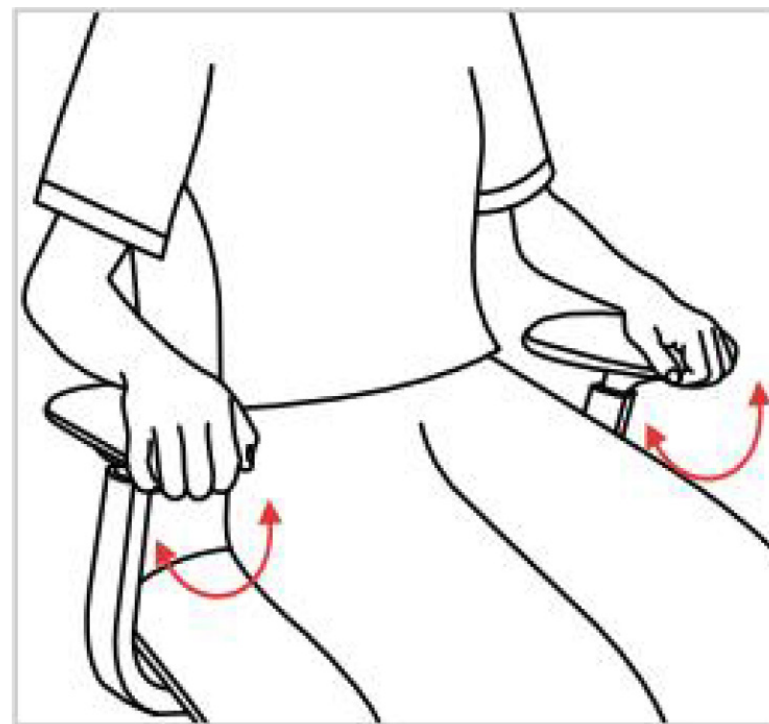

### D: Arm Pad Angle Adjustment

While seated, each arm pad can be rotated inward or outward.

# Flow Chair

## Operating Instructions



### E: Seat Height Adjustment


While seated, pull the single control lever upward and hold it while raising or lowering the seat to reach your desired seat height. When the lever is released to its original position, the seat height is locked.



### F: Backrest Tilt Angle Adjustment

While seated, pull the single control lever completely backward and lean against the back. When your desired angle is achieved, return the lever to the original middle position to lock your tilt angle into place. There are 4 positions.



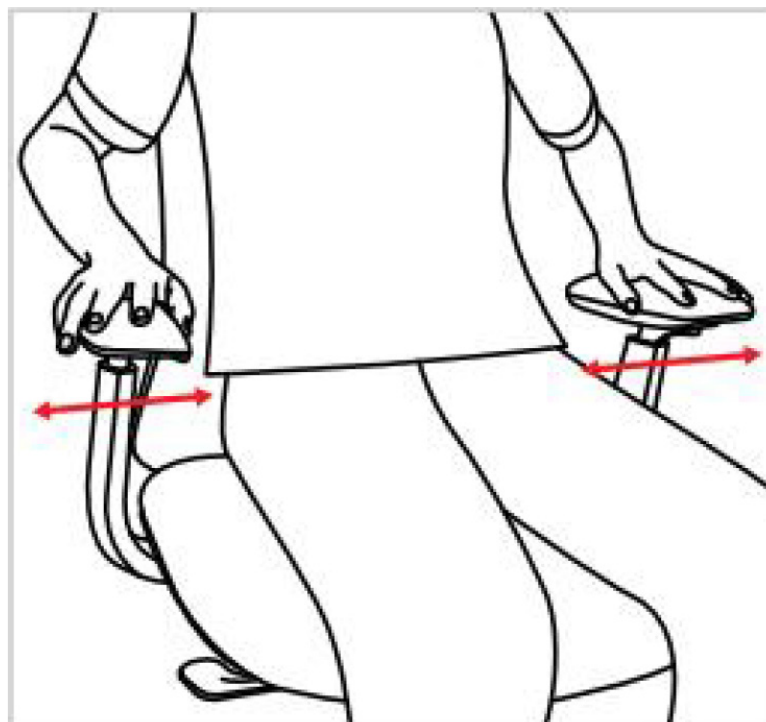

### H: Seat Slider Adjustment

While seated, pull the single control lever and move the seat forward to reach your desired seat position. When your desired seat position is achieved, release the lever to lock your seat position.



**Sydney** 02 8188 2732

**Melbourne** 03 9111 0315

**Brisbane** 07 3733 1923

**Adelaide** 08 7111 0810

**Perth** 08 9468 2707

[info@olgoffice.com](mailto:info@olgoffice.com)

[myolg.online](https://myolg.online) | [olgoffice.com](https://olgoffice.com) | [officedesigner.net](https://officedesigner.net) | [motionoffice.com](https://motionoffice.com)