

TECHNICAL SPECIFICATIONS

Model Number: 7716

Rated Voltage: 220-110v

Rated Frequency: 50/60hz

Net Weight: 214 lbs Weight Capacity: 265 lbs

WARRANTY

CORE NINE's 7716 Massage Chair provides a standard two year parts and two year in-home service warranty. A five year extended warranty for this chair may be purchased on our website at www.corenineusa.com within 90 days of purchasing your chair.

To register your massage chair, visit our website at www.corenineusa.com. Go to the "Support" page and click on "Product Registration." Complete the required fields, including your chair's serial number which is located on the back of your chair near the power switch, and press SEND.

Consumers may contact their retailer for additional warranty and service information.


© 2018 Core Nine Massage Technology

The images in this manual are for reference purposes and may not resemble the massage chair design you purchased. Core Nine reserves the right to make changes to the information in this document, including and without limitation the specifications and product descriptions at any time and without notice. No medical claims are warranted or implied by the use of this product.



7716 MASSAGE CHAIR

User Manual

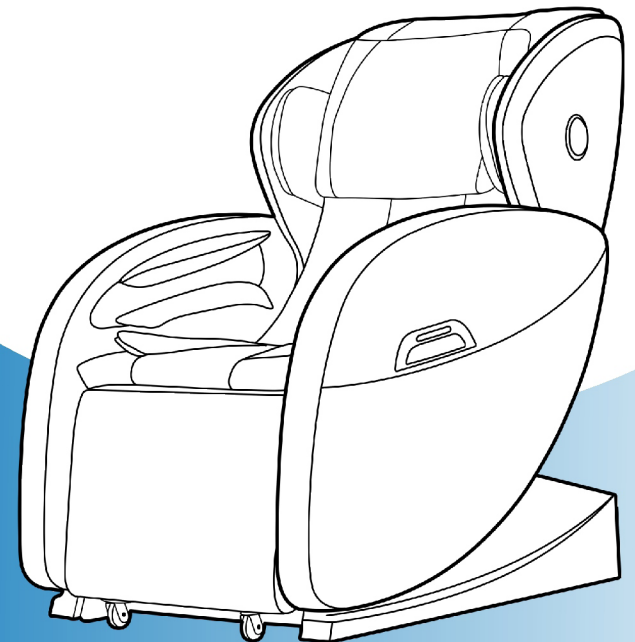

CONTENTS

Thank you for purchasing the Core Nine Massage Technology 7716 Massage Chair. Please read the contents of this manual before using your chair and refer to it when needed.

SAFETY PRECAUTIONS

MEDICAL WARNING	01
GENERAL WARNING/CAUTION	01
PROHIBITED ACTION	02
GROUNDING INSTRUCTIONS	02

MASSAGE CHAIR COMPONENTS

EXTERNAL STRUCTURE	03
INTERNAL STRUCTURE	04
REMOTE CONTROL INSTRUCTIONS	05 - 08

MASSAGE CHAIR INSTALLATION

INSTALLATION INSTRUCTIONS	09 - 13
SPACE REQUIREMENTS & MOVING	14
FINAL ADJUSTMENTS	14

CLEANING, STORAGE AND MAINTENANCE

CLEANING INSTRUCTIONS	15
MASSAGE CHAIR STORAGE	15
MASSAGE CHAIR MAINTENANCE	15

TROUBLESHOOTING

TROUBLESHOOTING GUIDE	16
-----------------------------	----

TECHNICAL SPECIFICATIONS	Back Cover
--------------------------------	------------

SAFETY PRECAUTIONS

MEDICAL WARNING



- Do not use this chair if you have a pacemaker or other medical electronic devices inside your body.
- Do not use this chair without consulting your physician if you have a medical condition.
- Massage chairs are not recommended for the following medical conditions: hyperostosis, musculoskeletal disorders, osteoporosis, phlebitis, thrombosis, serious heart conditions, malignant tumors or abscesses, diabetes, pregnancy, fever, bruising or swelling, serious skin conditions, joint dysfunction, spinal injury, recent surgery, or paralysis.
- This chair is not intended for self-treatment of medical conditions that should be managed by a qualified health care provider. If you feel any abnormal discomfort while using the chair, stop use and consult your physician.

WARNING



- This massage chair should only be used for its intended purpose as described in this manual.
- Do not attempt to repair or modify any electrical or mechanical functions in this chair.
- This chair should only be connected to a properly grounded outlet. See grounding instructions.
- Do not operate this chair where flammable products are being used such as aerosol sprays or oxygen.
- Do not place the power cord under any heavy objects or in high traffic areas.
- Unplug this chair from the electrical outlet immediately after using and before cleaning to reduce the risk of electric shock.
- To disconnect, turn all controls to the OFF position before unplugging the chair.
- Never operate this chair with a damaged power cord or if the plug is not working. Only a qualified technician should replace a damaged power cord.
- Do not remove the plug from the outlet while the chair is operating.
- Do not use the chair if the electrical outlet is loose.
- Keep the power cord away from heated surfaces.
- To avoid electric shock, never use wet hands to connect or disconnect the power plug from the electrical outlet and never use the massage chair when your body is wet or damp. If you spill liquid onto the chair, immediately turn off the chair and unplug the power cord.
- Do not use the chair if it is damaged or if the covering shows any sign of deterioration, such as peeling or cracking, or if the fabric is torn or the internal components exposed.
- Do not put hands or fingers near the rollers when the massage mechanism is operating. Injury may result from rollers squeezing together.

SAFETY PRECAUTIONS



PROHIBITED
ACTION
THAT
MAY VOID
WARRANTY



- Any modification, disassembly or maintenance of the chair by anyone other than an approved service professional will void the warranty. Contact your retail provider if your chair is in need of service.
- Do not use any attachments that are not included with this massage chair.
- Do not remove the seat cushion or tamper with the massage mechanism.
- Do not allow children or pets to play near the chair during operation.
- Close supervision is necessary when this chair is used by children or disabled persons.
- Only one person at a time should use the massage chair. The maximum weight load for this chair is 265 lbs.
- Do not use this chair outdoors or in excessively hot, humid or dusty environments.
- Do not place this chair directly in the sun or near an open flame.
- Do not place this chair near damp or moist areas such as swimming pools or bathrooms.
- Do not stand on the chair or place heavy objects on the chair.
- Do not stand or sit on the armrest or legrest.
- Do not exert force on the massage rollers when the massage mechanism is operating.
- Do not operate under a blanket, pillow or electric blanket.
- Do not use this chair while smoking.
- This massage chair is only intended for in-home use and not for commercial purposes.





GROUNDING
INSTRUCTIONS

- Connect this chair to a properly grounded outlet. Grounding provides a path of least resistance for electrical current to reduce the risk of electric shock if the product malfunctions or breaks down. This chair is equipped with a cord having an equipment-grounding conductor and a grounding plug.
- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
 - The chair must be connected to an outlet having the same configuration as the plug. No adapter should be used with this chair.
 - An improper connection of the equipment-grounding conductor can result in risk of electric shock.
 - If you are in doubt as to whether this product is properly grounded, do not modify the plug provided with this chair. Contact a qualified electrician to install a proper outlet.


MASSAGE CHAIR COMPONENTS

EXTERNAL STRUCTURE

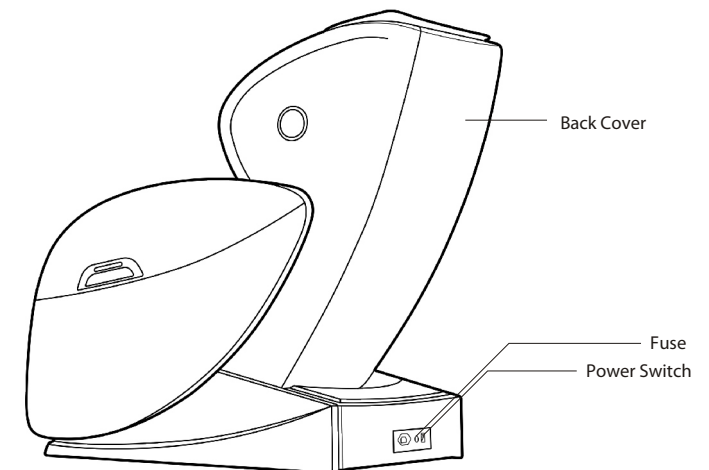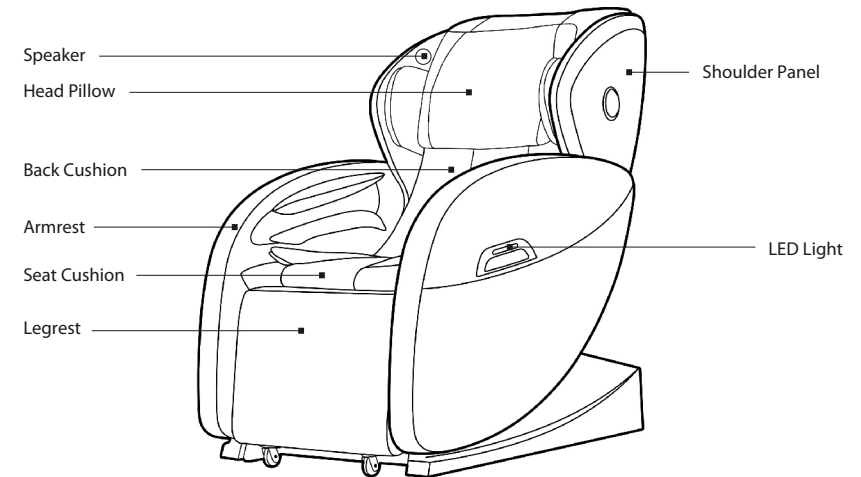


MASSAGE CHAIR COMPONENTS

INTERNAL STRUCTURE

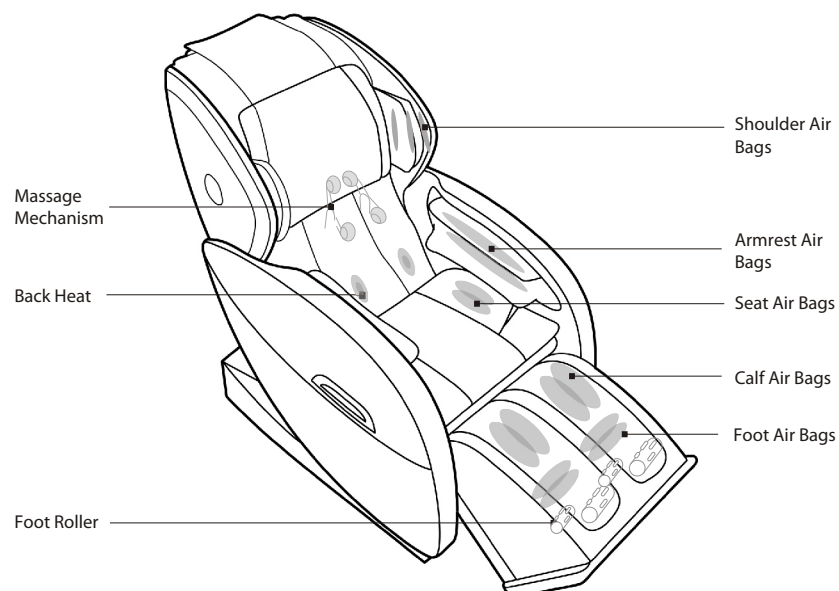






REMOTE CONTROL INSTRUCTIONS

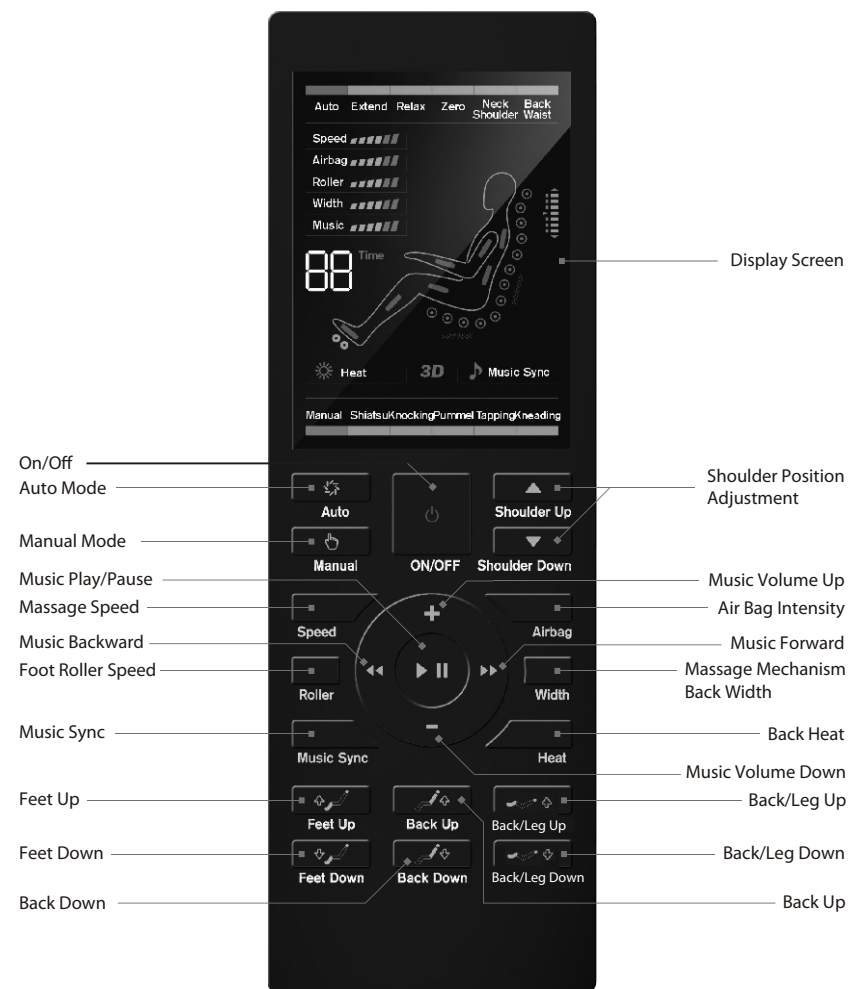









REMOTE CONTROL INSTRUCTIONS

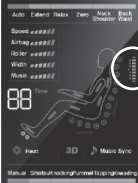To ensure an accurate auto scan sensor detection, press your back and head firmly against the chair. The massage mechanism will roll to the bottom of your glutes and up to your head to customize your massage according to your size and shape.







	<p>On/Off:</p> <p>Press this button to turn on the massage chair. The chair will scan your body then begin the "Relax" auto massage program. Press the On/Off button again to turn off the chair and return it to its upright position.</p>
	<p>Auto Massage Modes</p> <p>Press this button to choose an auto massage program. Each time you press this button the auto massage program changes on the remote control screen, cycling through the following programs:</p> <p>RELAX: A relaxing rocking motion massage that warms the muscles and restores the body.</p> <p>EXTEND: A medium to high intensity stretching massage that loosens stiff, sore muscles and joints.</p> <p>ZERO: Developed by NASA, Zero Gravity is a neutral body position that reclines the body and elevates the feet above the heart. This high intensity massage minimizes back pressure, releases back tension, rejuvenates the lymphatic system, and improves breathing and circulation.</p> <p>NECK SHOULDER: A medium intensity massage that focuses on relieving tension in the neck and shoulders.</p> <p>BACK WAIST: A medium intensity massage that focuses on the back, hips, waist, and lower body.</p>
	<p>Manual Massage Modes</p> <p>Press this button to choose a manual massage mode. Each time you press this button the manual massage mode changes on the remote control screen, cycling through the following modes:</p> <p>SHIATSU - Therapeutically presses on muscles, joints and acupressure points throughout the body.</p> <p>KNOCKING - A rhythmic massage that stimulates and energizes the muscles.</p> <p>PUMMEL - Deeply massages muscle tissue and joints by combining knocking and kneading massage modes.</p> <p>TAPPING - Applies rapid-tapping strokes along the spine.</p> <p>KNEADING - Kneads the back in small, circular motions.</p>
 Shoulder Up  Shoulder Down	<p>In Auto Massage Mode, press these buttons to adjust the height limit of the massage mechanism. (See Manual Shoulder Height Adjustment Size Chart on top of page 7)</p> <p>In Manual Massage Mode, press and hold these buttons to adjust the massage mechanism to a specific spot of focus. Release the button when the massage mechanism reaches the desired position.</p>

REMOTE CONTROL INSTRUCTIONS

	Manual Shoulder Height Adjustment Size Chart	
	Line 1: 5'0 and under	Line 5: 5'7" - 6'0
	Line 2: 5'0 - 5'2"	Line 6: 6'0 - 6'3"
	Line 3: 5'2" - 5'5"	Line 7: 6'3" and over
	Line 4: 5'5" - 5'7"	

	<p>Mechanism Speed:</p> <p>Press this button to cycle through six levels of massage speed.</p>
	<p>Roller Speed:</p> <p>Press this button to cycle through six levels of foot roller speed.</p>
	<p>Music Sync:</p> <p>Press this button to enable Bluetooth connectivity with the chair via your Bluetooth enabled device.</p>
	<p>Air Intensity:</p> <p>Press this button to cycle through six levels of acupressure air intensity.</p>
	<p>Back Roller Width:</p> <p>In Manual Massage Mode, press this button to cycle through six levels of back roller width.</p>
	<p>Heat:</p> <p>Press this button to turn the heat ON for the back. Press again to turn off the heat.</p>
	<p>Music Control:</p> <p>When your Bluetooth enabled device (i.e. smart phone) is connected to the massage chair you can use these controls to adjust your music.</p> <p>Press ▶ to play/pause your music.</p> <p>Press + or - to increase/decrease volume.</p> <p>Press » or « to forward/reverse to next song.</p>

REMOTE CONTROL INSTRUCTIONS

 Feet Up	Feet Up: Press and hold this button to move the leg ottoman height up. Release the button when you reach the desired position.
 Feet Down	Feet Down: Press and hold this button to move the leg ottoman height down. Release the button when you reach the desired position.
 Back Up	Back Up: Press and hold this button to raise the back. Release the button when you reach the desired position.
 Back Down	Back Down: Press and hold this button to lower the back. Release the button when you reach the desired position.
 Back/Leg Up	Back/Leg Up: Press and hold this button to simultaneously raise the legrest up and lower the backrest down. Release the button when you reach the desired position.
 Back/Leg Down	Back/Leg Down: Press and hold this button to simultaneously lower the legrest down and raise the backrest up. Release the button when you reach the desired position.

MASSAGE CHAIR INSTALLATION

Step 1: Carefully remove the massage chair from the carton.



Correct Demonstration:
Lift the massage chair out of the carton by lifting the armrests.



Incorrect Demonstration:
DO NOT lift the massage chair out of the carton by lifting the legrest.

MASSAGE CHAIR INSTALLATION

CAUTION: If your door width is less than 30 inches you will need to remove one armrest panel.




! This step is not necessary if your door width is more than 30 inches.

Remove the screws.



! This step is not necessary if your door width is more than 30 inches.

Remove the screws.

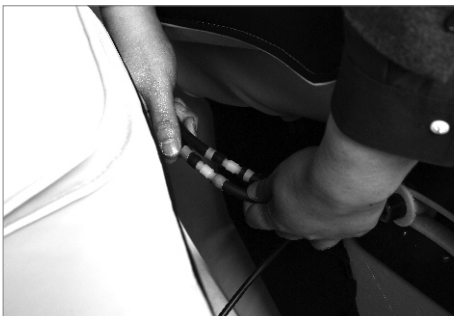

! This step is not necessary if your door width is more than 30 inches.

Unplug the electrical connections.

MASSAGE CHAIR INSTALLATION

Removing the armrest panel (continued)



! This step is not necessary if your door width is more than 30 inches.

Pull up to remove the armrest.

MASSAGE CHAIR INSTALLATION

Step 2: Connect the power.



Connect the power cord to the back of the chair, then plug into a grounded outlet.



Turn the power switch to the "On" position.



Press the On/Off button on the remote control.

MASSAGE CHAIR INSTALLATION

CAUTION: Do not bend your knees while legrest is extending or retracting.



✓ **Correct Demonstration:**
Keep knees strait while legrest is extending or retracting.



✗ **Incorrect Demonstration:**
Do not bend knees while legrest is extending or retracting.




Do not press the "back down" button while the legrest is extending or retracting.

CHAIR REQUIREMENTS & MOVING

SPACE NEEDED

When the massage chair is fully reclined it requires 26 inches of space in front of it and 18 inches of space behind it.

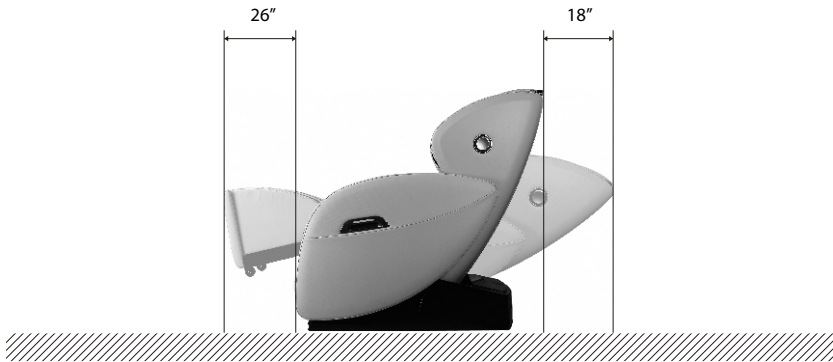

▲ WARNING

- Check to make sure the power cord is not knotted, entangled with any objects or crushed under the massage chair.
- Keep children and pets away from the chair as it reclines and returns to the upright position.

MOVING THE MASSAGE CHAIR

This chair can be moved by raising the front of the chair and tilting back on the wheels.

WARNING: Do not move the chair when someone is sitting on it or when the power switch is on.

- Unplug and remove the power cord and remote control before moving the chair.
- Use caution when handling the armrests and legrest ottoman to avoid damage.
- Remove the armrests before moving the chair through a narrow door.
- Use caution when rolling the chair across a tile or wood floor.
- To prevent the floor from being scratched, place a towel or blanket under the wheels or lift the chair using at least four people.
- The chair should be placed on a flat level surface and away from damp rooms (i.e. bathrooms) and open flames (i.e. kitchen stove, fireplace).
- Place a soft mat underneath the chair to protect your floors.

FINAL ADJUSTMENTS

- Make sure the massage chair is in the upright position before sitting down.
- Remove the head cushion for a more intense massage.

CLEANING, STORAGE & MAINTENANCE

CLEANING INSTRUCTIONS

WARNING:

- Turn the main power switch off and disconnect the power plug from the electrical outlet before cleaning the chair to reduce the risk of electric shock.
- Never use wet hands to connect or disconnect the power plug from the electrical outlet.
- Do not use a damp cloth to clean the power cord.

SYNTHETIC LEATHER CARE:

- For general cleaning, wipe down the leather with a damp cloth, then a dry cloth.
- Avoid excessive brushing or rubbing while cleaning the leather.
- To remove stains, use a damp cloth with a 3-5% neutral detergent, then wipe with a dry cloth.
- Do not use benzene, thinner, alcohol, or any other solvent or abrasive cleansing agent on the leather.

UPHOLSTERY CARE:

- Use a damp cloth with a 3-5% neutral detergent to clean the upholstery of your massage chair.
- Avoid excessive brushing or rubbing while cleaning the upholstery. Allow to air dry.
- Do not use benzene, thinner, alcohol, or any other solvent or abrasive cleansing agent on the upholstery.

PLASTIC CARE:

- Use a damp cloth with a 3-5% neutral detergent to clean the plastic components of the massage chair.
- Dry with a cloth or allow to air dry.

REMOTE CONTROL CARE:

- Do not use a damp cloth to clean the remote control. Use only a clean dry cloth.
- Do not use benzene, thinner, alcohol, or any other solvent or abrasive cleansing agent on the remote control.

STORING THE MASSAGE CHAIR

- Cover the chair while it is in storage.
- Do not store this chair outdoors or in direct sunlight.
- Do not store in excessively hot, cold, humid, damp, or dusty environments.

MASSAGE CHAIR MAINTENANCE

GROUNDING INSTRUCTIONS:

This chair is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that has the same configuration as the plug.

DANGER: An Improper connection of the equipment-grounding conductor can result in a risk of electric shock.

REPLACING A FUSE:

To replace a fuse, turn the power control button to the OFF position and unplug the power cord. Remove the fuse cover lid and replace with the same sized fuse (3A). Contact a qualified electrician if you are unable to replace the fuse. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded.

- Unplug this chair from the electrical outlet immediately after using and before cleaning to reduce the risk of electric shock.
- This chair should never be left unattended when plugged in.
- Never operate this chair with a damaged power cord or if the plug is not working.
- To disconnect, turn the power control button to the OFF position, then remove the plug from the outlet.