


MASTERDRIVE PLUS 2.0

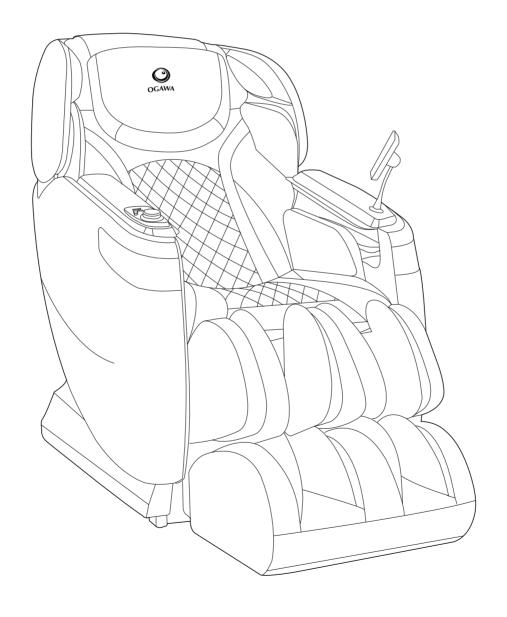

User Manual OG7598P 使用手册





MASTERDRIVE PLUS 2.0

Contents

Before Use

	Important safety instructions Grounding instructions Product parts Setup of the massage lounger Assembly Before use	EN5 EN6 EN8 EN9		
low to U	Jse			
	Short Cut Button Operation	N15		
/laintenance				
(Cleaning and maintenance	N29		
Q&A/Imp	portant notes			
	■Q&A	N31 N33		

Important safety instructions Must be followed

These safety instructions must be strictly followed in use to avoid personal injuries and property damage are as follows:

All the safety instructions are described in compliance with degrees of the injuries or damage as a result of wrong use.

Warning

Actions tending to cause serious injuries or death

Caution

Actions tending to cause minor injuries or property damage

Pay attention to the symbols before safety instructions (an example is given below).



Actions that must be absolutely forbidden



Actions that must be done

∕!\ Warning


- Before using the product, persons who are being treated or have any of the following symptoms should consult a physician.
 - (1) Persons with a pacemaker or another in-vivo electronic medical device tending to suffer electronic jamming;
 - (2) Patients with malignant tumors;
 - (3) Patients with heart disease;
 - (4) Persons proved to be unable to identify temperatures:
 - (5) Pregnant persons or women who have just had childbirth;
 - (6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation (12) Persons with protrusion of intervertebral disturbance:
 - (7) Osteoporosis patients, spinal fracture patients, or persons with acute painful diseases such as sprains or muscle strains;

- (8) Persons with injuries in the massaged
- Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);
- (10) Persons who are unwell or must have a rest;
- (11) Persons with an abnormal or bent vertebra;
- disc:
- (13) Persons who feel very uncomfortable (except for the circumstances above)

Otherwise accidents or physical discomfort may happen.

 If you feel physically abnormal while using or no effect after use, stop the product immediately and consult a physician about it.

Otherwise accidents or physical discomfort may happen.



Before use, make sure there is no foreign matter between the backrest and the back cover. Otherwise accidents or physical discomfort may happen.

 Before use, lift the back cushion and check whether fabric of traveling sections of the massage wheels or of other positions are damaged. (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.) '
If the product is used when the fabric is damaged, you may get injured or get an electric shock.

- In the first time of use, select AM Routine mode.
- Do not massage for more than 30 minutes each time.
- Do not massage a single part for more than 5 minutes. If any of these safety instructions is not followed, you may suffer an adverse effect and be injured.
- After use each time, turn the power switch to the "O" position ,and then pull out the

Otherwise accidents or injuries may happen due to naughty behaviors of children.

- Follow the regulations about use of the socket and the wiring devices.
- Use a 220-240V~,50/60Hz power supply.
 (Do not use the product in a foreign country or connect it with a transformer without permission.) Otherwise electric shocks, product faults or fires because of overheat may happen.
- Insert the power plug thoroughly into the socket. Otherwise electric shocks or fires caused by overheat may happen.
- Remove such dirt as dust on the power plug at regular intervals. Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)



Warning



• In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid smoke, fires and electric shocks.

Abnormality and fault examples

- The product fails to work after the power switch is turned to the ON position:
- After the power line is moved, the product is discontinuously powered on;
 In use, the product gives off a burning smell or an abnormal sound;
- The product is deformed or abnormally heating;
- → In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.
- Do not put the back cushion between the backrest and the back cover. Otherwise product faults may happen.
- When handling the product, hold its frame. Otherwise product faults or personal injuries may happen.
- The following persons should not use the product. Persons for whom massage is forbidden by doctors, such as persons with thrombosis, serious aneurysm, acute venous aneurysm, various skin inflammations (such as subcutaneous tissue inflammation) or various skin infections. Otherwise diséases may get worse.
- The following persons should not massage their waists.
 - Persons with acute lumbago, protrusion of intervertebral disc, or displacement of a lumbar vertebra;
 - Persons with deformation or other discomfort of the hip joint; Otherwise diseases may get worse.
- Do not put hands, arms or feet into the backrest's fabrics of traveling sections of the massage wheels.
- Children should not use the product. Keep them from playing on the product or climbing onto the Lower Leg/Foot massage section, the seat, the backrest or the armrests.
- Do not climb onto the backrest or the armrests.
- Do not lean or sit on the backrest.
- Keep your head from reachable areas of the backrest and the back cover.
- Persons unable to express themselves clearly or unable to operate the product should not
- When massing the neck, pay attention to moving directions of the massage wheels and do not massage with a too large force or massage front part of the neck. Otherwise accidents or personal injuries may happen.
- Do not damage the power line or the power plug.

(Do not damage, machine, forcedly bend, twist or prolong the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.)

A damaged power line or power plug may result in electric shocks, short circuit faults or fires. Please consult the shop from which you bought the product or a designated authorized service center about maintenance method of the power line or the power plug.

- When using the Warm massage wheels, avoid longtime contact with the skin in one position.
- Do not use the Knee Warm massage for a long time.

Otherwise you may get low-heat burns.

*Even if the temperature is relatively lower (40 °C~ 60 °C), low-heat burns may happen after longtime contact with skin (in spite of no obvious hot or painful feeling).

- Do not damage the Knee Warm (heater) section.
- Do not insert pins or needles into the product.
- Do not cut the product with a cutter.

If the internal heater is damaged, fires or electric shocks may happen.



Forbidden

Do not insert or pull out the power plug with wet hands.

Otherwise electric shocks may happen.



forbidden

 Do not refit, disassemble or repair the product without permission. Otherwise fires, abnormal movements or personal injuries may happen.

forbidden



- The following persons (even if they are physically healthy at present) should consult a physician before using the product.
 - (1) Persons with muscular atrophy due to aging or thin persons;
 - Persons feeling lumbago because of bone or viscus problems;
 - (3) Persons tending to suffer sprains or bruising;
 - (4) Persons with carsickness or seasickness or strong response when taking other transport means:
 - (5) Persons who once received a heart operation or another visceral operation; Otherwise health may get worse.
- Before sitting on the product, make sure there is no foreign matter between any two parts
 - (Make sure there is no foreign matter on the back cover, the backrest, the seat surface, the Lower Leg/Foot massage section or inside surface of the back cushion.) Otherwise accidents, injuries, or product faults caused by clamping of hands, feet, or other articles by the product may happen.
- Do not use the product when wearing any hard decorative article on head (such as hair pin).
- If there is any hard article (such as mobile phone or key) in a pocket of the trousers, take it out before massage.
- Before hand or arm massage, remove watch, nail wrap, ring, etc. Otherwise injuries may happen.



- Before sitting on the seat, make sure the massage wheels are in the retracting positions.
- If you want to leave the seat during the massage, stop the product first. Otherwise accidents or injuries may happen.
- When pulling out the power plug, do not pull the power line but hold the power plug. Otherwise an electric shock or a short circuit fault may happen.
- Before moving the product, make the Lower Leg/Foot massage section back to the original position by adjusting its angle. Otherwise injuries may happen.
- When moving the product by pulleys, put articles such as mats on the floor. Otherwise marks may be left on the floor.
- Keep children from the retaining screws on the remote controller holder. Otherwise children may cause accidents or suffer injuries by eating it or playing with it.
- Before moving the product by pulleys, remove the obstructions close to it. Lift the seat surface of the Lower Leg/Foot massage section to a position a little lower than the waist and move the product slowly.

 Otherwise accidents or injuries may happen because of turnover of the product.

- In use, place the product horizontally.
 Otherwise accidents due to turnover of the product may happen.
- If any symptom such as skin inflammation, itching or swelling in use, stop the product immédiately and consult a physician. Otherwise accidents or physical discomfort may happen.
- If the product is used again for massage after a period of out-of-service, read the Operating Instructions again and make sure the product can run normally first. Otherwise accidents or injuries may happen.
- Do not use the product and other devices at the same time. Otherwise accidents or physical discomfort may happen.



- Keep head, abdomen or skin from the massage wheels and do not put hands or feet between the massage wheels.
- Do not put the knees between the Lower Leg/Foot massage section.
- Do not fall asleep while using the product. Do not use the product after drinking.
 If air in the filling the air bag on the seat is not completely discharged, do not stand or jump on the seat or put things on it.
 - Otherwise accidents or injuries may happen.

∕!∖ Caution • Do not put hands or feet between the product and the Lower Leg/Foot massage section. Do not put hands, arms, or head into the seam of the Lower Leg/Foot massage section (footrest). For safety, admit the Lower Leg/Foot massage section after massage. • Do not put hands, feet or head between the backrest and the back cover. Do not put pets on the product (such as its back cover, backrest and armrest). • Do not pull out the power plug or turn OFF the power switch suddenly during massage. Otherwise injuries may happen. • Do not stand or sit on the back cover. Otherwise personal injuries due to the product toppling may occur. Do not stand or sit on the armrests. Otherwise personal injuries may happen. Do not stand or sit on the Lower Leg/Foot massage section or the footrest. Otherwise accidents or injuries due to rotation of front of the footrest or turnover of the product may happen. If bottom of the Lower Leg/Foot massage section runs into the floor, the floor may be damaged. • Do not drag or push the product after it is installed. Otherwise the floor may be damaged. • Do not move the product while there is a person on it. Otherwise, accidents, or injuries may happen due to a toppling of the product.

• Do not use the product on heating devices such as electric blankets.

Do not put the remote controller on the product.

Otherwise the product may be damaged.

Otherwise fires may happen.

Wet-hand contact forbidden

Forbidden

- Do not use the product in a bathroom or another wet place. Otherwise electric shocks or product faults may happen.
- Product wetting forbidden
- Do not sprinkle substances such as water on the product or its remote controller.
 Otherwise electric shocks, short circuit, or product faults may happen.



- Before cleaning or maintaining the product, pull out the power plug first.
 Otherwise electric shocks or injuries may happen.
- In the case of a power failure, pull out the power plug at once.
 Otherwise accidents or injuries may happen when power is restored.
- When the product is not used, pull out the power plug.
 Otherwise electric leakage fires may happen because of insulation aging caused by dust and moisture.


Grounding instructions

- The product must be grounded to reduce the electric shock hazard because of functional faults of the product.
- The product has a power line with a grounding conductor and a grounding plug. The grounding plug must be inserted into an appropriate socket that has been correctly installed and grounded in full compliance with the local code and decree.

⚠ Caution


- If the grounding conductor is not correctly connected, electric shocks may happen. If you are not sure about correctness of the grounding, have it inspected by a professional electrician. Even if the grounding plug provided with the product does not match with the socket you have, do not refit it by yourself but ask a professional electrician to install an appropriate socket.
 The product has a grounding plug. Make sure the product is connected with a socket matching with
- The product has a grounding plug. Make sure the product is connected with a socket matching with shape of the grounding plug.
- Do not connect the product to a multi-plug.
- If the power plug is damage, it must be replaced by a special plug available from OGAWA or authorize agents.
- 1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
- 3. The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
- 4. The appliance is intended for indoor use only.

Product Parts

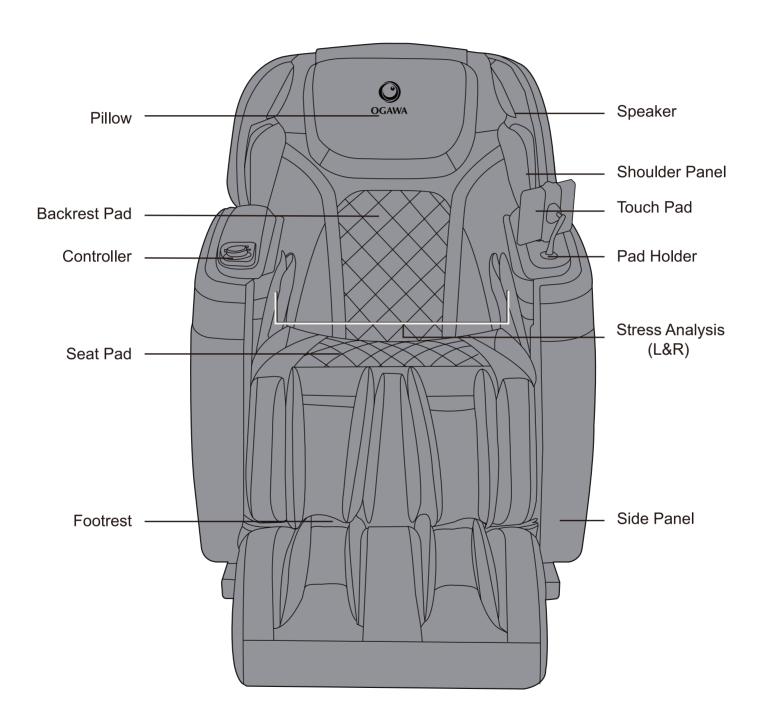

Product Parts


Air Bags Massage Position

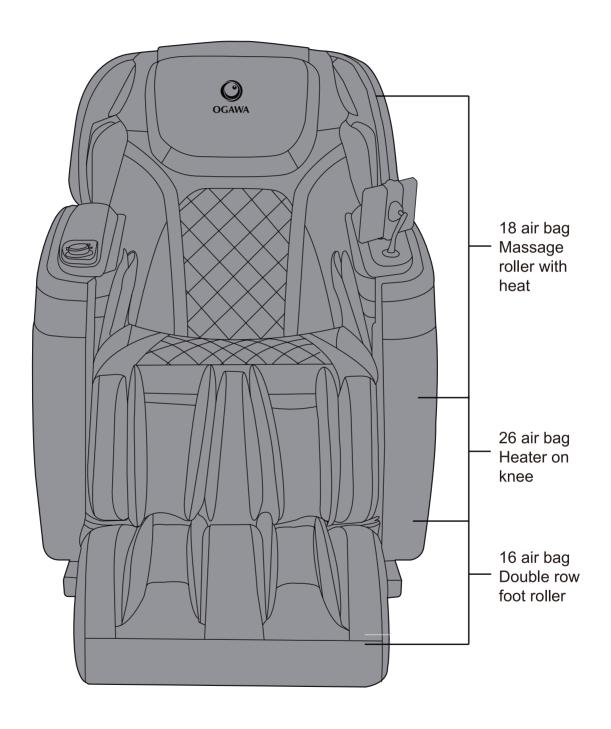

Setup of the massage lounger

Before use (installation position)

Make sure there is enough space for the tilting of the product.

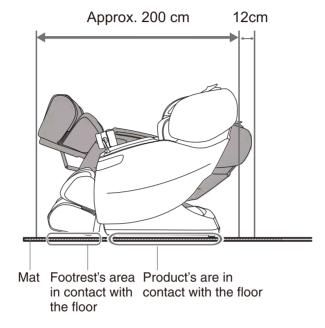

- Do not expose the product to direct sunlight or a high-temperature place (e.g., in front of heating equipment); otherwise its synthetic leather may fade or harden.
- Place a mat below the product to avoid floor damage. The mat should cover the product's area in contact with the floor and the footrest's area in contact with the floor (minimum dimensions: 200cm × 90cm). See the figure.
- Install the product close to a power socket.

2

Chair Moving Instruction

Method one: Hold the two side cover and lift up to moving



The product is heavy and should be handled carefully by two persons at least to avoid back strain.

Product weight Approx. 125 kg

Put the product on the floor.

- Put down the product slowly and carefully to avoid foot injury.
- Do not release the footrest until the product is placed horizontally. Otherwise the footrest will rebound to its original position.
- It is suggested to pave an article such as a mat on the floor to keep it from damage.

A Caution


- Do not drag or pull the product after it is installed.
- When handling the product, do not hold its frame.
 - Otherwise product faults or personal injuries may happen.
- Do not move the product by pulleys directly on a floor.
- Otherwise marks may be left on the floor.
- Do not move the product while there is a person on it.
 - person on it.
 Otherwise, accidents or injuries may happen due to falling down.
- Do not hold the foot massage section when moving the product.
 - Otherwise injuries may happen due to sliding.

Method two: Moving by using slip bar underneath

A Caution

Moving the massage chair with a slight pull or push as right figure, this way do not fit for the wood floor. Otherwise marks may be left on the floor.

- Press the ON/OFF button to return the back rest and footrest to its original position.
- Slide the power switch to the "O" position and unplug the unit.

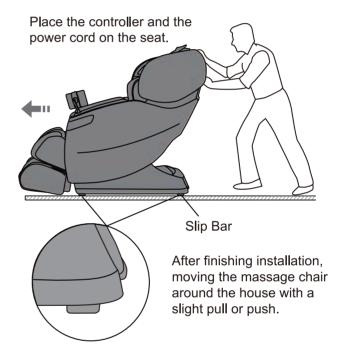

Assembly

(Please refer to the chair installation manual)

Before use

Check the space around the product.

Make sure there is no person, pet or other object close to the product.



Roll up the back cushion and fix it by the zipper.

Roll up the back cushion and fix it on the main body by the zipper.




Make sure there is no foreign matter in the seams of the product.

When checking the Lower Leg/Foot massage section, press the footrest forward by your hands and make sure there is no foreign matter in the seam.

Caution

- Do not put hands, fingers, feet or head into the seam(s) between the footrest and the seat surface or the armrests.
- Before sitting on the product, make sure there is no foreign matter between any two parts of it.

 • Do not put hands, arms or head between the
- backrest and the back cover.
- Do not put pets on the product (such as its back cover, backrest and armrests).

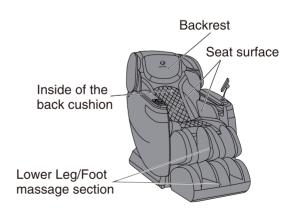



Inspect the power line and power plug

Marning


 Remove such dirt as dust on the power plug at regular intervals.

Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)

• Do not damage the power line or the power plug. Do not damage, machine, forcedly bend, twist or lengthen the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.


A damaged power line or power plug may result in electric shocks, short circuits, or fires.

Please consult the shop you bought the product or an authorized service center about maintenance method of the power line or the power plug.

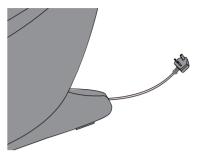

Do not be entangled by the power line.

Push the interface into the power input jack till the end.

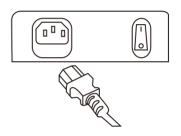



Power on the product

- Insert the power plug into the power socket.
- Pull the power switch to the "|" position.



Marning

 Insert the power plug into the power socket till the end.


Otherwise electric shocks or fires because of overheat may happen.

- Abide by the regulations on use of the socket and the wiring devices strictly.
- Use a 220-240V~,50/60Hz power supply.
 (Do not use the product in a foreign country or connect it with a transformer without permission.)

Otherwise electric shocks, product faults or fires because of overeat may happen.

 Do not insert or pull out the power plug with wet hands.


Otherwise an electric shock may happen.

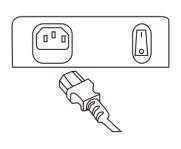

Before use (Continued)



Make sure the massage wheels are retracted

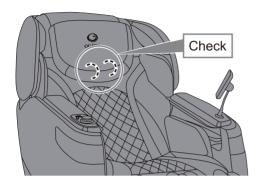


If they are not,

press ON return them to the retracting position.



Make sure the fabric is not damaged nor cracked

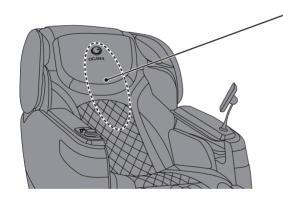

Inspected area:

The fabric of traveling sections of the massage wheels on the backrest

Marning

 Before use, raise the back cushion and check whether fabrics of the area pointed out in the figure are damaged.

(Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)


If the product is used when there is fabric damage, you may get injured or get an electric shock.



Adjust the lounger as needed

Adjustment of remote controller

Left-right adjustment.

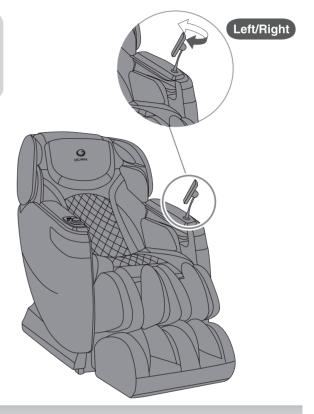




Adjust length of the foot massage section as needed

For a tall man


Auto adjust length of the foot massage section to prevent knees from hanging.

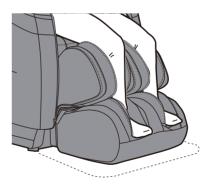

Step the sensor under heel when auto adjust reach comfortable length to stop the adjustment.

Short Cut Button Operation

Short cut button on RH side panel, the function available as below:

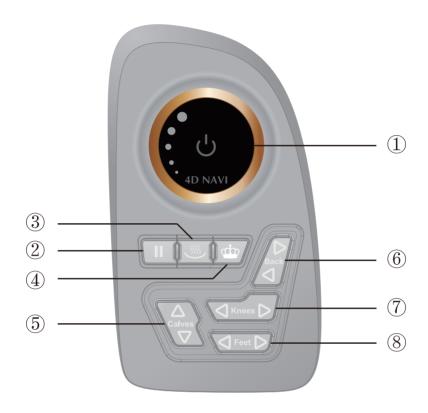

- 1. [Power] button, [4D] Controller:
 - Long press 1 second to activate the massage chair, Long press 1 second again to stop the massage chair function.
 - 4D Strength, turn clockwise to increase the 4D strength, counter clockwise to reduce.
- 2. [Pause] button: Press the button, all the massage function will temporary stop, press again to resume the massage program.
- 3. [Warm]: Press the button, heating will be activate, press again to close it.
- 4. [Master's Choice]: The short cut button for Master's Choice massage program.
- 5. [Footrest Incline/Recline]: Press upward arrow, footrest Incline, press downward arrow, footrest recline.
- 6. [Backrest Incline/Recline]: Press upper arrow, backrest incline, press lower arrow, backrest recline.
- 7. [Upper Footrest Extend/Retract]: Press left arrow, footrest extend, press right arrow, footrest retract.
- 8. [Lower Footrest Extend/ Retract]: Press left arrow, footrest extend, press right arrow, footrest retract.

Product Operation Guide


1. Please take note on below information when using this product:



- 1. Connect the power plug into the socket, turn the switch to "I" position.
- 2. Press the [POWER] button on the top RH to switch ON the massager chair.
- 3. Press the [POWER] button to shut off the massager chair after massage complete.

 Massage roller, footrest and backrest will return back to the origin position. Turn the switch to "O" position and unplug from socket.

2. Recommended massage program:

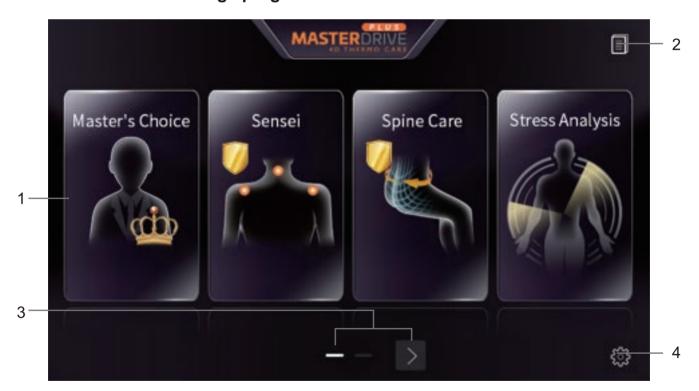

- 1. Recommended massage program icon 1 : Master's Choice, Sensei, Spine Care and Stress Analysis. Touch the icon to proceed to the massage.
- 2. User manual icon 2: A fast explanation for the massage chair function.
- 3. Next page icon 3: Touch the arrow to proceed to the next page.

4. Setting – icon 4: Allow user to make own setting on language, brightness, voice, and sleeping mode. After setting done, touch the top LH button to return back to the main page.



3. Main menu



- 1. Function available in main menu icon 1 : Auto, Custom, Advance, Favorites.
- 2. Touch the arrow icon icon 2 to return back to main page.
- 3. Auto program: Once this icon is touched, the screen will change to [Auto Program].



- 4. Exclusive massage program : Master's Choice, Sensei, Thermal Kneading, Full Body Relief, Spine Care.
- 5. 5 Element Massage program : Metal, Wood, Water, Fire, Earth.
- 6. Origin massage program : Balinese, Chinese, Thai.
- 7. Benefit massage program : Deep Tissue Massage, Circulation, Power Boost, Shape N Tone, Joint Care, Beauty Treat, Text-Neck.
- 8. Scenery massage program : AM Routine, Re-energize, Sweet Dream.
- 9. Favorites: Self favorites massage program collection.
- 10. Touch icon $\overline{\mathcal{O}}$, massage program will be temporary pause. Touch again to resume the massage.
- 11. Touch icon ® to return to massage status


4. Massage status:

After selecting 'Stress Analysis' program mode, place both of your palms on the sensor detector located both side of the arm rest. The stress analysis process will involve body detection, tension reading, during this process please have your palms remain on the sensor detector throughout, do not remove to prevent loss in readings. 2 beeps will be sounded, and your readings will be displayed on the screen upon completion.



The icon on massage status is: 1.Status 2.Strength Adjustment 3.Seat Adjustment 4.Ambient Light 5.Back to main page

1. After activated any auto program, before massage start, it will first proceed to Body Scanning. **Remark**: Please sit in correct posture as show to prevent any scanning error or accuracy out.

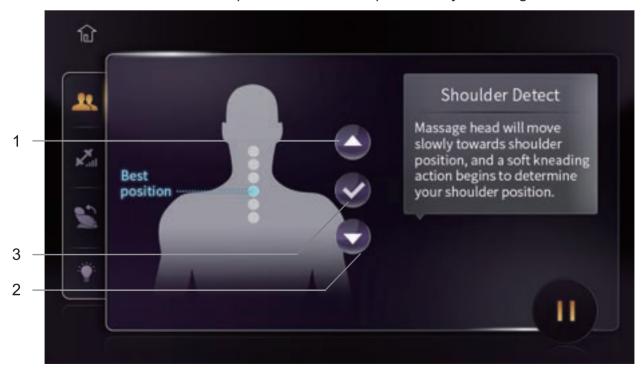


2. After scanning done, the page will turn to Shoulder Detect which allow user to re-tune if they feel the shoulder location need to adjust for better feeling. User can touch [UP] icon 1 or [DOWN] icon 2 to do adjustment or touch $[\sqrt{\ }]$ icon 3 to confirm


Remark: The massage program will automatic start if no signal receive within 10 second.




3. When the scanning detect error due to error sitting posture or without user, this window will pop out. Please readjust the posture then touch icon [Scan] to perform another body scanning.

After finish the Stress Analysis, Please click on "Start" to enter the massage status page. During the massage process, the following functions can be operated.

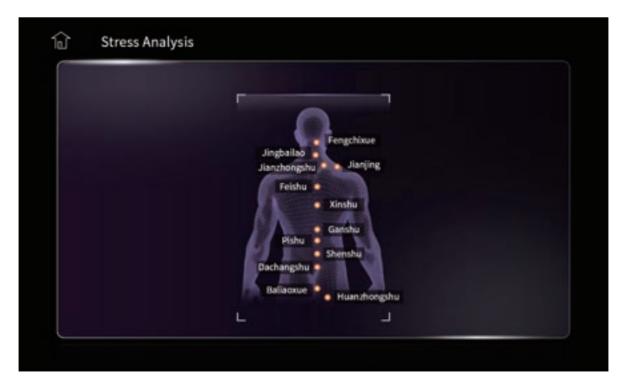

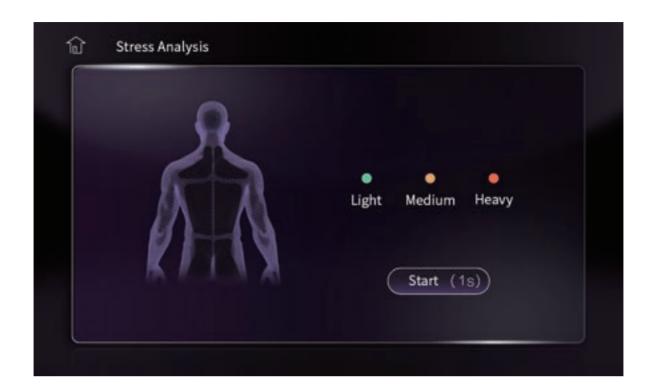


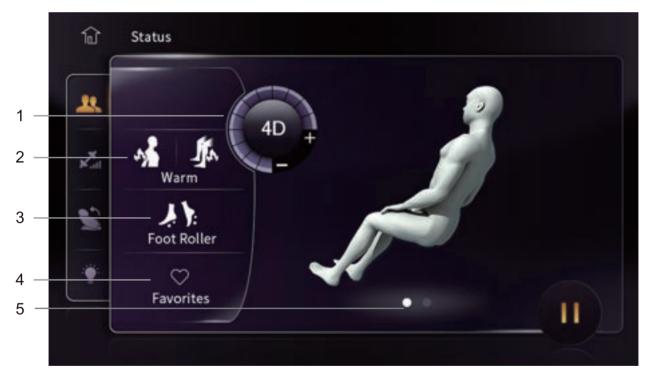

- 4. The massage program will start after scanning completed and the massage status page will appear. Below is the function available in this page:
- 5. [4D] icon 1: touch "-" 4D strength deduce, touch "+" 4D strength increase
- 6. [Warm] icon 2: Touch to activate heat on roller and knee, touch again to turn off the function.
- 7. [Foot Roller] icon 3: To activate foot roller function, touch again to turn off the function.
- 8. [Favorites] icon 4 : Allow user to save their favorites auto program. User can direct enjoy their favorites program in here after save.
 - Remark: To delete the program in favorites, touch the favorites icon in the origin location again.
- 9. The ongoing massage location and status also can be review by touching the human body or the point underneath icon 5.




5. Strength Adjustment:

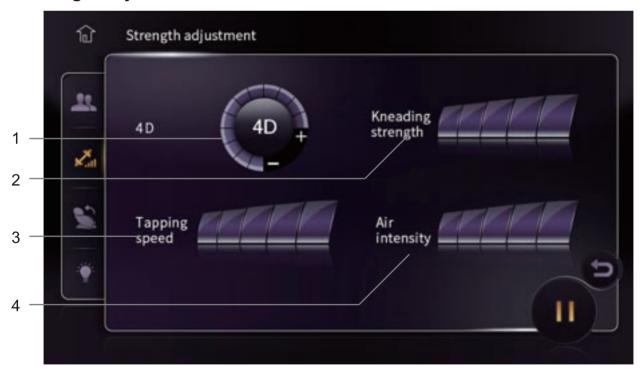


- 1. Function available in Strength Adjustment: 4D strength, kneading strength, tapping speed, air intensity.
- 2. [4D] icon 1: touch"- "4D strength deduce, touch "+" 4D strength increase
- 3. [Kneading strength] icon 2: touch icon for optional level selection from level 1 to 5.
- 4. [Tapping Speed] icon 3:, touch icon for optional level selection from level 1 to 5.
- 5. [Air Intensity] icon 4: touch one icon for optional level selection from level 1 to 5.

6. Seat Adjustment:

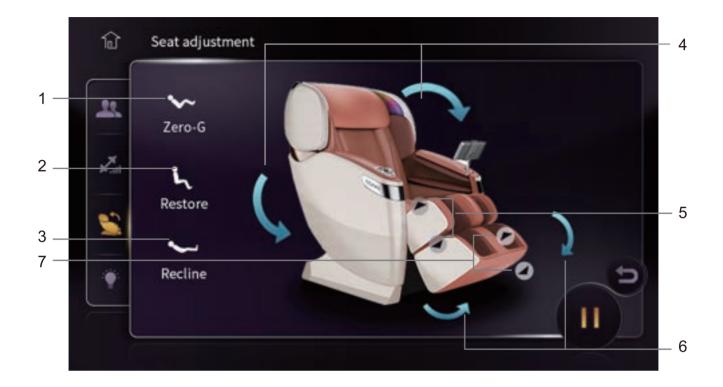

- 1. Function available in Seat Adjustment : Zero G, Restore, Recline
- 2. [Zero Gravity] icon 1: Zero gravity angle adjustment.
- 3. [Restore] / [Recline] icon 2,3: Chair angle adjustment.
- 4. [Backrest Incline/Recline] icon 4
- 5. [Upper Footrest Extend/Retract] icon 5
- 6. [Footrest Incline/Recline] icon 6
- 7. [Lower Footrest Extend/ Retract] icon 7


7. Ambient Light:

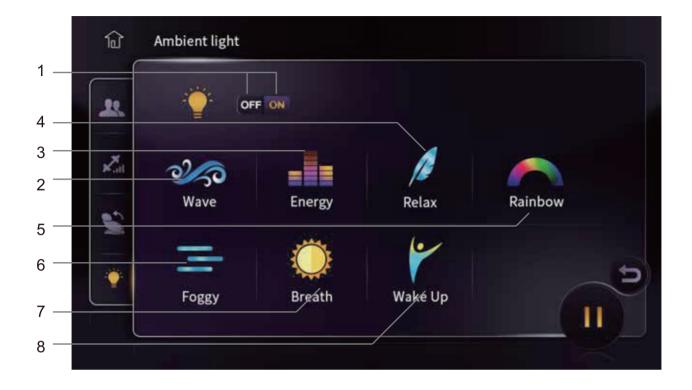

- 1. Ambient Light [ON/OFF] icon 1: Once activate, [Wave] light will be turn ON. Different light will turn ON in different program:
- 2. [Wave] icon 2: Master's Choice, The Traveller, Chinese, Shape N Tone, Stress Analysis.
- 3. [Energy] Icon 3: De-stress, OfficePRO, Thai
- 4. [Relax] icon 4: Text-Neck, Balinese, Deep Tissue Massage
- 5. [Rainbow] icon 5: Spine Care, Shop N Relax, Circulation
- 6. [Foggy] icon 6: CosyComfort, Beauty Treat, Sweet Dream
- 7. [Breath] icon 7: Joint Care, 4D Spa, Re-energize
- 8. [Wake Up] icon 8: The Athlete, Power Boost, AM Routine

8. Custom:

1. Custom: Neck & Shoulder, Waist, Hips, Hands, Calves, Heat. User can choose any massage group to form a program, then press to start the massage.

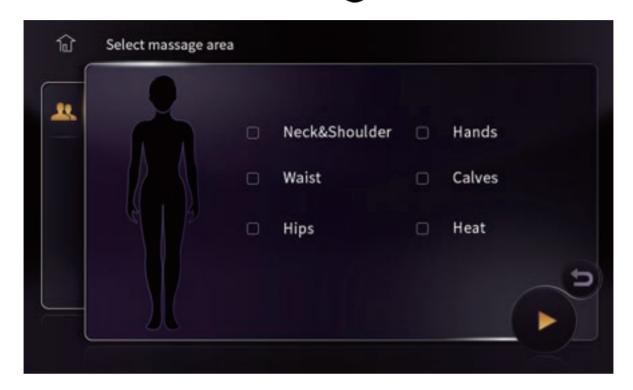

9. Advance:

1. Advance (Manual): Function available [Basic], [Air], [Special], it can be individual use or combine as a program to massage.



- 2. Function available in Basic as below: [Kneading], [Shiatsu], [Swedish], [Tapping], [Clapping], [Rolling]. [Width], [Spot], [Partial], [Full Body], [Air], [Upward] and [Downward].
- 3. Function available in Special as below: Special [Foot Roller], [Lumbar], [Knee Care], [Shoulder 4D].
- 4. [Pause] and [Return] icon.

The password for bluetooth connection is "9999".

10. Anti-pinch




Anti-pinch

Warning: Foreign objects are detected around the footrest of the massage chair or behind the massage chair. Please remove the foreign objects first, then click the "release" button on the APP, or click the "pause" button on the armrest to cancel the warning before proceeding massage

After massage

Make the foot massage section slide back to its original position.

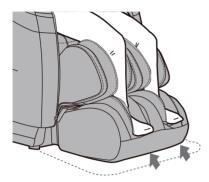

Move the feet from the Lower Leg/Foot massage section.

For safety, the footrest must be retracted after use.

Retracting method of the Lower Leg/Foot massage section

Make sure there are no articles in the retracting position.

Slowly move the feet from the Lower Leg/ Foot massage section.



Touch the footrest retract icon to allow the footrest back to origin position.


Marning

 Keep children or pet from using the product, playing on its main body, or climbing onto its Lower Leg/Foot massage section, seat surface, backrest or armrests;




otherwise accidents or injuries may happen.

Insert the remote controller back into the remote controller holder.

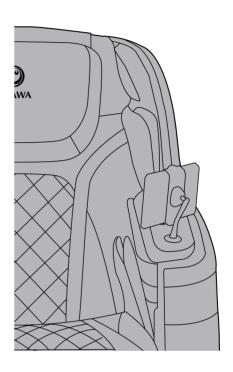



Power off the product.

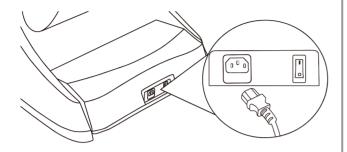

- 1) Turn off the power switch.
- (2) Pull out the power plug.



Marning

 After use each time, pull the power switch to the O position and pull out the power plug; otherwise accidents and injuries by playing with them by children may happen.

Timer function

Massage will end automatically when time is up.

- The Lower Leg/Foot massage section will descend automatically.
- The massage wheels will move to the retracting positions.
- The backrest will not raise automatically. If touch pad was shut off, press ON/OFF button, the backrest and footrest will rise up.

To stop the massage in halfway

Press



- The Lower Leg/Foot massage section will descend automatically and the massage wheels will back to the retracting positions.
- After the massage wheels are retracted, the backrest will raise.

If abnormal feeling

Press



- All the movements will stop immediately.
- Step down the product carefully to avoid turnover of the product.

If the pause button flashes

Press



The massage chair immediate stop when the calf anti-pinch sensor was trigger and the PAUSE button will flash. After remove the obstacle, press the pause button to cancel the anti-pinch trigger, and then select the massage program again.

Cleaning and maintenance

Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry

- **Do not clean the product with chemicals such as thinners, gasoline and alcohol.**
- When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.
- If the synthetic leather is very dirty, wipe it with the method below.
 - ①Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
 - ②Wipe surface of the synthetic leather with the soft cloth.
 - Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
 - 4 Wipe with a piece of wrung soft cloth.
 - 5 Have the synthetic leather take natural air drying.
- If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.
- Do not dry the surface by a hair drier.
- Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.
- Keep these positions from long-time contact with plastics to avoid fading.
- Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.









Cleaning of the plastic parts

- Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.
 - Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- Wipe with a piece of cloth once soaked in clean water and wrung out.
 - Wring the cloth out before using it to wipe the remote controller.
- Have the plastic parts take natural air drying.









Questions and answers (Q&A)

Can persons paying frequent visits to hospitals because of diseases use the product?

A

These persons should consult physicians before using the product.

Massage is the so-called "touch-pressure stimulation": Muscles are compressed to relieve their tension and promote hemokinesis. Some diseases may get worsened because of massage. Thus, consult the attending doctors before using the product.



How about the body height requirement for use of the product?



The body height requirement differs with the specific body type. See the rough reference below when using the product.

If a person shorter than 145 centimeters or taller than 185 centimeters uses the upper body massage function and the Lower Leg/Foot massage function of the product at the same time, it will be possible that his soleswill have poor contact with the foot massage section or that his knees will need to be bent.

For a taller person with knee bending when using the product:

Select method (A) or (B) below:

- ▲ Tilt the backrest and lower the Lower Leg/Foot massage section: or
- Massage the upper body only with the help of the footrest.

(Massage the feet and the upper body separately.)

For a short person difficult to touch the foot massage section:

Select method (A) or (B) below:

- A Raise the backrest and lift the Lower Leg/Foot massage section.
- Massage the upper body only with the help of the footrest.

(Massage the feet and the upper body separately.)



Are there any things needing special attention during moving?

A

Pay attention to the following things during moving.

For convenience during moving, tilt backrest of the product till the lowest position.

During handling, do not sit on the product.

①Press ON button power on the product.

②Press



to make the backrest completely tilt.

Press the button until backrest and footrest stop




- ③Turn off the power switch and pull out the power plug.
- If the original packing box is unavailable, make sure the power line is not wound on the product, wind it and place it on the seat surface. When handling the product, keep the power line from falling off and rubbing with ground.
- If the original packing box is unavailable, properly keep other packing auxiliary materials and wrap the product with them to avoid scratch and vibration during handling.

0

Where is serial number of the product?



It is on back of the main body.

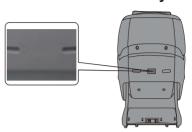

Q

What should I do if I do not feel warm in the knee?



「Knee Warm」 Only fabrics in the tiptoe positions are warm.

Make the tiptoes in close contact with the warm transfer part. When the knee massage section is being raised, the warm transfer part is in close contact with the knee make you feel warm. You may cover your knees with a blanket to get warmer.



I care about the sounds the product makes when being used.



It is caused by the core structure.



Does it matter if the massage wheels have different massage intensities?

A

This phenomenon possibly exits during massage because of the core structure.

To simulate the most natural massage effect, the product is designed with a core structure allowing alternate back massage by a left massage wheel and a right massage wheel. During massage, the massage wheels possibly have slightly different positions on the back. That 's why you have that feeling. It is not a fault.



Theacupressure force is too large.

A

Set the air bag intensity to be "1" through the Air Bag button. You can also lower the Lower Leg/ Foot massage section to reduce the acupressure force on the feet.



How about monthly power consumption of the product?

A

Supposing you massage for 30 minutes in two times (15 minutes for each time) on each day, about 2.5 kilowatt-hours will be consumed each month.

Troubleshooting

After a fault happens, inspect and try the corresponding method below.

If the fault still exists after that, contact the shop from which you bought the product.

Fault

The massage wheels stop

during use (The product beeps and all icons and buttons on the remote controller flicker and then go out.)

The product cannot tilt, or the footrest cannot be

raised or lowered (The product beeps, the running light on the remote controller go out and the product stops)

The massage wheels cannot reach the shoulders or the neck

The left and right massage wheels have different heights (intensities)

The product cannot run at

- Upper body (the neck to the
- waist) massage Lower leg/foot massage

Neither the massage wheels nor the knee massage section provides a warm feeling

The product cannot cool down even if the Dualtemperature function is disabled

The heater does not heat even if the Back and knee heating is enabled function

The product is damaged

The power line or the power plug has abnormal heating

Cause and elimination method

For safety, the massage wheels will possibly stop upon a too large external force during use.

If all marks and buttons on the remote controllerbegin to flicker, it suggests an extreme abnormality. In this case, turn off the power switch and turn it on about 10 seconds later.

If the massage wheels stop again, adjust your sitting posture and do not lean on the backrest completely. (Users, particularly those heavier than 100 kilograms, should follow relevant precautions.)

For safety, the product will stop upon an obstruction or a too large force.

If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.

If the head is not in contact with the headrest, or the back is not in contact with the backrest, the shoulder position in body type detection will possibly be lower than the actual position. Sit in the deepest position of the product, lean your head on the headrest and operate from the beginning again.

It is not a fault but a normal phenomenon because the product is provided with a massage core allowing alternate beats of the massage wheels.

- The power line is disconnected.
- The power switch is not turned on.
- No program is selected after ON button on the remote controller is pressed.
- The Back and knee heating button is set to be OFF. [Knee Warm] Only fabrics in the tiptoe positions are warm. The warm feeling depends on factors such as body type, massage method, clothes and room temperature. When the knee massage section is being raised, the warm transfer part is in close contact with the knee make you feel warm. You may cover your knees with a blanket to get warmer.
- Due to the heater structure, the product will still feel warm shortly after heating because of the residual heat.
- If a single part is continually massaged even after the heating function is disabled, you will feel increasingly warmer.
- If neither upper body massage nor knee massage is enabled, the heating function will not work separately.

To avoid accidents, contact an authorized service center.

If above solution are not applicable, kindly refer to "Product Warranty Card" and contact OGAWA service Center.

Troubleshooting (Continued)


The sounds and feelings you care about in use of the product

You will hear or have the following sounds or feelings when using the product. It is not abnormal phenomena but results of the product structure.

- Sound when the stretching massages are retracted
- Sound and feeling when the massage wheels rub patterns on the fabric
- Sound of movements such as kneading and beat
- Friction sound of the running massage wheels
- Sound of up-down movement
- Sound of the conveyor belt
- Motor sound
- Sound of the squeezing massage wheels when they begin to stretch
- Sound when a person is sitting on the seat
- Friction sound between the armrests and the back cushion when the backrest is tilting
- Friction sound between the massage wheels and the fabric
- Sound of the inflator pump during Air Bag massage
- Sound of air exhaust during Air Bag massage
- Running sound of the solenoid valve at bottom of the product during Air Bag massage.
- Swing of the footrest
- Sound when the shoulders are stretched or moved
- Running sound of the air bags
- Sliding sound of the foot massage section
- Friction sound between the back cushion and the back cover leather when the backrest is tilting

If the sound is loud, it is also possible that the product has failed.

• In this case, have the product inspected and repaired by an authorized service center.

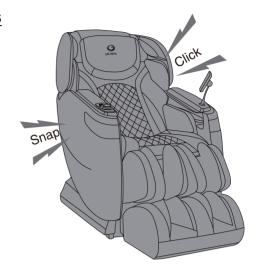

Marning

 Do not refit, disassemble or repair the product without permission.
 Otherwise fires, abnormal movements or personal injuries may happen.

Marning

- In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.
 - < Abnormality and fault examples>
 - The product fails to work after the power switch is turned to the ON position;
- After the power line is moved, the product is discontinuously powered on;
- In use, the product gives off a burning smell or an abnormal sound:
- The product is deformed or abnormally heating
 In any of these abnormalities and faults, have

Specifications

Color		Mocha	
Power supply		AC 220-240V~, 50-60Hz	
Power consumption		200W	
다	Range of massage (up-down direction)	Approx. 1.35 m	
Upper body massage	Range of massage (left-right direction)	Massage wheel spacing (including massage wheel width) during use of the product Massage wheel spacing (including massage wheel width) during rolling on the back and up-down moving: Approx. 4.5cm~18.5cm	
ਸ਼ਕਰਿਤ of massage (front-back direction)		Quantity of protruding massage wheels (adjustable intensity): Approx. 12cm	
sage	Massage speed	Kneading: Approx. 19 times/min. ~ approx. 36 times/min. Beat: Approx. 267 times/min. ~ approx. 438 times/min. (single side) Moving speed: Approx. 2.5 cm/s ~ approx. 3.5 cm/s	
Angle of inclination		Backrest: Approx. 128° ∼ 154° Footrest: Approx. 4° ∼ 86°	
Automatic power-off		Approx. 15 minutes (automatic power-off)	
Dimensions	When it is not tilting: (H×W×L)	Approx. 158cm X 84cm X 121cm	
sions	When it is tilting: (H×W×L)	Approx. 196cmx84cmx105cm	
Weight		Approx. 125kg	
Dimensions of packing box (H×W×L)		3 Carton boxes package Approx.: Searest: 146. 5x77x100cm Side cover: 128x38x68cm Footrest: 58x50x62cm	2 Carton boxes package Approx. : Seatrest: 158x85x100cm Footrest: 57x49x60cm
Weight (including the packing box)		3 Carton boxes package Approx:146kg	2 Carton boxes package Approx:144kg
Maximum body weight of user		Approx.:100kg	

For a user heavier than 100 kilograms, the product may have bigger noise and its fabric housing may be worn quicker.

Contact Us



MALAYSIA Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +603-5121 4286 Fax: +603-5121 4386



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampins Industrial Avenue 5,
T5 @ Tampines
Singapore 528623

Tel:+065-6846 8588 Fax:+065-6846 7677



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines

Tel: +632 889 0676 / +632 844 6851

Fax: +632 812 0421



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F,YHC Tower,1Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel:+852 3465 6262



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor,Petroland Tower,
12 Tan Trao,Tan Phu ward
District 7
Ho Chi Minh
Tel:+84 8 3775 3093/3775 3094
Fax:+84 8 3775 3095

Fax:+852 2410 0119