

## WELCOME TO The family

#### AT INTENSE, WE HAVE ONE GOAL - TO PROVIDE THE RIDE OF YOUR LIFE.

Our team of designers, engineers and product experts are focused on one thing every day: your experience on the bike. We build bikes that are as thrilling to look at as they are to ride, and we build them for the select few of you who understand the difference and refuse to settle for anything else.

From the early days of Intense, when founder Jeff Steber worked alone in his garage to today, where a crew of talented people work in a Temecula, CA factory, Intense has been a brand built on passion by forward thinkers who, even today, love nothing more than to throw a leg over a sweet bike and head out for a rip. We're so glad you've joined us.

Welcome to Intense, we hope it's the ride of your life.

#### THE TRACER 275

The Tracer family has represented Intense Cycles in the Trail/Enduro category for the last ten years. The newest generation of Tracers, which features the 275 wheel size, has been in development since 2012 and embodies a perfect balance of beauty and aggression while delivering an unprecedented ride quality.

Designed with a slack head angle, low bottom bracket and short chainstays, the new Tracers lead the industry in modern trail geometry, providing smooth pedaling and stable performance, with a look only available from Intense.



FRAME FEATURES	4
GEOMETRY	5
EXPLODED VIEW AND B.O.M.	6
ASSEMBLY	8
TORQUE CHART	12
SETUP	13
MAINTENANCE	16
REGISTRATION	19

### INTENSE CYCLES // 3

## FRAME FEATURES / SPEC


### FRAME FEATURES //

- ·ADJUSTABLE TRAVEL 5 3/4" OR 6 1/4" (145MM OR 160MM)
- •27.5 WHEEL SIZE
- PATENTED VPP SUSPENSION TECHNOLOGY
- •TAPERED HEAD TUBE
- ISCG Ø5 MOUNTS
- ·INTERNAL CABLE ROUTING FOR DROPPER POSTS
- •MONOCOQUE FRONT TRIANGLE (T275C ONLY)
- MODERN TRAIL GEOMETRY
- INTEGRATED 142X12 DROPOUTS
- ·INTEGRATED INTERNAL CABLE ROUTING SYSTEM (T275C) / EXTERNAL CABLE (T275)
- ANGULAR CONTACT BEARING / COLLET 15MM AXLE SYSTEM
- WITH REPLACEABLE GREASE ZERKS
- ·FLACK GUARD CHAIN STAY & DOWN TUBE PROTECTION

### COMPONENT SPEC //

- FORK ACCEPTS 1.125" STRAIGHT STEER OR 1.125"/1.5" TAPERED STEER.
  160MM TRAVEL. 552MM LOWER LEG LENGTH. 42MM OFFSET
  SHOCK 200MM X 57MM (7.875" X 2.25"). 22MM X 6MM AND 30MM X 6MM REDUCERS
  FRONT DERAILLEUR DIRECT MOUNT. TOP PULL
  SEAT POST 31.6MM
  HEADSET ZERO STACK 44 UPPER / EXTERNAL CUP 49 LOWER
  BOTTOM BRACKET PRESS FIT BB92 (T275C) / THREADED 73MM (T275)
  REAR AXLE 142MM X 12MM TA
- ·BRAKE MOUNT INTERNATIONAL STANDARD FOR 160MM ROTOR


# GEOMETRY

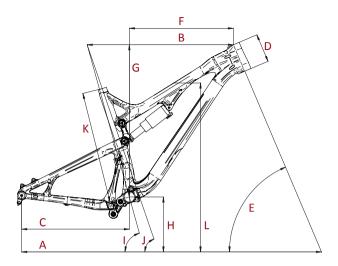

		SMALL	MEDIUM	LARGE	XLARGE
A	Wheel Base	1124 mm / 44.25"	1149 mm / 45.25"	1175 mm / 46.25"	1200 mm / 47.25"
В	Top Tube Length (HOR)	560 mm / 22"	585 mm / 23"	616 mm / 24.25"	641 mm / 25.25"
С	Chain Stay Length	432 mm / 17"			
D	Head Tube Length	100 mm / 4"	114 mm / 4.5"	125 mm / 5"	125 mm / 5"
Е	Head Tube Angle	66.5	66.5 <sup>-</sup>	66.5 <sup>.</sup>	66.5
F	Reach	395 mm / 15.5"	416 mm / 16.4"	445 mm / 17.5"	470 mm / 18.5"
G	Stack	594 mm / 23.4"	609 mm / 24.0"	618 mm / 24.3"	618 mm / 24.3"
Н	BB Height	343 mm / 13.5"			
I	Seat Tube Angle (Effective)	74.5	74.5 <sup>.</sup>	74.5	74.5 <sup>-</sup>
J	Seat Tube Angle (Actual)	70.5 <sup>.</sup>	70.5 <sup>-</sup>	70.5 <sup>-</sup>	70.5 <sup>.</sup>
К	Seat Tube Length	395 mm / 15.5"	445 mm / 17.5"	485 mm / 19"	540 mm / 21.25"
L	Standover Height	792 mm / 31.2"	798 mm / 31.4"	802 mm / 31.5"	803 mm / 31.6"

### **GEOMETRY NOTES** GEOMETRY TAKEN AT TOP OUT WITH 552MM FORK LENGTH AND 42MM FORK OFFSET.

INTENSE CYCLES // 5

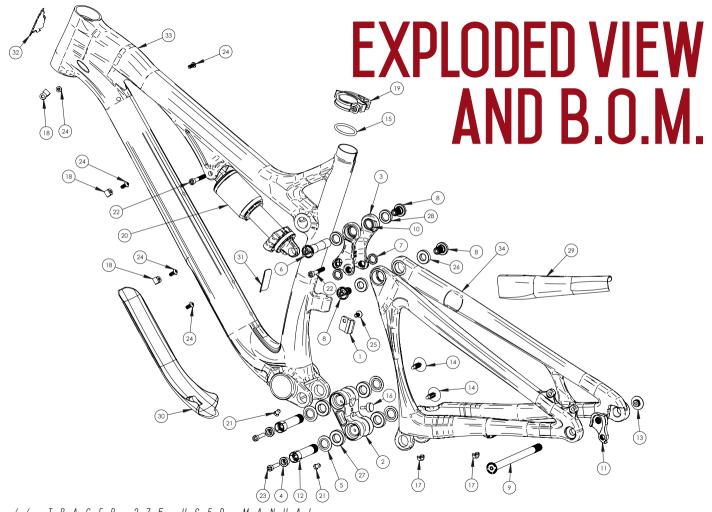

ITEM NO.	ITEM	PART NUMBER	DESCRIPTION	QTY.	TORQUE SPEC.	ITEM NO.
1	Derailler Mount Cover	130209	For Single Chain Ring Setup	1	N/A	19
2	Box Link	130770	Forged Lower Link	1	N/A	20
3	Top Link	130771T	Forged Top Link	1	N/A	21
4	Cone Adjuster	130777	Main Pivot Expander Cone	2	N/A	22
5	Bearing Cap	130778	Main Pivot Bearing Cap	4	N/A	
6	Axle Upper	130780	Top Link Pivot Axle	1	20 Nm / 175 in-Ibs	23
7	Washer	130784	Top Link Pivot Lower Washer	2	N/A	24
8	Bolt Shoulder	130785	Top Link Pivot Bolt	3	20 Nm / 175 in-Ibs	25
9	Rear Axle	130786	142 x 12mm Wheel Axle Kit	1	11 Nm / 100 in-lbs	26
10	Spacer	130789	Top Link Pivot Upper Spacer	2	N/A	27
11	Hanger	130790	Derailleur Hanger Forged Blk	1	N/A	28
12	Bolt Main Pivot	130791	Main Pivot 1.5t Expander Bolt Blk	2	7 Nm / 60 in-lbs	29
13	Hanger Bolt	130792	Derailleur Hanger Bolt	1	11 Nm / 100 in-Ibs	30
14	Plug	140004	Box Link Pivot Plug	2	N/A	30
15	Ring	140005	Ring Cock 1.5265 Blk	1	N/A	31
16	Bumper	140006	Box Link Bumper	1	N/A	32
17	Clip Plastic	310001	Snap-on Cable Guide Single	2	N/A	33
18	Guide Plastic	310004	Bolt-on Cable Guide Single	3	N/A	34

ITEM No.	ITEM	PART NUMBER	DESCRIPTION		TORQUE SPEC.
19	Seat Collar	346939	QR 34.9 Blk	1	N/A
20	Shock	365000	Rear Shock 7.875 x 2.25	1	N/A
21	Zerk Fitting	401011	M6 x 1.0	2	5 Nm / 40 in-lbs
22	SHCS M6 x 40	410002	Shock Bolt, Socket Head, M6 x 40	2	7 Nm / 60 in-Ibs
23	SHCS M6 x 22	410009	Cone Adjuster Bolt, Socket Head, M6 x 22	2	14 Nm / 125 in-Ibs
24	BHCS M5 X 12	410010	Guide Bolt, Button Head, M5 X 12	5	6 Nm / 54 in-Ibs
25	FHCS M6 x 12	410037	Derailleur Mount Cover Bolt, Flat Head, M6 x 12	1	7 Nm / 60 in-Ibs
26	Bearing 6901	430001	12 x 24 x 6 2RS Radial Bearing	2	N/A
27	Bearing 7902	430007	15 x 28 x 7 2RS MAX Angular Contact Bearing	4	N/A
28	Bearing 6802	430008	15 x 24 x 5 2RS MAX Radial Bearing	2	N/A
29	Guard Flack CS	500187	Flack Guard Tracer 275C Chain Stay	1	N/A
30	Guard Flack DT	ack DT 500189 Flack Guard Tracer 275C Down Tube		1	N/A
31	Decal California Bear	500300	Decal California Bear	1	N/A
32	Head Badge	500335	Head Badge Flame Logo	1	N/A
33	Front Triangle		Carbon, 4 Sizes	1	N/A
34	Rear Triangle	Triangle Carbon, 1 Size		1	N/A

## ASSEMBLY

### PREFACE //

Service and maintenance on an Intense bicycle requires special tools, abilities and knowledge of working on bicycles. It is always recommended to use an authorized Intense dealer for service and maintenance. Always wear eye protection. It is critical to use the proper tools, loctite, grease and torque specs during assembly. Failure to follow these instructions may result in serious bodily injury or death.

### **TOOLS NEEDED**

HIGH GRADE. WATERPROOF GREASE
(MAXIMA WATERPROOF GREASE
RECOMMENDED)
BLUE LOCTITE #243
5MM HEX WRENCH X2
8MM HEX WRENCH

### RECOMMENDATION

USE GREASE ON LOWER LINKAGE BOLTS ONLY. USE LOCTITE ON UPPER LINKAGE BOLTS, DROPOUT BOLTS AND HANGER BOLT.











### CONNECTING TOP LINK TO FRONT TRIANGLE //

**A** Holding top link (#130771) with shock mount pointed forward; hold upper spacer (#130789) against inside of bearing race.

**B** Match upper linkage to pivot point on top tube, making sure that spacers do not fall out (IMAGE #1).

**C** Using upper pivot axle (#130780), insert through non-drive side of top link bearing and push through to drive side bearing making sure spacers do not fall out. Then, apply loctite #243 to bolt (#130785) as well as upper axle threads, and thread bolt into axle from drive side using 5mm HEX wrench (IMAGE #2).

D Holding 5mm HEX wrench on nondrive side upper axle, insert torque wrench into bolt on drive side and tighten to 20 Nm / 175 in-lbs (IMAGE #3).

### CONNECTING BOX LINK TO FRONT TRIANGLE //

A Hold bearing cap (#130778) with rounded edge facing outwards against bearings on linkage piece (IMAGE #4). See exploded view on page 6 for linkage orientation. **B** Match link to front triangle pivot point and insert main pivot expander bolt with greased threads (#130791) through non-drive side of box link, holding bearing caps in place (IMAGE #5). Use 8mm HEX to install and torque bolt to 7 Nm / 60 in-lbs.





### CONNECTING REAR TRIANGLE TO BOX LINK //

**A** Follow previous steps to connect rear triangle to box link (IMAGE #6 & 7).



### CONNECTING REAR TRIANGLE TO TOP LINK //

A Insert shoulder bolts (#130785) through seat stay bearings. Hold lower top link washer (#130784) against inside race of seat stay bearing on top of shoulder bolt threads (IMAGE #8).

**B** Apply loctite #243 to female threads of top link (#130771). Match shoulder bolts to top link threads and tighten shoulder bolts to 20 Nm / 175 in-lbs making sure that each washer is in place between bearing and linkage (IMAGE #9).



### INSTALLING REAR SHOCK //


A Using rear shock, match forward end to forward shock mount and install M6x40mm bolt (#410002) through drive side of frame (IMAGE #10). Do not tighten.

**B** Match rear end of shock to desired travel setting (see below) on upper linkage and install M6x40mm bolt (#410002) through non-drive side of linkage.

C Tighten both M6x40mm (#410002) shock bolts in small increments until you reach approximately 7 Nm / 60 in-lbs.

### **ADJUSTABLE TRAVEL**

THE UPPER LINKAGE OF BOTH THE T275 AND T275C MODELS FEATURE DUAL MOUNTING POSITIONS WHICH ALLOW YOU TO CHOOSE BETWEEN 160MM AND 145MM REAR TRAVEL. FOR MORE INFORMATION SEE THE SET UP GUIDE ON PAGE 13.

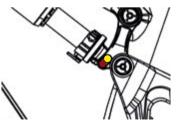



#### INSTALLING ADJUSTER CONES //

A Grease and insert cone adjuster (#130777) into head of main pivot expander bolt (#130791) with M6x22mm bolt (#410009) inserted through cone adjuster (IMAGE #11 & 12).


B Tighten M6x22mm bolt (#410009) with 5mm HEX and torgue to 14 Nm / 125 in-lbs (IMAGE #13).

INSTALLING DERAILLEUR HANGER //

A Grease outer edges of derailleur hanger (#130790) and add loctite #243 to threads of hanger bolt (#130792) (IMAGE #14).

B Insert hanger (#130790) into frame opening on drive side and match with hanger bolt (#130792), threading bolt into hanger. Torque to 11 Nm / 100 in-lbs (IMAGE #15 & 16).



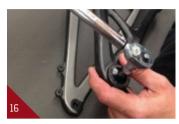

# **TORQUE CHART**


– 7 Nm / 60 in-Ibs

### TORQUE


ACHIEVING PROPER TORQUE IS VITAL TO ENSURING THE SAFE PERFORMANCE AND FUNCTION OF THE T275 AND T275C FRAMES. FAILURE TO DO SO COULD RESULT IN SUB-OPTIMAL PERFORMANCE OF YOUR FRAME AS WELL AS PREMATURE WEAR AND TEAR OF INDIVIDUAL PARTS.

### ADDITIONAL REFERENCE

IN ADDITION TO THIS CHART. ALL TORQUE VALUES ARE LASER ETCHED ONTO CORRESPONDING HARDWARE FOR YOUR REFERENCE.

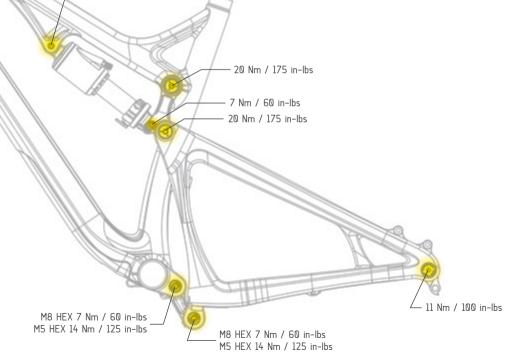

# SET UP

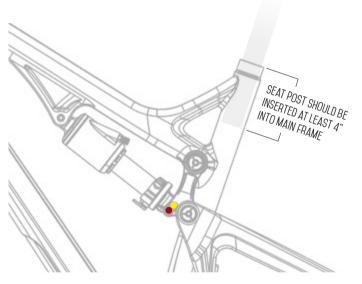

### SEATPOST


MAKE SURE TO INSERT SEAT POST AT LEAST 4" INTO THE MAIN FRAME. ANYTHING LESS THAN THIS AMOUNT COULD CAUSE DAMAGE TO THE FRAME OR EVEN FAILURE.

### **ADJUSTABLE TRAVEL**

• UPPER MOUNT: 160MM

●LOWER MOUNT: 145MM

### SHOCK SETUP

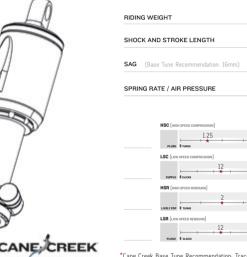

\*Cane Creek Base Tune Recommendation: Tracer 275 / T275C

### SET UP AND TUNE

PROPER SET UP AND TUNING CAN VARY FROM SHOCK TO SHOCK. PLEASE CONSULT THE CANE CREEK MANUAL INCLUDED WITH YOUR BIKE FOR COMPLETE INFORMATION ABOUT SET UP, TUNING AND GENERAL MAINTENANCE OR VISIT WWW.CANECREEK.COM/PRODUCTS/SUSPENSION

### SHOCK SETUP ROCK SHOX MONARCH PLUS RC3



### SET UP AND TUNE

PROPER SET UP AND TUNING CAN VARY FROM SHOCK TO SHOCK. PLEASE CONSULT THE ROCKSHOX MANUAL INCLUDED WITH YOUR BIKE FOR COMPLETE INFORMATION ABOUT SET UP. TUNING AND GENERAL MAINTENANCE OR VISIT WWW.SRAM.COM/ ROCKSHOX/PRODUCTS

TRAVEL	145 MM 160 MM			160 MM	
SHOCK STOKE					
SHOCK SAG	20% when sitting on the bike				
FORK SAG	25-30⊁ when sitting on the bike				
SHOCK	Roc	k Shox Monarch Plus RC3 200	0x57mm High Volur	ne MM Tune	
RIDER WEIGHT(LBS/KGS)	SPRING (PSI)	REBOUND (CLICKS OUT)	SPRING (PSI)	REBOUND (CLICKS OUT)	
100 lbs / 45 kgs	109		112		
110 lbs / 50 kgs	117	1 to 2	121		
120 lbs / 54 kgs	124		129	1 to 2	
130 lbs / 59 kgs	131		137		
140 lbs / 63.5 kgs	139		145		
150 lbs / 68 kgs	146		154		
160 lbs / 72.57 kgs	153		162		
170 lbs / 77.11 kgs	161		170		
180 lbs / 81.65 kgs	168	2(	179	2.4.4	
190 lbs / 86.18 kgs	175	3 to 4	187	3 to 4	
200 lbs / 90.72 kgs	183		195		
210 lbs / 95.25 kgs	190		204		
220 lbs / 99.79 kgs	198		212		
230 lbs / 140.33 kgs	205		220		
240 lbs / 108.86 kgs	212		228		
250 lbs / 113.40 kgs	220		237		
260 lbs / 117.93 kgs	227		245	5.0	
270 lbs / 122.50 kgs	234	5 to 6	253	5 to 6	
280 lbs / 127.00 kgs	242		262		
290 lbs / 131.54 kgs	249		270		
300 lbs / 136.08 kgs	256		278		

### SHOCK SETUP FOX SHOX EVOLUTION, FLOAT CTD ADJ



### SET UP AND TUNE

PROPER SET UP AND TUNING CAN VARY FROM SHOCK TO SHOCK. PLEASE CONSULT THE FOX MANUAL INCLUDED WITH YOUR BIKE FOR COMPLETE INFORMATION ABOUT SET UP. TUNING AND GENERAL MAINTENANCE OR VISIT WWW.FOXRACINGSHOX.COM

TRAVEL		145 MM	160 MM		
SHOCK STOKE					
SHOCK SAG	20% when sitting on the bike				
FORK SAG	25-30½ when sitting on the bike				
SHOCK	FOX Sho	FOX Shox Evolution, FLOAT CTD ADJ, 200x57 mm Tracer 275 Custom Tune			
RIDER WEIGHT(LBS/KGS)	SPRING (PSI)	SPRING (PSI) REBOUND (CLICKS OUT) SPRING (PSI)			
100 lbs / 45 kgs	96		114	-	
110 lbs / 50 kgs	103		120		
120 lbs / 54 kgs	109	3 to 4	127	3 to 4	
130 lbs / 59 kgs	115		133		
140 lbs / 63.5 kgs	122		140		
150 lbs / 68 kgs	128		146		
160 lbs / 72.57 kgs	135		153	]	
170 lbs / 77.11 kgs	141		159		
180 lbs / 81.65 kgs	148	5 to 6	166	E to C	
190 lbs / 86.18 kgs	154	5 to 6	172	5 to 6	
200 lbs / 90.72 kgs	160		179		
210 lbs / 95.25 kgs	167		185		
220 lbs / 99.79 kgs	173		192		
230 lbs / 140.33 kgs	180		198		
240 lbs / 108.86 kgs	186		205		
250 lbs / 113.40 kgs	193		211		
260 lbs / 117.93 kgs	199	7.0	218	7.0	
270 lbs / 122.50 kgs	205	7 to 8	224	7 to 8	
280 lbs / 127.00 kgs	212		231		
290 lbs / 131.54 kgs	218		237	]	
300 lbs / 136.08 kgs	225		244	]	

INTENSE CYCLES // 15

## MAINTENANCE

### GENERAL SERVICE AND CARE //

You have purchased a high performance bicycle which requires a certain level of service and maintenance to sustain the level of performance your frame was designed around. Proper care will also ensure the bike is safe to ride at all levels. It is important to read and understand the carbon care information as well as follow the maintenance schedule and inspect your bicycle before each ride. These will not only help to limit or avoid costly repairs but will also help to avoid injury due to service neglect and component failure.

### **T275C CARBON CARE**

INTENSE CYCLES EMPLOYS ADVANCED COMPOSITE TECHNIQUES AND MATERIALS IN OUR FRAMES WHICH DO REQUIRE A CERTAIN LEVEL OF CARE AND MAINTENANCE TO ENSURE A SAFE EXPERIENCE AT THE HIGH LEVEL OF PERFORMANCE EACH FRAME IS DESIGNED AROUND. NOT FOLLOWING THESE GUIDELINES WILL DECREASE THE LEVEL OF PERFORMANCE AND POSSIBLY CAUSE INJURY OR DEATH.

- ${\mbox{\circ}}$  Use a soft cloth with warm soapy water to clean the carbon surfaces. Do not use abrasive cloths or cleaners.
- Be sure all frame surfaces in contact with cables are protected. Cable housing rubbing on carbon can wear over time.
- Be sure brake levers, handle bar ends and the fork crown do not contact the frame at full rotation.
- Never clamp any part of a carbon frame in a bike stand or car rack.
- Always inspect your frame if you experience any chain suck. Intense frames come equipped with steel chain suck plates but damage can still be done in the event of chain suck.
- Always inspect your frame in full after a crash to be sure there is no damage. Look for cracks, dents or loose fibers. If you discover damage in any degree it's best to have your frame inspected by a qualified Intense Cycles dealer. Any direct impact to the frame can cause serious structural damage.
- Use high grade waterproof grease on seat post, BB and head set bearing contact areas with the carbon.
- Never ream or face a carbon frame.
- · Be sure to follow all recommended torque settings.

#### 16 // TRACER 275 USER MANUAL



### **MAINTENANCE SCHEDULE\***

	ACTION	EVERY RIDE	500 MILES OR 1 Month	2000 MILES OR 6 Months	4000 MILES OR 1 YEAR
TIRES	Check air pressure, inspect tread and sidewalls for tears and punctures	Х			
CHAIN	Brush off and lubricate	Х			
BRAKES	Squeeze brakes and confirm function	Х			
GENERAL	Clean complete bike of mud and debris		Х		
HEADSET	Check adjustment		Х		
BOX LINK	Add grease thru zerk fittings		Х		
FRAME PIVOTS	Check torques		Х		
SPOKES	Inspect for damage, check tension		Х		
SHOCK AND FORK	Check air pressure, inspect for leaks		Х		
DERAILEUR CABLES	Inspect and lube			Х	
SEATPOST	Clean and regrease interface with frame			Х	
FRAME PIVOTS	Remove pivot bolts, check bearings for pitting and wear			Х	
HEADSET	Disassemble stem, headset and fork. Check bearings for pitting and wear			Х	
HUBS	Pull wheels off, check hub bearings for pitting and wear			Х	
BOTTOM BRACKET	Remove crank arms and check BB bearings for pitting and wear			Х	
BRAKES	Replace brake pads			Х	
CHAIN	Inspect for damage and check for stretching			Х	
GENERAL	Complete Tune-Up				Х
SHOCK AND FORK	Overhaul		See MFG	Recommendations	

\* THE ABOVE MAINTENANCE SCHEDULE IS ONLY A GUIDELINE. REFER TO COMPONENT MANUFACTURER FOR SPECIFIC INSTRUCTION ON MAINTAINING THEIR PARTS.



### REGISTRATION

WWW.INTENSECYCLES.COM/WARRANTY-CARD/



CONTACT CUSTOMER SERVICE CS@INTENSECYCLES.COM 951-296-9596

### WWW.INTENSECYCLES.COM

PHONE: (951)-296-9596 CUSTOMER SERVICE: CS@INTENSECYCLES.COM GENERAL INFO: INFO@INTENSECYCLES.COM MEDIA. MARKETING. SPONSORSHIP: MARKETING@INTENSECYCLES.COM

INTENSE CYCLES USA 42380 RIO NEDO TEMECULA, CA. 92590