

# EXPLORE<sup>®</sup>

SCIENTIFIC


## 5-in-1 WiFi Professional Weather Station

Art.No.: WSX1001



## INSTRUCTION MANUAL

### ABOUT THIS INSTRUCTION MANUAL

 These operating instructions are to be considered a component of the device.

Please read the safety instructions and the operating instructions carefully before use.

Keep these instructions for renewed use at a later date. When the device is sold or given to someone else, the instruction manual must be provided to the new owner/user of the product.

The device is intended only for indoor use.

### GENERAL WARNINGS

- **Risk of electric shock** — This device contains electronic components that operate via a power source (batteries). Children should only use the device under adult supervision. Only use the device as described in the manual; otherwise, you run the risk of an electric shock.
- **Choking hazard** — Children should only use the device under adult supervision. Keep packaging material, like plastic bags and rubber bands, out of the reach of children, as these materials pose a choking hazard.
- **Risk of chemical burn** — Keep batteries out of the reach of children! Make sure you insert the batteries correctly. Leaking battery acid can lead to chemical burns. Avoid contact of battery acid with skin, eyes and mucous membranes. In the event of contact, rinse the affected region immediately with a plenty of water and seek medical attention.
- **Risk of fire/explosion** — Do not expose the device to high temperatures. Use only the recommended batteries. Do not short-circuit the device or batteries, or throw them into a fire. Excessive heat or improper handling could trigger a short-circuit, a fire, or an explosion.
- Do not disassemble the device. In the event of a defect, please contact your dealer. The dealer will contact the Service Centre and can send the device in to be repaired, if necessary.
- Use only the recommended batteries. Always replace weak or empty batteries with a new, complete set of batteries at full capacity. Do not use batteries from different brands or with different capacities. The batteries should be removed from the unit if it has not been used for a long time.

### SCOPE OF DELIVERY

Base station, 5-in-1 Multisensor, AC/DC adapter (5V), 1x CR2032 battery (Backup battery)

### BEFORE YOU BEGIN

- We recommend using alkaline batteries. If temperatures regularly fall below 0°C (32°F), we recommend using lithium batteries.
- Avoid using rechargeable batteries. (Rechargeable batteries cannot maintain correct power requirements.)
- Insert batteries before first use, matching the polarity in the battery compartment. Connect the AC/DC adapter with the Base station and insert 1 CR2032 battery as backup power. 3x AA Batteries are required for the 5-in-1 Multisensor.



# TABLE OF CONTENTS

---

|  |    |
|--|----|
| INTRODUCTION . . . . .   | 1  |
| OVERVIEW . . . . .   | 1  |
| CONSOLE . . . . .  | 1  |
| LCD DISPLAY . . . . .  | 2  |
| WIRELESS 5-IN-1 WEATHER SENSOR . . . . .                             | 2  |
| INSTALLATION AND SETUP . . . . .                                     | 3  |
| INSTALL WIRELESS 5-IN-1 WEATHER SENSOR. . . . .                      | 3  |
| POWER UP CONSOLE . . . . .   | 5  |
| PAIRING WIRELESS 5-IN-1 WEATHER SENSOR & CONSOLE . . . . .           | 6  |
| PAIRING ADDITIONAL WIRELESS SENSOR(S) & CONSOLE (OPTIONAL) . . . . . | 6  |
| CREATE WEATHER SERVER ACCOUNT & SETUP WI-FI CONNECTION . . . . .     | 6  |
| CREATE WEATHER UNDERGROUND ACCOUNT . . . . .                         | 6  |
| CREATE WEATHERCLOUD ACCOUNT . . . . .                                | 8  |
| SETUP WI-FI CONNECTION . . . . .                                     | 9  |
| SETUP THE WEATHER SERVER CONNECTION. . . . .                         | 10 |
| ADVANCE SETTING IN WEB INTERFACE . . . . .                           | 11 |
| VIEW YOUR WEATHER DATA IN WUNDERGROUND . . . . .                     | 11 |
| VIEW YOUR WEATHER DATA IN WEATHERCLOUD . . . . .                     | 12 |
| FIRMWARE UPDATE . . . . .  | 12 |
| OTHER SETTING & FUNCTIONS OF THE CONSOLE . . . . .                   | 13 |
| MANUAL CLOCK SETTING. . . . .  | 13 |
| MOON PHASE . . . . .   | 14 |
| POINTING THE WIRELESS 5-IN-1 SENSOR TO SOUTH . . . . .               | 14 |
| SETTING ALARM TIME . . . . .   | 14 |
| ACTIVATING ALARM AND TEMPERATURE PRE-ALARM FUNCTION . . . . .        | 15 |
| TEMPERATURE / HUMIDITY FUNCTION & TREND . . . . .                    | 15 |
| COMFORT INDICATION . . . . .   | 15 |
| WIRELESS SENSOR SIGNAL RECEIVING . . . . .                           | 16 |
| WIND . . . . .   | 16 |
| WEATHER INDEX . . . . .  | 16 |
| WEATHER FORECAST . . . . .   | 17 |
| BAROMETRIC PRESSURE. . . . .   | 17 |
| RAINFALL . . . . .   | 18 |
| MAX / MIN DATA RECORD . . . . .                                      | 18 |
| PAST 24 HOURS HISTORY DATA . . . . .                                 | 19 |
| WEATHER ALERT SETTING . . . . .                                      | 19 |
| BACKLIGHT . . . . .  | 20 |
| MAINTENANCE . . . . .  | 20 |
| BATTERY REPLACEMENT . . . . .  | 20 |
| CLEANING THE RAIN COLLECTOR. . . . .                                 | 20 |
| CLEANING HYGRO-THERMO SENSOR OF WIRELESS 5-IN-1 SENSOR . . . . .     | 21 |
| PRECAUTIONS . . . . .  | 21 |
| SPECIFICATION . . . . .  | 22 |
| CONSOLE . . . . .  | 22 |
| WIRELESS 5-IN-1 SENSOR . . . . .                                     | 24 |



## INTRODUCTION

Thank you for selecting the 5-in-1 WiFi Professional Weather Station. This system gathers and automatically uploads accurate and detailed weather data to Weather Underground and Weathercloud website - the famous weather service which allows weather observers to upload their local weather data with automated personal weather stations (PWS) - at which you can access and upload your weather data freely. This product offers professional weather observers or serious weather enthusiasts robust performance with a wide range of options and sensors. You will get your own local forecast, high/low, totals and averages for virtually all weather variables without using a PC.

This Weather Station which transmits outdoor temperature, humidity, wind and rain data, which can add to a sensor array of maximum 7 units, transmits your temperature & humidity to the console. Both sensors are fully assembled and calibrated for your easy installation. They send data at a low power radio frequency to the console from up to 150m/450 feet away (line of sight).


In the console, a high-speed processor is embedded to analyze the received weather data and these real-time data can be published to [Wunderground.com](http://Wunderground.com) and [weathercloud.net](http://weathercloud.net) through your home Wi-fi router. The console can also synchronize with internet time server to keep the time and weather data time stamp of high precision. The color background LCD display shows informative weather readings with advanced features, such as high/low alert alarm, different weather index, and MAX/MIN records. With calibration and moon phase feature, this system is truly a remarkably personal yet professional weather station for your own backyard.

### NOTE:

This instruction manual contains useful information on the proper use and care of this product. Please read this manual through to fully understand and enjoy its features, and keep it handy for future use.


## OVERVIEW

### CONSOLE

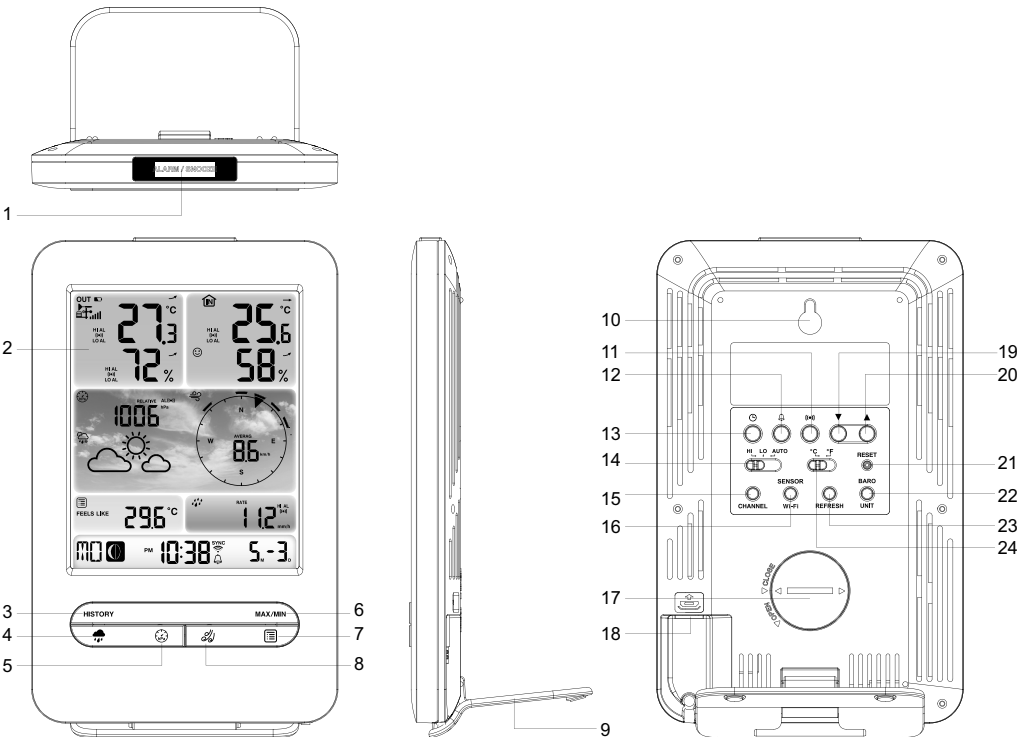

- |                                |                                   |                                     |
|--------------------------------|-----------------------------------|-------------------------------------|
| 1. [ <b>ALARM/SNOOZE</b> ] key | 9. Table stand                    | 17. Battery door                    |
| 2. LCD display                 | 10. Wall mounting holder          | 18. USB Power socket                |
| 3. [ <b>HISTORY</b> ] key      | 11. [ <b>ALERT</b> ] key          | 19. [ <b>▼</b> ] key                |
| 4. [ <b>RAIN</b> ] key         | 12. [ <b>ALARM</b> ] key          | 20. [ <b>▲</b> ] key                |
| 5. [ <b>BARO</b> ] key         | 13. [ <b>CLOCK SET</b> ] key      | 21. [ <b>RESET</b> ] key            |
| 6. [ <b>MAX / MIN</b> ] key    | 14. [ <b>HI / LO / AUTO</b> ] key | 22. [ <b>BARO UNIT</b> ] key        |
| 7. [ <b>INDEX</b> ] key        | 15. [ <b>CHANNEL</b> ] key        | 23. [ <b>REFRESH</b> ] key          |
| 8. [ <b>WIND</b> ] key         | 16. [ <b>SENSOR / WI-FI</b> ] key | 24. [ <b>°C / °F</b> ] slide switch |

### LCD DISPLAY

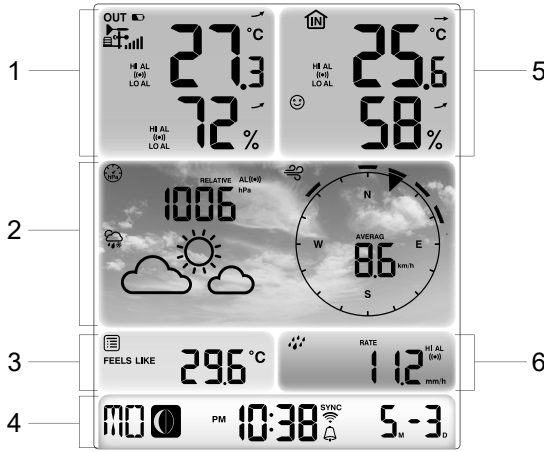


Display section:

1. Outdoor temperature & humidity
2. Weather forecast, Barometer, Wind direction & speed
3. Weather index
4. Time, calendar & moon phase
5. Indoor / CH temperature & humidity
6. Rainfall & Rain rate


### WIRELESS 5-IN-1 WEATHER SENSOR

1. Rain collector
2. Balance indicator
3. Antenna
4. Wind cups
5. Mounting pole
6. Radiation shield
7. Wind vane
8. Mounting base
9. Mounting clamp
10. Red LED indicator
11. [ **RESET** ] key
12. Battery door
13. Screws

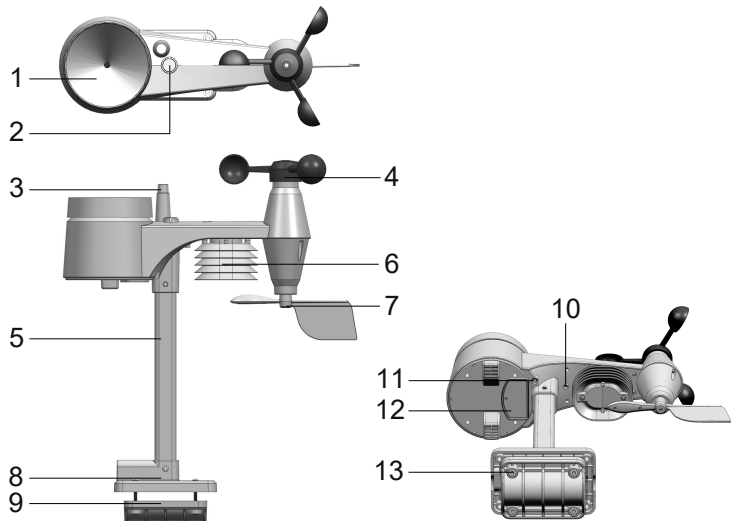


## RAIN GAUGE

1. Rain collector
2. Tipping bucket
3. Rain sensor
4. Drain holes

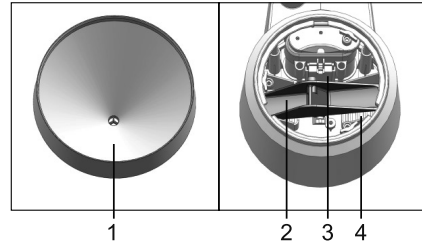


## TEMPERATURE AND HUMIDITY SENSOR

1. Radiation shield Sensor casing
2. Temperature and humidity sensor (inside the radiation shield)

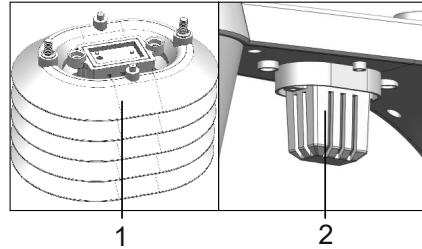

## WIND SENSOR

1. Wind cups (anemometer)
2. Wind vane

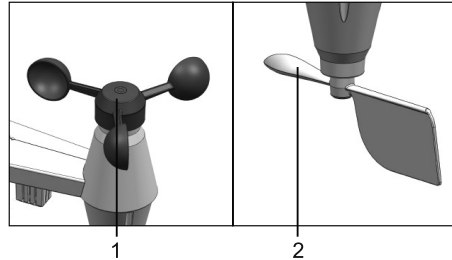

## INSTALLATION AND SETUP

### INSTALL WIRELESS 5-IN-1 WEATHER SENSOR


Your wireless 5-IN-1 sensor measures wind-speed, wind-direction, rainfall, temperature and humidity for you. It's assembled and calibrated for your easy installation.

### INSTALL BATTERIES

Unscrew the battery door at bottom of unit and insert the batteries according to the +/- polarity indicated. Screw the battery door compartment on tightly.

#### NOTE:

- Ensure the water tight O-ring is properly aligned in place to ensure water resistant.
- The red LED will begin flashing every 12 seconds.

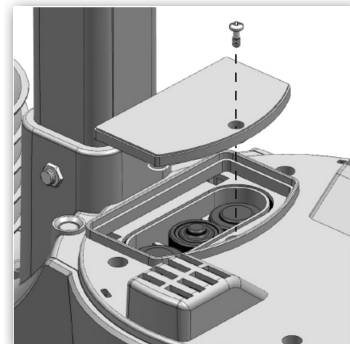


## ASSEMBLY THE STAND AND POLE

### Step 1

Insert the top side of the pole to the square hole of the weather sensor.


#### NOTE:

Ensure the pole and sensor's indicator align.

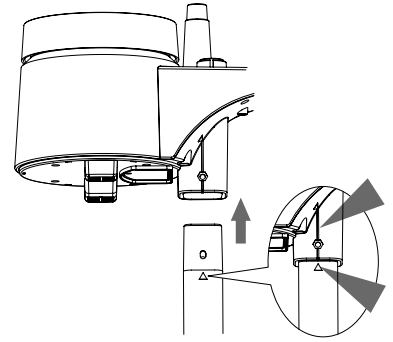

### Step 2

Place the nut in the hexagon hole on the sensor, then insert the screw in other side and tighten it by the screw driver.

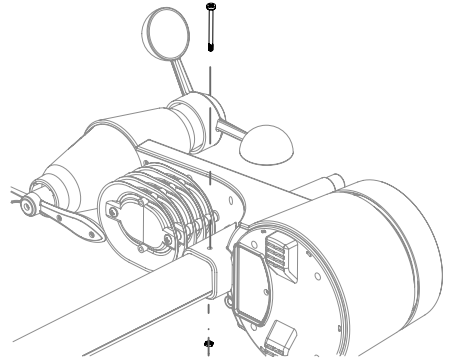


### Step 3

Insert the other side of the pole to the square hole of the plastic stand.


#### NOTE:

Ensure the pole and stand's indicator align.

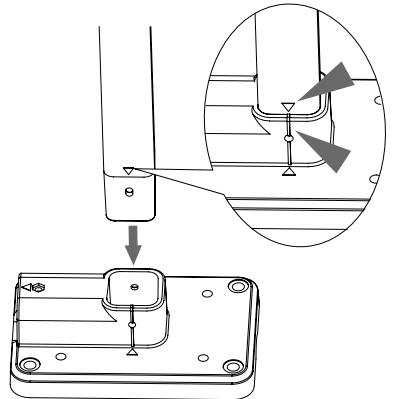


### Step 4

Place the nut in the hexagon hole of the stand, then insert the screw in other side and then tighten it by the screw driver.

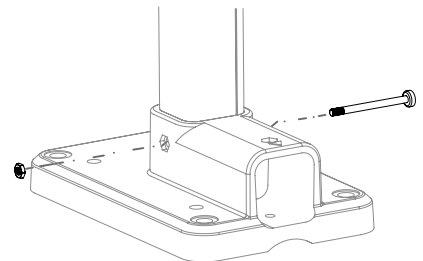

Install the wireless 5-IN-1 sensor in an open location with no obstructions above and around the sensor for accurate rain and wind measurement. Install the sensor with the smaller end facing the North to properly orient the wind direction vane. Secure the mounting stand and bracket (included) to a post or pole, and allow minimum 1.5m off the ground.

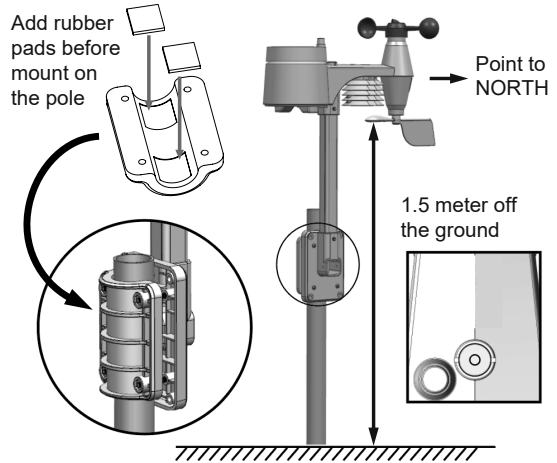

### **POWER UP CONSOLE**

Your console can pairing up with the wireless 5-IN-1 outdoor weather sensor and up to 7 optional wireless sensors. (Not included)

### **INSTALL THE BACKUP BATTERY**


1. Remove the battery door of the console.
2. Insert a new CR2032 battery as per the polarity information marked on the battery compartment.
3. Replace the battery door.

### **NOTE:**

The backup battery can backup: Time & Date, Max/Min & Past 24 hours weather records, Alert setting values, offset value of weather data and Sensor(s) channel history. The built-in memory can backup: Router setting and Weather server setting

### **POWER UP THE CONSOLE**

1. Plug the power adaptor USB plug to power up the main unit.
2. Once the main unit power up, all the segments of the LCD will be shown.
3. The console will automatically start AP mode.


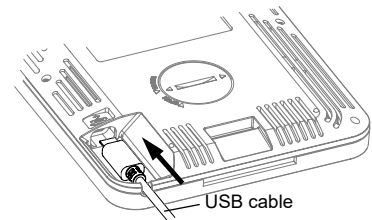


### **NOTE:**

If no display appears on the LCD after you plug the adaptor, press [ **RESET** ] key by using a pointed object.

### **TABLE STAND INSTALLATION**

The unit is designed for desktop or wall mount for easy viewing. follow the steps to hook the table stand on the bottom of the console.

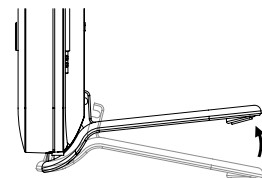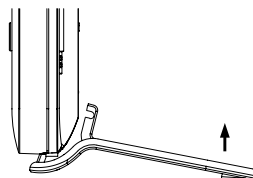



## SET LCD DISPLAY VIEWING ANGLE

Press [ ▲ ] or [ ▼ ] key in normal mode to adjust LCD viewing angle to fit table stand or wall mount situation.

## PAIRING WIRELESS 5-IN-1 WEATHER SENSOR & CONSOLE

After insert of batteries, the console will automatically search and connect the wireless 5-IN-1 sensor (the sensor antenna icon blinking).

Once the connection is successful, antenna icon and readings for outdoor temperature & humidity, wind speed, wind direction and rainfall will appear on the LCD.

## CHANGING BATTERIES AND MANUAL PAIRING OF SENSOR

Whenever you changed the batteries of the wireless 5-IN-1 sensor, pairing must be done manually.

1. Change all the batteries to new ones in the sensor.
2. Press [ **SENSOR / WI-FI** ] key on the console.
3. Press [ **RESET** ] key on the wireless 5-IN-1 sensor.

## PAIRING ADDITIONAL WIRELESS SENSOR(S) & CONSOLE (OPTIONAL)

This console can support up to 7 additional wireless sensor(s). You can press [ **SENSOR / WIFI** ] key to search the on display channel's sensor manually. Once your sensor paired up, the sensor signal strength indicator and weather reading will appear on your console display.

### NOTE:

- The additional wireless sensor(s) is not included.
- This console can support different type of additional wireless sensor, e.g. soil moisture and pool sensor. Check with your retailer for more detail.

## CREATE WEATHER SERVER ACCOUNT & SETUP WI-FI CONNECTION

The console can upload weather data to WUnderground and / or Weathercloud through WI-FI router. you can follow the step below to setup your device.

### NOTE:

The Weather Underground and Weathercloud website are subject to change.

## CREATE WEATHER UNDERGROUND ACCOUNT

1. In <https://www.wunderground.com> click the "Join" on the top right corner to open the registration page. Follow the instructions to create your account.



### NOTE:

Use the valid email address to register your account.

2. After you have created your account and completed the Email validation, please go back to the WUnderground web page to login. Then, click "My Profile" button on the top to open the drop-down menu and click "My Weather Station".



- In "My Weather Station" page bottom, press the "Add New Device" button to add your device.
- Follow their instruction to enter your station information, in the Step "Tell Us More About Your Device", enter a Name for your weather station, then choose "Other" in "Device Hardware" section. fill in other the other information and select "I Accept" to accept Weather underground's privacy terms, then click "Next" to create your station ID and key.

Add a New pws

TYPE LOCATION DETAILS DONE

Tell Us More About Your Device 75%

Name:(Required)  
 Surface Type:

Device Hardware:(Required)  
 Associate Webcam:

Height Above Ground:

You Make Our Forecasts More Accurate, We Respect Your Privacy  
 Contribute to the Weather Underground community by sharing some information about yourself and your sensor. We use this information to manage your account and to improve the experience from the Weather Underground community. We may also share certain data for commercial purposes, such as your sensor location.  
 Learn more about how we take your privacy seriously

(Required)  
 I Accept  I Deny

Email Preferences:  
 I would like to receive PWS notifications.

- Jot down Your "Station ID" and "Station key" for the further setup step.

Registration Complete! 100%

Congratulations! Your personal weather station is now registered with Weather Underground.

Enter the information below to your weather station software.

Your Station ID: **KCOARVAD281**

Your Station Key: **s1kgFvGZ**

Configure Your Software

## CREATE WEATHERCLOUD ACCOUNT

- In <https://weathercloud.net> enter your information in "Join us today" section, then follow the instructions to create your account.

weathercloud

About us Plans Projects Blog FAQ Map Sign In EN

Welcome to Weathercloud  
 The easiest way to share your weather data with the world.

Join us today

Username

Email

Password

By clicking Sign up, you agree to our Terms


**NOTE:**

Use the valid email address to register your account.


2. Sign in weathercloud and then you will go the "Devices" page, click "+ New" to create new device.



3. Enter all the information in **Create new device** page, for the **Model\*** selection box select the "W100 Series" under "CCL" section. for the Link type\* selection box select the "Pro Weather Link", Once you have completed, click **Create**.

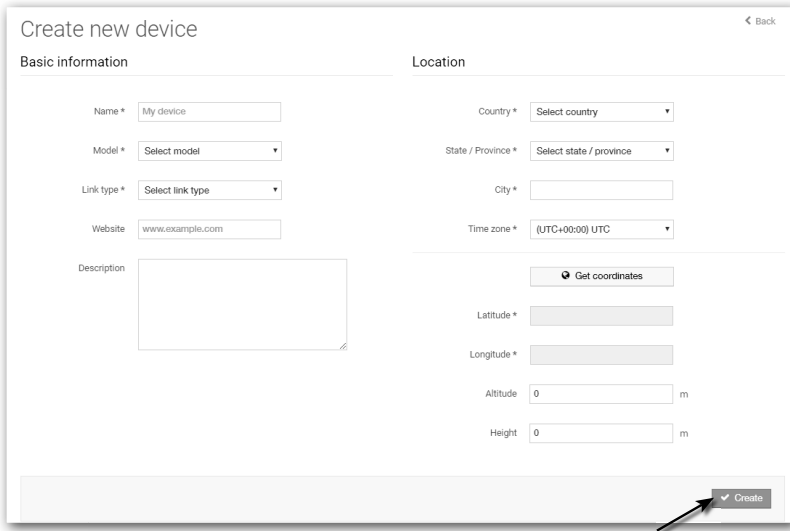

4. Jot down your ID and key for the further setup step.

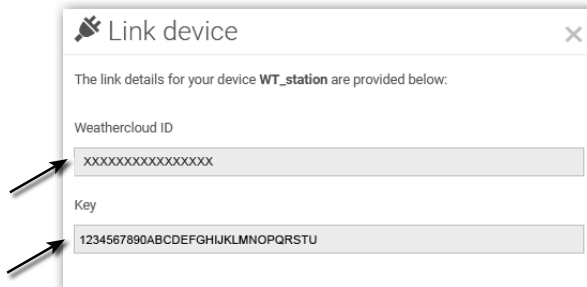

## SETUP WI-FI CONNECTION

1. When you first power up the console, or press and hold the [ **SENSOR / WI-FI** ]key for 6 seconds in normal mode, the console LCD will show "AP" and "📶" icon to signify that it has entered AP (access point) mode, and is ready for WI-FI settings.



2. Use the smart phone, tablet, or computer to connect to the console through WI-FI.
3. In PC choose WiFi network settings or In Android / iOS choose setting → WI-FI to select the console's SSID: *PWS-XXXXXX* in the list and it will need several second to connect.



PC Wi-Fi network interface



Android Wi-Fi network interface

4. Once connected, enter the following IP address into your internet browser's address bar, to access the console's web interface:

**<http://192.168.1.1>**

### NOTE :

- Some browsers will treat **192.168.1.1** as a search, so make sure you include **http://** header.
- Recommended browsers, such as the latest version of Chrome, Safari, Edge, Firefox or Opera.

## SETUP THE WEATHER SERVER CONNECTION

Enter the following information into the below web interface "SETUP" page. If you choose not to use Wunderground.com or Weathercloud.net, leave the check boxes unchecked.

Pro Weather Link

Language: English

SETUP ADVANCED

WIFI Router setup

Search Router: ROUTER\_A

Add Router

Security type: WAP2

Router Password: \*\*\*\*\*

Weather server setup

Wunderground

Station ID: WDW124

Station key: \*\*\*\*\*

Weathercloud

Station ID: IPACIR23Wc

Station key: \*\*\*\*\*

Mac address 00:0E:C6:00:07:10

Time server setup

Server URL: nist.time.gov

Function firmware version: 1.00  
WiFi firmware version: 1.00

Apply

SETUP page

### NOTE:

- When WI-FI setup is complete, your PC or mobile will resume your default WI-FI connection.
- During AP mode, you can press and hold the [ **SENSOR / WI-FI** ]key for 6 seconds to stop AP mode and the console will restore your previous setting.


### WI-FI CONNECTION STATUS

Below is the WI-FI icon status on the console LCD:

|  |  |   |
|--|--|---|
|  |  |   |
| Stable: Console is in connection with WI-FI router | Flashing: Console is trying to connect to WI-FI router | Flashing: Console currently in Access Point (AP) mode |

### TIME SERVER CONNECTION STATUS

After the console has connected to the internet, it will attempt to connect to the internet time server to obtain the UTC time. Once the connection succeeds and the console's time has been updated, the " **SYNC** " icon will appear on the LCD.



Time zone: To display the time of your time-zone, change the time zone in **CLOCK** setting mode from '00' (default) to your time zone (e.g.08 for Hong Kong).

1. Press and hold [ **CLOCK SET** ] key for 2s to enter time setting mode.
2. Press [ **▲** ] or [ **▼** ] key to enter your time zone, then press and hold [ **CLOCK SET** ] key to confirm and exit. Please refer to **MANUAL CLOCK SETTING** session of manual for details of other setting for the console.



The time will automatically synchronize Internet time server at 12:00AM and 12:00PM per day. Also you can press the [REFRESH] key to get the internet time manually within 1 minute.

## ADVANCE SETTING IN WEB INTERFACE

Press "ADVANCED" key at the top of web interface to enter the advance setting page, this page allow you to set and view the calibration data of the console, also you can update the firmware in here (Only available in PC platform).

Pro Weather Link

Language: English

SETUP      ADVANCED

Select setting unit

Temperature: °C      Humidity %

Indoor:  Current offset: 1       Current offset: -5

Outdoor:  Current offset: -9       Current offset: -10

Temperature calibration section

CH 1:  Current offset: 2       Current offset: -5

CH 2:  Current offset: 3       Current offset: -2

CH 3:  Current offset: 1.2       Current offset: -2

CH 4:  Current offset: -0.2       Current offset: -5

CH 5:  Current offset: -20.1       Current offset: -3

CH 6:  Current offset: 11.5       Current offset: -10

CH 7:  Current offset: 0.2       Current offset: -3

Humidity calibration section

Range: -20.0 ~ 20.0°C / -36.0 ~ 36.0°F (Default: 0.0)      Range: -20 ~ 20 (Default: 0.0)

Pressure: hpa      Select setting unit

Absolute Pressure Offset:  Current offset: -3 (Default: 0)

Relative Pressure Offset:  Current offset: 10 (Default: 0)

Setting Range: -560 ~ 560hpa / -16.54 ~ 16.54inHg / -420 ~ 420mmHg

Rain calibration section

\*\*Rain gain:  Current gain: 0.85 (Range: 0.5 ~ 1.5)(Default: 1.00)

Wind calibration section

\*\*Wind speed gain:  Current gain: 0.75 (Range: 0.5 ~ 1.5)(Default: 1.00)

\*\*Wind direction:  Current offset: 2° (Range: -10 ~ 10)(Default: 0°)

\*\*UV gain:  Current gain: 1.1 (Range: 0.01 ~ 10)(Default: 1.00)

\*\*Light gain:  Current gain: 1.0 (Range: 0.01 ~ 10)(Default: 1.00)

\*\* Depend on the model

Function firmware version: 1.00

WiFi firmware version: 1.00

Advanced page

## CALIBRATION

1. User may enter or change the offset and gain values for different measurement parameters while current offset and gain values are shown next to their corresponding boxes.

2. Once completed, press **Apply** in the SETUP page

The current offset value will show the previous value that you entered, if you want to change, just input the new value in the blank, the new value will valid once you press **Apply** icon in SETUP page.

### NOTE:

Calibration of most parameter is not required, with the exception of Relative Pressure, which must be calibrated to sea-level to account for altitude effects.

## VIEW YOUR WEATHER DATA IN WUNDERGROUND

To view your weather station live data in a web browser (PC or mobile version), please visit <http://www.wunderground.com>, and then enter your "Station ID" in the searching box. Your weather data will show up on the next page. You can also login your account to view and download the recorded data of your weather station.





Another way to view your station is use the web browser URL bar, type below in the URL bar:

**<https://www.wunderground.com/dashboard/pws/XXXX>**



Then replace the XXXX by your Weather underground station ID to go to your station live view directly.

You can also use the Apple iPad's "WunderStation" app to log your own weather station to view the live data.



**WunderStation**

### VIEWING YOUR WEATHER DATA IN WEATHERCLOUD

1. To view your weather station live data in a web browser (PC or mobile version), please visit <https://weathercloud.net> and sign in your own account.
2. Click the  icon inside the  pull down menu of your station.




3. Click **"Current"**, **"Wind"**, **"Evolution"** or **"Inside"** icon to view the live data of your weather station.



### FIRMWARE UPDATE

The console supports OTA firmware update capability. Its firmware may be updated over the air anytime (whenever necessary) through any web-browser on a PC with WI-FI connectivity. Update function, however, is not available through mobile/smart devices.

Two types of firmware updates are available, namely Function Firmware and System WI-FI Firmware, and are located at the bottom of **ADVANCED** page.

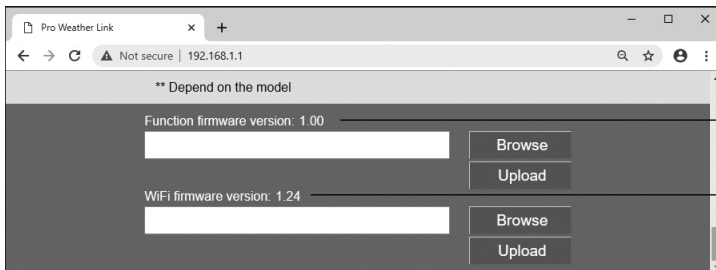


Current Function firmware version


Current WI-FI firmware version

## FIRMWARE UPDATE STEP

1. Download the latest version firmware (function or WI-FI) to your PC.
2. Set the Console into AP (access point) mode then connect the PC to the console (ref to "SETUP WI-FI CONNECTION" section in previous page).
3. To update the Function firmware, click the **Browse** in Function firmware section and browse to the location of the file you download in step 1. To update the WI-FI firmware, click the **Browse** in WI-FI firmware section.
4. Click the corresponding **Upload** to start transfer the firmware file to console (indicated by a transfer completion %).

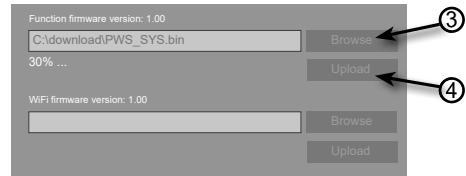

5. Once the console received the firmware file, it executes the update automatically as indicated by the update progress on display (i.e. 100 is completion).

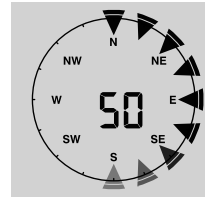

6. The console will restart once the update completed.

### NOTE:

- Function and WI-FI firmware cannot be updated at the same time, you need to update one by one.
- Please keep connecting the power during the firmware update process.
- Please make sure your PC's WI-FI connection is stable.
- When the update process start, do not operate the PC and console.
- During firmware update the console will stop upload data. It will reconnect to your WI-FI router and upload the data again once the update success. If the console cannot connect to your router, please end the SETUP page to setup again.
- After the firmware updates, user might need to input the Weather Underground ID and password again.

## OTHER SETTING & FUNCTIONS OF THE CONSOLE

### MANUAL CLOCK SETTING

This console is designed to obtain the local time by synchronize with the assigned internet time server. If you want to use it offline, you can set the time and date manually. During the first time startup, press and hold the [ **SENSOR / WI-FI** ]key for 6 seconds and let the console back to normal mode.

1. In normal mode, press and hold [ **CLOCK SET** ] key for 2 seconds to enter setting.
2. The setting sequence: Time Zone → DST ON/OFF → Hour → Minute → 12/24 hour format → Year → Month → Day → M-D/D-M format → Time sync ON/OFF → weekday Language.
3. Press [ **▲** ] or [ **▼** ] key to change the value. Press and hold the key for quick-adjust.
4. Press [ **CLOCK SET** ] key to save and exit the setting mode, or the unit will automatically exit the setting mode 60 seconds later without pressing any key.

















### NOTE:

- In normal mode, press [ **CLOCK SET** ] key to switch between year and date display.
- During the setting, you can press and hold [ **CLOCK SET** ] key for 2 seconds to back to normal model.



## MOON PHASE

The moon phase is determined by the time, date and time zone. The following table explains the moon phase icons of the Northern and Southern hemispheres. Please refer to ***ORIENTING THE 5-IN-1 SENSOR TOWARDS SOUTH*** section about how to setup for the Southern hemispheres.

| Northern hemisphere   | Moon Phase      | Southern hemisphere   |
|---|-----------------|---|
|  | New Moon        |  |
|  | Waxing Crescent |  |
|  | First quarter   |  |
|  | Waxing Gibbous  |  |
|  | Full Moon       |  |
|  | Waning Gibbous  |  |
|  | Third quarter   |  |
|  | Waning Crescent |  |

## POINTING THE WIRELESS 5-IN-1 SENSOR TO SOUTH

The outdoor 5-IN-1 sensor is calibrated to point to North for the maximum accuracy. However, for the user's convenience (e.g. users in the Southern hemisphere), it is possible to use the sensor with the wind vane pointing to South.

1. Install the 5-IN-1 wireless sensor with its wind meter end pointing to South. (Please refer to **INSTALLATION OF THE WIRELESS SENSOR** for mounting details)
2. In normal mode of the console, press and hold [ **INDEX** ] key for 10 seconds to enter into the calibration mode, then press [ **INDEX** ] key again until the "N" icon appears on the left bottom corner of the LCD to enter into the sensor orientation mode
3. Use [ **▲** ] or [ **▼** ] key to change to lower part (Southern Hemisphere).
4. Press [ **INDEX** ] key to confirm and exit.

### **NOTE:**

Changing the hemisphere setting will automatically switch the direction of the moon phase on the display.

## SETTING ALARM TIME

1. In normal time mode, press and hold [ **ALARM** ] key for 2 seconds until the alarm hour digit flashes to enter alarm time setting mode.
2. Press [ **▲** ] or [ **▼** ] key to change the value. Press and hold the key for quick-adjust.
3. Press [ **ALARM** ] key again to step the setting value to Minute with the Minute digit flashing.
4. Press [ **▲** ] or [ **▼** ] key to adjust the value of the flashing digit.
5. Press [ **ALARM** ] key to save and exit the setting.

### **NOTE:**

- In alarm mode, the "🔔" icon will display on the LCD.
- The alarm function will turn on automatically once you set the alarm time.



## **ACTIVATING ALARM AND TEMPERATURE PRE-ALARM FUNCTION**

1. In normal mode, press [ **ALARM** ] key to show the alarm time for 5 seconds.
2. When the alarm time displays, press [ **ALARM** ] key again to activate the alarm function.  
Or press [ **ALARM** ] key twice to activate the alarm with ice pre-alarm function.

|                  |                 |                             |
|------------------|-----------------|-----------------------------|
|                  |                 |                             |
| <b>Alarm off</b> | <b>Alarm on</b> | <b>Alarm with ice-alert</b> |

### **NOTE:**

Once the ice pre-alert activates, the pre-set alarm will sound and ice-alert icon will flash 30 minutes earlier if the outdoor temperature is below -3°C.

When clock reach the alarm time, alarm sound will start.

Where it can be stopped by following operation:

- Auto-stop after 2 minutes alarming if without any operation and the alarm will activate again in the next day.
- By pressing [ **ALARM/SNOOZE** ] key to enter snooze that the alarm will sound again after 5 minutes.
- By pressing and hold [ **ALARM/SNOOZE** ] key for 2 seconds to stop the alarm and will activate again in the next day
- By pressing [ **ALARM** ] key to stop the alarm and the alarm will activate again in the next day.

### **NOTE:**

- The snooze could be used continuously in 24 hours.
- During the snooze, the alarm icon “” will keep flashing.

## **TEMPERATURE / HUMIDITY FUNCTION & TREND**

Use the [ °C / °F ] slide switch to select the temperature display unit.

The temperature / humidity trend indicator shows the trends of changes in the forthcoming few minutes.

|                                     |        |        |         |
|-------------------------------------|--------|--------|---------|
| <b>Arrow indicator</b>              |        |        |         |
| <b>Temperature / Humidity trend</b> | Rising | Steady | Falling |

### **NOTE:**

- When indoor temperature is below -40°C, the LCD will display “Lo”. If temperature is above 70°C, LCD will display “HI”.
- When outdoor temperature is below -40°C, the LCD will display “Lo”. If temperature is above 80°C, LCD will display “HI”.
- When humidity is below 1%, LCD will display “Lo”. If humidity is above 99%, LCD will display “HI”.

## **COMFORT INDICATION**

The comfort indication is a pictorial indication based on indoor air temperature and humidity in an attempt to determine comfort level.

|                 |                    |                |
|-----------------|--------------------|----------------|
|                 |                    |                |
| <b>Too cold</b> | <b>Comfortable</b> | <b>Too hot</b> |

### **NOTE:**

- Comfort indication can vary under the same temperature, depending on the humidity.
- There is no comfort indication when temperature is below 0°C (32°F) or over 60°C (140°F).



## WIRELESS SENSOR SIGNAL RECEIVING

1. The console display signal strength for the wireless 5-IN-1 sensor, as per table below:

| <br><b>No signal</b> | <br><b>Weak signal</b> | <br><b>Good signal</b> |
|---|---|---|
|---|---|---|

2. If the signal has discontinued and does not recover within 15 minutes, the signal icon will disappear. The temperature and humidity will display "Er" for the corresponding channel.
3. If the signal does not recover within 48 hours, the "Er" display will become permanent. You need to replace the batteries and then press [ **SENSOR / WI-FI** ] key to pair up the sensor again.


## **VIEW THE OUTDOOR CHANNEL (OPTIONAL FEATURE WITH ADD ON EXTRA THERMAL HYGRO SENSORS)**

This console is capable to pair with a wireless 5-IN-1 sensor and up to 7 wireless thermal-hygro sensors. If you have 2 or more sensors, you can press [ **CHANNEL** ] key to switch between different wireless channels in normal mode, or press and hold [ **CHANNEL** ] key for 2 seconds to toggle auto-cycle mode to display the connected channels at 4 seconds interval.

During auto-cycle mode, press [ **CHANNEL** ] key to stop auto cycle and display the current channel.

## **WIND**

### **WIND SPEED AND DIRECTION SECTION OVERVIEW**

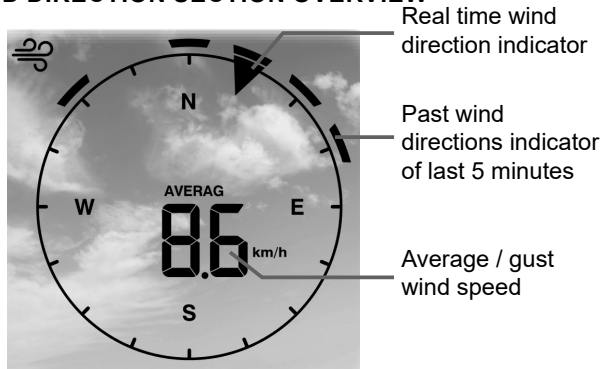

### **TO SET THE WIND SPEED UNIT AND DIRECTION DISPLAY FORMAT**

1. In normal mode, press and hold [ **WIND** ] key for 2 seconds to enter into wind speed unit mode and the unit will flash. Press [ **▲** ] or [ **▼** ] key to change the wind speed unit in this sequence: m/s → km/h → knots → mph
2. Press [ **WIND** ] key again to return to normal mode.

### **TO SELECT THE WIND DISPLAY MODE**

In normal mode, press [ **WIND** ] key to switch between **AVERAGE** and **GUST** wind speed.

## WEATHER INDEX

At the WEATHER INDEX section, you can press [ **INDEX** ] key to view the weather index in this sequence: **FEELS LIKE** → **HEAT INDEX** → **WIND CHILL** → **DEWPOINT**.

### **FEELS LIKE**

The feels like temperature index determine how the outdoor temperature that people actually feel.



## HEAT INDEX

The heat index, which is determined by the wireless 5-IN-1 sensor's temperature & humidity data, when the temperature is between 27°C (80°F) and 50°C (120°F).

| Heat Index range              | Warning         | Explanation                             |
|-------------------------------|-----------------|---|
| 27°C to 32°C (80°F to 90°F)   | Caution         | Possibility of heat exhaustion          |
| 33°C to 40°C (91°F to 105°F)  | Extreme Caution | Possibility of heat dehydration         |
| 41°C to 54°C (106°F to 129°F) | Danger          | Heat exhaustion likely                  |
| ≥55°C (≥130°F)                | Extreme Danger  | Strong risk of dehydration / sun stroke |

## WIND CHILL

A combination of the wireless 5-IN-1 sensor's temperature and wind speed data determines the current wind chill factor.

## DEW POINT

- The dew point is the temperature below which the water vapor in air at constant barometric pressure condenses into liquid water at the same rate at which it evaporates. The condensed water is called *dew* when it forms on a solid surface.
- The dew point temperature is determined by the temperature & humidity data from wireless 5-IN-1 sensor.

## WEATHER FORECAST

The built-in barometer can notice atmosphere pressure changes. Based on the data collected, it can predict the weather conditions in the forthcoming 12~24 hours within a 30~50km (19~31 miles) radius.

|       |               |        |       |                |       |
|-------|---------------|--------|-------|----------------|-------|
|       |               |        |       |                |       |
| Sunny | Partly cloudy | Cloudy | Rainy | Rainy / Stormy | Snowy |

## NOTE:

- The accuracy of a general pressure-based weather forecast is about 70% to 75%.
- The weather forecast is reflecting the weather situation for next 12~24 hours, it may not necessarily reflect the current situation.
- The **SNOWY** weather forecast is not based on the atmospheric pressure, but based on the temperature of outdoor. When the temperature is below -3°C (26°F), the **SNOWY** weather icon will be displayed on the LCD.

## BAROMETRIC PRESSURE

The atmospheric pressure is the pressure at any location of the earth caused by the weight of the column of air above it. One atmospheric pressure refers to the average pressure and gradually decreases as altitude increases. Meteorologists use barometers to measure atmospheric pressure. Since variation in atmospheric pressure greatly affected by weather, it is possible to forecast the weather by measuring the changes in pressure.



## TO SET THE BAROMETER UNIT

In normal mode, press [ **BARO UNIT** ] key to change the barometer unit in this sequence: hPa → inHg → mmHg



## TO VIEW THE ABSOLUTE / RELATIVE BAROMETRIC READING

In normal mode, press [ **BARO** ] key to switch between **ABSOLUTE / RELATIVE** barometric reading.

## RAINFALL

The **RAINFALL** section shows the rainfall and rain rate information.



## TO SET THE RAINFALL UNIT

1. Press and hold [ **RAIN** ] key for 2 seconds to enter unit setting mode.
2. Press [ **▲** ] or [ **▼** ] key to toggle the rainfall unit between mm and in.
3. Press [ **RAIN** ] key to confirm and exit the setting.

## TO SELECT THE RAINFALL DISPLAY MODE

Press [ **RAIN** ] key to toggle between:

1. **HOURLY** - the total rainfall in the past hour
2. **DAILY** - the total rainfall from midnight
3. **WEEKLY** - the total rainfall of the current week
4. **MONTHLY** - the total rainfall of the current calendar month
5. **Total** - the total rainfall since the last reset
6. **Rate** - Current rainfall rate in past an hour (Update every 24 seconds)

## TO RESET THE TOTAL RAINFALL RECORD

In normal mode, press and hold [ **HISTORY** ] key for 2 seconds to reset all the rainfall record.

### **NOTE:**

To ensure correct data, please reset all the rainfall record when you reinstall your wireless 5-IN-1 sensor to other location

## MAX / MIN DATA RECORD

The console can record the accumulated MAX / MIN weather data with the corresponding time stamp for you to easy review.

## TO VIEW THE ACCUMULATED MAX / MIN

In normal mode, press [ **MAX / MIN** ] key to check MAX/MIN records. The display sequence is: indoor (or current channel) MAX temperature → indoor (or current channel) MIN temperature → indoor (or current channel) MAX humidity → indoor (or current channel) MIN humidity → outdoor MAX temperature → outdoor MIN temperature → outdoor MAX humidity → outdoor MIN humidity → MAX average wind speed → MAX gust → MAX relative pressure → MIN relative pressure → MAX absolute pressure → MIN absolute pressure → MAX FEELS LIKE → MIN FEELS LIKE → MAX heat index → MIN heat index → MAX wind chill → MIN wind chill → MAX dew point → MIN dew point → MAX daily rainfall.

## TO CLEAR THE MAX/MIN RECORDS

Press and hold [ **MAX / MIN** ] key for 2 seconds to reset the MAX / MIN records of specify weather display section.

### **NOTE:**

The LCD will also display the "**HISTORY**" icon, data records time & date.

## PAST 24 HOURS HISTORY DATA

The console automatically stores the weather data of the past 24 hours.

1. Press [ **HISTORY** ] key to check the beginning of the current hour's weather data, e.g. the current time is 7:25 am, March 8, the display will show the data of 7:00am, March 8.
2. Press [ **HISTORY** ] key repeatedly to view older readings of the past 24 hours, e.g. 6:00am (Mar 8), 5:00am (Mar 8), ..., 10:00am (Mar 7), 9:00am (Mar 7), 8:00am (Mar 7)

### NOTE:

The LCD will also display the "**HISTORY**" icon, history data records with time & date.

## WEATHER ALERT SETTING



Weather Alert can alert you of certain weather conditions. Once the alert criterion is met, the alarm sound will activate and the LCD's alert icon will flash.

### TO SET ALERT

1. Press [ **ALERT** ] to select and display the desired weather alert reading in the sequence below:

| Alert reading Sequence                          | Setting Range  | Display Section                    | Default Value |
|---|----------------|------------------------------------|---------------|
| Indoor Temperature High Alert (current channel) | -40°C ~ 80°C   | Indoor / CH temperature & humidity | 40°C          |
| Indoor Temperature Low Alert (current channel)  |                |                                    | 0°C           |
| Indoor Humidity High Alert (current channel)    | 1% ~ 99%       |                                    | 80%           |
| Indoor Humidity Low Alert (current channel)     |                |                                    | 40%           |
| Outdoor Temperature High Alert                  | -40°C ~ 80°C   | Outdoor temperature & humidity     | 40°C          |
| Outdoor Temperature Low Alert                   |                |                                    | 0°C           |
| Outdoor Humidity High Alert                     | 1% ~ 99%       |                                    | 80%           |
| Outdoor Humidity Low Alert                      |                |                                    | 40%           |
| Average Wind Speed                              | 0.1m/s ~ 50m/s | Wind direction & speed             | 17.2mm/h      |
| Pressure Drop                                   | 1hPa ~ 10hPa   | Barometer                          | 3hPa          |
| Hourly Rainfall                                 | 1mm ~ 1000mm   | Rainfall                           | 100mm         |

2. Under the current alert reading, press and hold [ **ALERT** ] key for 2 seconds to enter alert setting and the alert reading will flash.
3. Press [ **▲** ] or [ **▼** ] key to adjust the value or press and hold the key to change rapidly.
4. Press [ **ALERT** ] key to confirm the value.
5. Press [ **ALARM** ] key to toggle the regarding alert on / off.
6. Press [ **ALERT** ] key to step to next alert reading.

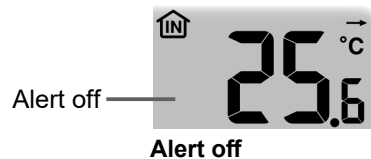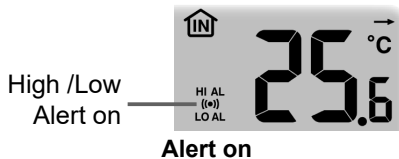

7. Press any key on the front side to save alert on/off status and back to normal mode, or it will automatically back to normal mode after 30 seconds without pressing any key.

## TO SILENCE THE ALERT ALARM

Press [ **ALARM / SNOOZE** ] key to silence the alert alarm or let the alarm automatically turn off after 2 minutes.

## NOTE:

- Once the alert is triggered, the alarm will sound for 2 minutes and the related alert icon and readings will flash.
- If the alert alarm is automatically off after 2 minutes, the alert icon and readings will still keep flash until the weather reading is out of the alert range.
- The weather alert will sound again when the weather readings falls into the alert range again.


## BACKLIGHT


The main unit backlight can be adjust, using the [ HI / LO / AUTO ] sliding switch to select the appropriate brightness:

- Slide to the [ HI ] position for the brighter backlight.
- Slide to the [ LO ] position for the dimmer backlight.
- Slide to the [ AUTO ] position for the auto adjust backlight that according to environment light level.

## MAINTENANCE


### BATTERY REPLACEMENT

If the low battery indicator “” displayed in OUT or CH section, it indicates that the current channel wireless or outdoor 5-in-1 sensor battery power is low. You should replace all the batteries in the current channel sensor at once.

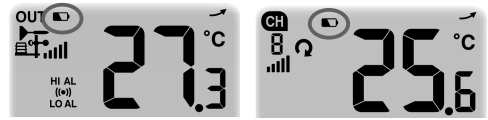


### CLEANING THE RAIN COLLECTOR

1. Unscrew the rain collector by turning it 30° anti-clockwise.
2. Gently remove the rain collector.
3. Clean and remove any debris or insects.
4. Install the collector when it is clean and fully dried.

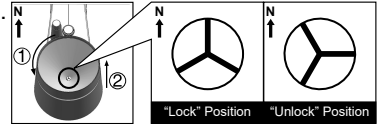

### CLEANING HYGRO-THERMO SENSOR OF WIRELESS 5-IN-1 SENSOR

1. Remove the 2 screws at the bottom of the radiation shield.
2. Gently pull out the shield.
3. Carefully remove any dirt or insects on the sensor casing (do not let the sensors inside get wet).
4. Clean the shield with water to remove any dirt or insects.
5. Install all the parts back when they are clean and fully dried.

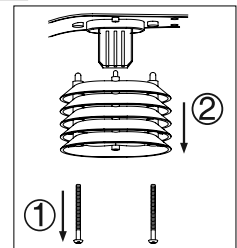

## PRECAUTIONS

- Keep and reading the “User manual” is highly recommended. The manufacturer and supplier cannot accept any responsibility for any incorrect readings, export data lost and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of weather conditions. This product is not to be used for medical purposes or for public information
- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit’s internal components. This invalidates the warranty.

- Placement of this product on certain types of wood may result in damage to its finishing for which manufacturer will not be responsible. Consult the furniture manufacturer's care instructions for information.
- Only use fresh batteries. Do not mix new and old batteries.
- Only use attachments / accessories specified by the manufacturer.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Dispose of used batteries according to the instructions.
- CAUTION! risk of explosion if battery is replaced by an incorrect type.
- The socket-outlet shall be installed near the equipment and easily be accessible.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Technical specifications and user manual contents for this product are subject to change without notice.
- When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- This product is not a toy. Keep out of the reach of children.
- The console is intended to be used only indoors.
- Place the console at least 20cm from nearby persons.



## SPECIFICATIONS

### CONSOLE

#### General Specification

|                             |                                      |
|-----------------------------|--------------------------------------|
| Dimensions (W x H x D)      | 136 x 168 x 24.5mm (5.4 x 6.6 x 1in) |
| Weight                      | 370g (with batteries)                |
| Main power                  | DC 5V, 1A adaptor                    |
| Backup battery              | CR2032, 3V batteries                 |
| Operating temperature range | -5°C ~ 50°C                          |

#### Wi-fi Communication Specification

|                                      |  |
|--------------------------------------|--|
| Wi-fi standard                       | 802.11 b/g/n   |
| Wi-fi operating frequency :          | 2.4GHz   |
| Supported router security type       | WPA/WPA2, OPEN, WEP (WEP only support Hexadecimal password)  |
| Supported device for setup UI        | Built-in Wi-fi with AP mode function smart devices, laptops or PCs: Android smart phone, Android pad, iPhone, iPad or Windows laptop |
| Recommended web browser for setup UI | Web browsers that support HTML 5, such as the latest version of Chrome, Safari, Edge, Firefox or Opera.                              |

#### Wireless Sensor side Communication Specification

|                       |   |
|-----------------------|---|
| Support sensors       | 1 Wireless 5-in-1 weather outdoor sensor and up to 7 Wireless hygro-thermo indoor sensors |
| RF frequency          | 915Mhz (US version) / 868Mhz (EU or UK version) / 917Mhz (AU version)                     |
| RF transmission range | 150m  |

#### Time Related Function Specification

|              |                       |
|--------------|-----------------------|
| Time display | HH: MM                |
| Hour format  | 12hr AM / PM or 24 hr |
| Date display | DD / MM or MM / DD    |



|                         |   |
|-------------------------|---|
| Time synchronize method | Through Internet time server to synchronize the UTC |
| Weekday languages       | EN / DE / FR / ES / IT / NL / RU                    |
| Time Zone               | +13 ~ -12 hour                                      |
| DST                     | ON / OFF  |

### Barometer Display & Function Specification

**Note:** The following details are listed as they are displayed or operate on the console.

|                  |  |
|------------------|--|
| Barometer unit   | hPa, inHg and mmHg   |
| Measuring range  | 540 ~ 1100hPa (relative setting range 930 ~ 1050hPa)   |
| Accuracy         | (700 ~ 1100hPa $\pm$ 5hPa) / (540 ~ 696hPa $\pm$ 8hPa)<br>(20.67 ~ 32.48inHg $\pm$ 0.15inHg) / (15.95 ~ 20.55inHg $\pm$ 0.24inHg)<br>(525 ~ 825mmHg $\pm$ 3.8mmHg) / (405 ~ 522mmHg $\pm$ 6mmHg)<br>Typical at 25°C (77°F) |
| Resolution       | 1hPa / 0.01inHg / 0.1mmHg  |
| Weather forecast | Sunny / Clear, Slightly Cloudy, Cloudy, Rainy, Rainy / Stormy and Snowy  |
| Display modes    | Current  |
| Memory modes     | Historical data of past 24 hours, daily Max / Min  |
| Alarm            | Pressure change alert  |

### Indoor / Outdoor Temperature Display & Function Specification

**Note:** The following details are listed as they are displayed or operate on the console.

|                  |   |
|------------------|---|
| Temperature unit | °C and °F   |
| Display range    | Indoor:-40 ~ 70°C(-40 ~ 158°F), Outdoor:-40 ~ 80(-40 ~ 176°F)   |
| Indoor Accuracy  | <0°C or >40°C $\pm$ 2°C (<32°F or >104°F $\pm$ 3.6°F)<br>0~40°C $\pm$ 1°C (32~104°F $\pm$ 1.8°F)  |
| Outdoor Accuracy | 60.1 ~ 80°C $\pm$ 0.8°C (140.2 ~ 176°F $\pm$ 1.4°F)<br>5.1 ~ 60°C $\pm$ 0.4°C (41.2 ~ 140°F $\pm$ 0.7°F)<br>-19.9 ~ 5°C $\pm$ 1°C (-3.8 ~ 41°F $\pm$ 1.8°F)<br>-40 ~ -20°C $\pm$ 1.5°C (-40 ~ -4°F $\pm$ 2.7°F) |
| Resolution       | °C / °F (1 decimal place)   |
| Display modes    | Current   |
| Memory modes     | Historical data of past 24 hours, daily Max / Min   |
| Alarm            | Hi / Lo temperature alert   |

### Indoor / Outdoor Humidity Display & Function Specification

**Note:** The following details are listed as they are displayed or operate on the console.

|                  |  |
|------------------|--|
| Humidity unit    | %  |
| Display range    | 1 ~ 99%  |
| Indoor Accuracy  | 20~39% or 71~90% RH $\pm$ 8%RH @ 25°C (77°F)<br>40~70% RH $\pm$ 5%RH @ 25°C (77°F)   |
| Outdoor Accuracy | 1 ~ 20% RH $\pm$ 6.5% RH @ 25°C (77°F)<br>21 ~ 80% RH $\pm$ 3.5% RH @ 25°C (77°F)<br>81 ~ 99% RH $\pm$ 6.5% RH @ 25°C (77°F) |
| Resolution       | 1%   |
| Display modes    | Current  |
| Memory modes     | Historical data of past 24 hours, Max / Min  |
| Alarm            | Hi / Lo Humidity Alert   |



### Wind Speed & Direction Display and Function Specification

**Note:** The following detail are listed as they are displayed or operate on the console.

|                            |   |
|----------------------------|---|
| Wind speed unit            | mph, m/s, km/h and knots                                  |
| Wind speed display range   | 0 ~ 112mph, 50m/s, 180km/h, 97knots                       |
| Resolution                 | mph, m/s, km/h and knots (1 decimal place)                |
| Speed accuracy             | < 5m/s: +/- 0.5m/s; > 5m/s: +/- 6% (whichever is greater) |
| Display mode               | Gust / Average  |
| Memory modes               | Historical Data of past 24 hours, Max Gust / Average      |
| Alarm                      | Hi Wind Speed Alert (Average / Gust)                      |
| Wind direction resolutions | 16 directions   |

### Rain Display & Function Specification

**Note:** The following details are listed as they are displayed or operate on the console.

|                       |  |
|-----------------------|--|
| Unit for rainfall     | mm and in  |
| Accuracy for rainfall | ± 7% or 1 tip                                      |
| Range of rainfall     | 0 ~ 19999mm (0 ~ 787.3 in)                         |
| Resolution            | 0.254mm (0.01in)                                   |
| Display modes         | Current  |
| Memory modes          | Historical Data of the past 24 hours, Max          |
| Rainfall display mode | Hourly / Daily / Weekly / Monthly / Total rainfall |
| Alarm                 | Hi Daily Rainfall Alert                            |

### Weather Index Display & Function Specification

**Note:** The following details are listed as they are displayed or operate on the console

|                    |  |
|--------------------|--|
| Weather index mode | Feels like, Wind Chill, Heat Index and Dew point |
| Feels like range   | -40 ~ 50°C                                       |
| Wind chill range   | -40 ~ 18°C, wind speed >4.8km/h                  |
| Heat index range   | 26 ~ 50°C  |
| Dew point range    | -20 ~ 60°C                                       |
| Display modes      | Current  |
| Memory modes       | Historical Data of past 24 hours, Max / Min      |

### WIRELESS 5-IN-1 SENSOR


|                        |   |
|------------------------|---|
| Dimensions (W x H x D) | 343.5 x 393.5 x 136mm (13.5 x 15.5 x 5.35in)  |
| Weight                 | 734g (with batteries)   |
| Main power             | 3 x AA size 1.5V batteries<br>(Lithium batteries recommended)   |
| Weather data           | Temperature, Humidity, Wind speed, Wind direction and Rainfall  |
| RF transmission range  | 150m  |
| RF frequency           | 915Mhz (US) / 868Mhz (EU, UK) / 917Mhz (AU)   |
| Transmission interval  | <ul style="list-style-type: none"> <li>• 12 seconds for wind speed and wind direction data</li> <li>• 24 seconds for temperature, humidity and rain data</li> </ul> |
| Operating range        | -40 ~ 60°C (-40 ~ 140°F) Lithium batteries required   |



## EC DECLARATION OF CONFORMITY

**CE** Hereby, Bresser GmbH declares that the equipment type with part number: WSX1001 is in compliance with Directive: 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.bresser.de/download/WSX1001/CE/WSX1001\\_CE.pdf](http://www.bresser.de/download/WSX1001/CE/WSX1001_CE.pdf)


## RCM DECLARATION OF CONFORMITY


 The product complies with electrical safety, EMC and radio spectrum regulatory requirements for products supplied to the Australia or New Zealand market.


## NOTES ON CLEANING


- Remove the batteries before cleaning.
- Only use a dry cloth to clean the exterior of the device. To avoid damaging the electronics, do not use any cleaning fluid.
- Protect the device from dust and moisture.

## DISPOSAL

 Dispose of the packaging materials properly, according to their type, such as paper or cardboard. Contact your local waste-disposal service or environmental authority for information on the proper disposal.

 Do not dispose of electronic devices in the household garbage!  
As per the Directive 2002/96/EC of the European Parliament on waste electrical and electronic equipment and its adaptation into German law, used electronic devices must be collected separately and recycled in an environmentally friendly manner.

 In accordance with the regulations concerning batteries and rechargeable batteries, disposing of them in the normal household waste is explicitly forbidden. Please make sure to dispose of your used batteries as required by law — at a local collection point or in the retail market. Disposal in domestic waste violates the Battery Directive. Batteries that contain toxins are marked with a sign and a chemical symbol.



## WARRANTY & SERVICE

The regular guarantee period is 2 years and begins on the day of purchase. To benefit from an extended voluntary guarantee period as stated on the gift box, registration on our website is required.

You can consult the full guarantee terms as well as information on extending the guarantee period and details of our services at [www.bresser.de/warranty\\_terms](http://www.bresser.de/warranty_terms).

Would you like detailed instructions for this product in a particular language? Then visit our website via the link below (QR code) for available versions.

Alternatively you can also send an email to [manuals@bresser.de](mailto:manuals@bresser.de) or leave a message on +49 (0) 28 72 – 80 74-220\*. Please always state your name, precise address, a valid phone number and email address, as well as the article number and name.

\*Number charged at local rates in Germany (the amount you will be charged per phone call will depend on the tariff of your phone provider); calls from abroad will involve higher costs.



[www.bresser.de/warranty\\_terms](http://www.bresser.de/warranty_terms)



## MANUAL DOWNLOAD:



[www.bresser.de/download/WSX1001](http://www.bresser.de/download/WSX1001)



## SERVICE AND WARRANTY:



[www.bresser.de/warranty\\_terms](http://www.bresser.de/warranty_terms)

Errors and technical changes reserved.  
Manual\_WSX1001CMBLC1\_Weather-Center-5in1\_en\_EXPSC\_v102019a

**EXPLORE**<sup>®</sup>  
SCIENTIFIC

**Bresser GmbH**

Gutenbergstr. 2 · DE-46414 Rhede  
Germany

[www.bresser.de](http://www.bresser.de) · [service@bresser.de](mailto:service@bresser.de)