
DESKY

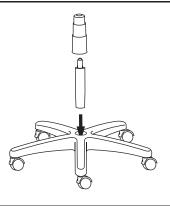



Step 1

Insert the two cylinders provided into the base as pictured.

Step 2

Proceed to secure both arm rests in position by using 4x M6 bolts on each arm.

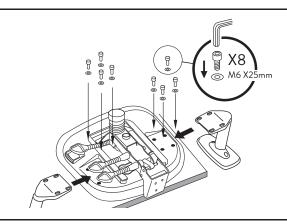

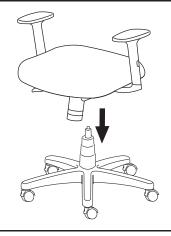


Step 3

Align the base with the bottom of the chair and affix into position.

Step 4

Slide back pannel into position and use 3x M8 supplied screws to firmly secure as pictured.

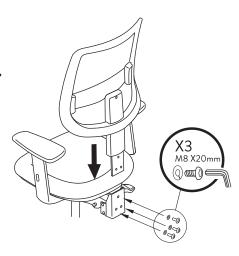



Ace Ergonomic Chair User Instructions

Seat Height Adjustable

Flip up lever on right side to raise or lower seat. Adjust so that your feet are supported adequately on the floor.

Backrest Angle

Flip up lever to unlock backrest. Recline to desired position and flip down lever to lock.

Seat Angle

First ensure backrest angle is locked by flipping down lever. Recline to desired angle and flip down lever to lock. Flip up lever to release tilt lock.

Tilt Tension Control

Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when reclining.

Backrest Height

Hold backrest by both sides and pull up to desired height. To lower backrest, pull to maximum height and then return to lowest height to start again. Adjust height so that the backrest curvature follows the curve of your back.

Armpad Angle

Grasp armpads and rotate them inwards or outwards to adjust elbow support to suit specific tasks. An inward position works during keyboard use, while an outward position is required during mousing.

Armrest Depth

Grasp armpads and push them forwards and backwards to suit your arm support.

Armrest Height

Press the button and raise or lower the armrest. Adjust height to adequately support elbows to take strain off shoulders.

Seat Depth Adjustment

Pull the lever under the right-side of the seat to adjust positioning.

