



External Wireless Sounder

Model: RWS401



Installation and Programming Instructions

Table of Contents

Introduction	3
Operational Functions.....	3
Alarm / Tamper Indication	3
Low Battery Indication.....	3
Supervision	3
Pre Alarm Indication.....	3
Sounder Self Testing.....	3
LED display.....	3
Mounting the Sounder.....	4
Programming the sounder	6
Step 1: Sounder/Receiver Communication Set up.....	6
Step 2: Setting the Sounder Parameters.....	6
<i>Strobe Control</i>	<i>6</i>
<i>Strobe Blink</i>	<i>6</i>
<i>Strobe Arm Squawk</i>	<i>7</i>
<i>Adjusting the Volume</i>	<i>7</i>
<i>Muting Tamper</i>	<i>7</i>
<i>Setting Supervision Time</i>	<i>7</i>
<i>Pre Alarm indication</i>	<i>8</i>
Step 3: Testing the Sounder	8
<i>Communication Test</i>	<i>8</i>
<i>Diagnostics.....</i>	<i>8</i>
Replacing Batteries	9
Technical Information.....	9
Electrical	9
Wireless	9
Environment.....	9
RTTE Compliance Statement	9
RISCO Group Limited Warranty	10
Contacting RISCO Group	12

Introduction

RISCO Group's two-way External Wireless Sounder is designed to extend the signaling capabilities of RISCO Group's wireless systems. The wireless sounder offers an easy and flexible solution for quick installation. The sounder is powered by its own batteries and communicates wirelessly with the security panel.

Up to 3 wireless sounders can be assigned to a system.

Operational Functions

Alarm / Tamper Indication

Upon an alarm condition, the sounder will be activated for a period of time defined by the system (**Bell Time Out** parameter).

Low Battery Indication

Upon a low battery condition a trouble indication is sent to the panel.

There are 2 types of low battery indications:

- ◆ Radio low battery
- ◆ Speaker low battery

Supervision

Each sounder can be defined to be supervised by the panel. The system generates a local fault signal identifying the sounder whose signal is not received during a predefined time, followed by a report to the Alarm Receiving Center (if defined).

Pre Alarm Indication

When an entry time starts, the system transmits a pre-alarm signal to the sounder. If the system is unset before the entry delay time expires, a cancellation signal is sent to the sounder.

If the sounder does not receive a cancellation signal within the entry delay time, the sounder will be activated.

Sounder Self Testing

Once placing all batteries in the battery holders or pressing on the reset switch located on the PCB (with the tamper switch open), the sounder performs a functional self test indicated by a strobe flash squawk sound.

LED display

The wireless sounder has 2 LEDs located on the PCB. These LEDs are enabled when the tamper is open and 10 minutes after the tamper is closed.

Red: Indicates transmission

Yellow: Indicates a low battery

Red and Yellow (3 seconds): Confirms successful learning

Mounting the Sounder


To mount the sounder follow this procedure:

1. Open the front cover by removing the case locking screw located at the bottom of the unit.
2. Hold the mounting pattern template (supplied) against the wall and mark the locations for the mounting holes (4 mounting holes are available). Drill the desired mounting holes and place the screw anchors.
3. Mount the back unit to the wall using the supplied screws, 3.9mm, 32mm length screws (DIN 7981 3.9X32 ZP).
4. Insert a tamper screw into a tamper hole -- see the figure below.
5. Access to the PCB is gained by releasing the inner cover retaining the clip and lifting the cover upward (rotating it on its axis).
6. Insert the supplied batteries in the metal clips according to the polarity. The sounder is ready for communication set up with the system.



Tamper Screw

7. After the sounder is trained, Close the inner cover, re-attach the front cover and lock the Cover Screw Assembly.

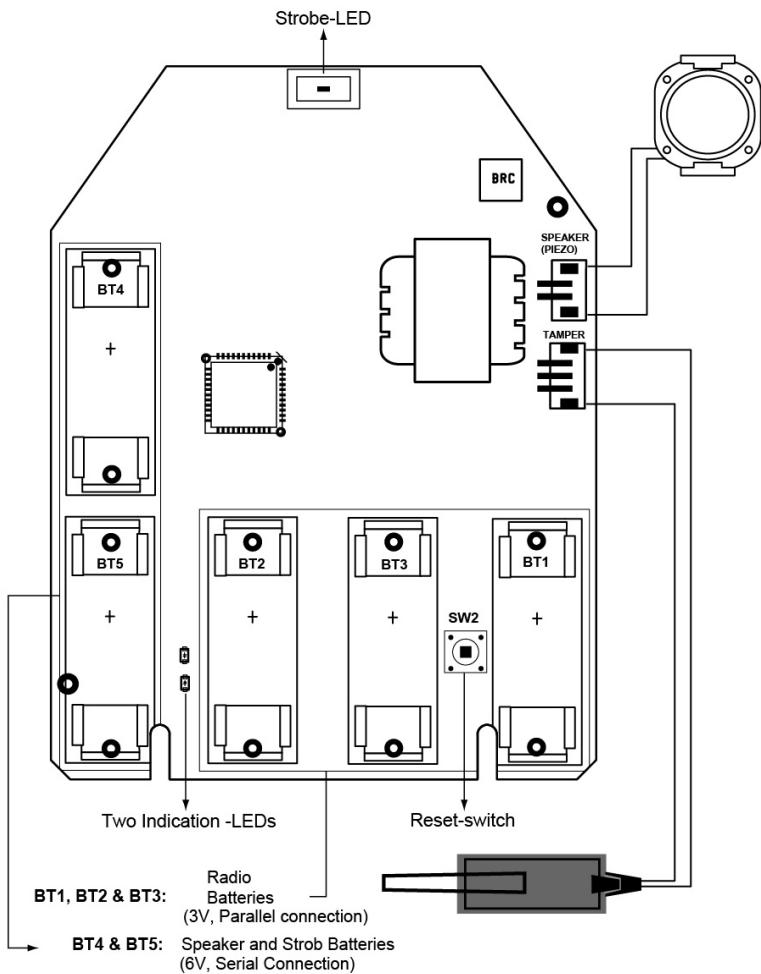

External Sounder - PCB Diagram

Programming the sounder

Programming the wireless sounder consists of the following 3 steps:

1. Setting communication between the receiver and the sounder
2. Setting sounder parameters
3. Testing the sounder

Step 1: Sounder/Receiver Communication Set up

The sounder must identify itself to the system's receiver by writing its ID into the system. Perform according to the following steps:

1. Set the receiver to the Write mode.



NOTE:

WisDom; Main engineer menu> 9) Devices > 2)Sounder > 1) Allocation > Select sounder> Choose ODWS1

Agility: Main Engineer menu: 2) Radio Devices > 1) Allocation > 1) RF Allocation

LightSYS (V2.40 and above): Main Engineer menu: 7) Install > 2) WL Device > 2) Allocation > 1) By RF > 4) Sounder

2. Select the sounder's ID.
3. Unpack the supplied batteries.
4. Insert two speaker batteries and three Radio batteries into the batteries holders.
5. After a squawk is heard and the sounder's strobe flashes you have 10 seconds to press on the tamper switch for at least 3 seconds. If the sounder is successfully recognized, the system will sound a confirmation beep and the sounder will initiate a second squawk sound and the 2 LEDs on the sounder will flash for 3 seconds.
6. Repeat the process for other sounders in the system.

Step 2: Setting the Sounder Parameters

Each sounder can be defined with different sets of parameters. The following table describes the list of parameters of the sounder.



NOTE:

For the specific programming location of each parameter refer to the system manuals.

Strobe Control

Defines the Strobe operation mode:

- **Always Off:** The strobe is deactivated
- **Follow Bell (Default):** The strobe is activated when the sounder bell is triggered
- **Follow Alarm:** The strobe is activated when an alarm event occurs in the system

Strobe Blink

Defines the number of times the strobe will flash per minute (Default 40 times per minute). Strobe Blink options:

[1] 20 times per minute [4] 50 times per minute

[2] 30 times per minute [5] 60 times per minute

[3] 40 times per minute (Default)

Strobe Arm Squawk

The time that strobe blinking will continue when set is performed (Default: 05)



NOTE:

If the sounder's squawk strobe is defined as NO (Refer to the Allocation section) this parameter will be ignored.

Adjusting the Volume

Defines the sounder sound volume for the following system modes:

- **Exit / Entry:** The sound produced during Exit/Entry time (Default: 0)
- **Alarm:** The sound produced during alarm (Default: 9)
- **Squawk:** The sound produced during squawk sounds (Default: 9)

The sound volume range is between 0 (silent) to 9 (maximum volume).

Muting Tamper

This feature disables a tamper alarm from the sounder and it is recommended to be used when replacing the sounder's batteries.



NOTES:

1. An ongoing tamper alarm will not be disabled.
2. **WisDom:** This feature is controlled under the Engineer Menu (Quick key [9][2][5]). Tamper alarm will be disabled during the current installation programming period.
3. **Agility:** Grandmaster Code/User Menu > Activities > Advanced > Service Mode (Agility 3 only)
The tamper alarm will be disabled for the time programmed in the Mode Service timer.
4. **LightSYS** (V2.40 and above): Grandmaster Code/User Menu > Activities > Advanced > Service Mode
The tamper alarm will be disabled for the time programmed in the Mode Service timer.

Setting Supervision Time

Specifies how often the system generates a supervision request to the sounder.

If any of the sounders does not respond to the request at least once during the receiver supervision time, the system will regard the accessory as lost.



NOTE:

The receiver supervision time should be higher than the sounder supervision time in order to eliminate false lost event.

Range: 00-255 minutes

Default: 58 minutes



NOTE:

WisDom: Engineer menu: 1) System > 1) Timers > 9) Accessory supervision time

Agility: Engineer menu: 1) System > 1) Timers > TX supervision

LightSYS (V2.40 and above): Engineer menu: 1) System > 1) Timers > 6) Wireless > 3) TX supervision.

Pre Alarm indication

This wireless sounder incorporates a pre-alarm feature that enhances the security of the system by producing a local alarm in case of sabotage.

If defined, the system sends a pre-alarm signal to the sounder at the beginning of the entry delay. If the sounder does not receive a cancellation signal from the system at the end of the entry time, the sounder goes into alarm mode.

NOTE:

WisDom (Ver 4.25): Engineer menu Quick key: 1)System> 2)Parameters> 35)Sounder Pre alarm

Agility: Engineer menu: [1][2] > Advanced > Sounder Pre alarm

LightSYS (V2.40 and above): Engineer menu 1) System > 2) Controls > 7) Device > 5) Sounder Pre alarm

Step 3: Testing the Sounder

Communication Test

The sounder communication test performs a communication test between the sounder receiver and the system.

➤ **To perform a communication test:**

1. Access the communication test option.

NOTE:

WisDom: Engineer menu > 9) Devices > 2) Sounders > 3) Communication test

Agility: Engineer menu > 2) Testing > 5) Sounder > 1) Communication test

LightSYS (V2.40 and above): Installer Code/User menu: Maintenance > Wireless Test >Wireless Sounders > Comm. Test.

2. The system sends a test signal to the sounders. A number between 00-99 indicates the strength of the communication signal between the system and the sounder.

NOTE:

For successful communication, the strength of the signal should be higher than the sounder receiver noise threshold level.

WisDom: Engineer menu quick key [9][2][4], **Agility**: Engineer menu > 2)Testing >1) Main unit > 1)Calibration).

Agility: Engineer menu: 2) Testing > 1) Main unit > 1) Calibration

LightSYS (V2.40 and above): Engineer menu: 7) Install > 2) WL Device > 1) RX Calibration.

Diagnostics

The Diagnostics menu enables to test parameters reflecting the operation of the sounder:

- ◆ **Speaker batteries voltage:** Tests the selected sounder's speaker batteries voltage
- ◆ **Radio batteries voltage:** Tests the selected sounder's radio's batteries voltage
- ◆ **Sounder version:** Displays information regarding the sounder's version

NOTE:

WisDom: User menu: 4) Maintenance > 7) Sounders > 1) Diagnostics

Agility: Engineer menu > 2) Testing> 5) Sounder>2) Battery test > 3)Version

LightSYS (V2.40 and above) Battery Test: Installer Code/User menu: Maintenance > WL Test > WL Sounders > Battery test

LightSYS V2.40 and above) Sounder Version: Installer Code/User menu: Maintenance. > Diagnostics > Sounders > Select Sounder >Version

The diagnostic features can also be performed from the Upload/Download software, locally or remotely.

- ◆ **Sounder Calibration:** Displays information regarding the noise level around the sounder.



NOTE:

WisDom: Engineer menu quick key: [9][2][4]

Agility: Engineer menu: 2) Testing > 5) Sounder > 4) Noise level > 1) View > 2) Calibrate

LightSYS (V2.40 and above): Installer Code/User menu: Maintenance > Diagnostics > Sounders > Select Sounder > Calibration

Replacing Batteries

1. Before opening the sounder it is advised to silence the tamper alarm using the Tamper Mute option.
2. Remove the screw from the bottom of the sounder cover and open both covers upwards and away from the sounder.
3. Remove the old batteries from the metal clips and replace them with the new ones. Pay attention to the polarity.
4. Replace both of the covers on the sounder and close the locking screw.



NOTES:

Dispose of old batteries according to your local regulations.

Risk of explosion if battery is replaced by an incorrect type.

Technical Information

Electrical

Power supply	5 x CR123, 3V Lithium batteries 3 batteries for the wireless system 2 batteries for signalling
Battery lifetime	3 years (typical)
Sounder volume	105 dB @ 1 meter (3.3") - adjustable
Strobe lens	Polycarbonate
Flash frequency	60 times per minute (max.)
Dimensions (HxWxD)	273 x 230 x 64 mm (10.7 x 9.0 x 2.5 inch)
Weight (including batteries)	1 Kg (2.2lbs)

Wireless

Wireless technology	Bidirectional narrow band
Frequency	868 MHz, 433 MHz
Range	150m (492') Line of sight
Monitoring	YES
Modulation Type	ASK

Environment

Temperature range	- 25°C to 70°C
IP class	IP 44, IK07

Standards

EN50131-4 Grade 2 Environmental Class IV

EN50131-6 Type C

RED Compliance Statement

Hereby, RISCO Group declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. For the CE Declaration of Conformity please refer to our website: www.riscogroup.com.

Standard Limited Product Warranty (“Limited Warranty”)

RISCO Ltd. (“RISCO”) guarantee RISCO’s hardware products (“Products”) to be free from defects in materials and workmanship when used and stored under normal conditions and in accordance with the instructions for use supplied by RISCO, for a period of (i) 24 months from the date of delivery of the Product (the “Warranty Period”). This Limited Warranty covers the Product only within the country where the Product was originally purchased and only covers Products purchased as new.

Contact with customers only. This Limited Warranty is solely for the benefit of customers who purchased the Products directly from RISCO or from an authorized distributor of RISCO. RISCO does not warrant the Product to consumers and nothing in this Warranty obligates RISCO to accept Product returns directly from end users who purchased the Products for their own use from RISCO’s customer or from any installer of RISCO, or otherwise provide warranty or other services to any such end user directly. RISCO’s authorized distributor or installer shall handle all interactions with its end users in connection with this Limited Warranty. RISCO’s authorized distributor or installer shall make no warranties, representations, guarantees or statements to its end users or other third parties that suggest that RISCO has any warranty or service obligation to, or any contractual privy with, any recipient of a Product.

Remedies. In the event that a material defect in a Product is discovered and reported to RISCO during the Warranty Period, RISCO shall accept return of the defective Product in accordance with the below RMA procedure and, at its option, either (i) repair or have repaired the defective Product, or (ii) provide a replacement product to the customer.

Return Material Authorization. In the event that you need to return your Product for repair or replacement, RISCO will provide you with a Return Merchandise Authorization Number (RMA#) as well as return instructions. Do not return your Product without prior approval from RISCO. Any Product returned without a valid, unique RMA# will be refused and returned to the sender at the sender’s expense. The returned Product must be accompanied with a detailed description of the defect discovered (“**Defect Description**”) and must otherwise follow RISCO’s then-current RMA procedure published in RISCO’s website at www.riscogroup.com in connection with any such return. If RISCO determines in its reasonable discretion that any Product returned by customer conforms to the applicable warranty (“**Non-Defective Product**”), RISCO will notify the customer of such determination and will return the applicable Product to customer at customer’s expense. In addition, RISCO may propose and assess customer a charge for testing and examination of Non-Defective Product.

Entire Liability. The repair or replacement of Products in accordance with this Limited Warranty shall be RISCO’s entire liability and customer’s sole and exclusive remedy in case a material defect in a Product is discovered and reported as required herein. RISCO’s obligation and this Limited Warranty are contingent upon the full payment by customer for such Product and upon a proven weekly testing and examination of the Product functionality.

Limitations. This Limited Warranty is the only warranty made by RISCO with respect to the Products. The warranty is not transferable to any third party. To the maximum extent permitted by applicable law, this Limited Warranty shall not apply and will be void if: (i) the conditions set forth above are not met (including, but not limited to, full payment by customer for the Product and a proven weekly testing and examination of the Product functionality); (ii) if the Products or any part or component thereof: (a) have been subjected to improper operation or installation; (b) have been subject to neglect, abuse, willful damage, abnormal working conditions, failure to follow RISCO’s instructions (whether oral or in writing); (c) have been misused, altered, modified or repaired without RISCO’s written approval or combined with, or installed on products, or equipment of the customer or of any third party; (d) have been damaged by any factor beyond RISCO’s reasonable control such as, but not limited to, power failure, electric power surges, or unsuitable third party components and the interaction of software therewith or (e) any failure or delay in the performance of the Product attributable to any means of communication provided by any third party service provider, including, but not limited to, GSM interruptions, lack of or internet outage and/or telephony failure. **BATTERIES ARE EXPLICITLY EXCLUDED FROM THE WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY APPLICABLE THERETO, IF ANY, IS THE BATTERY MANUFACTURER’S WARRANTY.** RISCO does not install or integrate the Product in the end user’s security system and is therefore not responsible for and cannot guarantee the performance of the end user’s security system which uses the Product or which the Product is a component of.

This Limited Warranty applies only to Products manufactured by or for RISCO. Further, this Limited Warranty does not apply to any software (including operating system) added to or provided with the Products or any third-party software, even if packaged or sold with the RISCO Product. Manufacturers, suppliers, or third parties other than RISCO may provide their own warranties, but RISCO, to the extent permitted by law and except as otherwise specifically set forth herein, provides its Products "AS IS". Software and applications distributed or made available by RISCO in conjunction with the Product (with or without the RISCO brand), including, but not limited to system software, as well as P2P services or any other service made available by RISCO in relation to the Product, are not covered under this Limited Warranty. Refer to the Terms of Service at: <https://riscocloud.com/ELAS/WebUI/UserLogin/License> for details of your rights and obligations with respect to the use of such applications, software or any service. RISCO does not represent that the Product may not be compromised or circumvented; that the Product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce the risk of a burglary, robbery or fire without warning, but it is not insurance or a guarantee that such will not occur or will not cause or lead to personal injury or property loss. CONSEQUENTLY, RISCO SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON ANY CLAIM AT ALL INCLUDING A CLAIM THAT THE PRODUCT FAILED TO GIVE WARNING.

EXCEPT FOR THE WARRANTIES SET FORTH HEREIN, RISCO AND ITS LICENSORS HEREBY DISCLAIM ALL EXPRESS, IMPLIED OR STATUTORY, REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS WITH REGARD TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE EXTENT PERMITTED BY LAW. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, RISCO AND ITS LICENSORS DO NOT REPRESENT OR WARRANT THAT: (i) THE OPERATION OR USE OF THE PRODUCT WILL BE TIMELY, SECURE, UNINTERRUPTED OR ERROR-FREE; (ii) THAT ANY FILES, CONTENT OR INFORMATION OF ANY KIND THAT MAY BE ACCESSED THROUGH THE PRODUCT SHALL REMAIN SECURED OR NON DAMAGED. CUSTOMER ACKNOWLEDGES THAT NEITHER RISCO NOR ITS LICENSORS CONTROL THE TRANSFER OF DATA OVER COMMUNICATIONS FACILITIES, INCLUDING THE INTERNET, GSM OR OTHER MEANS OF COMMUNICATIONS AND THAT RISCO'S PRODUCTS, MAY BE SUBJECT TO LIMITATIONS, DELAYS, AND OTHER PROBLEMS INHERENT IN THE USE OF SUCH MEANS OF COMMUNICATIONS. RISCO IS NOT RESPONSIBLE FOR ANY DELAYS, DELIVERY FAILURES, OR OTHER DAMAGE RESULTING FROM SUCH PROBLEMS. RISCO WARRANTS THAT ITS PRODUCTS DO NOT, TO THE BEST OF ITS KNOWLEDGE, INFRINGE UPON ANY PATENT, COPYRIGHT, TRADEMARK, TRADE SECRET OR OTHER INTELLECTUAL PROPERTY RIGHT IN ANY EVENT RISCO SHALL NOT BE LIABLE FOR ANY AMOUNTS REPRESENTING LOST REVENUES OR PROFITS, PUNITIVE DAMAGES, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF THEY WERE FORESEEABLE OR RISCO HAS BEEN INFORMED OF THEIR POTENTIAL.

Contacting RISCO Group

RISCO Group is committed to customer service and product support. You can contact us through our website www.riscogroup.com or as follows:

United Kingdom

Tel: +44-(0)-161-655-5500

E-mail: support-uk@riscogroup.com

Italy

Tel: +39-02-66590054

E-mail: support-it@riscogroup.com

Spain

Tel: +34-91-490-2133

E-mail: support-es@riscogroup.com

France

Tel: +33-164-73-28-50

E-mail: support-fr@riscogroup.com

Belgium (Benelux)

Tel: +32-2522-7622

E-mail: support-be@riscogroup.com

USA

Tel: +1-631-719-4400

E-mail: support-usa@riscogroup.com

China (Shanghai)

Tel: +86-21-52-39-0066

E-mail: support-cn@riscogroup.com

Israel

Tel: +972-3-963-7777


E-mail: support@riscogroup.com

Australia

Tel: +1-800-991-542

E-mail: support-au@riscogroup.com

RISCO product was purchased from

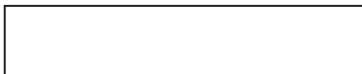

All rights reserved.

No part of this document may be reproduced in any form without prior written permission from the publisher.

For the CE Declaration of Conformity please refer to our website: www.riscogroup.com.



PD 6662:2010

© RISCO Group 10/17

5IN2718 B