

# Instruction Manual



# C o r t e b e r t



To ensure correct care, please take some time to review the enclosed instructions to review how to operate your watch.

Vol.1.02 EN

# Cortebert MYSTÈRE

## Swiss Movement Automatic Watch

This timepiece is equipped with a self-winding Swiss Mechanical Automatic movement.



**It does not need a battery.**

It is powered by the motions of the user's own wrist during the wear of the watch.

You may also choose to wind the watch manually.

For more details on operating this timepiece please refer to the enclosed booklet or visit :

**IM.CORTEBERT1790.COM**

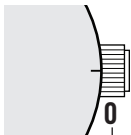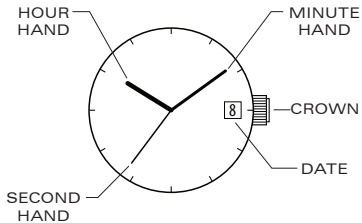


**CLOSED**  
For  
Water Resistance

**(1st click) (2nd click)**



**OPENED**  
Not secured  
For Water Resistance

**BI-DIRECTIONAL  
TURNING BEZEL**

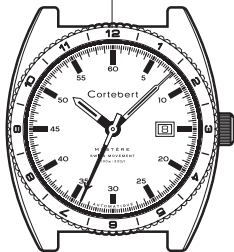

**BEFORE YOU USE THIS WATCH, IT IS RECOMMENDED THAT YOU MANUALLY WIND THE MAIN-SPRING TO START IT MOVING.**

THIS WATCH IS AN AUTOMATIC WATCH EQUIPPED WITH A MANUAL WINDING MECHANISM.

## **WINDING THE MAINSPRING**




1. When it is in position [0], turn the crown clockwise to wind. Wind 5-10 times and it will start to move naturally after shaking slightly.

- \* This watch **MUST** be worn for at least 8 (Eight) hours each day to ensure it is fully wound. An automatic watch will only wind when the watch is on your wrist and your arm moves. Winding the watch by the crown will put power on the spring but not enough to allow the watch to function fully. If your watch stops overnight or loses time it means it is not being fully wound.

## HOW TO SET THE TIME


1. Pull the crown out to position **[2]**-(2nd click).
2. Turn the crown clockwise to set the correct time.
3. Push the crown in.

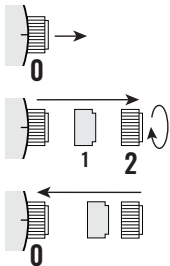

\* Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.

## HOW TO SET THE DATE

1. Pull the crown out to position **[1]**-(1st click).
2. Turn the crown clockwise to set the correct date.
3. Push the crown in.

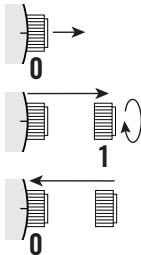


\* Do not set the date between 9:00 P.M. and 4:00 A.M.

## HOW TO READ A SECOND TIME ZONE


Using the bezel of this watch, you can read the time of a second timezone giving you at a glance view of the time in two different places with ease.

For example you live in London and the current time is 2.00 PM.


Knowing that the time in Bangkok is +6 Hours ahead.

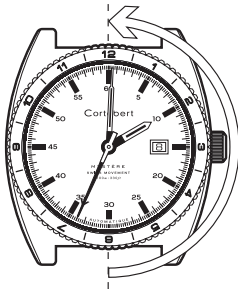

You can simply move the bezel so that the number 6 is aligned to the 12 o'clock position on the dial.

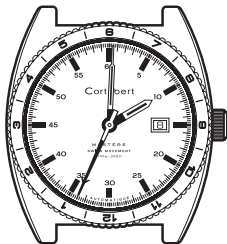

By doing so this gives you the time at a glance in London and in Bangkok with the bezel referencing the time in Bangkok and the hour hand on the main dial positioned at the time London.

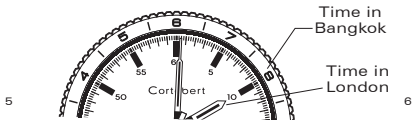

## WATER RESISTANCE































Note that the water resistance chart serves only as a guide (please refer to the water resistance chart on the next page). Actual water resistance may vary depending on a number of factors including water temperature, water salinity and use under water.

The water resistance of your timepiece may eventually be compromised over time with general wear and tear and use of your timepiece under adverse conditions.

Always remember to employ the screw down crown if available to maintain the water resistance of your timepiece. Warranty may be voided if the screw down crown has not been properly employed.

Note that you should **NEVER** wear your watch in a jacuzzi, hot shower or steam room where steam may enter the case despite the water tight seals used to protect your watch.

This may cause condensation inside your watch, which may effect and damage the inner workings of your watch.

| WATER RESISTANCE CHART                | 30M/<br>3ATM  | 50M/<br>5ATM  | 100M/<br>10ATM  | 150M/<br>15ATM  | 200M/<br>20ATM  |
|---------------------------------------|---|---|---|---|---|
| SPLASH/<br>SHOWERING                  |  |  |  |  |  |
| SWIMMING/<br>BATHING                  |  |  |  |  |  |
| BRIEF SWIMMING/<br>WATER SPORTS       |  |  |  |  |  |
| PROLONGED<br>SWIMMING/<br>FREE DIVING |  |  |  |  |  |
| SCUBA<br>DIVING                       |  |  |  |  |  |
| PROFESSIONAL<br>DEEP SEA DIVING       |  |  |  |  |  |