

SPM-128JSL INTRODUCTION

TIMER
Maximum to 90 mins

TEMP
From 37°C to 130°C

SPEED
From 0-10 speeds

Not allow to use the mixing tool at speed 5 or above

Bowl is not installed or installed incorrectly

The temperature reaches the set value



Press the power switch to the ON position before use



TURBO

TURBO

Press "TURBO" button (for 3 or 4 seconds) to mix and cut ingredients at a very high speed.

- To make sure the lid and measuring cup closed before start.
- Do not use the mixing tool with this function.
- Do not use this function more than 2 minutes per time.
- Do not use this function when food exceeding 60°C.

SCALE



TARE

SCALE/TARE

Step 1. Press the "SCALE/TARE" button to enter SCALE mode.
Step 2. Press this button again to enter TARE function, screen display "0000".
Step 3. Load the ingredients in/on mixing bowl for weighing.
Step 4. Press the STOP/START/PAUSE button or MODE/REVERSE button to exit the SCALE mode.

STOP



START / PAUSE

STOP/START/PAUSE

- After selecting the timer, temp and speed (or only speed), press this button to START cooking, press again to PAUSE, press again to continue (START).
- Keep pressing this button for 2 seconds to STOP the machine.

MODE



REVERSE

STIRRING/MIXING/CHOPPING

Step 1. Turn the knob to select the speed, temp, timer.
Step 2. Press the STOP/START/PAUSE button. The indicator light turns blue and machine working.
Step 3. The indicator light turns red, cooking finish.

REVERSE: At speed 1, 2, 3, press the MODE/REVERSE button, the blade will switch to reverse direction after 2 seconds. Reverse function use for stirring foods, forward function use for chopping foods.

PRE-SET Function

1. KNEAD: Machine standby (speed at "0").

Step 1. Press the MODE/REVERSE button once to enter KNEAD mode, "F-1" display on screen.
Step 2. Press the STOP/START/PAUSE button to start kneading.
Step 3. Wait for automatic stop; or keep pressing STOP/START/PAUSE button for 2 seconds to stop.

- KNEAD mode preset at 1min30secs, timer can be increased to 3 mins.
- Do not use the mixing tool for kneading.

2. STEAM: Machine standby (speed at "0").

Step 1. Press the MODE/REVERSE button twice to enter STEAM mode, "F-2" display on screen.
Step 2. Press the STOP/START/PAUSE button to start steaming.
Step 3. Wait for automatic stop; or keep pressing STOP/START/PAUSE button for 2 seconds to stop.

- STEAM mode preset at 20 mins, timer can be increased.



3. SAUTÉ: Machine standby (speed at "0").

Step 1. Press the MODE/REVERSE button thrice to enter SAUTÉ mode, "F-3" display on screen.
Step 2. Press the STOP/START/PAUSE button to start roasting.
Step 3. Wait for automatic stop; or keep pressing STOP/START/PAUSE button for 2 seconds to stop.

- SAUTÉ mode preset at 7 mins, timer can be adjust from 0-7 mins.
- SAUTÉ function for small pieces ingredients.

NOTE

Press STOP/START/PAUSE button for 2 seconds to exit the above KNEAD/STEAM/SAUTÉ modes.

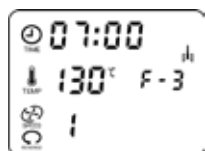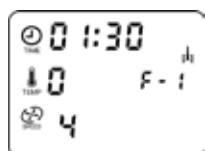

SPM-128JSL INTRODUCTION



1

Cooking Basket

Cooking fragile food/side dishes (e.g. rice, pasta, potato); Draining/filtering of fruit and vegetable juice.



2

Mixing Tool

Whipping cream or beating egg whites; Blending or Mixing when cooking fragile food (e.g. fish, eggplant).

- only can use at speed 1/2/3/4.



3

Steamer Tray

Steaming meat, fish and vegetables etc.



4

Measuring Cup (100ml)

Measuring liquid; Closing as cover when high-speed functions are used; Opening when add ingredients to the bowl without open lid.



5

Spatula

Stirring, mixing or scraping the ingredients; Lifting the cooking basket.



6

Scale

An integrated scale to help weigh ingredients, max weight 5 kg in 5g increments.



7

Blade

Chopping or grinding ingredients; Blending when use REVERSE function.

- Do not use to cut hard ingredients, e.g. bones, frozen foods.



NOTE

Cleaning in the dishwasher: before cleaning the mixing bowl in the dishwasher, always remove the sealing ring from the blade.

HOW TO CLEAN

Following cleaning tips are only used for cleaning the mixing bowl (with the blade) Do not place any attachments into the mixing bowl.

NOTE

- **Quick Cleaning:** Fill the bowl with 1L water, choose speed 10/10sec then start cleaning. Usually suggested to use after each steps of cooking.
- **Normal Cleaning:** Fill the bowl with 1L water and 1-3 drips of washing liquid, choose speed 10/30sec, then start cleaning. Usually suggested to use after all cooking steps.
- **Deep Cleaning:** Fill the bowl with 1L water, white vinegar and 1-3 drips of washing liquid, wait for 10 minutes, then clearing or scrub gently with a scouring ball, choose speed 10/1min to start cleaning. Usually suggested to use after cooking sticky food.