



Instruction Manual

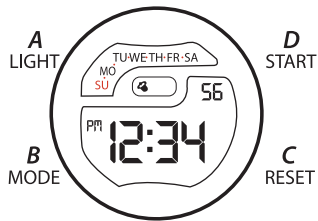

Alarm Chime



Alarm on chime off



Chime on alarm off



Alarm and chime on

Features:

6-digit LCD display, display hour, minute, second, week, hourly chime and daily alarm.

12/24 hour format selectable, auto calendar.

1/100 second chronograph with split function.

EL backlight.

Operational Manual:

At any mode, press the **A** key to turn on the backlight; this will last for 3 seconds.

Press the **D** key to check the month and date.

Press the **C** key to check the alarm time.

Press the **B** key to cycle through setting modes.

Alarm Setting:

From the normal display mode, press **B** key twice to enter into Alarm Mode and alarm hour is flashing, Press the **D** key to adjust the correct hour for your alarm.

Press the **C** key to get to the minutes and **D** key to adjust to the correct alarm minutes.

Press the **B** key to exit.

Alarm & Chime on/off:

To turn alarm on, press and hold the **C** key and press the **D** key.

If the alarm is on, you will see the alarm icon with a black background.

To turn hourly chime on, press and hold the **D** key and press the **C** key.

Chronograph Function:

Press the **B** key to enter the chronograph mode.

Press the **D** key to start and again to pause, While timer is paused, press the **C** key to reset timer.

Press the **C** key to check the alarm time.

While in the chronograph mode, press the **D** key to start,

press the **C** key to enter split function and document the first groups records;

press the **C** key again and this will begin the third group;

when completed, press the **D** key to stop the function.

Press the **C** key to read the final group record and the **C** key again to clear the record.