





1. Pick Your Landing

Place the **first StairSlide section*** at the bottom of your stairs according to your preferred landing style.

High Adventure | Age: 6+ | Weight: Up to 175lbs

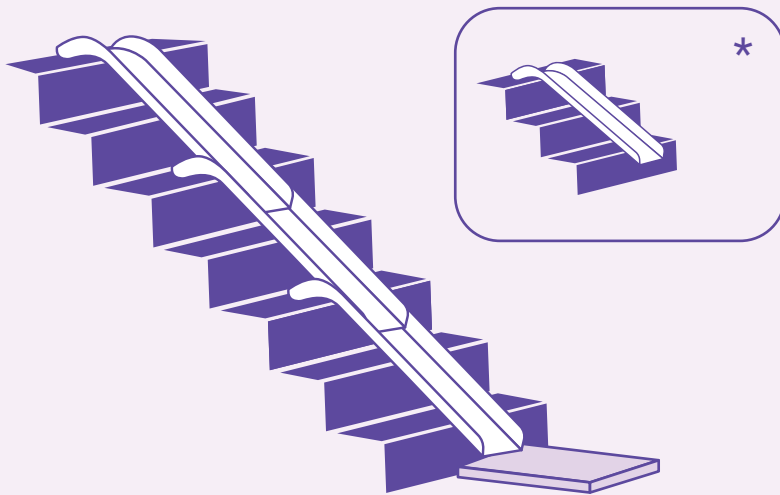

Low Impact | Age: <5 | Weight: Up to 100lbs

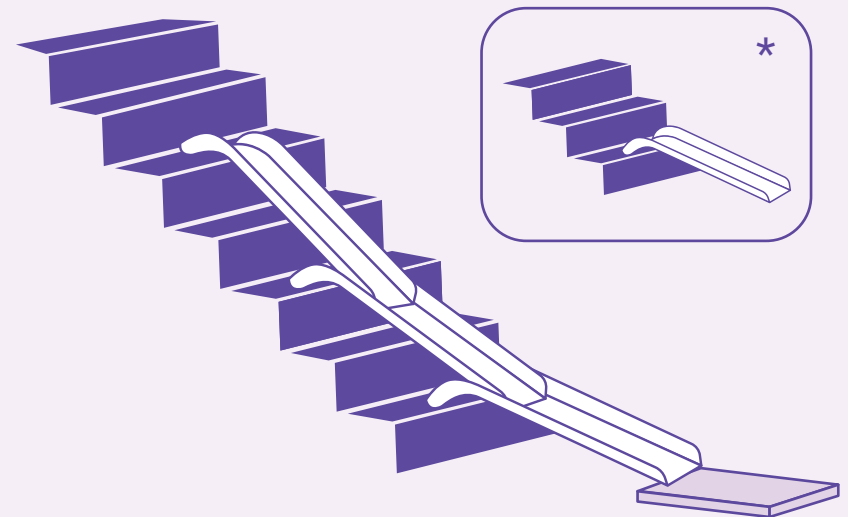



2. Adjust The Slides

Overlap the StairSlide sections, covering the slide's curve, for the smoothest transition. Allow at least 2 to 3 inches between the slide and the wall to avoid pinched fingers.

3. Impact Choices

Place a landing pad (and/or a soft cushion) at the bottom of the slide to aid a safer landing. (Pad sold separately).

Pro Tip: Use lots of pillows!

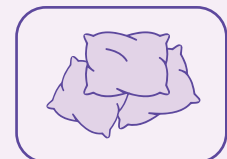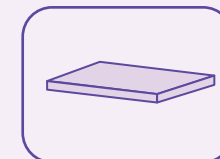



Follow Us

@stairslide

| @officialstairslide



Tips For Safer Sliding

- Use in a seated position.
- Bend your knees and land on your feet.
- Reposition the StairSlide after each use.
- Use with adult supervision.
- Have at least one foot of landing area for each stair covered.
- Stack and Store the slides when not in use.
- Slide feet first.
- Do not use near or under stair railings.
- Have one rider go down the StairSlide at a time.

Care & Maintenance

StairSlide is intended for indoor use only; the product is not designed to weather outdoor elements such as rain or snow. Plus, outdoor slides already exist; we don't want to steal their thunder.

Whenever the StairSlide is not actively in use, stack the sections together and store them so they don't obstruct the bustling traffic of your home.

RETURN POLICY: We accept returns up to 30 days after delivery if the item is in its original condition; item(s) must not show any signs of wear or damage. Customers are responsible for the cost of return shipping. Due to the weight/size of the order, shipping prices may vary.

For more information regarding our return policy, visit <https://stairslide.com/policies/refund-policy>.