


# DUAL MEMORY STOPWATCH

## USER INSTRUCTIONS

### KEY CONFIGURATION


- S1 : MODE
- S2 : SPLIT/RESET
- S3 : START/STOP
- S4 : RECALL

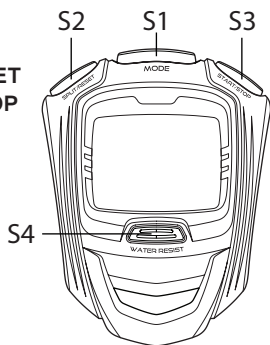

### TIME MODE :

- Time adjustment : Press S1 goto TIME mode.
- Press and hold S2 for 2 second to enter adjust mode. You can see the digit is flashing and now can be adjust.
- Press S2 scroll next variable.
- Sequence: Year>Month>Date>12/24 format>Hour>Minute>Second
- Press S3 to adjust value. Hold the button for fast scrolling.
- Press the S1 to confirm and back to TIME mode.

### COUNT DOWN TIMER MODE

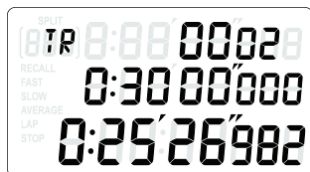

- Top row : No. of loop pass
- Middle row : Preset count down time
- Bottom row : Counting time

#### How to set the count down timer

- Press and hold S2 for 2sec. to enter setting mode.
- First the hour digit is flashing, press S3 to increase value, press S2 switch to minute till 1/1000second digit. Repeat the about step until complete the setting. Press S1 when finish and back to Count down timer mode.
- How to start count down timer
- Press S3 to start/stop, press S3 again to resume the timer.
- Press S2 to reset to preset countdown time when timer is stop.

#### How to set the pace frequency


- Once you enter Pace mode, the bottom value is flashing, press S2 to scroll the value, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 120, 150, 180, 210, 240, 270, 300, 330 (pace/minute)
- Press S3 to confirm and start.
- Press S3 to stop, press S3 again to resume the pacer.
- Press S2 to reset the counter when pacer is stop. Press S2 again to enter setting model.
- Note:
- Pacer will stop automatically when leave Pacer Mode

### TALLY COUNTER MODE



- Press S2 or S3 to increment count by 1.
- To reset the counter, press and hold S4 for 2 sec.

### CHRONOGRAPH MODE

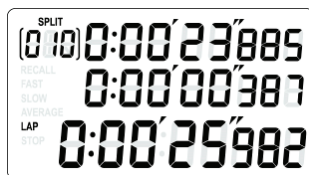

- Top row : No. of split and Split times.
- Middle row : Lap times
- Bottom row : Overall times

- Measure and record lap times and split times and overall time simultaneously. (Memories depends on model).
- 1/1000 second precision for first 9hr, 59min, 59sec, 999millisecond.

#### How to start/stop a session:

- Press S3 to start/stop, press S3 again to resume the timer.

#### How to reset the record:

- Press S2 to reset to record while the session is stop.

### EXERCISE TIMER MODE

This timer will count down for INT ACT > INT PEST > INT ACT > .... as well as no. of loops you preset.



- INT ACT (Interval action times)
- INT PEST (Interval rest times)
- INT LOOPS (Interval loops)
- INT TOTAL (Interval total times)

#### How to set the Exercise Timer

- Press and hold S2 for 2 sec. to enter setting mode.
- You can see the first digit is flashing, press S2 again to start adjust minute. Press S3 increase the value, press S2 to confirm and go next value for setting.
- Setting sequence: Action time (min. & sec.)>Rest time (min. & sec.)>No. of loop
- Press S1 to confirm and back to Exercise timer mode.
- Max. Action/Rest Time: 59min.59sec.
- Max. Loop: 30

### ALARM MODE:



- Top row : Alarm 1 / 2
- Middle row : Alarm time
- Bottom row : Alarm status

- Press S3 to scroll Alarm1, Alarm2, Hourly chime.
- Press S4 to switch on/off the alarm or hourly chime function.

Alarm adjustment: Press and hold S2 for 2 second to enter adjust mode. You can see the hour digit is flashing and press S3 to adjust value. Hold the button for fast scrolling. Hold the button for fast scrolling.

- Press S2 scroll next variable.
- Sequence: Hour>Minute
- Press the S1 to confirm.

### Record split & lap times:

- Press S3 to start, press S2 to record split time until memory is full. (depends on model)
- When the memory is full, the top roll will shown "FULL" and cannot record split time anymore, while the bottom row "over all times" will still running.
- Press S3 again to stop.


### DATA RECALL:

- When in Chronograph mode
- Press S4 to recall split times and lap times,
- you can see the date and time of record, after 2sec. can see the data.
- Press S2 to recall the fastest & slowest lap time.
- Press S3 to recall the average time amount in these laps.
- Press S1 back to chronograph mode during in data recall mode.
- Notes:
- You can recall the data by press S4 even the stopwatch is running.
- In case the new session is not yet start, you can still recall the last session data. ①

### How to use the Exercise Timer

- Press S4 to check the timer detail before start the session.
- Press S3 to start, press S3 again to stop/ resume the timer.
- Press S4 to restart the timer when timer is stop.
- When the Action time is finish and start counting Rest time, a long "beep" sound will alert.
- Another "beep" sound will alert. when these is 5 sec. before the Rest time finish.
- After complete the preset no. of loop, three times "beep" sound will be alert and back to Exercise Timer mode.

### PACER MODE

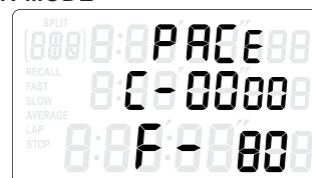


- Top row : PACE MODE
- Middle row : No. of count /pace
- Bottom row : Pace frequency(times/minute) ②

### BATTERY REPLACEMENT

When the LCD display becomes dim, replace with a new battery.

Battery type: CR2032 x 1pcs

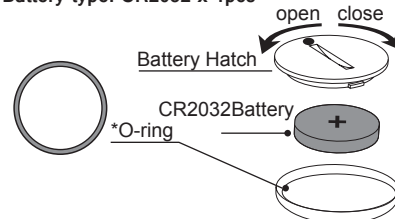

We strongly recommend taking your stopwatch to a local jeweler to have battery replaced to avoid possibility of permanently damaging of the stopwatch.

### WARNING :

- Keep batteries away from children. If swallowed, contact a doctor or emergency personnel immediately.
- Batteries contain chemical substances. They should be disposed of properly according to local regulations. ③

## LIMITED WARRANTY OUR BASIC POLICY

Marshall –Browning International Corporation (MBI Corp.) warrants to the original owner, this timepiece (excluding battery, lanyard, clip, band or strap) for the period of one year from the original purchase date. This limited warranty is given by MBI Corp. and not by the dealer from whom the timepiece was purchased.

---

### THE WARRANTY PROCESS – WHAT IS COVERED BY THE WARRANTY

If the timepiece develops a manufacturing defect within the one year limited warranty period, it will be either repaired or replaced (at MBI Corp.'s option) with a timepiece of equal value, providing the original owner submits the following:

1. Proof of purchase, i.e. a validated store receipt showing date of purchase.
2. A check or money order (no cash, please) in the amount of \$8.50 to cover the cost of shipping and handling

### WHAT IS NOT COVERED BY THE WARRANTY

- A. MBI Corp. will not repair defects of damages caused by or showing evidence of:
  1. Improper or unauthorized service.
  2. Misuse, tampering, abuse or mistreatment of the timepiece.
  3. Damage to the case or viable cracking of the lens.
  4. Moisture damage, if the product is a non-water-resistant timepiece.
- B. If we find that the battery is the cause of the defect, MBI Corp. reserves the right to charge (\$8.50) for a new replacement.

MBI Corp. is not liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

### YOUR RIGHTS UNDER IMPLIED WARRANTIES AND STATE LAW.

MBI Corp. limits the duration of any warrant implied by state law, including the implied warrant of merchantability, to one year from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### CARING FOR YOUR TIMER

Proper care of your timepiece will provide many years of enjoyment. We recommend that:

1. The battery be replaced at once when it becomes depleted. Use **Lithium Type CR-2032**. Please ask your local retailer to replace the battery for you using the same model as you took out.
2. The lens be replaced immediately if it becomes damaged, as contamination from dust, moisture, and other foreign substances will damage the module.
3. If the timepiece is not marked "water-resistant," avoid immersing or exposing it to water, steam, or other forms of moisture.

### WHEN YOU REQUIRE SERVICE

If your timer ever requires factory servicing, you can send it directly to:

MBI CORP, c/o Frazier Sports 6600 Broad Avenue Waco, TX 76712

We strongly recommend that when sending it through the mail, you send the product insured, return receipt requested, so that if a problem in shipping arises, you can trace it through the originating post office. You will be billed for all services deemed out of warranty; and since we reserve the right to substitute with a replacement product of equal or greater value, NEVER include a personal item, such as a watchband, with the repair request.

---

Robic...Timers & pedometers for champions at every level! Please call (203) 264-2702 for a free catalog.  
www.RobicTimers.com